

## User Access Level of Web/Phone/Handset User Interface

---

### Overview

User access level feature is used to achieve different access levels for different authorized users. It is useful for protecting the IP phone from unauthorized configuration, and popularly used for the Hosted PBX solution. The following describes how to customize the access permission for configurations on the web user interface and phone user interface.

This guide applies to the following Yealink IP phones:

- SIP-T58V/A, SIP-T56A, SIP VP-T49G, CP860, CP960 and W56P IP phones running firmware version 80 or later
- SIP-T54S, SIP-T52S, SIP-T48G/S, SIP-T46G/S, SIP-T42G/S, SIP-T41P/S, SIP-T40P/G, SIP-T29G, SIP-T27P/G, SIP-T23P/G, SIP-T21(P) E2 and SIP-T19(P) E2 and W52P IP phones running firmware version 81 or later

### Scenario

For a Hosted PBX solution, IP phones are provided to customers for free but required a minimum consumption monthly. All PBX services associated features on the deployed IP phones are preconfigured to avoid customers from using other Hosted PBX's service, and the Hosted PBX system administrator can restrict the user access permission using user access level feature. For example, the Hosted PBX system administrator restricts the write permission of the account associated configurations. This means customers can only read these configurations on both web user interface and phone user interface.

### Introduction

Yealink IP phones support access levels of admin, var and user. The following describes the detailed information of each access level:

- **Admin:** The administrator access level. With this access level, all configurations on both web user interface and phone user interface can be read and written. The authentication identity for this access level is **admin**. And the default password is **admin**.
- **Var:** The value-added reseller access level. Generally, with this access level, most configurations on the web user interface and phone user interface can be read and written. The authentication identity for this access level is **var**. And the default password is **var**.
- **User:** The end user access level. Generally, only a few configurations are allowed to be

written and read for access user. The authentication identity for this access level is **user**.  
And the default password is **user**.

## Specification

Access permissions of all configuration items available on Yealink IP phones' web user interface and phone/handset user interface can be defined in a fixed WebItemsLevel.cfg file. Each configuration item in the file is formatted as:

**ItemName = X<sub>1</sub>X<sub>2</sub>**

The valid values of X<sub>1</sub>, X<sub>2</sub> include 0, 1, 2 and 3.

X<sub>1</sub> is used for specifying the access level. The access levels: 2 = admin, 1 = var, 0 = user, 3 = none.

X<sub>2</sub> is used for defining the access permission. 2 means the configuration item is read-only for X<sub>1</sub> and higher access levels, the highest is always writable. 1 means the configuration item is read-only for X<sub>1</sub> access level, and writable for higher access levels. 0 means the configuration item is writable for X<sub>1</sub> and higher access levels. 3 means the configuration item is read-only for X<sub>1</sub> and higher access levels.

The following table lists the possible values of X<sub>1</sub>X<sub>2</sub> and the configuration results with different access levels:

(W: writable; R: read-only; N: hidden)

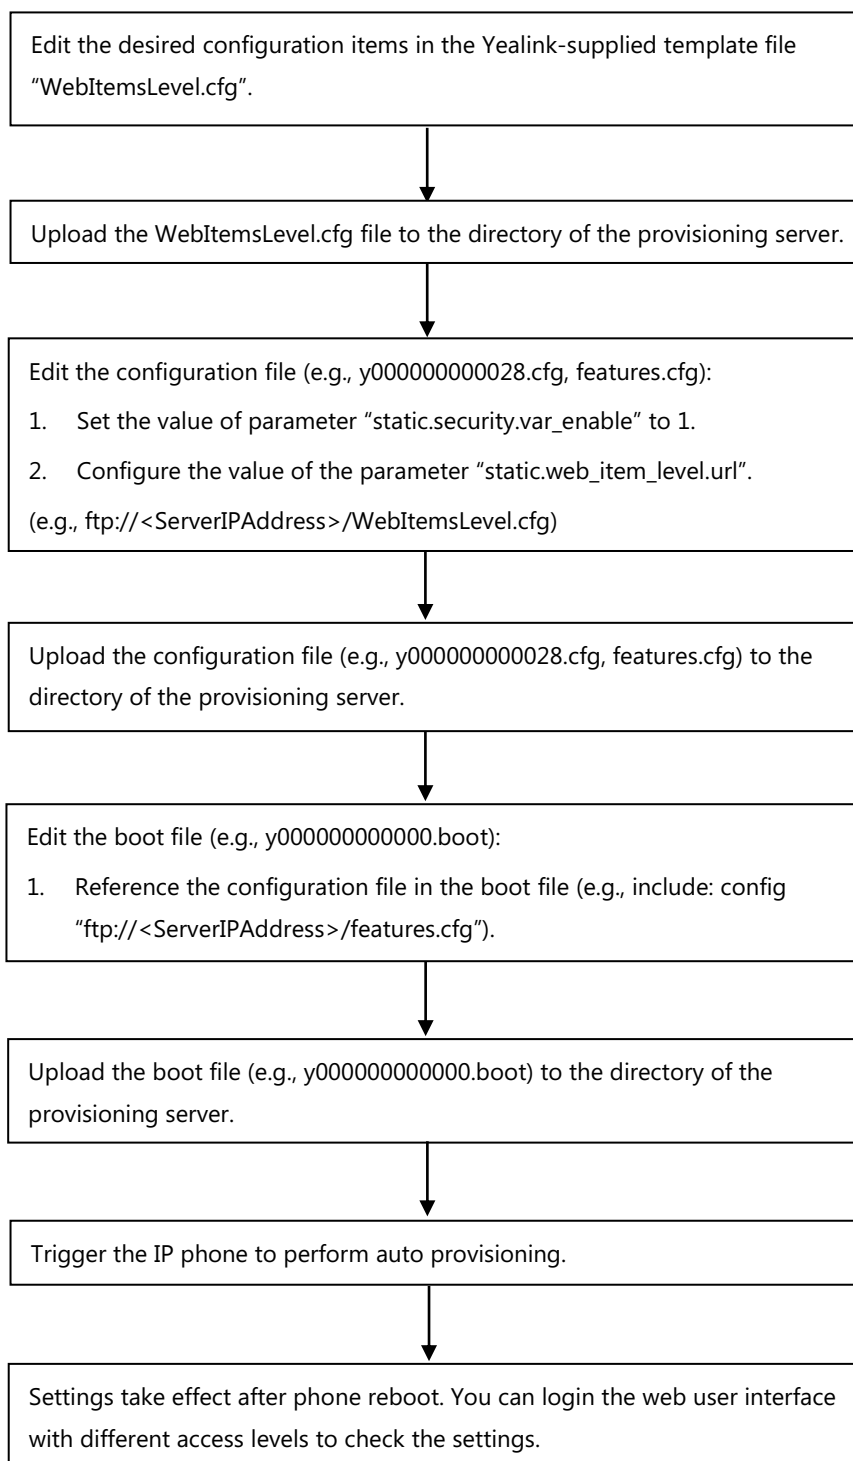
| Results<br>Values of X <sub>1</sub> X <sub>2</sub> | admin (2) | var (1) | user (0) |
|--|-----------|---------|----------|
| 0  | WR        | WR      | WR       |
| 1  | WR        | WR      | N        |
| 2  | WR        | N       | N        |
| 3  | N         | N       | N        |
| 00   | WR        | WR      | WR       |
| 01   | WR        | WR      | R        |
| 02   | WR        | R       | R        |
| 03   | R         | R       | R        |
| 10   | WR        | WR      | N        |
| 11   | WR        | R       | N        |
| 12   | WR        | R       | N        |
| 13   | R         | R       | N        |
| 20   | WR        | N       | N        |

| <b>Results</b><br><b>Values of <math>X_1X_2</math></b> | <b>admin (2)</b> | <b>var (1)</b> | <b>user (0)</b> |
|--|------------------|----------------|-----------------|
| 21   | WR               | N              | N               |
| 22   | WR               | N              | N               |
| 23   | R                | N              | N               |
| 30/31/32/33  | N                | N              | N               |

## Application

This section will introduce procedures to configure access permission of the web user interface in detail. The flow chart of configuring user access level is shown as below:

**Note:** The boot file is only applicable to the IP phones running new firmware version (new auto provisioning mechanism). The parameter varies from firmware version to firmware version (refer to [Configuring Yealink IP Phones](#)).



## Customizing WebItemsLevel.cfg

You can ask Yealink Field Application Engineer for the template file "WebItemsLevel.cfg", or you can download it online:

<http://support.yealink.com/documentFront/forwardToDocumentFrontDisplayPage>.

We recommend you only edit the desired configuration items in the supplied "WebItemsLevel.cfg" file, and keep other configuration items constant.

WebItemsLevel.cfg downloaded via auto provisioning will override that in the phone flash. Access level of any configuration item missed (including configuration value left blank) in the downloaded WebItemsLevel.cfg file will be changed to user by default.

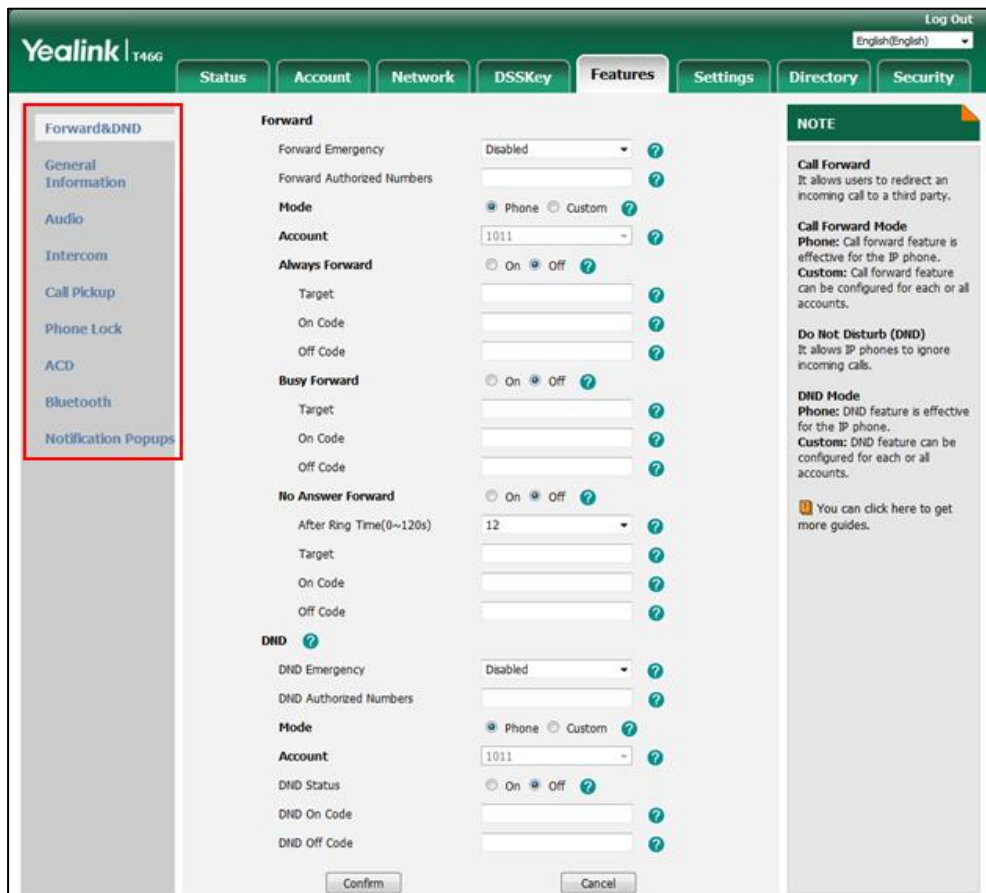
## Web User Interface

The following shows configuration segments for the web user interface in the WebItemsLevel.cfg file for reference:

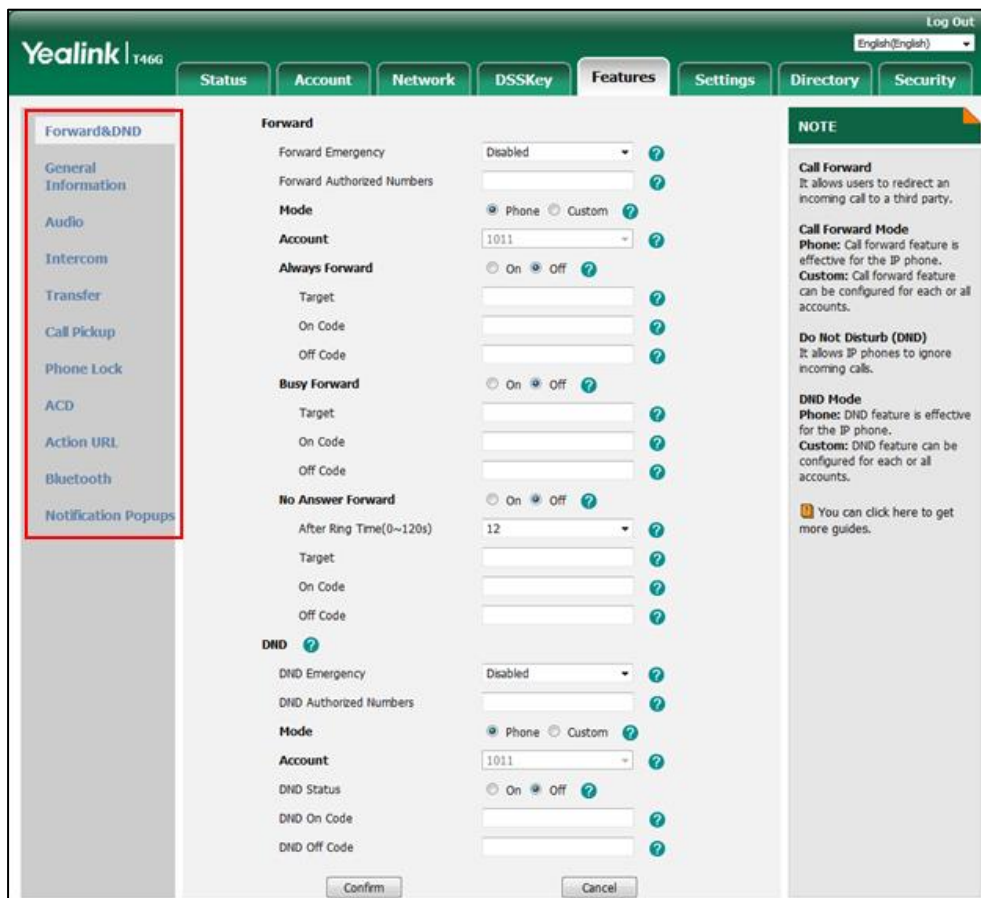
**Sample 1:** Configuration items in the WebItemsLevel.cfg for navigation bar settings of the Features page:

```
[ Features ]
features-forward = 0
features-general = 0
features-audio = 0
features-intercom = 0
features-transfer = 1
features-callpickup = 0
features-remote = 2
features-phonelock = 0
features-acd = 0
features-sms = 2
features-actionurl = 1
features-bluetooth = 0
features-powered = 2
features-notifypop = 0
```

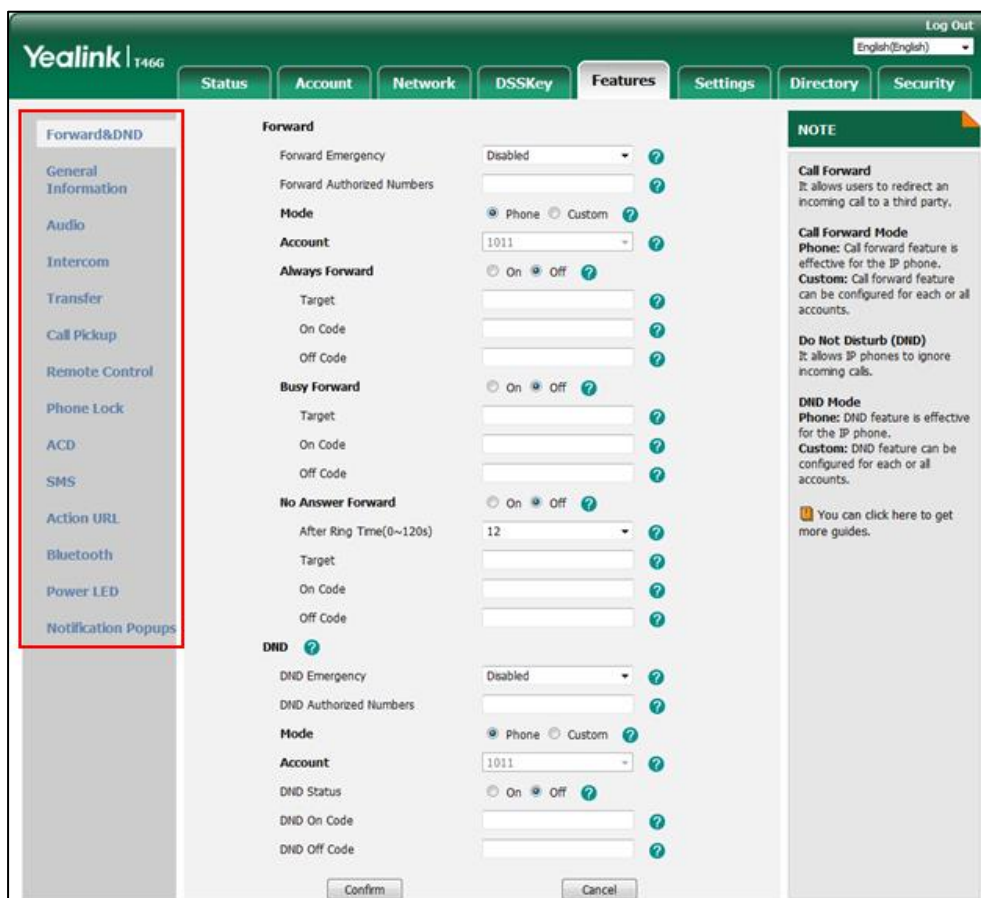
According to the above configuration of access level, when logging in the web user interface with user access level, the web user interface displays as below:



When logging in the web user interface with var access level, the web user interface displays as below:



When logging in the web user interface with admin access level, the web user interface displays as below:



**Note:** Configuration items for navigation bar are not writable on both web user interface and phone user interface. So, configuration items for navigation bar can be configured only using the format "ItemName = X".

If the access permission of the first navigation configuration item for each main page is restricted, the access to the main web page will be denied.

The following table lists the first navigation configuration items for each main page:

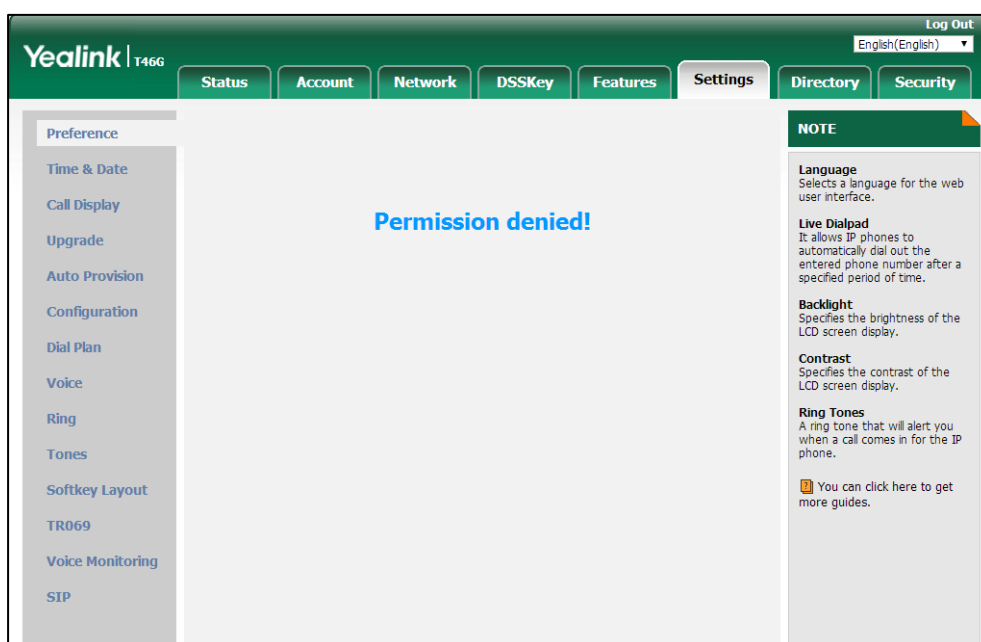
| Main Page                                      | First Navigation Item  | Configuration Item |
|--|--|--------------------|
| Account  | Register   | account-register   |
| Network  | Basic  | network-basic      |
| DSSKey/Dsskey<br>(not applicable to W52P/W56P) | Line Key 1-6 (for CP960),<br>Line Key 1-10 (for SIP-T58V/T58A/T56A),<br>Line Key 1-11 (for SIP VP-T49G/SIP-T48G/T48S),<br>Line Key 1-9 (for SIP-T54S/T46G/T46S/T29G),<br>Line Key 1-7 (for | linekey            |



| Main Page | First Navigation Item   | Configuration Item  |
|-----------|---|---------------------|
|           | SIP-T52S/T27P/T27G),<br>Line Key 1-5 (for<br>SIP-T42G/T42S/T41P/T41S),<br>Line Key (for<br>SIP-T40P/T40G/T23P/T23G),<br>Line Key (for SIP-T21(P) E2),<br>Programable key (for SIP-T19(P)<br>E2/CP860) |                     |
| Features  | Forward&DND   | features-forward    |
| Settings  | Preference  | settings-preference |
| Directory | Local Directory   | contacts-basic      |
| Security  | Password  | password            |

For example, set the value of the configuration item “settings-preference” to be 1.

When logging into with user access level, the access to the Settings web page will be denied.



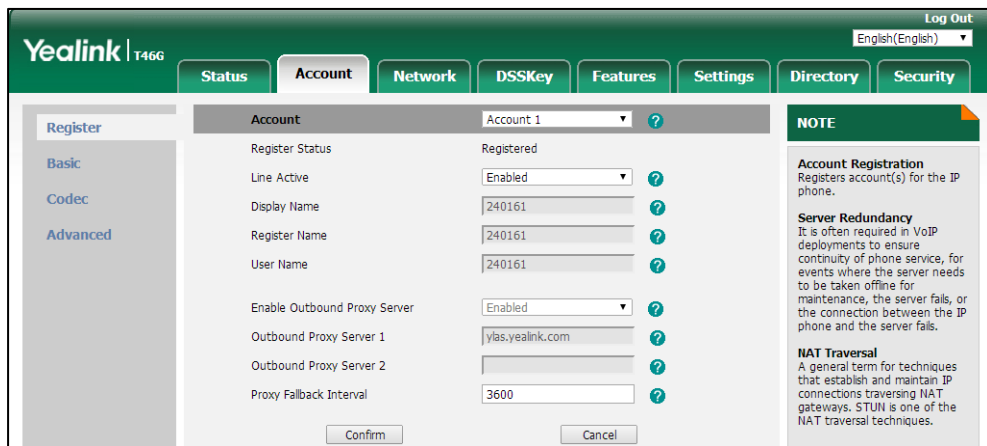
**Sample2:** Configuration items in the WebItemsLevel.cfg for the Register settings of Account page:

```
[ Account-Register ]
switch-account = 0
account_status = 0
line_active = 0
account_label = 11
display_name = 01
register_name = 03
user_name = 01
```

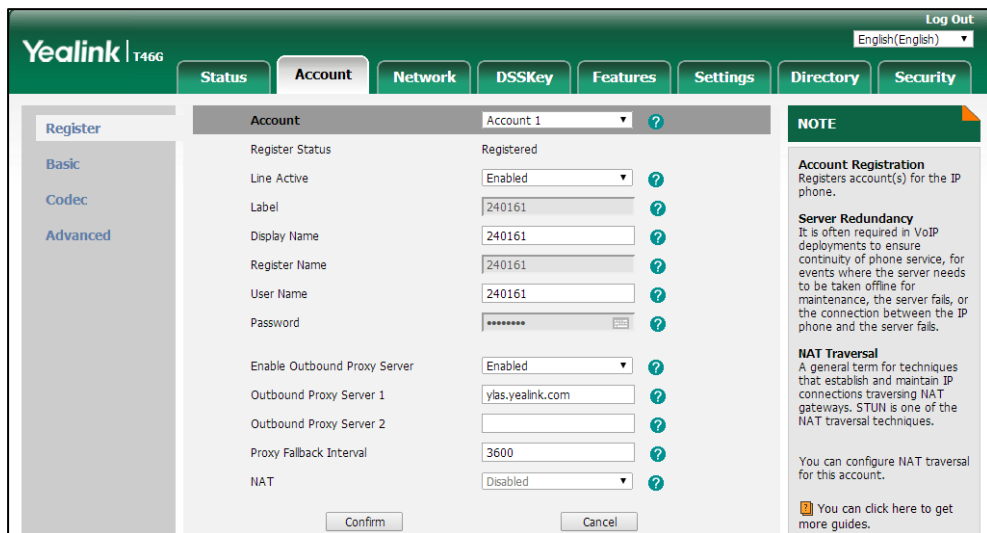
```

account_password = 12
enabled-outbound-proxy-server = 01
outbound-proxy-server = 01
backup-outbound-proxy-server = 01
NAT_traversal = 12
sip_server = 2
sip_server2 = 2
outbound-proxy-server-port = 2
backup-outbound-proxy-server-port = 2
    
```

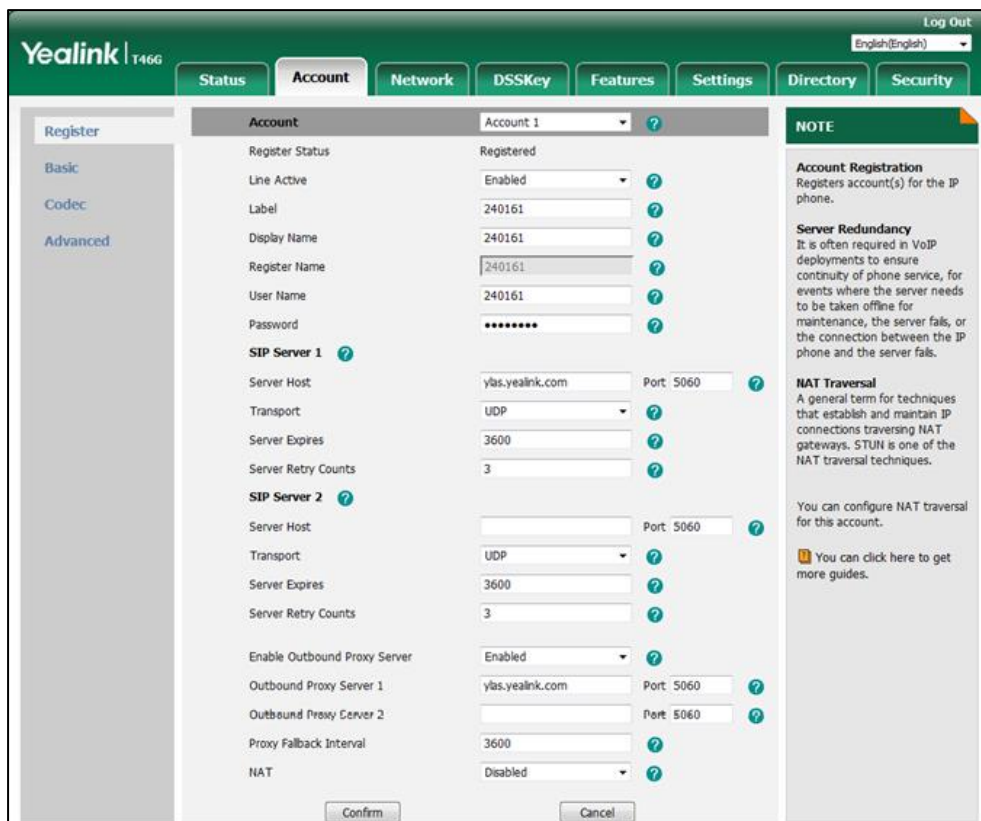
According to the above configuration of access level, when logging in the web user interface with user access level, the web user interface displays as below:



When logging in the web user interface with var access level, the web user interface displays as below:



When logging in the web user interface with admin access level, the web user interface displays as below:



For more information on parameters of the WebItemsLevel.cfg file, refer to [Appendix-A: Configuration Parameters](#) on page 23.

## Phone/Handset User Interface

**For SIP-T58V/T58A/T56A/T54S/T52S/SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2, CP860 and CP960 IP phones:**

**The following shows configuration segments for the phone user interface in the WebItemsLevel.cfg file for reference:**

If you set the access permission of the high level, it will have an impact on that of the low level. In the following examples, the call forward menu has a higher level than always forward/busy forward/no answer forward submenu.

**Example1:** Configuration items in the WebItemsLevel.cfg for call forward menu and its submenu settings:

```
[ GUI ]
callcontrol_forward = 02
always-forward = 10
busy-forward = 00
NoAnswer-forward = 00
```

**Note:** The configuration of busy forward is the same as the one of the no answer forward, so the following figures take busy forward as an example.

According to the above configuration of access level, when logging in to the phone user interface with user access level, the access permission of each submenu is displayed as below:

Always forward submenu is hidden for user access level:



Busy forward/no answer forward submenu is read-only for user access level:



When logging in to the phone user interface with var access level, the access permission of each submenu is displayed as below:

Always forward submenu is read-only for var access level:



Busy forward/no answer forward submenu is read-only for var access level:



When logging in to the phone user interface with admin access level, the phone user interface displays as below:

Always forward submenu is writable for admin access level:



Busy forward/no answer forward submenu is writable for admin access level:



**Example2:** Configuration items in the WebItemsLevel.cfg for call forward menu and its submenu settings:

```
[ GUI ]
callcontrol_forward = 00
always-forward = 01
busy-forward = 02
NoAnswer-forward = 00
```

According to the above configuration of access level, when logging in to the phone user interface with user access level, the access permission of each submenu is displayed as below:

Always forward submenu is read-only for user access level:



Busy forward submenu is read-only for user access level:



No answer forward submenu is writable for user access level:

The screenshot shows a configuration window titled "No Answer Forward". It has a list of settings:
 

- 1. No Answer Forward: Disabled (with a toggle switch)
- 2. Forward to:
- 3. After Ring Time: 12s (with a toggle switch)
- 4. On Code:
- 5. Off Code:

 At the bottom, there are four buttons: "Back", "Switch", and "Save".

When logging in to the phone user interface with var access level, the access permission of each submenu is displayed as below:

Always forward submenu is writable for var access level:

The screenshot shows a configuration window titled "Always Forward". It has a list of settings:
 

- 1. Always Forward: Disabled (with a toggle switch)
- 2. Forward to:
- 3. On Code:
- 4. Off Code:

 At the bottom, there are four buttons: "Back", "Switch", and "Save".

Busy forward submenu is read-only for var access level:

The screenshot shows a configuration window titled "Busy Forward". It has a list of settings:
 

- 1. Busy Forward: Disabled (with a toggle switch)
- 2. Forward to:
- 3. On Code:
- 4. Off Code:

 At the bottom, there are four buttons: "Back", "Switch", and "Save".

No answer forward submenu is writable for var access level:

No Answer Forward

1. No Answer Forward: Disabled

2. Forward to:

3. After Ring Time: 12s

4. On Code:

5. Off Code:

Back Switch Save

When logging in to the phone user interface with admin access level, the phone user interface displays as below:

Always forward submenu is writable for admin access level:

Always Forward

1. Always Forward: Disabled

2. Forward to:

3. On Code:

4. Off Code:

Back Switch Save

Busy forward submenu is writable for admin access level:

Busy Forward

1. Busy Forward: Disabled

2. Forward to:

3. On Code:

4. Off Code:

Back Switch Save



No answer forward submenu is writable for admin access level:

**For W52P/W56P IP DECT phones:**

The following shows configuration segments for the handset user interface in the WebItemsLevel.cfg file for reference:

If you set the access permission of the high level, it will have an impact on that of the low level. In the following examples, the Settings menu has a higher level than other submenus.

**Example:** Configuration items in the WebItemsLevel.cfg for Telephony submenu settings:

```
[ GUI ]
Auto_Answer = 01
Auto_Intercom = 02
Default_Line = 03
Incoming_Lines = 02
Speed_Dial = 0
Blacklist = 1
```

According to the above configuration of access level:

For user access level, the Blacklist submenu is hidden. The Auto Answer, Auto Intercom, Default Line and Incoming Lines submenus are read-only. Only the Speed Dial submenu is writable.

For var access level, the Auto Intercom, Default Line and Incoming Lines submenus are read-only. The Auto Answer, Speed Dial and Blacklist submenus are writable.

For admin access level, only the Default Line submenu is read-only, the others are writable.

For more information on parameters of the WebItemsLevel.cfg file, refer to [Appendix-A: Configuration Parameters](#) on page 23.

## Configuring Yealink IP Phones

User access level feature is disabled for Yealink SIP-T58V/T58A/T56A/T54S/T52S/SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2, CP860, CP960, W52P and W56P IP phones in neutral firmware version by default. Before using this feature, you need to enable it through auto provisioning introduced as following. User access level feature is configurable only via configuration files.

### For SIP VP-T49G:

**To configure user access level feature for Yealink IP phones:**

1. Edit the following parameters in the configuration file (e.g., y000000000051.cfg).

| Parameters  | Permitted Values | Default  |
|---|------------------|----------|
| <b>security.var_enable</b>  | <b>0 or 1</b>    | <b>0</b> |
| <p><b>Description:</b><br/>This parameter is used to enable or disable the login of the web/phone/handset user interface with different access levels.</p> <p><b>0</b>-Disabled<br/><b>1</b>-Enabled</p> <p><b>Note:</b> It takes effect after reboot.</p> <p><b>Web User Interface:</b><br/>None</p> <p><b>Phone User Interface:</b><br/>None</p>                            |                  |          |
| <b>security.default_access_level</b>  | <b>0, 1 or 2</b> | <b>0</b> |
| <p><b>Description:</b><br/>This parameter is used to configure the default access level to access the phone/handset user interface.</p> <p><b>0</b>-user<br/><b>1</b>-var<br/><b>2</b>-admin</p> <p><b>Note:</b> It works only if the value of the parameter "security.var_enable" is set to 1 (Enabled). It takes effect after reboot.</p> <p><b>Web User Interface:</b></p> |                  |          |

| Parameters   | Permitted Values                             | Default      |
|--|--|--------------|
| None<br><b>Phone User Interface:</b><br>None   |  |              |
| <b>web_item_level.url</b>  | <b>FTP, TFTP, HTTP or HTTPS download URL</b> | <b>Blank</b> |
| <p><b>Description:</b><br/>This parameter is used to configure the access URL of the WebItemsLevel.cfg file.</p> <p><b>Note:</b> It takes effect after reboot.</p> <p><b>Web User Interface:</b><br/>None</p> <p><b>Phone User Interface:</b><br/>None</p> |  |              |

The parameter settings in the configuration file for reference are shown as below:

security.var\_enable = 1

web\_item\_level.url = ftp://192.168.1.100/WebItemsLevel.cfg

security.default\_access\_level = 1

2. Upload the configuration file to the directory of the provisioning server.
3. Configure the access URL of the provisioning server for the IP phone.
4. Trigger the IP phone to perform auto provisioning.

For more information on auto provisioning Yealink IP phones, refer to [Yealink SIP-T2 Series T19\(P\) E2 T4 Series CP860 W56P IP Phones Auto Provisioning Guide](#).

For

SIP-T58V/T58A/T56A/T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP960/W52P/W56P:

**To configure user access level feature for Yealink IP phones:**

1. Edit the following parameters in the configuration file (e.g., features.cfg).

| Parameters  | Permitted Values | Default  |
|---|------------------|----------|
| <b>static.security.var_enable</b>   | <b>0 or 1</b>    | <b>0</b> |
| <p><b>Description:</b><br/>                     This parameter is used to enable or disable the login of the web/phone user interface with different access levels.<br/> <b>0</b>-Disabled<br/> <b>1</b>-Enabled<br/> <b>Note:</b> It takes effect after reboot.<br/> <b>Web User Interface:</b><br/>                     None<br/> <b>Phone User Interface:</b><br/>                     None</p>  |                  |          |
| <b>static.security.default_access_level</b>   | <b>0, 1 or 2</b> | <b>0</b> |
| <p><b>Description:</b><br/>                     This parameter is used to configure the default access level to access the phone user interface.<br/> <b>0</b>-user<br/> <b>1</b>-var<br/> <b>2</b>-admin<br/> <b>Note:</b> It works only if the value of the parameter "static.security.var_enable" is set to 1 (Enabled). It takes effect after reboot.<br/> <b>Web User Interface:</b><br/>                     None<br/> <b>Phone User Interface:</b><br/>                     None</p> |                  |          |

| Parameters   | Permitted Values                             | Default      |
|--|--|--------------|
| <b>static.web_item_level.url</b>   | <b>FTP, TFTP, HTTP or HTTPS download URL</b> | <b>Blank</b> |
| <p><b>Description:</b><br/>This parameter is used to configure the access URL of the WebItemsLevel.cfg file.</p> <p><b>Note:</b> It takes effect after reboot.</p> <p><b>Web User Interface:</b><br/>None</p> <p><b>Phone User Interface:</b><br/>None</p> |  |              |

The parameter settings in the configuration file for reference are shown as below:

```
static.security.var_enable = 1
```

```
static.web_item_level.url = ftp://192.168.1.100/WebItemsLevel.cfg
```

```
static.security.default_access_level = 1
```

- Upload the configuration file to the directory of the provisioning server.
- Reference the configuration file in the boot file (e.g., y000000000000.boot).  
include:config "ftp://192.168.1.100/features.cfg"
- Upload the boot file to the directory of the provisioning server.
- Configure the access URL of the provisioning server for the IP phone.
- Trigger the IP phone to perform auto provisioning.

The boot file is only applicable to IP phones running new firmware version (new auto provisioning mechanism). For more information on auto provisioning Yealink IP phones, refer to

[Yealink SIP-T2 Series\\_T19\(P\)](#)

[E2\\_T4\\_Series\\_T5\\_Series\\_W5\\_Series\\_CP860\\_IP\\_Phones\\_Auto\\_Provisioning\\_Guide\\_V81.](#)

## Logging the Web/Phone/Handset User Interface with Different Access Levels

When the user access level is enabled, you can login the web/phone/handset user interface with different access levels.

### To login the web user interface with different access levels:

- Press the **OK/√** key when the phone is idle to obtain the IP address.  
For W56P, press the **OK->Status->Base** to obtain the IP address.
- Enter the IP address (e.g., http://192.168.0.10 or 192.168.0.10) in the address bar of web browser on your PC and then press the **Enter** key.

3. Enter the user name (admin/var/user) and password (admin/var/user) in the login page.
4. Click **Confirm** to login.

When logging in with different access levels, you can see different permissions of web user interface.

**To login the phone user interface with different access levels:**

1. Press **Menu->UserMode**.
2. Press ◀ or ▶, or the **Switch** soft key to select the desired access level in the **User Type** field.
3. Enter the password in the **Password** field.



4. Press the **Save** soft key to accept the change.

You can see different permissions of phone user interface when logging in with different access levels.

**To login the handset user interface with different access levels:**




1. Press **OK->User Mode**.
2. Press ◀ or ▶ to select the desired access level in the **User Type** field.
3. Enter the password in the **Password** field.
4. Press the **Save** soft key to accept the change.

You can see different permissions of handset user interface when logging in with different access levels.

## Appendix-A : Configuration Parameters

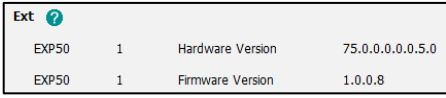
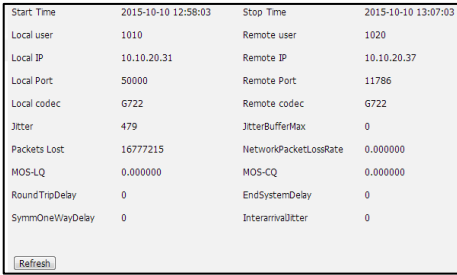
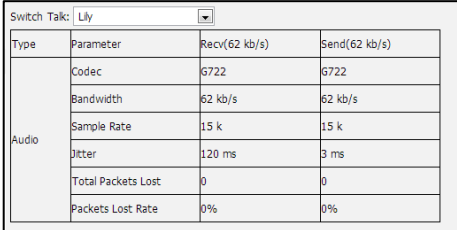
### Configuration Parameters of Web User Interface

The following table lists configuration items in the WebItemsLevel.cfg file with associated configurations on the web user interface (take SIP-T46G IP phones as an example for reference):


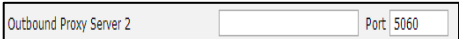
| Section Header  | Parameters and Default Value   | Configuration Items on the Web User Interface  |
|-----------------|--|--|
| [ Status-Menu ] | Status-Basic = 0   | Status->Status (the whole page)  |
|                 | Status-RTP = 0   | Status->RTP Status (the whole page)  |
|                 | Status-VoIP = 0<br>(only applicable to W52P/W56P IP DECT phones)                             | Status->Handset&VoIP   |
|                 | Status-TalkStats = 0<br>(only applicable to SIP-T58V/T58A/T56 A/SIP VP-T49G/CP960 IP phones) | Status->Talk Statistics (the whole page)   |
| [ Status ]      | version = 0  | Status->Version<br>            |
|                 | DeviceCertificate = 0<br>(not applicable to SIP-T58V/T58A/T56 A/SIP VP-T49G/CP960 IP phones) | Status->Device Certificate<br> |
|                 | network = 0  | Status->Network<br>            |
|                 | IPv4 = 0   | Status->IPv4   |

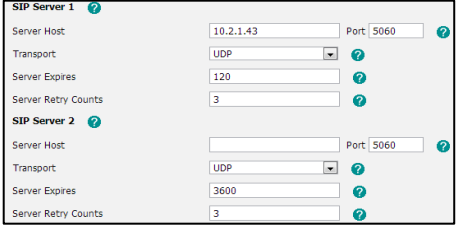
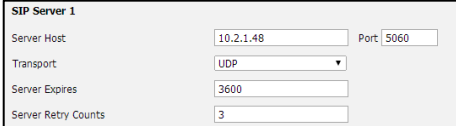
| Section Header  | Parameters and Default Value   | Configuration Items on the Web User Interface  |                              |                  |                                  |                 |                 |                  |          |               |              |                  |               |               |   |                  |          |
|---|--|--|------------------------------|------------------|----------------------------------|-----------------|-----------------|------------------|----------|---------------|--------------|------------------|---------------|---------------|---|------------------|----------|
| [ Status ]  |  | <p><b>IPv4</b> ?</p> <table border="1"> <tr><td>WAN Port Type</td><td>DHCP</td></tr> <tr><td>WAN IP Address</td><td>10.3.6.205</td></tr> <tr><td>Subnet Mask</td><td>255.255.255.0</td></tr> <tr><td>Gateway</td><td>10.3.6.254</td></tr> <tr><td>Primary DNS</td><td>192.168.1.167</td></tr> <tr><td>Secondary DNS</td><td>192.168.1.166</td></tr> </table> | WAN Port Type                | DHCP             | WAN IP Address                   | 10.3.6.205      | Subnet Mask     | 255.255.255.0    | Gateway  | 10.3.6.254    | Primary DNS  | 192.168.1.167    | Secondary DNS | 192.168.1.166 |   |                  |          |
|   | WAN Port Type  | DHCP   |                              |                  |                                  |                 |                 |                  |          |               |              |                  |               |               |   |                  |          |
|   | WAN IP Address   | 10.3.6.205   |                              |                  |                                  |                 |                 |                  |          |               |              |                  |               |               |   |                  |          |
|   | Subnet Mask  | 255.255.255.0  |                              |                  |                                  |                 |                 |                  |          |               |              |                  |               |               |   |                  |          |
|   | Gateway  | 10.3.6.254   |                              |                  |                                  |                 |                 |                  |          |               |              |                  |               |               |   |                  |          |
| Primary DNS   | 192.168.1.167  |  |                              |                  |                                  |                 |                 |                  |          |               |              |                  |               |               |   |                  |          |
| Secondary DNS   | 192.168.1.166  |  |                              |                  |                                  |                 |                 |                  |          |               |              |                  |               |               |   |                  |          |
| IPv6 = 0  | <p>Status-&gt;IPv6</p> <p><b>IPv6</b> ?</p> <table border="1"> <tr><td>WAN Port Type</td><td>DHCP</td></tr> <tr><td>WAN IP Address</td><td>2006:1:1:1:215:65ff:fe45:6e47/64</td></tr> <tr><td>Gateway</td><td>2006:1:1:1::/64</td></tr> <tr><td>Primary DNS</td><td>::</td></tr> <tr><td>Secondary DNS</td><td>::</td></tr> </table>   | WAN Port Type  | DHCP                         | WAN IP Address   | 2006:1:1:1:215:65ff:fe45:6e47/64 | Gateway         | 2006:1:1:1::/64 | Primary DNS      | ::       | Secondary DNS | ::           |                  |               |               |   |                  |          |
| WAN Port Type   | DHCP   |  |                              |                  |                                  |                 |                 |                  |          |               |              |                  |               |               |   |                  |          |
| WAN IP Address  | 2006:1:1:1:215:65ff:fe45:6e47/64   |  |                              |                  |                                  |                 |                 |                  |          |               |              |                  |               |               |   |                  |          |
| Gateway   | 2006:1:1:1::/64  |  |                              |                  |                                  |                 |                 |                  |          |               |              |                  |               |               |   |                  |          |
| Primary DNS   | ::   |  |                              |                  |                                  |                 |                 |                  |          |               |              |                  |               |               |   |                  |          |
| Secondary DNS   | ::   |  |                              |                  |                                  |                 |                 |                  |          |               |              |                  |               |               |   |                  |          |
| NetworkCommon = 0   | <p>Status-&gt;Network Common</p> <p><b>Network Common</b> ?</p> <table border="1"> <tr><td>MAC Address</td><td>0015654146DD</td></tr> <tr><td>WAN Prot. Status</td><td>100Mbps Full Duplex</td></tr> <tr><td>PC Port. Status</td><td>Link Down</td></tr> <tr><td>Device Type</td><td>Router</td></tr> <tr><td>Uptime</td><td>0 days 21:35</td></tr> </table>   | MAC Address  | 0015654146DD                 | WAN Prot. Status | 100Mbps Full Duplex              | PC Port. Status | Link Down       | Device Type      | Router   | Uptime        | 0 days 21:35 |                  |               |               |   |                  |          |
| MAC Address   | 0015654146DD   |  |                              |                  |                                  |                 |                 |                  |          |               |              |                  |               |               |   |                  |          |
| WAN Prot. Status  | 100Mbps Full Duplex  |  |                              |                  |                                  |                 |                 |                  |          |               |              |                  |               |               |   |                  |          |
| PC Port. Status   | Link Down  |  |                              |                  |                                  |                 |                 |                  |          |               |              |                  |               |               |   |                  |          |
| Device Type   | Router   |  |                              |                  |                                  |                 |                 |                  |          |               |              |                  |               |               |   |                  |          |
| Uptime  | 0 days 21:35   |  |                              |                  |                                  |                 |                 |                  |          |               |              |                  |               |               |   |                  |          |
| AccountStatus = 0<br>(not applicable to W52P/W56P IP DECT phones)   | <p>Status-&gt;Account Status</p> <p><b>Account Status</b> ?</p> <table border="1"> <tr><td>Account1</td><td>1010@10.2.1.199 : Registered</td></tr> <tr><td>Account2</td><td>Disabled</td></tr> <tr><td>Account3</td><td>Disabled</td></tr> <tr><td>Account4</td><td>Disabled</td></tr> <tr><td>Account5</td><td>Disabled</td></tr> <tr><td>Account6</td><td>Disabled</td></tr> </table>  | Account1   | 1010@10.2.1.199 : Registered | Account2         | Disabled                         | Account3        | Disabled        | Account4         | Disabled | Account5      | Disabled     | Account6         | Disabled      |               |   |                  |          |
| Account1  | 1010@10.2.1.199 : Registered   |  |                              |                  |                                  |                 |                 |                  |          |               |              |                  |               |               |   |                  |          |
| Account2  | Disabled   |  |                              |                  |                                  |                 |                 |                  |          |               |              |                  |               |               |   |                  |          |
| Account3  | Disabled   |  |                              |                  |                                  |                 |                 |                  |          |               |              |                  |               |               |   |                  |          |
| Account4  | Disabled   |  |                              |                  |                                  |                 |                 |                  |          |               |              |                  |               |               |   |                  |          |
| Account5  | Disabled   |  |                              |                  |                                  |                 |                 |                  |          |               |              |                  |               |               |   |                  |          |
| Account6  | Disabled   |  |                              |                  |                                  |                 |                 |                  |          |               |              |                  |               |               |   |                  |          |
| Ext = 0<br>(only applicable to SIP-T58V/T58A/T56A/T54S/T52S/T48G/T48S/T46G/T46S/T29G/T27P/T27G IP phones) | <p>Status-&gt;Ext</p> <p>For SIP-T29G and SIP-T27P/G:</p> <p><b>Ext</b> ?</p> <table border="1"> <tr><td>EXP20</td><td>1</td><td>Hardware Version</td><td>32.1.0.0</td></tr> <tr><td>EXP20</td><td>1</td><td>Firmware Version</td><td>9.16.0.0</td></tr> </table> <p>For SIP-T48G/S and SIP-T46G/S:</p> <p><b>Ext</b> ?</p> <table border="1"> <tr><td>EXP40</td><td>1</td><td>Hardware Version</td><td>66.0.0.0</td></tr> <tr><td>EXP40</td><td>1</td><td>Firmware Version</td><td>6.16.0.0</td></tr> </table> <p>For SIP-T58V/T58A/T56A/T54S/T52S:</p> | EXP20  | 1                            | Hardware Version | 32.1.0.0                         | EXP20           | 1               | Firmware Version | 9.16.0.0 | EXP40         | 1            | Hardware Version | 66.0.0.0      | EXP40         | 1 | Firmware Version | 6.16.0.0 |
| EXP20   | 1  | Hardware Version   | 32.1.0.0                     |                  |                                  |                 |                 |                  |          |               |              |                  |               |               |   |                  |          |
| EXP20   | 1  | Firmware Version   | 9.16.0.0                     |                  |                                  |                 |                 |                  |          |               |              |                  |               |               |   |                  |          |
| EXP40   | 1  | Hardware Version   | 66.0.0.0                     |                  |                                  |                 |                 |                  |          |               |              |                  |               |               |   |                  |          |
| EXP40   | 1  | Firmware Version   | 6.16.0.0                     |                  |                                  |                 |                 |                  |          |               |              |                  |               |               |   |                  |          |

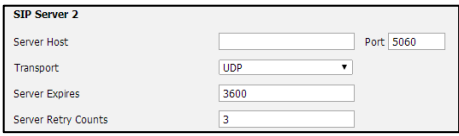


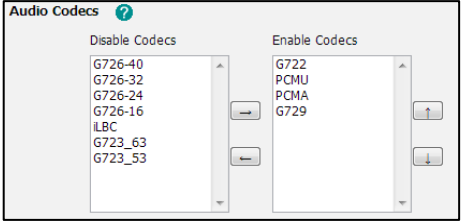
| Section Header  | Parameters and Default Value                 | Configuration Items on the Web User Interface   |                                    |                     |                  |                     |            |       |                  |         |           |             |           |             |            |       |             |        |             |                    |              |      |                   |     |                 |   |              |         |                       |          |        |          |        |          |                |   |                |   |                 |   |                    |   |
|---|--|---|------------------------------------|---------------------|------------------|---------------------|------------|-------|------------------|---------|-----------|-------------|-----------|-------------|------------|-------|-------------|--------|-------------|--------------------|--------------|------|-------------------|-----|-----------------|---|--------------|---------|-----------------------|----------|--------|----------|--------|----------|----------------|---|----------------|---|-----------------|---|--------------------|---|
|   |  |  <table border="1"> <thead> <tr> <th>Ext</th> <th>EXP50</th> <th>Hardware Version</th> <th>75.0.0.0.0.0.5.0</th> </tr> </thead> <tbody> <tr> <td></td> <td>1</td> <td>Firmware Version</td> <td>1.0.0.8</td> </tr> </tbody> </table>  | Ext                                | EXP50               | Hardware Version | 75.0.0.0.0.0.5.0    |            | 1     | Firmware Version | 1.0.0.8 |           |             |           |             |            |       |             |        |             |                    |              |      |                   |     |                 |   |              |         |                       |          |        |          |        |          |                |   |                |   |                 |   |                    |   |
| Ext   | EXP50  | Hardware Version  | 75.0.0.0.0.0.5.0                   |                     |                  |                     |            |       |                  |         |           |             |           |             |            |       |             |        |             |                    |              |      |                   |     |                 |   |              |         |                       |          |        |          |        |          |                |   |                |   |                 |   |                    |   |
|   | 1  | Firmware Version  | 1.0.0.8                            |                     |                  |                     |            |       |                  |         |           |             |           |             |            |       |             |        |             |                    |              |      |                   |     |                 |   |              |         |                       |          |        |          |        |          |                |   |                |   |                 |   |                    |   |
| <p>[ Status-VoIP ]<br/>(only applicable to W56P IP DECT phones)</p>                           | registered-handset = 0                       | Status->Registered Handsets   |                                    |                     |                  |                     |            |       |                  |         |           |             |           |             |            |       |             |        |             |                    |              |      |                   |     |                 |   |              |         |                       |          |        |          |        |          |                |   |                |   |                 |   |                    |   |
|   | registered-new-handset = 0                   | Status->Register New Handsets   |                                    |                     |                  |                     |            |       |                  |         |           |             |           |             |            |       |             |        |             |                    |              |      |                   |     |                 |   |              |         |                       |          |        |          |        |          |                |   |                |   |                 |   |                    |   |
|   | voip-status = 0                              | Status->Paging Status   |                                    |                     |                  |                     |            |       |                  |         |           |             |           |             |            |       |             |        |             |                    |              |      |                   |     |                 |   |              |         |                       |          |        |          |        |          |                |   |                |   |                 |   |                    |   |
|   | Paging = 0                                   | Status->VoIP Status   |                                    |                     |                  |                     |            |       |                  |         |           |             |           |             |            |       |             |        |             |                    |              |      |                   |     |                 |   |              |         |                       |          |        |          |        |          |                |   |                |   |                 |   |                    |   |
| <p>[ RTP-Status ]<br/>(only applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/CP960 IP phones)</p> | rtcp-status = 11<br>(12 for CP960 IP phones) | <p>Status-&gt;RTP Status</p>  <table border="1"> <thead> <tr> <th>Start Time</th> <td>2015-10-10 12:58:03</td> <th>Stop Time</th> <td>2015-10-10 13:07:03</td> </tr> </thead> <tbody> <tr> <td>Local user</td> <td>1010</td> <td>Remote user</td> <td>1020</td> </tr> <tr> <td>Local IP</td> <td>10.10.20.31</td> <td>Remote IP</td> <td>10.10.20.37</td> </tr> <tr> <td>Local Port</td> <td>50000</td> <td>Remote Port</td> <td>11786</td> </tr> <tr> <td>Local codec</td> <td>G722</td> <td>Remote codec</td> <td>G722</td> </tr> <tr> <td>Jitter</td> <td>479</td> <td>JitterBufferMax</td> <td>0</td> </tr> <tr> <td>Packets Lost</td> <td>1677215</td> <td>NetworkPacketLossRate</td> <td>0.000000</td> </tr> <tr> <td>MOS-LQ</td> <td>0.000000</td> <td>MOS-CQ</td> <td>0.000000</td> </tr> <tr> <td>RoundTripDelay</td> <td>0</td> <td>EndSystemDelay</td> <td>0</td> </tr> <tr> <td>SymmOneWayDelay</td> <td>0</td> <td>InterarrivalJitter</td> <td>0</td> </tr> </tbody> </table> | Start Time                         | 2015-10-10 12:58:03 | Stop Time        | 2015-10-10 13:07:03 | Local user | 1010  | Remote user      | 1020    | Local IP  | 10.10.20.31 | Remote IP | 10.10.20.37 | Local Port | 50000 | Remote Port | 11786  | Local codec | G722               | Remote codec | G722 | Jitter            | 479 | JitterBufferMax | 0 | Packets Lost | 1677215 | NetworkPacketLossRate | 0.000000 | MOS-LQ | 0.000000 | MOS-CQ | 0.000000 | RoundTripDelay | 0 | EndSystemDelay | 0 | SymmOneWayDelay | 0 | InterarrivalJitter | 0 |
| Start Time  | 2015-10-10 12:58:03                          | Stop Time   | 2015-10-10 13:07:03                |                     |                  |                     |            |       |                  |         |           |             |           |             |            |       |             |        |             |                    |              |      |                   |     |                 |   |              |         |                       |          |        |          |        |          |                |   |                |   |                 |   |                    |   |
| Local user  | 1010   | Remote user   | 1020                               |                     |                  |                     |            |       |                  |         |           |             |           |             |            |       |             |        |             |                    |              |      |                   |     |                 |   |              |         |                       |          |        |          |        |          |                |   |                |   |                 |   |                    |   |
| Local IP  | 10.10.20.31                                  | Remote IP   | 10.10.20.37                        |                     |                  |                     |            |       |                  |         |           |             |           |             |            |       |             |        |             |                    |              |      |                   |     |                 |   |              |         |                       |          |        |          |        |          |                |   |                |   |                 |   |                    |   |
| Local Port  | 50000  | Remote Port   | 11786                              |                     |                  |                     |            |       |                  |         |           |             |           |             |            |       |             |        |             |                    |              |      |                   |     |                 |   |              |         |                       |          |        |          |        |          |                |   |                |   |                 |   |                    |   |
| Local codec   | G722   | Remote codec  | G722                               |                     |                  |                     |            |       |                  |         |           |             |           |             |            |       |             |        |             |                    |              |      |                   |     |                 |   |              |         |                       |          |        |          |        |          |                |   |                |   |                 |   |                    |   |
| Jitter  | 479  | JitterBufferMax   | 0                                  |                     |                  |                     |            |       |                  |         |           |             |           |             |            |       |             |        |             |                    |              |      |                   |     |                 |   |              |         |                       |          |        |          |        |          |                |   |                |   |                 |   |                    |   |
| Packets Lost  | 1677215                                      | NetworkPacketLossRate   | 0.000000                           |                     |                  |                     |            |       |                  |         |           |             |           |             |            |       |             |        |             |                    |              |      |                   |     |                 |   |              |         |                       |          |        |          |        |          |                |   |                |   |                 |   |                    |   |
| MOS-LQ  | 0.000000                                     | MOS-CQ  | 0.000000                           |                     |                  |                     |            |       |                  |         |           |             |           |             |            |       |             |        |             |                    |              |      |                   |     |                 |   |              |         |                       |          |        |          |        |          |                |   |                |   |                 |   |                    |   |
| RoundTripDelay  | 0  | EndSystemDelay  | 0                                  |                     |                  |                     |            |       |                  |         |           |             |           |             |            |       |             |        |             |                    |              |      |                   |     |                 |   |              |         |                       |          |        |          |        |          |                |   |                |   |                 |   |                    |   |
| SymmOneWayDelay   | 0  | InterarrivalJitter  | 0                                  |                     |                  |                     |            |       |                  |         |           |             |           |             |            |       |             |        |             |                    |              |      |                   |     |                 |   |              |         |                       |          |        |          |        |          |                |   |                |   |                 |   |                    |   |
| <p>[ Talk-Stats ]<br/>(only applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/CP960 IP phones)</p> | talk-stats = 0<br>(12 for CP960 IP phones)   | <p>Status-&gt;Talk Statistics</p>  <table border="1"> <thead> <tr> <th>Type</th> <th>Parameter</th> <th>Recv(62 kb/s)</th> <th>Send(62 kb/s)</th> </tr> </thead> <tbody> <tr> <td rowspan="7">Audio</td> <td>Codec</td> <td>G722</td> <td>G722</td> </tr> <tr> <td>Bandwidth</td> <td>62 kb/s</td> <td>62 kb/s</td> </tr> <tr> <td>Sample Rate</td> <td>15 k</td> <td>15 k</td> </tr> <tr> <td>Jitter</td> <td>120 ms</td> <td>3 ms</td> </tr> <tr> <td>Total Packets Lost</td> <td>0</td> <td>0</td> </tr> <tr> <td>Packets Lost Rate</td> <td>0%</td> <td>0%</td> </tr> </tbody> </table>   | Type                               | Parameter           | Recv(62 kb/s)    | Send(62 kb/s)       | Audio      | Codec | G722             | G722    | Bandwidth | 62 kb/s     | 62 kb/s   | Sample Rate | 15 k       | 15 k  | Jitter      | 120 ms | 3 ms        | Total Packets Lost | 0            | 0    | Packets Lost Rate | 0%  | 0%              |   |              |         |                       |          |        |          |        |          |                |   |                |   |                 |   |                    |   |
| Type  | Parameter                                    | Recv(62 kb/s)   | Send(62 kb/s)                      |                     |                  |                     |            |       |                  |         |           |             |           |             |            |       |             |        |             |                    |              |      |                   |     |                 |   |              |         |                       |          |        |          |        |          |                |   |                |   |                 |   |                    |   |
| Audio   | Codec  | G722  | G722                               |                     |                  |                     |            |       |                  |         |           |             |           |             |            |       |             |        |             |                    |              |      |                   |     |                 |   |              |         |                       |          |        |          |        |          |                |   |                |   |                 |   |                    |   |
|   | Bandwidth                                    | 62 kb/s   | 62 kb/s                            |                     |                  |                     |            |       |                  |         |           |             |           |             |            |       |             |        |             |                    |              |      |                   |     |                 |   |              |         |                       |          |        |          |        |          |                |   |                |   |                 |   |                    |   |
|   | Sample Rate                                  | 15 k  | 15 k                               |                     |                  |                     |            |       |                  |         |           |             |           |             |            |       |             |        |             |                    |              |      |                   |     |                 |   |              |         |                       |          |        |          |        |          |                |   |                |   |                 |   |                    |   |
|   | Jitter                                       | 120 ms  | 3 ms                               |                     |                  |                     |            |       |                  |         |           |             |           |             |            |       |             |        |             |                    |              |      |                   |     |                 |   |              |         |                       |          |        |          |        |          |                |   |                |   |                 |   |                    |   |
|   | Total Packets Lost                           | 0   | 0                                  |                     |                  |                     |            |       |                  |         |           |             |           |             |            |       |             |        |             |                    |              |      |                   |     |                 |   |              |         |                       |          |        |          |        |          |                |   |                |   |                 |   |                    |   |
|   | Packets Lost Rate                            | 0%  | 0%                                 |                     |                  |                     |            |       |                  |         |           |             |           |             |            |       |             |        |             |                    |              |      |                   |     |                 |   |              |         |                       |          |        |          |        |          |                |   |                |   |                 |   |                    |   |
|   | <p>[ Account ]</p>                           | account-register = 0  | Account->Register (the whole page) |                     |                  |                     |            |       |                  |         |           |             |           |             |            |       |             |        |             |                    |              |      |                   |     |                 |   |              |         |                       |          |        |          |        |          |                |   |                |   |                 |   |                    |   |
| account-basic = 0   |  | Account->Basic (the whole page)   |                                    |                     |                  |                     |            |       |                  |         |           |             |           |             |            |       |             |        |             |                    |              |      |                   |     |                 |   |              |         |                       |          |        |          |        |          |                |   |                |   |                 |   |                    |   |
| account-codec = 0   |  | Account->Codec (the whole page)   |                                    |                     |                  |                     |            |       |                  |         |           |             |           |             |            |       |             |        |             |                    |              |      |                   |     |                 |   |              |         |                       |          |        |          |        |          |                |   |                |   |                 |   |                    |   |
| account-adv = 2<br>(0 for SIP VP-T49G W52P/W56P IP phones)                                    |  | Account->Advanced (the whole page)  |                                    |                     |                  |                     |            |       |                  |         |           |             |           |             |            |       |             |        |             |                    |              |      |                   |     |                 |   |              |         |                       |          |        |          |        |          |                |   |                |   |                 |   |                    |   |
| account-assign = 0<br>(only applicable to W52P/W56P IP DECT phones)                           |  | Account->Number Assignment (the whole page)   |                                    |                     |                  |                     |            |       |                  |         |           |             |           |             |            |       |             |        |             |                    |              |      |                   |     |                 |   |              |         |                       |          |        |          |        |          |                |   |                |   |                 |   |                    |   |

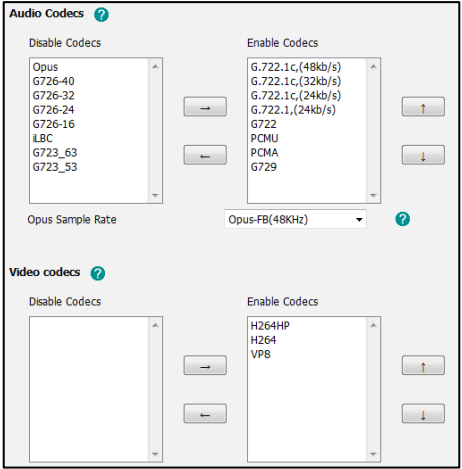
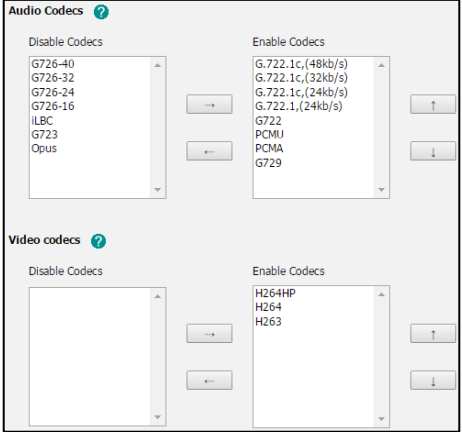
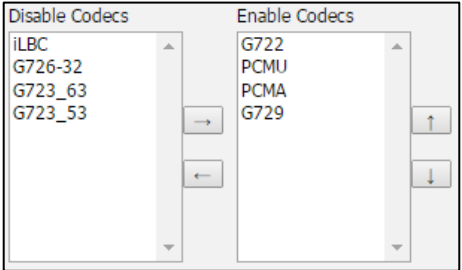
| Section Header  | Parameters and Default Value  | Configuration Items on the Web User Interface   |
|---|---|---|
|   | account-handsetname = 0<br>(only applicable to W52P/W56P IP DECT phones)  | Account->Handset Name (the whole page)          |
|   | account-direct = 0<br>(only applicable to SIP VP-T49G IP phones)  | Account->SIP IP Call (the whole page)           |
| [ Account-Register ]  | switch-account = 0<br>(not applicable to SIP-T19(P) E2/CP860 IP phones)   | Account->Register->Account                      |
|   | account_status = 0  | Account->Register->Register Status              |
|   | line_active = 0   | Account->Register->Line Active                  |
|   | account_label = 0   | Account->Register->Label                        |
|   | display_name = 0  | Account->Register->Display Name                 |
|   | register_name = 01  | Account->Register->Register Name                |
|   | user_name = 01  | Account->Register->User Name                    |
|   | account_password = 01<br>(2 for SIP VP-T49G/W52P/W56P IP phones)  | Account->Register->Password                     |
|   | enabled-outbound-proxy-server = 2<br>(01 for SIP VP-T49G W52P/W56P IP phones)   | Account->Register->Enable Outbound Proxy Server |
| outbound-proxy-server = 2<br>(01 for SIP VP-T49G/W52P/W56P IP phones) | SIP-T58V/T58A/T56A/SIP VP-T49G/CP960:<br>Account->Register->Outbound Proxy Server 1<br>Account->Register->Outbound Proxy Server 1->Port |   |

| Section Header       | Parameters and Default Value  | Configuration Items on the Web User Interface  |
|----------------------|---|--|
| [ Account-Register ] |   |  <p>SIP-T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)<br/>E2/CP860/W52P/W56P:<br/>Account-&gt;Register-&gt;Outbound Proxy Server 1</p>   |
|                      | outbound-proxy-server-port = 2<br>(not applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/CP960 IP phones)        | Account->Register->Outbound Proxy Server 1->Port   |
|                      | backup-outbound-proxy-server = 2<br>(01 for SIP VP-T49G W52P/W56P IP phones)                                | <p>SIP-T58V/T58A/T56A/SIP VP-T49G/CP960:<br/>Account-&gt;Register-&gt;Outbound Proxy Server 2<br/>Account-&gt;Register-&gt;Outbound Proxy Server 2-&gt;Port</p>  <p>SIP-T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)<br/>E2/W52P/W56P/CP860:<br/>Account-&gt;Register-&gt;Outbound Proxy Server 2</p> |
|                      | backup-outbound-proxy-server-port = 2<br>(not applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/CP960 IP phones) | Account->Register->Outbound Proxy Server 2->Port   |
|                      | proxy-fallback-interval = 2<br>(01 for SIP VP-T49G/   | Account->Register->Proxy Fallback Interval   |

| Section Header   | Parameters and Default Value  | Configuration Items on the Web User Interface  |
|--|---|--|
| [ Account-Register ]   | W52P/W56P IP phones)  |  |
|  | transport-item = 2<br>(only applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/CP860/CP960/W52P/W56P IP phones) | Account->Register->Transport   |
|  | NAT_traversal = 2   | SIP-T58V/T58A/T56A/T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/W52P/W56P:<br>Account->Register->NAT<br>SIP VP-T49G:<br>Account->Register->NAT<br>Account->SIP IP Call->NAT  |
|  | sip_server = 2  | SIP-T58V/T58A/T56A/SIP VP-T49G/CP960:<br>Account->Register->SIP Server 1/2<br><br>SIP-T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/W52P/W56P:<br>Account->Register->SIP Server 1<br> |
| sip_server2 = 2<br>(not applicable to SIP-T58V/T58A/T56A/SIP | Account->Register->SIP Server 2   |  |

| Section Header    | Parameters and Default Value   | Configuration Items on the Web User Interface                                      |
|-------------------|--|--|
|                   | VP-T49G/CP960 IP phones)   |  |
| [ Account-Basic ] | switch-account = 0<br>(not applicable to SIP-T19(P) E2/CP860 IP phones)  | Account->Basic->Account  |
|                   | proxy_require = 2<br>(0 for SIP VP-T49G/W52P/W56P IP phones)             | Account->Basic->Proxy Require  |
|                   | send_anonymous = 1   | Account->Basic->Local Anonymous  |
|                   | anonymous_rejection_enabled = 0  | Account->Basic->Local Anonymous Rejection  |
|                   | anonymous_call_enabled = 0<br>(for neutral firmware version only)        | Account->Basic->Send Anonymous Code  |
|                   | anonymous_call_On Code = 1<br>(for neutral firmware version only)        | Account->Basic->Send Anonymous Code->On Code                                       |
|                   | anonymous_call_Off Code = 1<br>(for neutral firmware version only)       | Account->Basic->Send Anonymous Code->Off Code                                      |
|                   | send_anonymous_rejection_code = 0<br>(for neutral firmware version only) | Account->Basic->Send Anonymous Rejection Code                                      |
|                   | anonymous_rejection_OnCode = 1<br>(for neutral firmware version only)    | Account->Basic->Send Anonymous Rejection Code->On Code                             |

| Section Header    | Parameters and Default Value  | Configuration Items on the Web User Interface  |
|-------------------|---|--|
| [ Account-Basic ] | anonymous_rejection_OffCode = 1<br>(for neutral firmware version only)  | Account->Basic->Send Anonymous Rejection Code->Off Code  |
|                   | misscall-log = 0<br>(not applicable to W52P/W56P IP DECT phones)        | Account->Basic->Missed Call Log  |
|                   | auto-answer = 0<br>(not applicable to W52P/W56P IP DECT phones)         | Account->Basic->Auto Answer  |
|                   | auto-answer-mute = 0<br>(only applicable to CP860 and CP960 IP phones)  | Account->Basic->Auto Answer Mute   |
|                   | ring-type = 0<br>(not applicable to W52P/W56P IP DECT phones)           | Account->Basic->Ring Type  |
| [ Account-Codec ] | switch-account = 0<br>(not applicable to SIP-T19(P) E2/CP860 IP phones) | Account->Codec->Account  |
|                   | codecs-group = 0  | Account->Codec->Audio Codecs<br>SIP-T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860:<br><br>SIP-T58V/T58A/T56A/CP960: |

| Section Header    | Parameters and Default Value   | Configuration Items on the Web User Interface   |
|-------------------|--|---|
| [ Account-Codec ] |  |  <p>SIP VP-T49G:</p>  <p>W52P/W56P:</p>  |
| [ Account-Adv ]   | <p>switch-account = 0<br/>(not applicable to SIP-T19(P) E2/CP860 IP phones)</p> <p>UDP_keep-alive = 2<br/>(only applicable to SIP-T58V/T58A/T56 A/SIP)</p> | <p>Account-&gt;Advanced-&gt;Account</p> <p>Account-&gt;Advanced-&gt;Keep Alive Type<br/>Account-&gt;Advanced-&gt;Keep Alive Interval(Seconds)</p>   |

| Section Header  | Parameters and Default Value  | Configuration Items on the Web User Interface  |
|-----------------|---|--|
| [ Account-Adv ] | VP-T49G/CP960/W52P/W56P IP phones)  |  |
|                 | udp-keep-alive-type = 2<br>(not applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/CP960/W52P/W56P IP phones)     | Account->Advanced->Keep Alive Type   |
|                 | udp-keep-alive-interval = 2<br>(not applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/CP960/W52P/W56P IP phones) | Account->Advanced->Keep Alive Interval(Seconds)  |
|                 | rport = 2   | Account->Advanced->RPort   |
|                 | subscribe-period = 2  | Account->Advanced->Subscribe Period(Seconds)   |
|                 | DTMF_items = 2  | SIP-T58V/T58A/T56A/T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP960/W52P/W56P:<br>Account->Advanced->DTMF Type<br>Account->Advanced->DTMF Info Type<br>Account->Advanced->DTMF Payload Type(96~127)<br>SIP VP-T49G:<br>Account->Advanced->DTMF Type<br>Account->Advanced->DTMF Info Type<br>Account->Advanced->DTMF Payload Type(96~127)<br>Account->SIP IP Call->DTMF Type<br>Account->SIP IP Call->DTMF Info Type<br>Account->SIP IP Call->DTMF Payload Type(96~127) |
|                 | reliable_retransmission   | Account->Advanced->Retransmission  |



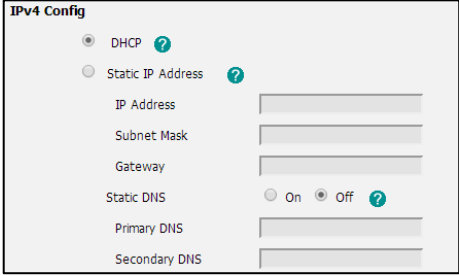
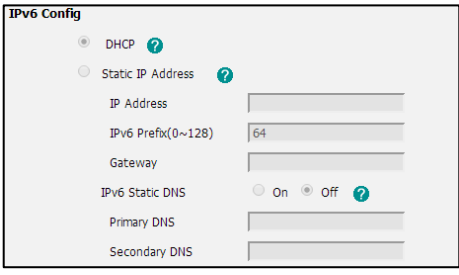
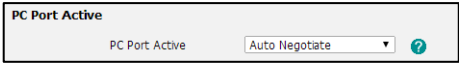
| Section Header       | Parameters and Default Value  | Configuration Items on the Web User Interface   |
|----------------------|---|---|
| [ Account-Adv ]      | on = 2  |   |
|                      | subscribe-register = 2  | Account->Advanced->Subscribe Register   |
|                      | MWI-items = 2   | Account->Advanced->Subscribe for MWI<br>Account->Advanced->MWI Subscription Period(Seconds)<br>Account->Advanced->Subscribe MWI To Voice Mail |
|                      | voice_mail = 2<br>(0 for SIP VP-T49G/W52P/W56P IP phones)   | Account->Advanced->Voice Mail   |
|                      | voice_mail_display = 2<br>(not applicable to W52P/W56P IP DECT phones)  | Account->Advanced->Voice Mail Display   |
|                      | caller-ID-header = 2  | Account->Advanced->Caller ID Source   |
|                      | use-session-timer = 2   | Account->Advanced->Session Timer  |
|                      | session-timer = 2   | Account->Advanced->Session Expires(30~7200s)  |
|                      | session-refresher = 2   | Account->Advanced->Session Refresher  |
|                      | user-equal-phone = 2  | Account->Advanced->Send user=phone  |
| voice-encryption = 2 | SIP-T58V/T58A/T56A/T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P)<br>E2/T19(P) E2/CP860/CP960/W52P/W56P:<br>Account->Advanced->RTP Encryption(SRTP)<br>SIP VP-T49G:<br>Account->Advanced->RTP Encryption(SRTP)<br>Account->SIP IP Call->RTP Encryption(SRTP) |   |
| ptime-item = 2       | Account->Advanced->PTime(ms)  |   |


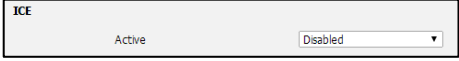
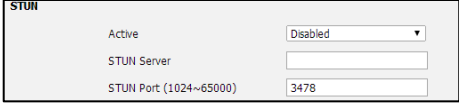
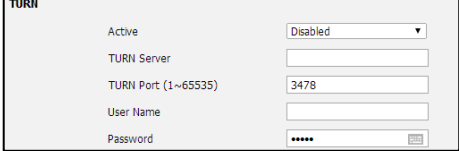
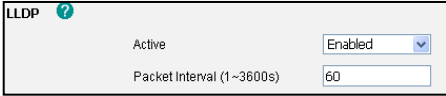
| Section Header  | Parameters and Default Value  | Configuration Items on the Web User Interface  |
|-----------------|---|--|
| [ Account-Adv ] | BLF-list-URI = 2<br>(not applicable to SIP-T19(P) E2/CP860/W52P/W56P IP phones)                 | Account->Advanced->BLF List URI  |
|                 | BlfListCode = 2<br>(not applicable to SIP-T19(P) E2/CP860/W52P/W56P IP phones)                  | Account->Advanced->BLF List Pickup Code  |
|                 | BLFListBargeInCode = 2<br>(not applicable to SIP-T19(P) E2/CP860/W52P/W56P IP phones)           | Account->Advanced->BLF List Barge In Code  |
|                 | BLF-List-Retrieve-Code = 2<br>(not applicable to SIP-T19(P) E2/CP860/W52P/W56P IP phones)       | Account->Advanced->BLF List Retrieve Call Parked Code  |
|                 | share-line = 2  | Account->Advanced->Shared Line   |
|                 | Call-Pull-Feature-Access-Code = 2<br>(not applicable to SIP-T19(P) E2/W52P/W56P IP DECT phones) | Account->Advanced->Call Pull Feature Access Code<br><br>(only appear when the parameter "account.X.shared_line" is set to 1) |
|                 | dialog-info-call-pickup = 2<br>(not applicable to SIP-T19(P) E2/CP860/W52P/W56P IP phones)      | Account->Advanced->Dialog Info Call Pickup   |
|                 | BLA-number = 2  | Account->Advanced->BLA Number  |

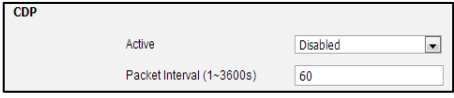
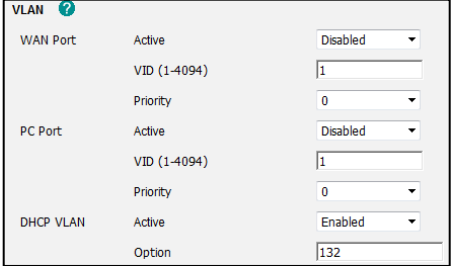
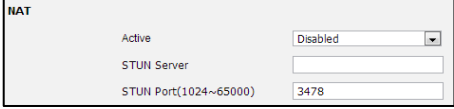


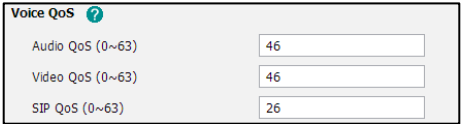
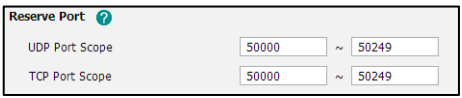
| Section Header                                    | Parameters and Default Value  | Configuration Items on the Web User Interface            |
|---|---|--|
|   | (not applicable to W52P/W56P/SIP VP-T49G/SIP-T58V/T58A/T56A IP phones)                                |  |
| [ Account-Adv ]                                   | BLA-subscription-period = 2<br>(not applicable to W52P/W56P/SIP VP-T49G/SIP-T58V/T58A/T56A IP phones) | Account->Advanced->BLA Subscription Period               |
|   | SIP-send-MAC = 2  | Account->Advanced->SIP Send MAC                          |
|   | SIP-send-line = 2   | Account->Advanced->SIP Send Line                         |
|   | SIP-Reg-retry-timer = 2   | Account->Advanced->SIP Registration Retry Timer(0~1800s) |
|   | conference-type = 2   | Account->Advanced->Conference Type                       |
|   | conference-uri = 2  | Account->Advanced->Conference URI                        |
|   | ACD-subscrip-period = 2<br>(not applicable to SIP-T58V/T58A/T56A/CP960/W52P/W56P IP phones)           | Account->Advanced->ACD Subscribe Period(120~3600s)       |
|   | Earlymedia = 2<br>(not applicable to W52P/W56P IP DECT phones)  | Account->Advanced->Early Media                           |
|   | SIPServerType = 2   | Account->Advanced->SIP Server Type                       |
|   | Music-ServerURI = 2<br>(not applicable to W52P/W56P IP DECT phones)                                   | Account->Advanced->Music Server URI                      |
| Direct-Call-Pickup-Code = 2<br>(not applicable to | Account->Advanced->Directed Call Pickup Code  |  |

| Section Header  | Parameters and Default Value   | Configuration Items on the Web User Interface   |
|-----------------|--|---|
| [ Account-Adv ] | W52P/W56P IP DECT phones)  |   |
|                 | Group-Call-Pickup-Code = 2<br>(not applicable to W52P/W56P IP DECT phones)                                 | Account->Advanced->Group Call Pickup Code   |
|                 | Distinctive-Ring-Tones = 2<br>(not applicable to W52P/W56P IP DECT phones)                                 | Account->Advanced->Distinctive Ring Tones   |
|                 | UnregisterOnReboot = 2   | Account->Advanced->Unregister When Reboot   |
|                 | Out-Dialog-BLF = 2<br>(not applicable to SIP-T19(P) E2/CP860/W52P/W56P IP phones)                          | Account->Advanced->Out Dialog BLF   |
|                 | RTCP-Collector-Name = 2  | Account->Advanced->VQ RTCP-XR Collector Name  |
|                 | RTCP-Collector-Address = 2   | Account->Advanced->VQ RTCP-XR Collector Address   |
|                 | RTCP-Collector-Port = 2  | Account->Advanced->VQ RTCP-XR Collector Port  |
|                 | Number-Of-Linekey = 2<br>(1 for SIP VP-T49G IP phone; not applicable to SIP-T19(P) E2/W52P/W56P IP phones) | Account->Advanced->Number of line key<br>(only appear when the parameter "features.auto_linekeys.enable" is set to 1) |
|                 | number_of_simultaneous_outgoing_calls = 2  | Account->Advanced->Number of simultaneous outgoing calls  |


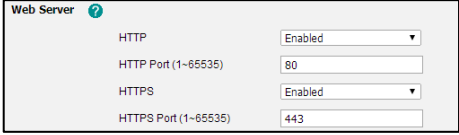

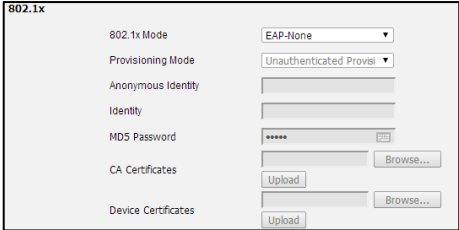

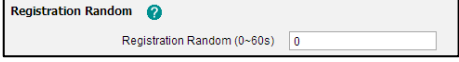
| Section Header   | Parameters and Default Value  | Configuration Items on the Web User Interface |
|--|---|---|
|  | (only applicable to W52P/W56P IP DECT phones)   |   |
| [ Account-Assign ]<br>(only applicable to W52P/W56P IP DECT phones)      | incoming-lines = 0  | Account->Number Assignment->Incoming lines    |
|  | outgoing-lines =0   | Account->Number Assignment->Outgoing lines    |
| [ Account-Handsetname ]<br>(only applicable to W52P/W56P IP DECT phones) | Handsetname = 1   | Account->Handset Name                         |
| [ Network ]  | network-basic = 0   | Network->Basic (the whole page)               |
|  | network-pcport = 0<br>(not applicable to CP860/CP960/W52P/W56P IP phones)                                     | Network->PC Port (the whole page)             |
|  | network-nat = 2<br>(not applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/CP960 IP phones)                         | Network->NAT (the whole page)                 |
|  | network-advanced = 2<br>(0 for SIP VP-T49G/CP860/W52P/W56P IP phones)   | Network->Advanced (the whole page)            |
|  | network-wifi = 0<br>(only applicable to SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T42S/T41S/T29G/T27G IP) | Network->Wi-Fi (the whole page)               |


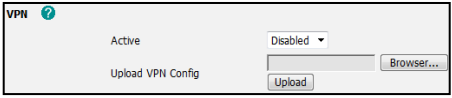
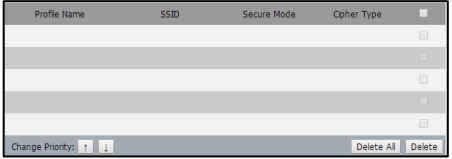
| Section Header     | Parameters and Default Value   | Configuration Items on the Web User Interface  |
|--------------------|--|--|
|                    | phones)<br><br>shotlevel = 2<br>(0 for CP960/SIP-T58V/T58A/T56A/SIP VP-T49G IP phones) |  |
| [ Network-Basic ]  | ipaddress-mode = 0<br>(2 for SIP VP-T49G/W52P/W56P IP phones)                          | Network->Basic->Internet<br>Port->Mode(IPv4/IPv6)  |
|                    | ipv4config = 0<br>(2 for SIP VP-T49G/W52P/W56P IP phones)                              | Network->Basic->IPv4 Config<br>       |
|                    | ipv6config = 0<br>(2 for SIP VP-T49G/W52P/W56P IP phones)                              | Network->Basic->IPv6 Config<br>      |
|                    | wan-ppoe = 2<br>(only applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/CP960 IP phones)    | Network->Basic->PPPoE<br>Network->Basic->PPPoE->User Name<br>Network->Basic->PPPoE->Password                             |
| [ Network-PCPort ] | pcport-active = 0<br>(not applicable to CP860/CP960/W52P/W56P IP phones)               | Network->PC Port->PC Port Active<br> |
|                    | manual = 2   | Network->NAT->Nat Manual   |

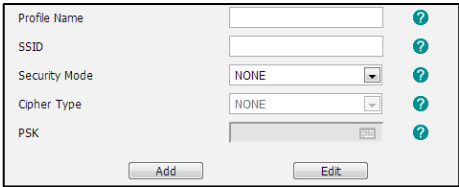
| Section Header  | Parameters and Default Value        | Configuration Items on the Web User Interface   |
|---|-------------------------------------|---|
| [ Network-Nat ]<br>(not applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/CP960/W52P/W56P IP phones) |                                     |                               |
|   | manual-switch = 2                   | Network->NAT->Nat Manual->Active  |
|   | manual-ip = 2                       | Network->NAT->Nat Manual->IP Address  |
|   | ICE = 2                             | Network->NAT->ICE<br>         |
|   | ICE-switch = 2                      | Network->NAT->ICE->Active   |
|   | STUN = 2                            | Network->NAT->STUN<br>        |
|   | STUN-switch = 2                     | Network->NAT->STUN->Active  |
|   | STUN-server = 2                     | Network->NAT->STUN->STUN Server   |
|   | STUN-port = 2                       | Network->NAT->STUN->STUN Port (1024~65000)  |
|   | TURN = 2                            | Network->NAT->TURN<br>      |
|   | TURN-switch = 2                     | Network->NAT->TURN->Active  |
|   | TURN-server = 2                     | Network->NAT->TURN->TURN Server   |
|   | TURN-port = 2                       | Network->NAT->TURN->TURN Port (1~65535)   |
|   | TURN-username = 2                   | Network->NAT->TURN->User Name   |
| TURN-password = 2   | Network->NAT->TURN->Password        |   |
| [ Network-Advanced ]  | LLDP-items = 2                      | Network->Advanced->LLDP<br> |
|   | CDP-items = 2<br>(not applicable to | Network->Advanced->CDP  |

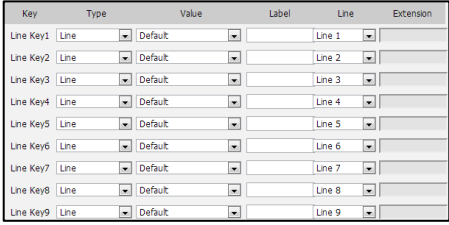
| Section Header       | Parameters and Default Value   | Configuration Items on the Web User Interface   |
|----------------------|--|---|
| [ Network-Advanced ] | W52P/W56P IP DECT phones)  |   |
|                      | VLAN-items = 2   | <p>Network-&gt;Advanced-&gt;VLAN</p>    |
|                      | NAT-items = 2<br>(only applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/CP860/CP960/W52P/W56P IP phones) | <p>Network-&gt;Advanced-&gt;NAT</p>    |
|                      | port-link = 2<br>(not applicable to W52P/W56P IP DECT phones)  | <p>Network-&gt;Advanced-&gt;Port Link</p>   |
|                      | voice-QoS = 2  | <p>Network-&gt;Advanced-&gt;Voice QoS</p> <p>W52P/W56P/CP860/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2:</p>  <p>SIP-T58V/T58A/T56A/SIP VP-T49G:</p>  |
|                      | reserve-port = 0<br>(2 for CP960 IP phones; only applicable to                                       | <p>Network-&gt;Advanced-&gt;Reserved Port</p>   |

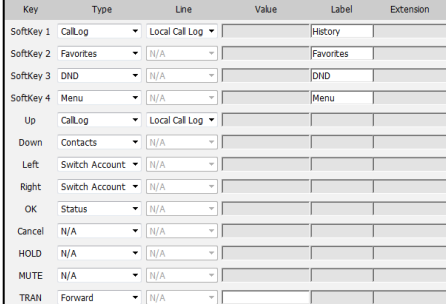
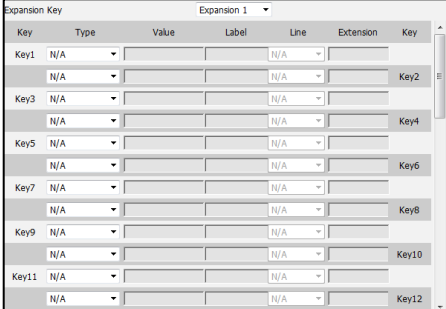


| Section Header       | Parameters and Default Value  | Configuration Items on the Web User Interface  |
|----------------------|---|--|
| [ Network-Advanced ] | SIP-T58V/T58A/T56 A/SIP<br>VP-T49G/CP960 IP phones)                                 |  |
|                      | local-RTP-port = 2<br>(not applicable to SIP-T58V/T58A/T56 A/SIP VP-T49G IP phones) | Network->Advanced->Local RTP Port<br><br>  |
|                      | web-server = 2  | Network->Advanced->Web Server<br><br>  |
|                      | 8021x = 2   | Network->Advanced->802.1x<br>SIP-T58V/T58A/T56A/SIP VP-T49G/CP960:<br><br><br><br>SIP-T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)<br>E2/CP860/W52P/W56P:<br><br> |
|                      | span-to-pc-port = 2<br>(not applicable to CP860/CP960/W52P/W56P IP phones)          | Network->Advanced->Span to PC<br><br>  |
|                      | reg-surge-prev = 2  | Network->Advanced->Registration Random<br><br>   |
|                      | ICMPv6_Status =2  | Network->Advanced->ICMPv6 Status   |


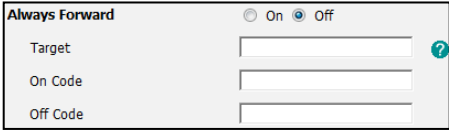
| Section Header   | Parameters and Default Value  | Configuration Items on the Web User Interface  |
|------------------|---|--|
|                  | (only applicable to SIP-T58V/T58A/T56A/SIP<br>VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G/CP9<br>60 IP phones)                                       |                            |
|                  | open-VPN = 2  | Network->Advanced->VPN<br> |
| [ Network-Wifi ] | wifi-active = 0<br>(2 for SIP VP-T49G IP phones; only applicable to SIP<br>VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T42S/T41S<br>/T29G/T27G IP phones) | Network->Wi-Fi->Wi-Fi Active   |
|                  | wifi-list = 0<br>(2 for SIP VP-T49G IP phones; only applicable to SIP<br>VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T42S/T41S<br>T29G/T27G IP phones)    | Network->Wi-Fi<br>       |
|                  | wifi-label = 0<br>(only applicable to SIP-T54S/T52S/T48G/T48S/T46G/T46S/<br>T42S/T41S/T29G/T27G IP phones)  | Network->Wi-Fi->Profile Name   |
|                  | wifi-ssid = 0<br>(only applicable to SIP-T54S/T52S/T48G/T48S/T46G/T46S/<br>T42S/T41S/T29G/T27G IP phones)   | Network->Wi-Fi->SSID   |

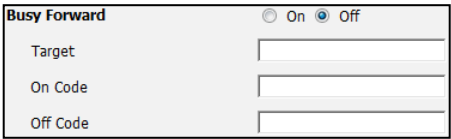
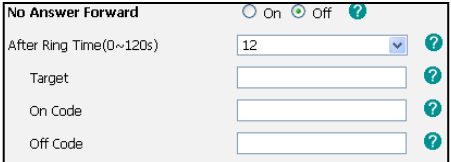
| Section Header   | Parameters and Default Value  | Configuration Items on the Web User Interface   |
|--|---|---|
| [ Network-Wifi ]   | T42S/T41S/T29G/T27G IP phones)  |   |
|  | wifi-mode = 0<br>(only applicable to SIP-T54S/T52S/T48G/T48S/T46G/T46S/T42S/T41S/T29G/T27G IP phones) | Network->Wi-Fi->Security Mode   |
|  | wifi-type = 0<br>(only applicable to SIP-T54S/T52S/T48G/T48S/T46G/T46S/T42S/T41S/T29G/T27G IP phones) | Network->Wi-Fi->Cipher Type   |
|  | wifi-psk = 0<br>(only applicable to SIP-T54S/T52S/T48G/T48S/T46G/T46S/T42S/T41S/T29G/T27G IP phones)  | Network->Wi-Fi->PSK   |
|  | wifi-edit = 2<br>(only applicable to SIP VP-T49G IP phones)   | Network->Wi-Fi->  |
|  | wifi-status-detection-timeout = 0<br>(only applicable to SIP VP-T49G IP phones)                       | Network->Wi-Fi->Time-Out For Wi-Fi Status Detection   |
| [ DSSKey ]<br>(not applicable to W52P/W56P IP DECT phones) | linekey = 0<br>(not applicable to SIP-T19(P) E2/CP860 IP phones)                                      | Dsskey->Line Key (the whole page(s) for all the line keys)  |
|  | programmablekey = 0   | Dsskey->Programable Key (the whole page)  |

| Section Header   | Parameters and Default Value  | Configuration Items on the Web User Interface   |
|--|---|---|
|  | <p>(not applicable to CP960 IP phones)</p> <p>extkey = 0<br/>(only applicable to SIP-T58V/T58A/T56A/T54S/T52S/T48G/T48S/T46G/T46S/T29G/T27P/T27G IP phones)</p> | <p>Dsskey-&gt;Ext Key (the whole page)</p>  |
| <p>[ LineKey ]<br/>(not applicable to SIP-T19(P) E2/CP860/W52P/W56P IP phones)</p> | <p>line-key = 0</p>   | <p>Dsskey-&gt;Line Key (for all the line keys on each page)</p>  |
|  | <p>Enable-Page-Tips = 0<br/>(only applicable to SIP-T58V/T58A/T56A/T54S/T52S/T46G/T46S/T29G/T42G/T42S/T41P/T41S/T27P/T27G/CP960 IP phones)</p>                  | <p>Dsskey-&gt;Line Key-&gt;Enable Page Tips</p>   |
|  | <p>Label-Length = 0<br/>(only applicable to SIP VP-T49G/SIP-T54S/T48G/T48S/T46G/T46S/T29G IP phones)</p>  | <p>Dsskey-&gt;Line Key-&gt;Label Length</p>   |
|  | <p>Label-Length-Shorten = 0<br/>(only applicable to SIP-T52S IP phones)</p>   | <p>Dsskey-&gt;Line Key-&gt;Linekey length in short</p>  |
| <p>[ ProgramKey ]</p>  | <p>programmable-key = 0</p>   | <p>Dsskey-&gt;Programable Key</p>   |

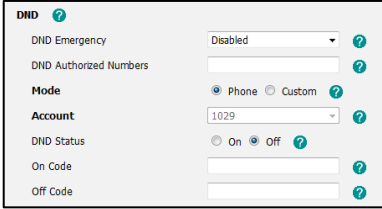
| Section Header  | Parameters and Default Value   | Configuration Items on the Web User Interface   |
|---|--|---|
| (not applicable to CP960/W52P/W56 P IP DECT phones)   |  |   |
| <p>[ ExtKey ]</p> <p>(only applicable to SIP-T58V/T58A/T56A/T54S/T52S/T48G/T48S/T46G/T46S/T29G/T27P/T27G IP phones)</p> | <p>ext-key = 0</p>   | <p>Dsskey-&gt;Ext Key</p>    |
| <p>[ Features ]</p>   | <p>features-forward = 0</p> <p>features-general = 0</p> <p>features-audio = 0</p> <p>features-intercom = 0<br/>(not applicable to W52P/W56P IP DECT phones)</p> <p>features-transfer = 0</p> <p>features-callpickup = 0</p> <p>features-remote = 2<br/>(0 for SIP VP-T49G IP phones; not applicable to W52P/W56P IP DECT phones)</p> <p>features-phonelock</p> | <p>Features-&gt;Forward&amp;DND (the whole page)</p> <p>Features-&gt;General Information (the whole page)</p> <p>Features-&gt;Audio (the whole page)</p> <p>Features-&gt;Intercom (the whole page)</p> <p>Features-&gt;Transfer (the whole page)</p> <p>Features-&gt;Call Pickup (the whole page)</p> <p>Features-&gt;Remote Control (the whole page)</p> <p>Features-&gt;Phone Lock (the whole page)</p> |

| Section Header | Parameters and Default Value   | Configuration Items on the Web User Interface  |
|----------------|--|--|
| [ Features ]   | = 0  |  |
|                | features-acd = 2<br>(0 for SIP VP-T49G IP phones; not applicable to SIP-T58V/T58A/T56A/CP960/W52P/W56P IP phones)                            | Features->ACD (the whole page)                 |
|                | features-sms = 0<br>(not applicable to SIP-T58V/T58A/T56A/CP960/W52P/W56P IP phones)   | Features->SMS (the whole page)                 |
|                | features-actionurl = 2<br>(0 for SIP VP-T49G IP phones; not applicable to W52P/W56P IP DECT phones)  | Features->Action URL (the whole page)          |
|                | features-bluetooth = 0<br>(only applicable to SIP-T58V/T58A/T56A/T54S/T52S/SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T42S/T41ST29G/T27G IP phones) | Features->Bluetooth (the whole page)           |
|                | features-powered = 0<br>(not applicable to CP860 IP phones)  | Features->Power LED (the whole page)           |
|                | features-notifypop = 0<br>(not applicable to W52P/W56P IP DECT phones)   | Features->Notification Popups (the whole page) |

| Section Header  | Parameters and Default Value  | Configuration Items on the Web User Interface   |
|-----------------|---|---|
|                 | features-doorphone = 0<br>(only applicable to SIP-T58V/T58A/T56A IP phones)           | Features->Door Phone (the whole page)   |
| [ Forward&DND ] | head-forward = 0  | Features->Forward&DND-> Forward            |
|                 | forward-emergency = 0<br>(not applicable to W52P/W56P IP DECT phones)                 | Features->Forward&DND->Forward ->Forward Emergency  |
|                 | forward-authorized-numbers = 0<br>(not applicable to W52P/W56P IP DECT phones)        | Features->Forward&DND->Forward ->Forward Authorized Numbers   |
|                 | forward-mode = 0<br>(not applicable to SIP-T19(P) E2/CP860/CP960/W52P/W56P IP phones) | Features->Forward&DND->Forward ->Mode   |
|                 | forward-account = 0<br>(not applicable to SIP-T19(P) E2/CP860 IP phones)              | Features->Forward&DND->Forward ->Account  |
|                 | always-forward = 0  | Features->Forward&DND->Always Forward<br> |
|                 | always-forward-enabled = 0  | Features->Forward&DND->Forward->Always Forward->On/Off  |
|                 | always-forward-target = 0   | Features->Forward&DND->Forward->Always Forward->Target  |
|                 | always-forward-On   | Features->Forward&DND->Forward->  |

| Section Header    | Parameters and Default Value  | Configuration Items on the Web User Interface  |
|-------------------|---|--|
| [ Forward&DND ]   | Code = 0<br>(for neutral firmware version only)                       | Always Forward->On Code  |
|                   | always-forward-Off<br>Code = 0<br>(for neutral firmware version only) | Features->Forward&DND->Forward->Always Forward->Off Code   |
|                   | busy-forward = 0  | Features->Forward&DND->Busy Forward<br>        |
|                   | busy-forward-enabled = 0  | Features->Forward&DND->Forward->Busy Forward->On/Off   |
|                   | busy-forward-target = 0   | Features->Forward&DND->Forward->Busy Forward->Target   |
|                   | busy-forward-OnCode = 0<br>(for neutral firmware version only)        | Features->Forward&DND->Forward->Busy Forward->On Code  |
|                   | busy-forward-OffCode = 0<br>(for neutral firmware version only)       | Features->Forward&DND->Forward->Busy Forward->Off Code   |
|                   | NoAnswer-forward = 0  | Features->Forward&DND->No Answer Forward<br> |
|                   | NoAnswer-forward-enabled = 0  | Features->Forward&DND->Forward->No Answer Forward->On/Off  |
|                   | NoAnswer-forward-ringtimes = 0  | Features->Forward&DND->Forward->No Answer Forward->After Ring Time (0~120s)  |
| NoAnswer-forward- | Features->Forward&DND->Forward->No                                    |  |



| Section Header  | Parameters and Default Value  | Configuration Items on the Web User Interface   |
|-----------------|---|---|
| [ Forward&DND ] | target = 0  | Answer Forward->Target  |
|                 | NoAnswer-forward-OnCode = 0<br>(for neutral firmware version only)  | Features->Forward&DND->Forward->No Answer Forward->On Code  |
|                 | NoAnswer-forward-OffCode = 0<br>(for neutral firmware version only)   | Features->Forward&DND->Forward->No Answer Forward->Off Code   |
|                 | DND = 0   | Features->Forward&DND->DND<br> |
|                 | DND-Emergency = 0<br>(not applicable to W52P/W56P IP DECT phones)   | Features->Forward&DND->DND->DND Emergency   |
|                 | DND-Authorized-Numbers = 0<br>(not applicable to W52P/W56P IP DECT phones)                                      | Features->Forward&DND->DND->DND Authorized Numbers  |
|                 | DND-mode = 0<br>(01 for SIP VP-T49G/W52P/W56P IP phones; not applicable to SIP-T19(P) E2/CP860/CP960 IP phones) | Features->Forward&DND->DND->Mode  |
|                 | DND-account = 0<br>(01 for SIP VP-T49G/W52P/W56P IP)  | Features->Forward&DND->DND->Account   |

| Section Header          | Parameters and Default Value   | Configuration Items on the Web User Interface  |
|-------------------------|--|--|
| [ Forward&DND ]         | phones; not applicable to SIP-T19(P) E2/CP860 IP phones)                                       |  |
|                         | DND-Status = 0<br>(01 for SIP VP-T49G/W52P/W56P IP phones)                                     | Features->Forward&DND->DND->DND Status   |
|                         | DND-OnCode = 0<br>(01 for SIP VP-T49G/W52P/W56P IP phones; for neutral firmware version only)  | Features->Forward&DND->DND->On Code  |
|                         | DND-OffCode = 0<br>(01 for SIP VP-T49G/W52P/W56P IP phones; for neutral firmware version only) | Features->Forward&DND->DND->Off Code   |
| [ General-Information ] | call_waiting = 0   | Features->General Information->Call Waiting<br>Features->General Information->Call Waiting On Code (for neutral firmware version only)<br>Features->General Information->Call Waiting Off Code (for neutral firmware version only) |
|                         | auto-redial = 0<br>(not applicable to W52P/W56P IP DECT phones)                                | Features->General Information->Auto Redial   |
|                         | auto_redial_interval = 0<br>(not applicable to W52P/W56P IP DECT phones)                       | Features->General Information->Auto Redial Interval(1~300s)  |
|                         | auto_redial_times = 0<br>(not applicable to  | Features->General Information->Auto Redial Times (1~300)   |

| Section Header          | Parameters and Default Value  | Configuration Items on the Web User Interface               |
|-------------------------|---|---|
| [ General-Information ] | W52P/W56P IP DECT phones)   |   |
|                         | key_as_send = 0<br>(not applicable to CP960 IP phones)              | Features->General Information->Key As Send                  |
|                         | reserve-pound = 2   | Features->General Information->Reserve # in User Name       |
|                         | hotline-number = 0<br>(not applicable to W52P/W56P IP DECT phones)  | Features->General Information->Hotline Number               |
|                         | hotline-delay = 0<br>(not applicable to W52P/W56P IP DECT phones)   | Features->General Information->Hotline Delay(0~10s)         |
|                         | busytone_delay = 0  | Features->General Information->Busy Tone Delay (Seconds)    |
|                         | return-code-refuse = 0  | Features->General Information->Return Code When Refuse      |
|                         | return-code-DND = 0   | Features->General Information->Return Code When DND         |
|                         | call_completion = 0<br>(not applicable to W52P/W56P IP DECT phones) | Features->General Information->Call Completion              |
|                         | feature-key-synchronisation = 0                                     | Features->General Information->Feature Key Synchronization  |
|                         | TimeOut-for-DialNow = 0   | Features->General Information->Time Out for Dial Now Rule   |
|                         | RFC-2543-Hold = 2   | Features->General Information->RFC 2543 Hold                |
|                         | use-outbound-in-dialog = 2  | Features->General Information->Use Outbound Proxy In Dialog |
| IsDeal-180 = 2          | Features->General Information->180 Ring Workaround                  |   |

| Section Header          | Parameters and Default Value   | Configuration Items on the Web User Interface              |
|-------------------------|--|--|
| [ General-Information ] | logon-wizard = 2<br>(not applicable to CP860/W52P/W56P IP phones)                          | Features->General Information->Logon Wizard                |
|                         | PswPrefix = 0<br>(2 for SIP VP-T49G IP phones; not applicable to W52P/W56P IP DECT phones) | Features->General Information->PswPrefix                   |
|                         | PswLength = 0<br>(2 for SIP VP-T49G IP phones; not applicable to W52P/W56P IP DECT phones) | Features->General Information->PswLength                   |
|                         | PswDial = 0<br>(2 for SIP VP-T49G IP phones; not applicable to W52P/W56P IP DECT phones)   | Features->General Information->PswDial                     |
|                         | SaveCallHistory = 2  | Features->General Information->Save Call Log               |
|                         | SuppressDTMFDisplay = 1  | Features->General Information->Suppress DTMF Display       |
|                         | SuppressDTMFDisplayDelay = 1   | Features->General Information->Suppress DTMF Display Delay |
|                         | play-local-DTMF-tone = 0<br>(not applicable to W52P/W56P IP DECT phones)                   | Features->General Information->Play Local DTMF Tone        |
|                         | DTMFRepetition = 0<br>(not applicable to W52P/W56P IP DECT phones)                         | Features->General Information->DTMF Repetition             |

| Section Header          | Parameters and Default Value  | Configuration Items on the Web User Interface          |
|-------------------------|---|--|
| [ General-Information ] | MulticastCodec = 0<br>(not applicable to SIP-T19(P) E2/W52P/W56P IP phones)                         | Features->General Information->Multicast Codec         |
|                         | PlayHoldTone = 0<br>(not applicable to W52P/W56P IP DECT phones)                                    | Features->General Information->Play Hold Tone          |
|                         | PlayHoldToneDelay = 0<br>(not applicable to W52P/W56P IP DECT phones)                               | Features->General Information->Play Hold Tone Delay    |
|                         | AllowMute = 0<br>(not applicable to W52P/W56P IP DECT phones)                                       | Features->General Information->Allow Mute              |
|                         | DualHeadset = 0<br>(1 for SIP VP-T49G IP phones; not applicable to CP860/CP960/W52P/W56P IP phones) | Features->General Information->Dual Headset            |
|                         | AutoAnswerDelay = 0<br>(not applicable to W52P/W56P IP DECT phones)                                 | Features->General Information->Auto Answer Delay(1~4s) |
|                         | enable-auto-answer-tone = 0<br>(not applicable to W52P/W56P IP DECT phones)                         | Features->General Information->Enable Auto Answer Tone |
|                         | HeadsetPrior = 0<br>(not applicable to CP860/CP960/W52P)  | Features->General Information->Headset Prior           |

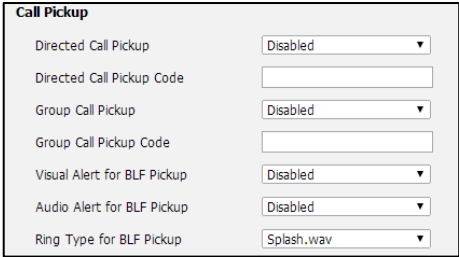
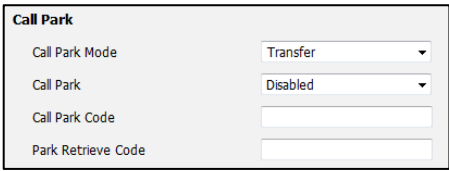
| Section Header          | Parameters and Default Value  | Configuration Items on the Web User Interface              |
|-------------------------|---|--|
| [ General-Information ] | /W56P IP phones)  |  |
|                         | DTMFReplaceTran = 0<br>(not applicable to W52P/W56P IP DECT phones)   | Features->General Information->DTMF Replace Tran           |
|                         | TranSendDTMF = 1<br>(not applicable to W52P/W56P IP DECT phones)  | Features->General Information->Tran Send DTMF              |
|                         | SendPoundKey = 0<br>(not applicable to W52P/W56P IP DECT phones)  | Features->General Information->Send Pound Key              |
|                         | FwdInternational = 0  | Features->General Information->Fwd International           |
|                         | Diversion-History-Info = 1  | Features->General Information->Diversion/History-Info      |
|                         | allow-trans-exist-call = 0<br>(not applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G/CP960/W52P/W56P IP phones) | Features->General Information->Allow Trans Exist Call      |
|                         | blf-led-mode = 0<br>(not applicable to SIP VP-T49G/SIP-T19(P)E2/CP860/CP960/W52P/W56P IP phones)  | Features->General Information->BLF LED Mode                |
|                         | ReLogOffTime = 2  | Features->General Information->Auto Logout Time(1~1000min) |

| Section Header          | Parameters and Default Value   | Configuration Items on the Web User Interface   |
|-------------------------|--|---|
| [ General-Information ] | call-number-filter = 0   | Features->General Information->Call Number Filter   |
|                         | Use_Logo = 0<br>(not applicable to SIP-T58V/T58A/T56A/T54S/T52S/SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T29G/CP960/W52P/W56P IP phones)    | Features->General Information->Use Logo   |
|                         | upload_logo = 0<br>(not applicable to SIP-T58V/T58A/T56A/T54S/T52S/SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T29G/CP960/W52P/W56P IP phones) | Features->General Information->Upload Logo  |
|                         | sip-trust-control = 2  | Features->General Information->Accept SIP Trust Server Only   |
|                         | allow-IP-call = 0  | SIP-T58V/T58A/T56A/T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/W52P/W56P:<br>Features->General Information->Allow IP Call<br>SIP VP-T49G:<br>Account->SIP IP Call->Allow IP Call       |
|                         | IP-direct-auto-answer = 0<br>(not applicable to W52P/W56P IP DECT phones)  | SIP-T58V/T58A/T56A/T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860:<br>Features->General Information->IP Direct Auto Answer<br>SIP VP-T49G:<br>Account->SIP IP Call->IP Direct Auto Answer |
| calllog-show-num =      | Features->General Information->Call List   |   |

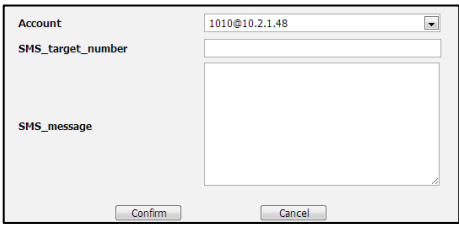
| Section Header          | Parameters and Default Value  | Configuration Items on the Web User Interface            |
|-------------------------|---|--|
| [ General-Information ] | 0<br>(not applicable to W52P/W56P IP DECT phones)                                 | Show Number  |
|                         | voicemail-tone = 0  | Features->General Information->Voice Mail Tone           |
|                         | DHCP-hostname = 0   | Features->General Information->DHCP Hostname             |
|                         | reboot-in-talking = 0   | Features->General Information->Reboot In Talking         |
|                         | Hide-Feature-Access-Codes = 0<br>(not applicable to W52P/W56P IP DECT phones)     | Features->General Information->Hide Feature Access Codes |
|                         | display-method-on-dialing = 2   | Features->General Information->Display Method on Dialing |
|                         | cloud-active = 0<br>(only applicable to CP860 IP phones)                          | Features->General Information->Cloud Enable              |
|                         | auto-linekeys = 1<br>(not applicable to SIP-T19(P) E2/ CP860/W52P/W56P IP phones) | Features->General Information->Auto Linekeys             |
|                         | call-waiting-tone = 0   | Features->Audio->Call Waiting Tone                       |
|                         | button-sound = 0<br>(not applicable to W52P/W56P IP DECT phones)                  | Features->Audio->Key Tone                                |



| Section Header  | Parameters and Default Value   | Configuration Items on the Web User Interface   |
|---|--|---|
| [ Features-Audio]   | send-sound = 0<br>(not applicable to W52P/W56P IP DECT phones)                 | Features->Audio->Send Tone  |
|   | redial_tone = 0<br>(not applicable to W52P/W56P IP DECT phones)                | Features->Audio->Redial Tone  |
|   | headset-send-volume = 1<br>(not applicable to CP860/CP960/W52P/W56P IP phones) | Features->Audio->Headset Send Volume (-50~50)   |
|   | handset-send-volume = 1<br>(not applicable to CP860/CP960/W52P/W56P IP phones) | Features->Audio->Handset Send Volume (-50~50)   |
|   | handfree-send-volume = 1<br>(not applicable to W52P/W56P IP phones)            | Features->Audio->Handfree Send Volume (-50~50)  |
|   | Ringer_Dev = 0<br>(not applicable to CP860 IP phones)                          | Features->Audio->Ringer Device for Headset  |
| [ Features-Intercom ]<br>(not applicable to W52P/W56P IP DECT phones) | allow-intercom = 0   | T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860:<br>Features->Intercom->Allow Intercom<br>SIP-T58V/T58A/T56A/SIP VP-T49G:<br>Features->Intercom->Accept Intercom |
|   | intercom-mute = 0  | Features->Intercom->Intercom Mute   |
|   | intercom-tone = 0  | Features->Intercom->Intercom Tone   |
|   | intercom-barge = 0   | Features->Intercom->Intercom Barge  |
| [ Features-Transfer   | semi-attend-transfe  | Features->Transfer->Semi-Attended Transfer  |

| Section Header          | Parameters and Default Value   | Configuration Items on the Web User Interface  |
|-------------------------|--|--|
| ]                       | r = 0  |  |
|                         | blind-tran-onhook = 0  | Features->Transfer->Blind Transfer On Hook   |
|                         | Semi-Attend-Trans-OnHook = 0   | Features->Transfer->Attended Transfer On Hook  |
|                         | transfer-on-conference-hang-up = 0<br>(not applicable to W52P/W56P IP DECT phones)       | Features->Transfer->Transfer on Conference Hang up   |
|                         | TransferModeViaDsskey = 0<br>(not applicable to SIP-T19(P) E2/CP860/W52P/W56P IP phones) | Features->Transfer->Transfer Mode Via Dsskey   |
| [ Features-Callpickup ] | Call-Pickup = 0<br>(not applicable to W52P/W56P IP phones)                               | Features->Call Pickup->Call Pickup<br> |
|                         | Call-Park = 0<br>(not applicable to SIP-T58V/T58A/T56A/SIP VP-T49G IP phones)            | Features->Call Pickup->Call Park<br>   |
|                         | pushxml-server-add r = 2<br>(not applicable to SIP-T58V/T58A/T56A/CP960 IP phones)       | Features->Remote Control->Push XML Server IP Address   |
|                         | XMLSIPNotify = 2<br>(not applicable to   | Features->Remote Control->SIP Notify   |

| Section Header  | Parameters and Default Value  | Configuration Items on the Web User Interface      |
|---|---|--|
| <p>[ Features-Remote ]<br/>(not applicable to W52P/W56P IP DECT phones)</p> | SIP-T58V/T58A/T56 A/CP960 IP phones)  |  |
|   | XMLBlockInCalling = 2<br>(1 for SIP VP-T49G/CP860 IP phones, not applicable to SIP-T58V/T58A/T56 A/CP960 IP phones) | Features->Remote Control->Block XML in Calling     |
|   | ActionURILimitIP = 2  | Features->Remote Control->Action URI Allow IP List |
|   | CSTAControl = 2<br>(not applicable to SIP-T58V/T58A/T56 A/SIP VP-T49G/CP860 IP phones)                              | Features->Remote Control->CSTA Control             |
| <p>[ Features-Lock ]<br/>(not applicable to W52P/W56P IP DECT phones)</p>   | Lock_Enable = 0<br>(2 for SIP VP-T49G IP phones)  | Features->Phone Lock->Phone Lock Enable            |
|   | keyboard_lock = 0<br>(2 for SIP VP-T49G IP phones, not applicable to SIP-T58V/T58A/T56 A IP phones)                 | Features->Phone Lock->Phone Lock Type              |
|   | Phone_Unlock_PIN = 0<br>(2 for SIP VP-T49G IP phones)   | Features->Phone Lock->Phone Unlock PIN(0~15 Digit) |
|   | Phone_lock_time_out = 0<br>(2 for SIP VP-T49G IP phones)  | Features->Phone Lock->Phone Lock Time Out(0~3600s) |
|   | emergency_setting = 0   | Features->Phone Lock->Emergency                    |

| Section Header   | Parameters and Default Value            | Configuration Items on the Web User Interface   |
|--|---|---|
|  | (2 for SIP VP-T49G IP phones)           |   |
| [ Features-ACD ]<br>(not applicable to SIP-T58V/T58A/T56A/CP960/W52P/W56P IP phones) | ACD-auto-available = 2                  | Features->ACD->ACD->ACD Auto Available  |
|  | ACD-auto-available-timer = 2            | Features->ACD->ACD->ACD Auto Available Timer(0~120s)  |
| [ Features-SMS ]<br>(only applicable to SIP VP-T49G IP phones)                       | send-sms = 0                            | Features->SMS-><br> |
| [ Features-ActionURL ]<br>(not applicable to W52P/W56P IP DECT phones)               | setup-complete = 2                      | Features->Action URL->Setup Completed   |
|  | log-on = 2                              | Features->Action URL->Registered  |
|  | log-off = 2                             | Features->Action URL->Unregistered  |
|  | register-fail = 2                       | Features->Action URL->Register Failed   |
|  | off-hook = 2                            | Features->Action URL->Off Hook  |
|  | on-hook = 2                             | Features->Action URL->On Hook   |
|  | incoming-call = 2                       | Features->Action URL->Incoming Call   |
|  | outgoing-call = 2                       | Features->Action URL->Outgoing Call   |
|  | call-establish = 2                      | Features->Action URL->Established   |
|  | Call-Terminated = 2                     | Features->Action URL->Terminated  |
|  | DND-On = 2                              | Features->Action URL->Open DND  |
|  | DND-Off = 2                             | Features->Action URL->Close DND   |
|  | Forward-On-Code = 2                     | Features->Action URL->Open Always Forward   |
|  | Forward-Off-Code = 2                    | Features->Action URL->Close Always Forward  |
| Busy-Forward-On =  | Features->Action URL->Open Busy Forward |   |

| Section Header   | Parameters and Default Value   | Configuration Items on the Web User Interface |
|--|--|---|
| [ Features-ActionURL ]<br>(not applicable to W52P/W56P IP DECT phones) | 2  |   |
|  | Busy-Forward-Off = 2   | Features->Action URL->Close Busy Forward      |
|  | No-Answer-Forward-On = 2   | Features->Action URL->Open NoAnswer Forward   |
|  | No-Answer-Forward-Off = 2  | Features->Action URL->Close NoAnswer Forward  |
|  | TransferCall = 2   | Features->Action URL->Transfer Call           |
|  | Blind-transfer-call = 2  | Features->Action URL->Blind Transfer          |
|  | Attended-transfer-call = 2   | Features->Action URL->Attended Transfer       |
|  | Hold = 2   | Features->Action URL->Hold                    |
|  | Unhold = 2   | Features->Action URL->UnHold                  |
|  | Mute = 2   | Features->Action URL->Mute                    |
|  | Unmute = 2   | Features->Action URL->UnMute                  |
|  | Missed-call = 2  | Features->Action URL->Missed Call             |
|  | IPChange = 2   | Features->Action URL->IP Changed              |
|  | IdletoBusy = 2   | Features->Action URL->Idle To Busy            |
|  | BusytoIdle = 2   | Features->Action URL->Busy To Idle            |
|  | RejectIncomingCall = 2   | Features->Action URL->Reject Incoming Call    |
|  | AnswerNewInCall = 2  | Features->Action URL->Answer New-In Call      |
|  | TransferFailed = 2   | Features->Action URL->Transfer Failed         |
|  | TransferFinished = 2   | Features->Action URL->Transfer Finished       |
|  | ForwardIncomingCall = 2  | Features->Action URL->Forward Incoming Call   |
| UCServer = 2   | Features->Action URL->UCServer<br>(only appear when the parameter "action_url.is_ume" is set to 1) |   |
| ReportIP = 2   | Features->Action URL->Report IP  |   |

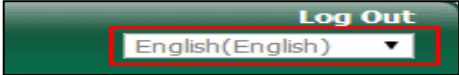
| Section Header   | Parameters and Default Value  | Configuration Items on the Web User Interface                    |
|--|---|--|
| [ Features-ActionURL ]<br>(not applicable to W52P/W56P IP DECT phones) |   | (only appear when the parameter "action_url.is_ume" is set to 1) |
|  | AutopFinish = 2   | Features->Action URL->Autop Finish                               |
|  | OpenCallWait = 2  | Features->Action URL->Open Call Waiting                          |
|  | CloseCallWait = 2   | Features->Action URL->Close Call Waiting                         |
|  | Headset = 2<br>(not applicable to CP860/CP960 IP phones)  | Features->Action URL->Headset                                    |
|  | Handfree = 2<br>(not applicable to CP860 IP phones)   | Features->Action URL->Handfree                                   |
|  | CancelCallOut = 2   | Features->Action URL->Cancel Call Out                            |
|  | RemoteBusy = 2  | Features->Action URL->Remote Busy                                |
| CallRemoteCancelled = 2  | Features->Action URL->Call Remote Canceled  |  |
| [ Features-Bluetooth ]   | bluetooth-active = 0<br>(only applicable to SIP-T58V/T58A/T56A/T54S/T52S/SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T42S/T41S/T29G/T27G/CP960 IP phones) | Features->Bluetooth->Bluetooth Active                            |
| [ Features-PowerL  | common-power-light-on = 0   | Features->Power LED->Common Power Light On                       |
|  | ring-power-light-flash = 0  | Features->Power LED->Ringing Power Light Flash                   |
|  | mail-power-light-flash = 0  | Features->Power LED->Voice/Text Mail Power Light Flash           |
|  | miss-call-light-flash = 0<br>(only applicable to W52P/W56P IP   | Features->Power LED->Miss Call Power Light Flash                 |

| Section Header   | Parameters and Default Value  | Configuration Items on the Web User Interface  |
|--|---|--|
| <p>ED ]<br/>(not applicable to CP860/CP960 IP phones)</p> <p>[ Features-PowerLED ]<br/>(not applicable to CP860 IP phones)</p> | <p>DECT phones)</p> <p>mute-power-light-flash = 0<br/>(not applicable to W52P/W56P IP DECT phones)</p> <p>hold-power-light-flash = 0<br/>(not applicable to W52P/W56P IP DECT phones)</p> <p>talk-power-light-flash = 0<br/>(not applicable to W52P/W56P IP DECT phones)</p> <p>misscall-power-light-flash = 0<br/>(not applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/CP860/W52P/W56P IP phones)</p> | <p>Features-&gt;Power LED-&gt;Mute Power Light Flash</p> <p>Features-&gt;Power LED-&gt;Hold/Held Power Light Flash</p> <p>Features-&gt;Power LED-&gt;Talk/Dial Power Light On</p> <p>Features-&gt;Power LED-&gt;MissCall Power Light Flash</p>   |
| <p>[ Features-Notification Popup ]<br/>(not applicable to W52P/W56P IP DECT phones)</p>  | <p>Display-Voice-Mail-Popup = 0</p> <p>Display-Missed-Call-Popup = 0</p> <p>Display-Forward-Call-Popup = 0</p> <p>Display-Text-Message-Popup = 0<br/>(not applicable to SIP-T58V/T58A/T56A/CP960 IP phones)</p>   | <p>Features-&gt;Notification Popups-&gt;Display Voice Mail Popup</p> <p>Features-&gt;Notification Popups-&gt;Display Missed Call Popup</p> <p>Features-&gt;Notification Popups-&gt;Display Forward Call Popup</p> <p>Features-&gt;Notification Popups-&gt;Display Text Message Popup</p> |
| <p>[ Features-Doorphone ]</p>  | <p>switch_list = 0</p>  | <p>Features-&gt;Door Phone-&gt;Door Phone List</p>   |


| Section Header   | Parameters and Default Value                                     | Configuration Items on the Web User Interface |
|--|--|---|
| one ]<br>(only applicable to SIP-T58V/T58A/T56A IP phones)           | display_name = 0   | Features->Door Phone->Display Name            |
|  | phone_number = 0   | Features->Door Phone->Phone Number            |
|  | unlock_pin = 0   | Features->Door Phone->Unlock PIN              |
|  | full_screen = 0  | Features->Door Phone->Full Screen             |
|  | send_audio = 0   | Features->Door Phone->Send Audio              |
|  | send_video = 0 (not applicable to SIP-T56A IP phones)            | Features->Door Phone->Send Video              |
| [ Settings ]   | settings-preference = 0  | Settings->Preference (the whole page)         |
|  | settings-datetime = 0  | Settings->Time & Date (the whole page)        |
|  | settings-calldisplay = 0   | Settings->Call Display (the whole page)       |
|  | settings-upgrade = 0   | Settings->Upgrade (the whole page)            |
|  | settings-autop = 2<br>(0 for SIP VP-T49G/W52P/W56P IP phones)    | Settings->Auto Provision (the whole page)     |
|  | settings-config = 0  | Settings->Configuration (the whole page)      |
|  | settings-dialplan = 2<br>(0 for SIP VP-T49G/W52P/W56P IP phones) | Settings->Dial Plan (the whole page)          |
|  | settings-voice = 2<br>(0 for SIP VP-T49G/W52P/W56P IP phones)    | Settings->Voice (the whole page)              |
| settings-ring = 2<br>(1 for SIP VP-T49G IP phones; not applicable to | Settings->Ring (the whole page)                                  |   |





| Section Header | Parameters and Default Value   | Configuration Items on the Web User Interface |
|----------------|--|---|
| [ Settings ]   | W52P/W56P IP DECT phones)  |   |
|                | settings-tones = 2<br>(0 for SIP VP-T49G/W52P/W56P IP phones)  | Settings->Tones (the whole page)              |
|                | settings-softkey = 2<br>(not applicable to W52P/W56P IP DECT phones)   | Settings->Softkey Layout (the whole page)     |
|                | settings-tr069 = 2   | Settings->TR069 (the whole page)              |
|                | settings-voicemonitoring = 2<br>(0 for SIP VP-T49G IP phones; not applicable to W52P/W56P IP DECT phones)                              | Settings->Voice Monitoring (the whole page)   |
|                | settings-sip = 2<br>(0 for SIP VP-T49G and 1 for W52P/W56P IP phones)  | Settings->SIP (the whole page)                |
|                | settings-powersaving = 0<br>(only applicable to SIP-T58V/T58A/T56A/T54S/T52S/SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T29G/CP960 IP phones) | Settings->Power Saving (the whole page)       |
|                | settings-camera = 0<br>(only applicable to SIP VP-T49G IP phones)  | Settings->Camera (the whole page)             |

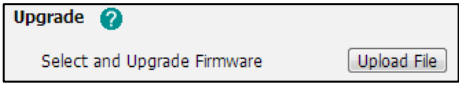

| Section Header          | Parameters and Default Value   | Configuration Items on the Web User Interface  |
|-------------------------|--|--|
|                         | settings-video = 0<br>(only applicable to SIP-T58V/T58A/SIP VP-T49G IP phones)                           | Settings->Video (the whole page)   |
| [ Settings-Preference ] | web-language = 0   | SIP-T58V/T58A/T56A/SIP VP-T49G:<br>Settings->Preference->Language<br>SIP-T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)<br>E2/CP860/W52P/W56P:<br> |
|                         | live-dialpad = 0<br>(not applicable to W52P/W56P IP DECT phones)   | Settings->Preference->Live Dialpad   |
|                         | inter-digit-time = 0<br>(not applicable to W52P/W56P IP DECT phones)                                     | Settings->Preference->Inter Digit Time(1~14s)  |
|                         | transparency = 0<br>(only applicable to SIP-T48G/S IP phones)  | Settings->Preference->Transparency   |
|                         | UnusedBackLight = 0<br>(only applicable to SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G IP phones) | Settings->Preference->Backlight Inactive Level (Unused BackLight)  |
| [ Settings-Preference ] | backlight = 0<br>(only applicable to SIP-T58V/T58A/T56A/T54S/T52S/SIP VP-T49G/SIP-T48G/                  | Settings->Preference->Backlight Active Level (Active Backlight Level)  |

| Section Header          | Parameters and Default Value   | Configuration Items on the Web User Interface  |
|-------------------------|--|--|
| [ Settings-Preference ] | T48S/T46G/T46S/T29G/T27P/T27G/CP960 IP phones)   |  |
|                         | BacklightTime = 0<br>(not applicable to SIP-T19(P) E2 and W52P/W56P IP phones)   | Settings->Preference->Backlight Time(seconds)  |
|                         | contrast_ctrl = 0<br>(only applicable to SIP-T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860/CP960 IP phones)            | Settings->Preference->Contrast   |
|                         | watchdog = 2   | Settings->Preference->Watch Dog  |
|                         | ring_type_setting = 0<br>(not applicable to W52P/W56P IP DECT phones)  | Settings->Preference->Ring Type<br>Settings->Preference->Upload Ringtone   |
|                         | Wallpaper = 0<br>(only applicable to SIP-T58V/T58A/T56A/T54S/T52S/SIP VP-T49G/SIP-T48G/T48S/T48S/T46G/T46S/T29G/CP960 IP phones) | SIP-T58V/T58A/T56A/SIP VP-T49G:<br>Settings->Preference->Wallpaper<br>Settings->Preference->Upload Wallpaper<br>SIP-T48G/T48S:<br>Settings->Preference->Wallpaper<br>Settings->Preference->Upload Wallpaper(480*272)<br>Settings->Preference->Wallpaper with DSSkey unfold<br>T54S/T52S/T46G/T46S/T29G:<br>Settings->Preference->Wallpaper<br>Settings->Preference->Upload Wallpaper(480*272)(Upload Wallpaper(320*240)) |
|                         | ExpWallpaper = 0<br>(only applicable to  | Settings->Preference->Wallpaper for Expansion Modules  |

| Section Header | Parameters and Default Value   | Configuration Items on the Web User Interface   |
|----------------|--|---|
|                | SIP-T58V/T58A/T56<br>A IP phones)  |   |
|                | screen-saver-wait-time = 0<br>(only applicable to SIP VP-T49G IP phones)                       | Settings->Preference->Screensaver Wait Time   |
|                | screen-saver-type = 0<br>(only applicable to SIP VP-T49G IP phones)                            | Settings->Preference->Screensaver Type<br>Settings->Preference->Screensaver                                   |
|                | ScreenSaver = 0<br>(only applicable to SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G IP phones)       | Settings->Preference-><br> |
|                | ScreenSaverUpload = 0<br>(only applicable to SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G IP phones) | Settings->Preference->Upload Screensaver<br>(only appear when the parameter "screensaver.type" is set to 1.)  |
|                | DHCP-Time = 0  | Settings->Time & Date->DHCP Time  |
|                | manual-time = 0  | Settings->Time & Date->Manual Time  |
|                | time_zone = 0  | Settings->Time & Date->Time Zone  |
|                | daylight-time = 0  | Settings->Time & Date->Daylight Saving Time   |
|                | location = 0   | Settings->Time & Date->Location   |
|                | time_type = 0  | Settings->Time & Date->Fixed Type   |
|                | daylight_date = 0  | Settings->Time & Date->Start Date<br>Settings->Time & Date->End Date  |
|                | offset = 0   | Settings->Time & Date->Offset(minutes)  |
|                | NTP_priority = 0   | Settings->Time & Date->NTP by DHCP Priority   |


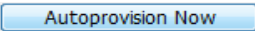
| Section Header           | Parameters and Default Value  | Configuration Items on the Web User Interface  |
|--------------------------|---|--|
| [ Time&Date ]            | prim_server = 0   | SIP-T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)<br>E2/CP860/W52P/W56P:<br>Settings->Time & Date->Primary Server<br>SIP-T58V/T58A/T56A/SIP VP-T49G:<br>Settings->Time & Date->Primary NTP Server                  |
|                          | sec_server = 0  | SIP-T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)<br>E2/CP860/W52P/W56P:<br>Settings->Time & Date->Secondary Server<br>SIP-T58V/T58A/T56A/SIP VP-T49G:<br>Settings->Time & Date->Secondary NTP Server              |
|                          | update_interval = 0   | SIP-T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)<br>E2/W52P/W56P/CP860:<br>Settings->Time & Date->Update Interval (15~86400s)<br>SIP-T58V/T58A/T56A/SIP VP-T49G:<br>Settings->Time & Date->Synchronism(15~86400s) |
| [ Time&Date ]            | manual-time-setting<br>gs = 0   | Settings->Time & Date->Manual Time<br>   |
|                          | time_format_setting = 0   | Settings->Time & Date->Time Format   |
|                          | date_format_setting = 0   | Settings->Time & Date->Date Format   |
| [ Settings-CallDisplay ] | Display-Contact-Photo = 0<br>(only applicable to SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T4 | Settings->Call Display->Display Contact Photo  |

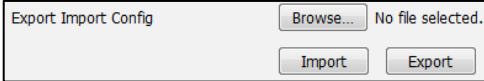
| Section Header       | Parameters and Default Value   | Configuration Items on the Web User Interface   |
|----------------------|--|---|
|                      | 6G/T46S/T29G IP phones)  |   |
|                      | Incoming-Call-Ringer-Animation = 0   | Settings->Call Display->Display Called Party Information  |
|                      | Call-Display-Method = 0  | Settings->Call Display->Call Information Display Method   |
| [ Settings-Upgrade ] | version_info = 0   | Settings->Upgrade->Version<br>  |
|                      | reset_to_factory = 2<br>(1 for SIP VP-T49G/W52P/W56P IP phones)                | SIP-T58V/T58A/T56A/SIP VP-T49G:<br>Settings->Upgrade->Reset to Factory Setting<br>SIP-T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)<br>E2/CP860/W52P/W56P:<br>Settings->Upgrade->Reset to factory |
|                      | reset_built_in_sdcard = 0<br>(only applicable to SIP-T58V/T58A/T56A IP phones) | Settings->Upgrade->Reset built-in SD card   |
|                      | reset = 0<br>(2 for SIP VP-T49G IP phones)                                     | Settings->Upgrade->Reset  |
| [ Settings-Upgrade ] | reset_local_settings = 0<br>(not applicable to                                 | Settings->Upgrade->Reset local settings<br>(only appear when the parameter "static.auto_provision.custom.protect" is set to 1.)   |

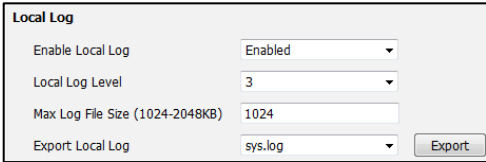
| Section Header       | Parameters and Default Value   | Configuration Items on the Web User Interface  |
|----------------------|--|--|
| [ Settings-Upgrade ] | SIP VP-T49G IP phones)   |  |
|                      | reset_nonstatic_settings = 0<br>(not applicable to SIP VP-T49G IP phones)  | Settings->Upgrade->Reset non-static settings (only appear when the parameter "static.auto_provision.custom.protect" is set to 1.)  |
|                      | reset_static_settings = 2<br>(not applicable to SIP VP-T49G IP phones)     | Settings->Upgrade->Reset static settings (only appear when the parameter "static.auto_provision.custom.protect" is set to 1.)  |
|                      | reset_userdata = 0<br>(not applicable to SIP VP-T49G IP phones)            | Settings->Upgrade->Reset userdata & local config (only appear when the parameter "static.auto_provision.custom.protect" is set to 1.)  |
|                      | reset_local_config = 0<br>(only applicable to SIP VP-T49G/CP860 IP phones) | Settings->Upgrade->Reset Local Configuration (only appear when the parameter "auto_provision.custom.protect" is set to 1.)   |
|                      | reboot_device = 0  | Settings->Upgrade->Reboot  |
|                      | upgrade_firmware = 0<br>(1 for SIP VP-T49G/W52P/W56P IP phones)            | SIP-T58V/T58A/T56A/SIP VP-T49G:<br>Settings->Upgrade->Upgrade<br> SIP-T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)<br>E2/CP860/W52P/W56P:<br>Settings->Upgrade->Select And Upgrade Firmware<br> |
|                      | upgrade_handset_firmware = 1<br>(only applicable to                        | Settings->Upgrade->Select and Upgrade Handset Firmware   |

| Section Header             | Parameters and Default Value  | Configuration Items on the Web User Interface               |  |
|----------------------------|---|---|--|
|                            | W52P/W56P IP<br>DECT phones)  |   |  |
| [ Settings-AutoProvision ] | pnp-active = 2  | Settings->Auto Provision->PNP Active                        |  |
|                            | dhcp-active = 2   | Settings->Auto Provision->DHCP Active                       |  |
|                            | custom-option = 2   | Settings->Auto Provision->Custom Option(128~254)            |  |
|                            | DHCP-Option-Value = 2   | Settings->Auto Provision->DHCP Option Value                 |  |
|                            | server-URL = 2  | Settings->Auto Provision->Server URL                        |  |
|                            | account = 2   | Settings->Auto Provision->User Name                         |  |
|                            | password = 2  | Settings->Auto Provision->Password                          |  |
|                            | attempt-expired-time = 2  | Settings->Auto Provision->Attempt Expired Time(s)           |  |
|                            | common-AES-key = 2  | Settings->Auto Provision->Common AES Key                    |  |
|                            | MAC-Oriented-AES-key = 2  | Settings->Auto Provision->MAC-Oriented AES Key              |  |
|                            | zero_active = 2<br>(not applicable to W52P/W56P IP DECT phones)           | Settings->Auto Provision->Zero Active                       |  |
|                            | wait_time = 2<br>(not applicable to W52P/W56P IP DECT phones)             | Settings->Auto Provision->Wait Time(1~100s)                 |  |
|                            | poweron-active = 2  | Settings->Auto Provision->Power On                          |  |
|                            | repeatedly-active = 2   | Settings->Auto Provision->Repeatedly                        |  |
|                            | repeat-interval = 2   | Settings->Auto Provision->Interval(Minutes)                 |  |
|                            | weekly-active = 2   | Settings->Auto Provision->Weekly                            |  |
|                            | weekly-upgrade-interval = 2<br>(not applicable to SIP-T58V/T58A/T56A/SIP) | Settings->Auto Provision->Weekly Upgrade Interval(0~12week) |  |
|                            | Settings-AutoProvision ]  |   |  |





| Section Header             | Parameters and Default Value   | Configuration Items on the Web User Interface  |
|----------------------------|--|--|
| [ Settings-AutoProvision ] | VP-T49G/CP860/CP960 IP phones)   |  |
|                            | inactivity-time-expire = 2<br>(not applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/CP860/CP960 IP phones) | Settings->Auto Provision->Inactivity Time Expire(0~120min)   |
|                            | autop-time = 2   | Settings->Auto Provision->Time   |
|                            | day-of-week = 2  | Settings->Auto Provision->Day of Week<br> |
|                            | flexible-switch = 2<br>(not applicable to SIP VP-T49G/CP860 IP phones)                                 | Settings->Auto Provision->Flexible Auto Provision  |
|                            | flexible-interval = 2<br>(not applicable to SIP VP-T49G/CP860 IP phones)                               | Settings->Auto Provision->Flexible Interval Days   |
|                            | flexible-autoptime = 2<br>(not applicable to SIP VP-T49G/CP860 IP phones)                              | Settings->Auto Provision->Flexible Time  |
|                            | btn-autop-now = 2  | Settings->Auto Provision-><br>           |
|                            | opt-configfile = 0<br>(1 for SIP VP-T49G IP phones)  | Settings->Configuration->Export Import Configuration (Export or Import Configuration)  |


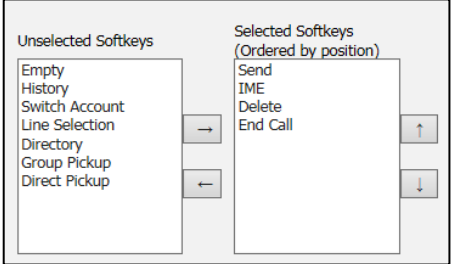
| Section Header      | Parameters and Default Value                                | Configuration Items on the Web User Interface  |
|---------------------|---|--|
| [ Settings-Config ] |   |    |
|                     | opt-factory-configfile = 0<br>(2 for SIP VP-T49G IP phones) | Settings->Configuration->Import Factory Configuration (for SIP VP-T49G: only appear when the parameter "features.custom_factory_config.enable" is set to 1; for other IP phones: only appear when the parameter "static.features.custom_factory_config.enable" is set to 1)  |
|                     | export-cfg-config-file = 0<br>(2 for SIP VP-T49G IP phones) | Settings->Configuration->Export CFG Configuration File   |
|                     | import-cfg-config-file = 0<br>(2 for SIP VP-T49G IP phones) | Settings->Configuration->Import CFG Configuration File   |
| [ Settings-Config ] | pcap_trace = 0<br>(1 for SIP VP-T49G IP phones)             | Settings->Configuration->Pcap Feature<br>Settings->Configuration->Packet Capture Count (only applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/CP960 IP phones)<br>Settings->Configuration->Packet Capture Clip Bytes (only applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/CP960 IP phones)<br>Settings->Configuration->Pcap Filter Type (only applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/CP960 IP phones)<br>Settings->Configuration->Packet Filter String (only applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/CP960 IP phones) |
|                     | syslog = 1<br>(only applicable to SIP-T58V/T58A/T56A/SIP)   | Settings->Configuration->Export System Log   |

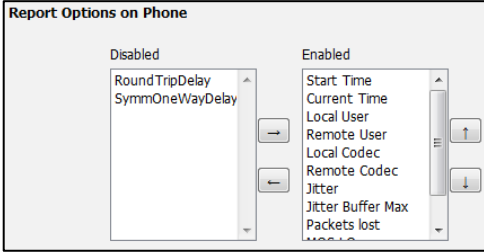
| Section Header      | Parameters and Default Value   | Configuration Items on the Web User Interface  |
|---------------------|--|--|
|                     | VP-T49G/CP960 IP phones)   |  |
|                     | SystemLogLevel = 2<br>(only applicable to SIP-T58V/T58A/T56 A/SIP VP-T49G/CP960 IP phones)         | Settings->Configuration->System Log Level  |
|                     | Local_Logging = 0<br>(not applicable to SIP-T58V/T58A/T56 A/SIP VP-T49G/CP960 IP phones)           | Settings->Configuration->Local Log<br>   |
|                     | Local_Log_Switch = 0<br>(not applicable to SIP-T58V/T58A/T56 A/SIP VP-T49G/CP960 IP phones)        | Settings->Configuration->Local Log->Enable Local Log   |
|                     | Local_Log_Level = 0<br>(not applicable to SIP-T58V/T58A/T56 A/SIP VP-T49G/CP960 IP phones)         | Settings->Configuration->Local Log->Local Log Level  |
| [ Settings-Config ] | Local_Log_Max_File_Size = 0<br>(not applicable to SIP-T58V/T58A/T56 A/SIP VP-T49G/CP960 IP phones) | For T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T29G/T27P/T27G/CP860:<br>Settings->Configuration->Local Logging->Max Log File Size (1024-2048KB)<br>For SIP-T40P/T40G/T23P/T23G/T21(P) E2/T19(P) E2:<br>Settings->Configuration->Local Logging->Max Log File Size (256-1024KB) |
|                     | Local_Log_Export = 0   | Settings->Configuration->Local Log->Export Local Log   |

| Section Header      | Parameters and Default Value   | Configuration Items on the Web User Interface  |
|---------------------|--|--|
|                     | (not applicable to SIP-T58V/T58A/T56 A/SIP VP-T49G/CP960 IP phones)                              |  |
| [ Settings-Config ] | Syslog_Switch = 2<br>(not applicable to SIP-T58V/T58A/T56 A/SIP VP-T49G/CP960 IP phones)         | Settings->Configuration->Syslog->Enable Syslog   |
|                     | Syslog_Server = 2<br>(not applicable to SIP-T58V/T58A/T56 A/SIP VP-T49G/CP960 IP phones)         | Settings->Configuration->Syslog->Syslog Server<br>Settings->Configuration->Syslog->Syslog Server->Port |
|                     | Syslog_Transport_Type = 2<br>(not applicable to SIP-T58V/T58A/T56 A/SIP VP-T49G/CP960 IP phones) | Settings->Configuration->Syslog->Syslog Transport Type   |
|                     | Syslog_Level = 2<br>(not applicable to SIP-T58V/T58A/T56 A/SIP VP-T49G/CP960 IP phones)          | Settings->Configuration->Syslog->Syslog Level  |
|                     | Syslog_Facility = 2<br>(not applicable to SIP-T58V/T58A/T56 A/SIP VP-T49G/CP960 IP phones)       | Settings->Configuration->Syslog->Syslog Facility   |
|                     | Syslog_Prepend_Mac = 2   | Settings->Configuration->Syslog->Syslog Prepend MAC  |

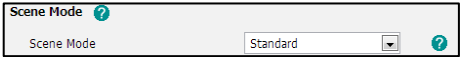
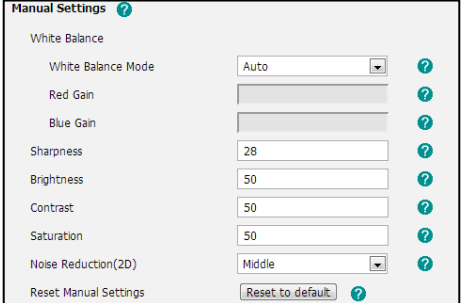
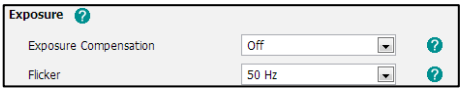
| Section Header        | Parameters and Default Value   | Configuration Items on the Web User Interface  |
|-----------------------|--|--|
|                       | (not applicable to SIP-T58V/T58A/T56 A/SIP<br>VP-T49G/CP960 IP phones)   |  |
|                       | ExportAllDiagnostic Files = 2<br>(not applicable to SIP-T58V/T58A/T56 A/SIP<br>VP-T49G/CP860/CP960 IP phones)  | Settings->Configuration->Export All Diagnostic Files   |
| [ Settings-DialPlan ] | replace-rule = 0   | Settings->Dial Plan->Replace Rule (the whole page)   |
|                       | dial-now = 0   | Settings->Dial Plan->Dial Now (the whole page)   |
|                       | area-code = 0  | Settings->Dial Plan->Area Code (the whole page)  |
|                       | block-out = 0  | Settings->Dial Plan->Block Out (the whole page)  |
|                       | replace-rule-control = 0   | Settings->Dial Plan->Replace Rule->Prefix<br>Settings->Dial Plan->Replace Rule->Replace<br>Settings->Dial Plan->Replace Rule->Account<br>(not applicable to SIP-T19(P) E2/CP860 IP phones) |
|                       | dial-now-control = 0   | Settings->Dial Plan->Dial Now->Rule<br>Settings->Dial Plan->Dial Now->Account<br>(not applicable to SIP-T19(P) E2/CP860 IP phones)   |
| area-code-control = 0 | Settings->Dial Plan->Area Code->Code<br>Settings->Dial Plan->Area Code->Min Length (1-15)<br>Settings->Dial Plan->Area Code->Max Length (1-15)<br>Settings->Dial Plan->Area Code->Account<br>(not applicable to SIP-T19(P) E2/CP860 IP phones) |  |

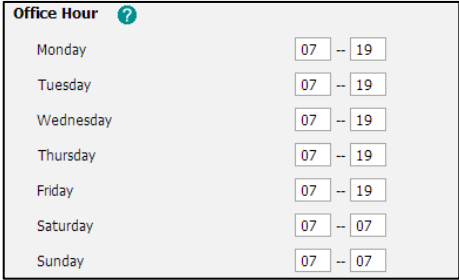
| Section Header  | Parameters and Default Value                                     | Configuration Items on the Web User Interface  |
|---|--|--|
| [ Settings-DialPlan ]   | block-out-control = 0  | Settings->Dial Plan->Block Out->BlockOut NumberX(X=1,2,...,10)<br>Settings->Dial Plan->Block Out->Account (not applicable to SIP-T19(P) E2/CP860 IP phones)  |
| [ Settings-Voice ]  | echo-cancellation = 2<br>(0 for SIP VP-T49G/W52P/W56P IP phones) | Settings->Voice->Echo Cancellation<br>   |
|   | jitter-buffer = 2<br>(0 for SIP VP-T49G/W52P/W56P IP phones)     | Settings->Voice->JITTER BUFFER<br>   |
| [ Settings-Ring ]<br>(not applicable to W52P/W56P IP DECT phones) | personal-ring = 2<br>(1 for SIP VP-T49G IP phones)               | Settings->Ring->Internal Ringer Text<br>Settings->Ring->Internal Ringer File   |
| [ Settings-Tones ]  | tone-items = 2<br>(0 for SIP VP-T49G/W52P/W56P IP phones)        | Settings->Tones->Select Country<br>Settings->Tones->Dial<br>Settings->Tones->Secondary Dial (not applicable to SIP VP-T49G/CP860/W56P/W52P IP phones)<br>Settings->Tones->Ring Back<br>Settings->Tones->Busy<br>Settings->Tones->Congestion (not applicable to W56P/W52P IP DECT phones)<br>Settings->Tones->Call Waiting<br>Settings->Tones->Dial Recall (not applicable to W56P/W52P IP DECT phones)<br>Settings->Tones->Info (not applicable to W56P/W52P IP DECT phones)<br>Settings->Tones->Stutter (not applicable to W56P/W52P IP DECT phones)<br>Settings->Tones->Message (not applicable to SIP-T58V/T58A/T56A/W56P/W52P IP |

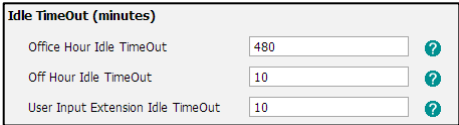
| Section Header  | Parameters and Default Value  | Configuration Items on the Web User Interface   |
|---|---|---|
|   |   | phones)<br>Settings->Tones->Auto Answer (not applicable to W52P/W56P IP DECT phones)  |
|   | tone-country = 2<br>(not applicable to SIP-T58V/T58A/T56 A/SIP VP-T49G/CP860 IP phones) | Settings->Tones->Select Country   |
| [ Softkey ]<br>(not applicable to W52P/W56P IP DECT phones) | Custom_SoftKey = 2  | Settings->Softkey Layout->Custom Softkey  |
|   | SoftKey_Type = 2  | Settings->Softkey Layout->Call States<br> |
|   | SoftKey_Select = 2  | Settings->Softkey Layout-><br>           |
| [ TR069 ]   | head = 2  | Settings->TR069-> <b>TR069</b> ?  |
|   | EnableTR069 = 2   | Settings->TR069->Enable TR069   |
|   | ACSUsername = 2   | Settings->TR069->ACS Username   |
|   | ACSPassword = 2   | Settings->TR069->ACS Password   |
|   | ACSURL = 2  | Settings->TR069->ACS URL  |
|   | EnablePeriodicInform = 2  | Settings->TR069->Enable Periodic Inform   |
|   | PeriodicInformInterval = 2  | Settings->TR069->Periodic Inform Interval (seconds)   |
|   | RequestUsername = 2   | Settings->TR069->Connection Request Username  |
| RequestPassword = 2   | Settings->TR069->Connection Request Password  |   |
| [ Settings-VoiceMonitoring ]                                | RTCP-Session-Report = 2   | Settings->Voice Monitoring->VQ RTCP-XR Session Report   |

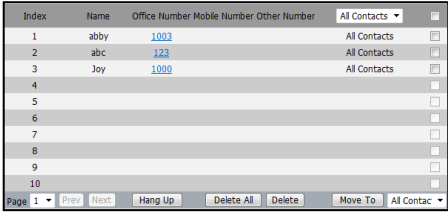
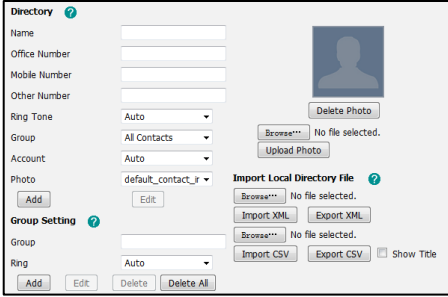
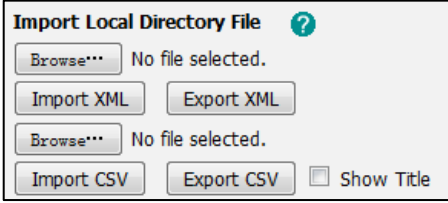

| Section Header               | Parameters and Default Value  | Configuration Items on the Web User Interface   |
|------------------------------|---|---|
| [ Settings-VoiceMonitoring ] | RTCP-Interval-Report = 2  | Settings->Voice Monitoring->VQ RTCP-XR Interval Report  |
|                              | RTCP-Interval-Period = 2  | Settings->Voice Monitoring->Period for Interval Report  |
|                              | RTCP-Warning-Moslq = 2  | Settings->Voice Monitoring->Warning threshold for Moslq   |
|                              | RTCP-Critical-Moslq = 2   | Settings->Voice Monitoring->Critical threshold for Moslq  |
|                              | RTCP-Warning-Delay = 2  | Settings->Voice Monitoring->Warning threshold for Delay   |
|                              | RTCP-Critical-Delay = 2   | Settings->Voice Monitoring->Critical threshold for Delay  |
|                              | Display-VQReport-On-Web = 2   | Settings->Voice Monitoring->Display Report options on Web   |
|                              | Display-VQReport-On-UI = 2  | Settings->Voice Monitoring->Display Report options on phone   |
|                              | Voice-RTCP-XR-Report = 2<br>(not applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/CP860/CP960 IP phones)  | Settings->Voice Monitoring->Voice RTCP-XR Report  |
| RTCP-Report-Options = 2      | Settings->Voice Monitoring->Report Options on Phone<br><br> |   |
| [ Settings-SIP ]             | sip-session-timer = 2   | Settings->SIP->SIP Session Timer T1 (0.5~10s)<br>Settings->SIP->SIP Session Timer T2 (2~40s)<br>Settings->SIP->SIP Session Timer T4 |


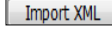

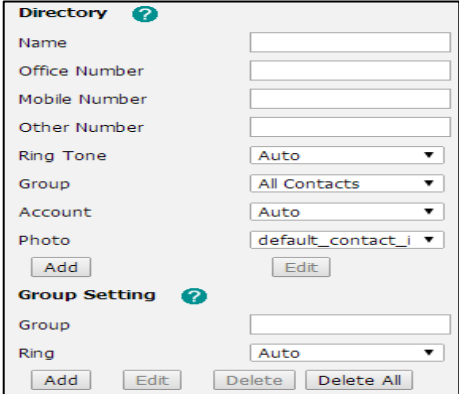
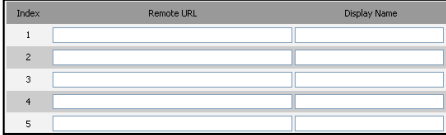


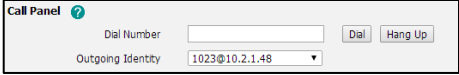
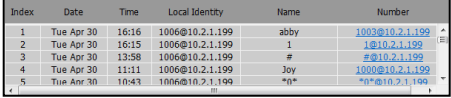
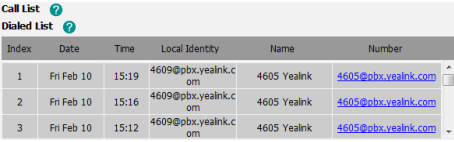
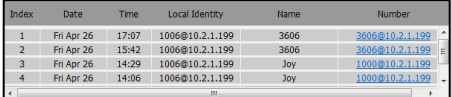
| Section Header   | Parameters and Default Value  | Configuration Items on the Web User Interface   |
|--|---|---|
|  |   | (2.5~60s)   |
|  | local-SIP-port = 2  | Settings->SIP->Local SIP Port   |
|  | TLS-SIP-Port = 2  | Settings->SIP->TLS SIP Port   |
| <p>[ Settings-Camera ]<br/>(only applicable to SIP VP-T49G IP phones)</p>              | scene-mode = 2  | Settings->Camera->Scene Mode<br>  |
|  | manual-settings = 2   | Settings->Camera->Manual Settings (only appear when the parameter "camera.scene_mode" is set to 0)<br> |
|  | exposure = 2  | Settings->Camera->Exposure<br>  |
|  | status-bar-icon = 2   | Settings->Camera->Camera Icon on Status Bar   |
| <p>[ Settings-Video ]<br/>(only applicable to SIP-T58V/T58A/SIP VP-T49G IP phones)</p> | video-active = 0  | Settings->Video->Video Active   |
|  | auto-start-video = 0<br>(not applicable to SIP-T58V/T58A IP phones)       | Settings->Video->Auto Start Video   |
|  | auto-answer-video-mute = 0<br>(not applicable to SIP-T58V/T58A IP phones) | Settings->Video->Auto Answer Video Mute   |
|  | uplink-bandwidth = 2<br>(not applicable to                                | Settings->Video->Uplink Bandwidth   |

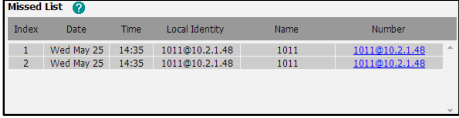
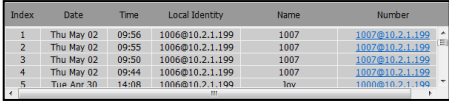
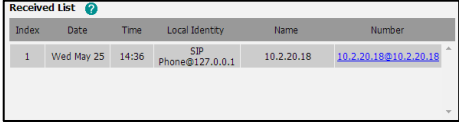
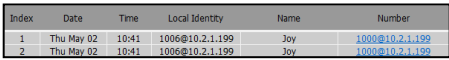
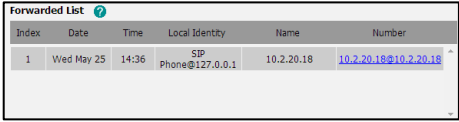
| Section Header   | Parameters and Default Value  | Configuration Items on the Web User Interface  |
|--|---|--|
|  | SIP-T58V/T58A IP phones)  |  |
|  | downlink-bandwidth = 2<br>(not applicable to SIP-T58V/T58A IP phones) | Settings->Video->Downlink Bandwidth  |
| [ Settings-Power Saving ]<br>(not applicable to SIP-T19(P) E2 IP phones) | enable = 2<br>(not applicable to SIP VP-T49G/CP960 IP phones)         | Settings->Power Saving->Power Saving   |
|  | office_hour = 0<br>(2 for SIP VP-T49G IP phones)                      | Settings->Power Saving->Office Hour<br> |
|  | office_Monday = 0<br>(2 for SIP VP-T49G IP phones)                    | Settings->Power Saving->Monday   |
|  | office_Tuesday = 0<br>(2 for SIP VP-T49G IP phones)                   | Settings->Power Saving->Tuesday  |
|  | office_Wednesday = 0<br>(2 for SIP VP-T49G IP phones)                 | Settings->Power Saving->Wednesday  |
|  | office_Thursday = 0<br>(2 for SIP VP-T49G IP phones)                  | Settings->Power Saving->Thursday   |
|  | office_Friday = 0<br>(2 for SIP VP-T49G IP phones)                    | Settings->Power Saving->Friday   |
|  | office_Saturday = 0   | Settings->Power Saving->Saturday   |

| Section Header  | Parameters and Default Value   | Configuration Items on the Web User Interface  |
|---|--|--|
| [ Settings-PowerSaving ]<br>(not applicable to SIP-T19(P) E2 IP phones) | (2 for SIP VP-T49G IP phones)  |  |
|   | office_sunday = 0<br>(2 for SIP VP-T49G IP phones)   | Settings->Power Saving->Sunday   |
|   | idle_timeout = 0<br>(2 for SIP VP-T49G IP phones)  | Settings->Power Saving->Idle TimeOut (minutes)<br> |
|   | office_timeout = 0<br>(2 for SIP VP-T49G IP phones)  | Settings->Power Saving->Office Hour Idle TimeOut   |
|   | off_timeout = 0<br>(2 for SIP VP-T49G IP phones)   | Settings->Power Saving->Off Hour Idle TimeOut  |
|   | user_input_ext_timeout = 0<br>(2 for SIP VP-T49G IP phones)                                      | Settings->Power Saving->User Input Extension Idle TimeOut  |
| [ Contacts ]  | contacts-basic = 0   | Directory->Local Directory (the whole page)  |
|   | contacts-remote = 1<br>(0 for SIP VP-T49G IP phones)   | Directory->Remote Phone Book (the whole page)  |
|   | contacts-callinfo = 0<br>(not applicable to W52P/W56P IP DECT phones)                            | Directory->Phone Call Info (the whole page)  |
|   | contacts-LDAP = 1<br>(0 for SIP VP-T49G W52P/W56P IP phones; not applicable to SIP-T19(P) E2 IP) | Directory->LDAP (the whole page)   |

| Section Header   | Parameters and Default Value   | Configuration Items on the Web User Interface   |
|--|--|---|
|  | phones)  |   |
|  | contacts-multicastIP = 1<br>(0 for SIP VP-T49G IP phones)                | Directory-> Multicast IP (the whole page)   |
|  | contacts-favorite = 0  | Directory-> Setting (the whole page)  |
| [ Contacts-Basic ]<br>(only applicable to W56P IP DECT phones) | download-contacts = 0  | Directory-> Local Directory-> File Template Download  |
|  | importcontacts = 0   | Directory-> Local Directory-> Import Contacts   |
|  | export-contacts = 0  | Directory-> Local Directory-> Export Contacts   |
|  | contact-list = 0<br>(not applicable to W52P/W56P IP DECT phones)         | Directory-> Local Directory<br>                                |
|  | all-contacts-control = 0<br>(not applicable to W52P/W56P IP DECT phones) | Directory-> Local Directory<br>                               |
| [ LocalPhoneBook ]<br>(not applicable to W56P IP DECT phones)  | import-export-contacts = 0<br>(1 for SIP VP-T49G/W52P/W56P IP phones)    | Directory-> Local Directory-> Import Local Directory File<br> |
|  | btnImportCSV = 0<br>(1 for SIP VP-T49G/W52P/W56P IP phones)              | Directory-> Local Directory->                                |

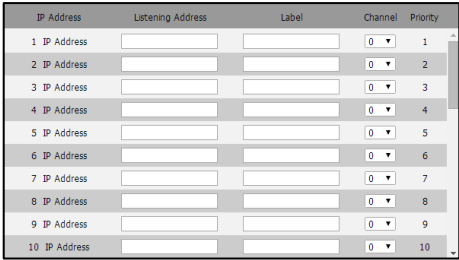
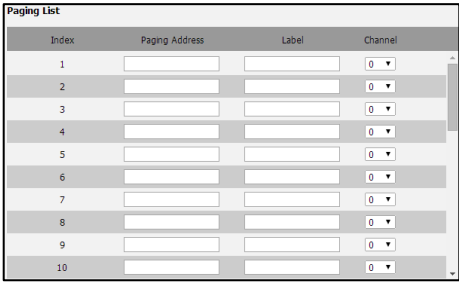
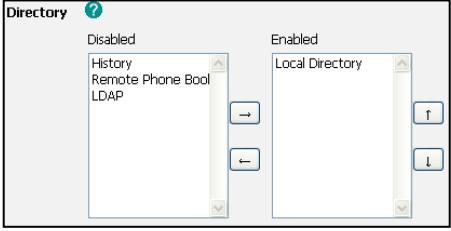
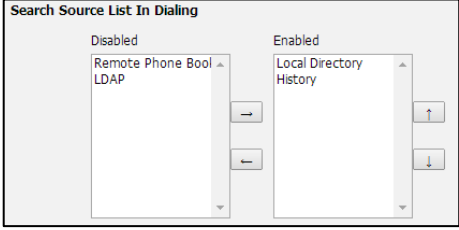
| Section Header  | Parameters and Default Value   | Configuration Items on the Web User Interface  |
|---|--|--|
| [ LocalPhoneBook ]<br>(not applicable to W56P IP DECT phones) | phones)  |  |
|   | btnExportCSV = 0<br>(1 for SIP VP-T49G/W52P/W56P IP phones)          | Directory->Local Directory->        |
|   | btnImportXML = 0<br>(1 for SIP VP-T49G/W52P/W56P IP phones)          | Directory->Local Directory->        |
|   | btnExportXML = 0<br>(1 for SIP VP-T49G/W52P/W56P IP phones)          | Directory->Local Directory->        |
|   | opt-contacts = 0<br>(not applicable to W52P/W56P IP DECT phones)     | Directory->Local Directory-><br>   |
| [ Contacts-Remote ]   | remote-phonebook-list = 1<br>(0 for SIP VP-T49G/W52P/W56P IP phones) | Directory->Remote Phone Book-><br> |
|   | SRemoteNameEnable = 1<br>(0 for SIP VP-T49G/W52P/W56P IP phones)     | Directory->Remote Phone Book->Incoming/Outgoing Call Lookup  |
|   | SRemoteNameFlashTime = 1   | Directory->Remote Phone Book->Update Time Interval(Seconds)  |

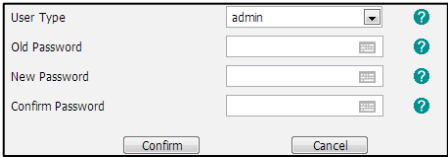

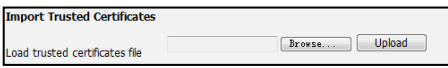

| Section Header  | Parameters and Default Value  | Configuration Items on the Web User Interface   |
|---|---|---|
|   | (0 for SIP VP-T49G/W52P/W56P IP phones)   |   |
| [ PhoneCallInfo ]<br>(not applicable to W52P/W56P IP DECT phones) | call-control = 0  | Directory->Phone Call Info->Call Panel<br>    |
|   | dialed-list-title = 0<br>(only applicable to SIP-T58V/T58A/T56 AVP-T49G IP phones)        | Directory->Phone Call Info-> <b>Call Log</b> ?<br><br>Directory->Phone Call Info-> <b>Placed List</b> ?                         |
|   | dialed-list-content = 0<br>(only applicable to SIP-T58V/T58A/T56 A/SIP VP-T49G IP phones) | Directory->Phone Call Info->Placed List<br>  |
|   | dialed-list = 0<br>(not applicable to SIP-T58V/T58A/T56 A/SIP VP-T49G/CP960 IP phones)    | Directory->Phone Call Info-><br>            |
|   | missed-list-title = 0<br>(only applicable to SIP-T58V/T58A/T56 A/SIP VP-T49G IP phones)   | Directory->Phone Call Info-> <b>Missed List</b> ?   |
|   | missed-list-content = 0<br>(only applicable to SIP-T58V/T58A/T56 A/SIP VP-T49G IP phones) | Directory->Phone Call Info->Missed List<br> |
| missed-list = 0<br>(not applicable to SIP-T58V/T58A/T56)          | Directory->Phone Call Info->  |   |


 
| Section Header   | Parameters and Default Value   | Configuration Items on the Web User Interface   |                     |                 |                       |                 |        |        |            |            |                     |                 |                       |                 |            |            |                 |                 |                 |                 |   |            |       |                 |      |                 |   |            |       |                 |      |                 |   |            |       |                 |     |                 |
|--|--|---|---------------------|-----------------|-----------------------|-----------------|--------|--------|------------|------------|---------------------|-----------------|-----------------------|-----------------|------------|------------|-----------------|-----------------|-----------------|-----------------|---|------------|-------|-----------------|------|-----------------|---|------------|-------|-----------------|------|-----------------|---|------------|-------|-----------------|-----|-----------------|
| <p>[ PhoneCallInfo ]<br/>(not applicable to W52P/W56P IP DECT phones)</p>                            | <p>A/SIP<br/>VP-T49G/CP960 IP phones)</p>  |  <table border="1"> <thead> <tr> <th>Index</th> <th>Date</th> <th>Time</th> <th>Local Identity</th> <th>Name</th> <th>Number</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>Wed May 25</td> <td>14:35</td> <td>1011@10.2.1.148</td> <td>1011</td> <td>1011@10.2.1.148</td> </tr> <tr> <td>2</td> <td>Wed May 25</td> <td>14:35</td> <td>1011@10.2.1.148</td> <td>1011</td> <td>1011@10.2.1.148</td> </tr> </tbody> </table>  | Index               | Date            | Time                  | Local Identity  | Name   | Number | 1          | Wed May 25 | 14:35               | 1011@10.2.1.148 | 1011                  | 1011@10.2.1.148 | 2          | Wed May 25 | 14:35           | 1011@10.2.1.148 | 1011            | 1011@10.2.1.148 |   |            |       |                 |      |                 |   |            |       |                 |      |                 |   |            |       |                 |     |                 |
|  | Index  | Date  | Time                | Local Identity  | Name                  | Number          |        |        |            |            |                     |                 |                       |                 |            |            |                 |                 |                 |                 |   |            |       |                 |      |                 |   |            |       |                 |      |                 |   |            |       |                 |     |                 |
|  | 1  | Wed May 25  | 14:35               | 1011@10.2.1.148 | 1011                  | 1011@10.2.1.148 |        |        |            |            |                     |                 |                       |                 |            |            |                 |                 |                 |                 |   |            |       |                 |      |                 |   |            |       |                 |      |                 |   |            |       |                 |     |                 |
|  | 2  | Wed May 25  | 14:35               | 1011@10.2.1.148 | 1011                  | 1011@10.2.1.148 |        |        |            |            |                     |                 |                       |                 |            |            |                 |                 |                 |                 |   |            |       |                 |      |                 |   |            |       |                 |      |                 |   |            |       |                 |     |                 |
|  | <p>received-list-title = 0<br/>(only applicable to SIP-T58V/T58A/T56 A/SIP VP-T49G IP phones)</p>  | <p>Directory-&gt;Phone Call Info-&gt; <b>Received List</b> ?</p>  |                     |                 |                       |                 |        |        |            |            |                     |                 |                       |                 |            |            |                 |                 |                 |                 |   |            |       |                 |      |                 |   |            |       |                 |      |                 |   |            |       |                 |     |                 |
|  | <p>received-list-content = 0<br/>(only applicable to SIP-T58V/T58A/T56 A/SIP VP-T49G IP phones)</p>  | <p>Directory-&gt;Phone Call Info-&gt;Received List</p>  <table border="1"> <thead> <tr> <th>Index</th> <th>Date</th> <th>Time</th> <th>Local Identity</th> <th>Name</th> <th>Number</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>Thu May 02</td> <td>09:56</td> <td>1006@10.2.1.199</td> <td>1007</td> <td>1007@10.2.1.199</td> </tr> <tr> <td>2</td> <td>Thu May 02</td> <td>09:55</td> <td>1006@10.2.1.199</td> <td>1007</td> <td>1007@10.2.1.199</td> </tr> <tr> <td>3</td> <td>Thu May 02</td> <td>09:50</td> <td>1006@10.2.1.199</td> <td>1007</td> <td>1007@10.2.1.199</td> </tr> <tr> <td>4</td> <td>Thu May 02</td> <td>09:44</td> <td>1006@10.2.1.199</td> <td>1007</td> <td>1007@10.2.1.199</td> </tr> <tr> <td>5</td> <td>Tue Apr 30</td> <td>14:08</td> <td>1006@10.2.1.199</td> <td>Joy</td> <td>1006@10.2.1.199</td> </tr> </tbody> </table> | Index               | Date            | Time                  | Local Identity  | Name   | Number | 1          | Thu May 02 | 09:56               | 1006@10.2.1.199 | 1007                  | 1007@10.2.1.199 | 2          | Thu May 02 | 09:55           | 1006@10.2.1.199 | 1007            | 1007@10.2.1.199 | 3 | Thu May 02 | 09:50 | 1006@10.2.1.199 | 1007 | 1007@10.2.1.199 | 4 | Thu May 02 | 09:44 | 1006@10.2.1.199 | 1007 | 1007@10.2.1.199 | 5 | Tue Apr 30 | 14:08 | 1006@10.2.1.199 | Joy | 1006@10.2.1.199 |
|  | Index  | Date  | Time                | Local Identity  | Name                  | Number          |        |        |            |            |                     |                 |                       |                 |            |            |                 |                 |                 |                 |   |            |       |                 |      |                 |   |            |       |                 |      |                 |   |            |       |                 |     |                 |
| 1  | Thu May 02   | 09:56   | 1006@10.2.1.199     | 1007            | 1007@10.2.1.199       |                 |        |        |            |            |                     |                 |                       |                 |            |            |                 |                 |                 |                 |   |            |       |                 |      |                 |   |            |       |                 |      |                 |   |            |       |                 |     |                 |
| 2  | Thu May 02   | 09:55   | 1006@10.2.1.199     | 1007            | 1007@10.2.1.199       |                 |        |        |            |            |                     |                 |                       |                 |            |            |                 |                 |                 |                 |   |            |       |                 |      |                 |   |            |       |                 |      |                 |   |            |       |                 |     |                 |
| 3  | Thu May 02   | 09:50   | 1006@10.2.1.199     | 1007            | 1007@10.2.1.199       |                 |        |        |            |            |                     |                 |                       |                 |            |            |                 |                 |                 |                 |   |            |       |                 |      |                 |   |            |       |                 |      |                 |   |            |       |                 |     |                 |
| 4  | Thu May 02   | 09:44   | 1006@10.2.1.199     | 1007            | 1007@10.2.1.199       |                 |        |        |            |            |                     |                 |                       |                 |            |            |                 |                 |                 |                 |   |            |       |                 |      |                 |   |            |       |                 |      |                 |   |            |       |                 |     |                 |
| 5  | Tue Apr 30   | 14:08   | 1006@10.2.1.199     | Joy             | 1006@10.2.1.199       |                 |        |        |            |            |                     |                 |                       |                 |            |            |                 |                 |                 |                 |   |            |       |                 |      |                 |   |            |       |                 |      |                 |   |            |       |                 |     |                 |
| <p>received-list = 0<br/>(not applicable to SIP-T58V/T58A/T56 A/SIP VP-T49G/CP960 IP phones)</p>     | <p>Directory-&gt;Phone Call Info-&gt;</p>  <table border="1"> <thead> <tr> <th>Index</th> <th>Date</th> <th>Time</th> <th>Local Identity</th> <th>Name</th> <th>Number</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>Wed May 25</td> <td>14:36</td> <td>SIP Phone@127.0.0.1</td> <td>10.2.20.18</td> <td>10.2.20.18@10.2.20.18</td> </tr> </tbody> </table>  | Index   | Date                | Time            | Local Identity        | Name            | Number | 1      | Wed May 25 | 14:36      | SIP Phone@127.0.0.1 | 10.2.20.18      | 10.2.20.18@10.2.20.18 |                 |            |            |                 |                 |                 |                 |   |            |       |                 |      |                 |   |            |       |                 |      |                 |   |            |       |                 |     |                 |
| Index  | Date   | Time  | Local Identity      | Name            | Number                |                 |        |        |            |            |                     |                 |                       |                 |            |            |                 |                 |                 |                 |   |            |       |                 |      |                 |   |            |       |                 |      |                 |   |            |       |                 |     |                 |
| 1  | Wed May 25   | 14:36   | SIP Phone@127.0.0.1 | 10.2.20.18      | 10.2.20.18@10.2.20.18 |                 |        |        |            |            |                     |                 |                       |                 |            |            |                 |                 |                 |                 |   |            |       |                 |      |                 |   |            |       |                 |      |                 |   |            |       |                 |     |                 |
| <p>forwarded-list-title = 0<br/>(only applicable to SIP-T58V/T58A/T56 A/SIP VP-T49G IP phones)</p>   | <p>Directory-&gt;Phone Call Info-&gt; <b>Forwarded List</b> ?</p>  |   |                     |                 |                       |                 |        |        |            |            |                     |                 |                       |                 |            |            |                 |                 |                 |                 |   |            |       |                 |      |                 |   |            |       |                 |      |                 |   |            |       |                 |     |                 |
| <p>forwarded-list-content = 0<br/>(only applicable to SIP-T58V/T58A/T56 A/SIP VP-T49G IP phones)</p> | <p>Directory-&gt;Phone Call Info-&gt;Forwarded List</p>  <table border="1"> <thead> <tr> <th>Index</th> <th>Date</th> <th>Time</th> <th>Local Identity</th> <th>Name</th> <th>Number</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>Thu May 02</td> <td>10:41</td> <td>1006@10.2.1.199</td> <td>Joy</td> <td>1006@10.2.1.199</td> </tr> <tr> <td>2</td> <td>Thu May 02</td> <td>10:41</td> <td>1006@10.2.1.199</td> <td>Joy</td> <td>1006@10.2.1.199</td> </tr> </tbody> </table> | Index   | Date                | Time            | Local Identity        | Name            | Number | 1      | Thu May 02 | 10:41      | 1006@10.2.1.199     | Joy             | 1006@10.2.1.199       | 2               | Thu May 02 | 10:41      | 1006@10.2.1.199 | Joy             | 1006@10.2.1.199 |                 |   |            |       |                 |      |                 |   |            |       |                 |      |                 |   |            |       |                 |     |                 |
| Index  | Date   | Time  | Local Identity      | Name            | Number                |                 |        |        |            |            |                     |                 |                       |                 |            |            |                 |                 |                 |                 |   |            |       |                 |      |                 |   |            |       |                 |      |                 |   |            |       |                 |     |                 |
| 1  | Thu May 02   | 10:41   | 1006@10.2.1.199     | Joy             | 1006@10.2.1.199       |                 |        |        |            |            |                     |                 |                       |                 |            |            |                 |                 |                 |                 |   |            |       |                 |      |                 |   |            |       |                 |      |                 |   |            |       |                 |     |                 |
| 2  | Thu May 02   | 10:41   | 1006@10.2.1.199     | Joy             | 1006@10.2.1.199       |                 |        |        |            |            |                     |                 |                       |                 |            |            |                 |                 |                 |                 |   |            |       |                 |      |                 |   |            |       |                 |      |                 |   |            |       |                 |     |                 |
| <p>forwarded-list = 0<br/>(not applicable to SIP-T58V/T58A/T56 A/SIP VP-T49G/CP960 IP</p>            | <p>Directory-&gt;Phone Call Info-&gt;</p>  <table border="1"> <thead> <tr> <th>Index</th> <th>Date</th> <th>Time</th> <th>Local Identity</th> <th>Name</th> <th>Number</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>Wed May 25</td> <td>14:36</td> <td>SIP Phone@127.0.0.1</td> <td>10.2.20.18</td> <td>10.2.20.18@10.2.20.18</td> </tr> </tbody> </table>  | Index   | Date                | Time            | Local Identity        | Name            | Number | 1      | Wed May 25 | 14:36      | SIP Phone@127.0.0.1 | 10.2.20.18      | 10.2.20.18@10.2.20.18 |                 |            |            |                 |                 |                 |                 |   |            |       |                 |      |                 |   |            |       |                 |      |                 |   |            |       |                 |     |                 |
| Index  | Date   | Time  | Local Identity      | Name            | Number                |                 |        |        |            |            |                     |                 |                       |                 |            |            |                 |                 |                 |                 |   |            |       |                 |      |                 |   |            |       |                 |      |                 |   |            |       |                 |     |                 |
| 1  | Wed May 25   | 14:36   | SIP Phone@127.0.0.1 | 10.2.20.18      | 10.2.20.18@10.2.20.18 |                 |        |        |            |            |                     |                 |                       |                 |            |            |                 |                 |                 |                 |   |            |       |                 |      |                 |   |            |       |                 |      |                 |   |            |       |                 |     |                 |

| Section Header   | Parameters and Default Value  | Configuration Items on the Web User Interface  |
|--|---|--|
|  | phones)   |  |
| [ LDAP ]<br>(not applicable to SIP-T19(P) E2 IP phones)    | enable-LDAP = 0   | Directory->LDAP->Enable LDAP                   |
|  | LDAP-name-filter = 0  | Directory->LDAP->LDAP Name Filter              |
|  | LDAP-number-filter = 0  | Directory->LDAP->LDAP Number Filter            |
|  | LDAP-TLS-Mode = 0   | Directory->LDAP->LDAP TLS Mode                 |
|  | server-address = 0  | Directory->LDAP->Server Address                |
|  | port = 0  | Directory->LDAP->Port                          |
|  | base = 0  | Directory->LDAP->Base                          |
|  | user-name = 0   | Directory->LDAP->Username                      |
|  | password = 0  | Directory->LDAP->Password                      |
|  | maxhits = 0   | Directory->LDAP->Max Hits (1~32000)            |
|  | LDAP-name-attributes = 0  | Directory->LDAP->LDAP Name Attributes          |
|  | LDAP-number-attributes = 0  | Directory->LDAP->LDAP Number Attributes        |
|  | LDAP-display-name = 0   | Directory->LDAP->LDAP Display Name             |
|  | [ LDAP ]<br>(not applicable to SIP-T19(P) E2 IP phones)               | protocol = 0                                   |
| LDAP-lookup-for-incoming-call = 0                          |   | Directory->LDAP->LDAP Lookup For Incoming Call |
| LDAP-lookup-for-callout = 0                                |   | Directory->LDAP->LDAP Lookup For Callout       |
| LDAP-sorting-results = 0                                   |   | Directory->LDAP->LDAP Sorting Results          |
| [ MulticastIP ]<br>(not applicable to W56P IP DECT phones) | Receive_Priority = 1<br>(0 for SIP VP-T49G IP phones)                 | Directory->Multicast IP->Paging Barge          |
|  | Ignore_DND =2<br>(not applicable to SIP-T58V/T58A/T56A/SIP-T49G/CP960 | Directory->Multicast IP->Ignore DND            |



| Section Header               | Parameters and Default Value   | Configuration Items on the Web User Interface   |
|------------------------------|--|---|
|                              | <p>IP phones)</p> <p>PagePriorityActive = 1<br/>(0 for SIP VP-T49G IP phones)</p> <p>MulticastIPConfig = 1<br/>(0 for SIP VP-T49G IP phones)</p> <p>PagingList = 1<br/>(0 for SIP VP-T49G IP phones)</p> | <p>Directory-&gt;Multicast IP-&gt;Paging Priority Active</p> <p>Directory-&gt;Multicast IP-&gt;</p>  <p>Directory-&gt;Multicast IP-&gt;Paging List</p>                 |
| <p>[ Contacts-Favorite ]</p> | <p>contacts-group = 0<br/>(not applicable to SIP-T58V/T58A/T56 A/SIP VP-T49G/W52P/W5 6P IP phones)</p> <p>super-search = 0</p>   | <p>Directory-&gt;Setting-&gt;Directory</p>  <p>Directory-&gt;Setting-&gt;Search Source List In Dialing</p>  <p>Directory-&gt;Setting-&gt;Recent Call In Dialing</p> |
|                              | <p>password = 0</p>  | <p>Security-&gt;Password (the whole page)</p>   |

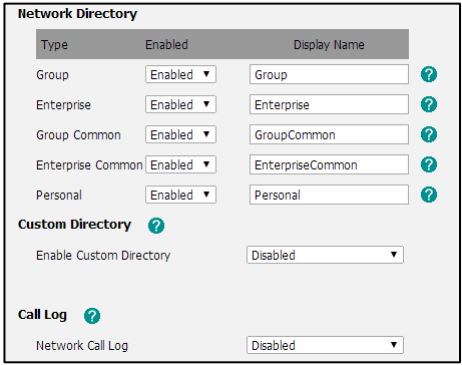
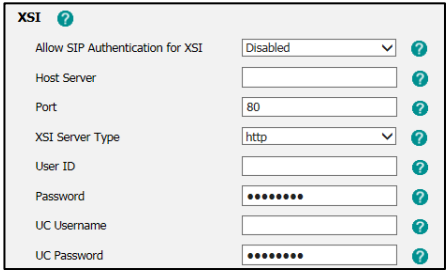
| Section Header   | Parameters and Default Value                                  | Configuration Items on the Web User Interface   |
|--|---|---|
| [ Security ]   | trusted_cert = 2  | Security->Trusted Certificates (the whole page)   |
|  | server_cert = 2   | Security->Server Certificates (the whole page)  |
|  | base-pin = 0<br>(only applicable to W52P/W56P IP DECT phones) | Security->Base PIN (the whole page)   |
| [ Password ]<br>(only applicable to SIP VP-T49G IP phones) | set-password = 0  | Security->Password-><br>  |
| [ TrustCerts ]   | trust-certs-records = 2                                       | Security->Trusted Certificates-><br>                             |
|  | btn-delete-certs = 2  | Security->Trusted Certificates-> <input type="button" value="Delete"/>  |
|  | only-accept-trusted-certs = 2                                 | Security->Trusted Certificates->Only Accept Trusted Certificates  |
|  | common-name-validation = 2                                    | Security->Trusted Certificates->Common Name Validation  |
|  | ca-certs = 2  | Security->Trusted Certificates->CA Certificates   |
|  | upload-trust-certs = 2  | Security->Trusted Certificates->Import Trusted Certificates<br> |
| [ ServerCerts ]  | server-certs-records = 2                                      | Security->Server Certificates<br>                               |
|  | server-certs-device-  | Security->Server Certificates-> Device Certificates   |

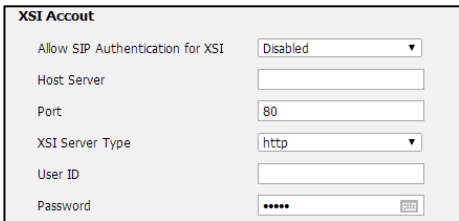
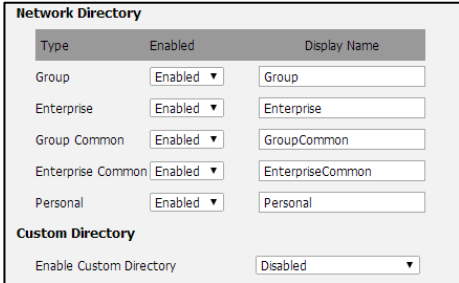

| Section Header  | Parameters and Default Value   | Configuration Items on the Web User Interface   |
|---|--|---|
|   | cert = 2   |   |
|   | server-certs-upload = 2  | Security->Server Certificates->Import Server Certificates<br> |
| [ BasePin ]<br>(only applicable to W56P IP DECT phones)   | Base-unit-pin = 0  | Security->Base PIN->Base Unit PIN   |
| [ HiddenSetting ]   | custom-factory-config = 2  | Hidden->Custom Factory Config   |
|   | DND-Active = 2   | Hidden->DND Active  |
|   | Forward-Active = 2   | Hidden->Forward Active  |
|   | Broadsoft-Active = 2<br>(1 for SIP VP-T49G/W52P/W56P IP phones)                      | Hidden->Broadsoft Active  |
|   | Redirect-Active = 2<br>(1 for SIP VP-T49G/W52P/W56P IP phones)                       | Hidden->Redirect Active   |
|   | XSI-Active = 2<br>(not applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/CP960 IP phones) | Hidden->XSI Active  |
| UC-Active = 2<br>(1 for SIP VP-T49G IP phones; only applicable to SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G IP phones) | Hidden->UC Active  |   |

| Section Header | Parameters and Default Value  | Configuration Items on the Web User Interface                                   |
|----------------|---|---|
|                | remote_pcap_switch = 2<br>(only applicable to SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G IP phones)   | Hidden->Remote Pcap<br>Hidden->Remote Pcap Port<br>Hidden->Remote Pcap Password |
|                | remote_pcap = 2<br>(only applicable to SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G IP phones)          | Hidden->Remote Pcap   |
|                | remote_pcap_port = 2<br>(only applicable to SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G IP phones)     | Hidden->Remote Pcap Port  |
|                | remote_pcap_password = 2<br>(only applicable to SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G IP phones) | Hidden->Remote Pcap Password  |
|                | pushxml = 2<br>(not applicable to W52P/W56P IP DECT phones)                                       | Hidden->PushXML Test  |

## Configuration Parameters for BroadSoft UC-One Version

The following table lists configuration items in the WebItemsLevel.cfg file for configurations only integrated with BroadSoft UC-One firmware version on the web user interface.

| Section Header  | Parameters and Default Value  | Configuration Items on the Web User Interface   |
|---|---|---|
| [ General-Information ]   | EnableAutoFavorite = 0<br>(only applicable to SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G/CP960 IP phones) | Features->General Information->Enable Auto Favorite   |
| [ Contacts ]<br>(only applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/CP960 IP phones)           | contacts-broadsoft = 0  | Directory->Network Directory (the whole page)   |
| [ Contacts-Broadsoft ]<br>(only applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/CP960 IP phones) | Directotries = 0<br>(1 for CP960 IP phones)   | Directory->Network Directory->Network Directory<br><br>Directory->Network Directory->Custom Directory<br><br>Directory->Network Directory->Call Log<br><br> |
|   | XSI = 0<br>(1 for CP960 IP phones)  | Directory->Network Directory->XSI<br><br>   |

| Section Header  | Parameters and Default Value  | Configuration Items on the Web User Interface   |
|---|---|---|
| <p>[ Apps ]<br/>(not applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/CP960 IP phones)</p>      | broadsoft-XSI = 1   | Applications->Broadsoft XSI (the whole page)  |
|   | broadsoft-XMPP = 1<br>(only applicable to SIP-T54S/T52S/T48G/T46G/T29G)         | Applications->Broadsoft XMPP (the whole page)   |
| <p>[ Broadsoft ]<br/>(not applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/CP960 IP phones)</p> | XSI = 1   | Applications->Broadsoft XSI->XSI Account<br><br>  |
|   | Directotries = 1  | Applications->Broadsoft XSI->Network Directory<br><br>Applications->Broadsoft XSI->Custom Directory<br><br> |
|   | CallLog = 1   | Applications->Broadsoft XSI->Call Log   |
|   | XMPP-accout = 1<br>(only applicable to SIP-T54S/T52S/T48S/T48G/T46S/T46G/T29G)  | Applications->Broadsoft XMPP->XMPP Account<br><br>  |
|   | XMPP-userame = 1<br>(only applicable to SIP-T54S/T52S/T48S/T48G/T46S/T46G/T29G) | Applications->Broadsoft XMPP->XMPP UserName   |
|   | XMPP-password = 1<br>(only applicable to  | Applications->Broadsoft XMPP->XMPP Password   |

| Section Header | Parameters and Default Value            | Configuration Items on the Web User Interface |
|----------------|---|---|
|                | SIP-T54S/T52S/T48S/T48G/T46S/T46G/T29G) |   |

## Configuration Parameters of Phone User Interface

The following table lists configuration items in the WebItemsLevel.cfg file with associated configurations on the phone user interface of the SIP-T58V/T58A/T56A/T54S/T52S/SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860 IP phones:

| Section Header | Parameters and Default Value                      | Configuration Items on the Phone User Interface  |
|----------------|---|--|
| [ GUI ]        | status_list = 0                                   | SIP-T58V/T58A/T56A/CP960:<br>Settings->Status<br>SIP<br>VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P)<br>E2/T19(P) E2/CP860:<br>Menu->Status   |
|                | Status_IP = 0<br>(11 for SIP VP-T49G IP phones)   | SIP-T58V/T58A/T56A/CP960:<br>Settings->Status->General->IPv4<br>SIP VP-T49G:<br>Menu->Status->General->IPv4<br>SIP-T48G/T48S:<br>Menu->Status->General->IPv4 IP<br>SIP-T54S/T52S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860:<br>Menu->Status->IPv4 (or IPv4 Address) |
|                | Status_IPv6 = 0<br>(11 for SIP VP-T49G IP phones) | SIP-T58V/T58A/T56A/CP960:<br>Settings->Status->General->IPv6<br>SIP VP-T49G:<br>Menu->Status->General->IPv6<br>SIP-T48G/T48S:<br>Menu->Status->General->IPv6 IP<br>SIP-T54S/T52S/T46G/T46S/T42G/T42S/T41   |

| Section Header | Parameters and Default Value  | Configuration Items on the Phone User Interface  |
|----------------|---|--|
| [ GUI ]        |   | P/T41S/T40P/T40G//T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860:<br>Menu->Status->IPv6 (or IPv6 Address)  |
|                | Status_MAC = 0<br>(21 for SIP VP-T49G IP phones)  | SIP-T58V/T58A/T56A/CP960:<br>Settings->Status->General->MAC<br>SIP VP-T49G/SIP-T48G/T48S:<br>Menu->Status->General->MAC (or MAC Address)<br>SIP-T54S/T52S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G//T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860:<br>Menu->Status->MAC (or MAC Address) |
|                | Status_HW = 0<br>(01 for SIP VP-T49G IP phones)   | SIP-T58V/T58A/T56A/CP960:<br>Settings->Status->Phone->Hardware<br>SIP VP-T49G/SIP-T48G/T48S:<br>Menu->Status->Phone->Hardware<br>SIP-T54S/T52S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G//T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860:<br>Menu->Status->More->Phone->Hardware           |
|                | Status_More = 0<br>(not applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/SIP-T48G/T48S/CP960 IP phones) | Menu->Status->More   |
|                | network = 0   | SIP-T58V/T58A/T56A/CP960:<br>Settings->Status->Network<br>SIP VP-T49G/SIP-T48G/T48S:<br>Menu->Status->Network<br>SIP-T54S/T52S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G//T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860:<br>Menu->Status->More->Network                                   |
|                | Status_More_Phone = 0   | SIP-T58V/T58A/T56A/CP960:<br>Settings->Status->Phone   |



| Section Header | Parameters and Default Value   | Configuration Items on the Phone User Interface   |
|----------------|--|---|
| [ GUI ]        |  | SIP VP-T49G/SIP-T48G/T48S:<br>Menu->Status->Phone<br><br>SIP-T54S/T52S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860:<br>Menu->Status->More->Phone   |
|                | Status_More_Account = 0  | SIP-T58V/T58A/T56A/CP960:<br>Settings->Status->Accounts<br><br>SIP VP-T49G/SIP-T48G/T48S:<br>Menu->Status->Accounts<br><br>SIP-T54S/T52S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860:<br>Menu->Status->More->Accounts (or Account) |
|                | Status_More_RTP = 0<br>(02 for SIP VP-T49G IP phones)  | SIP-T58V/T58A/T56A/CP960:<br>Settings->Status->RTP Status<br><br>SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T29G:<br>Menu->Status->RTP Status<br><br>SIP-T54S/T52S/T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860:<br>Menu->Status->More->RTP               |
|                | status_general= 0<br>(02 for SIP VP-T49G IP phones; only applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/SIP-T48G/T48S IP phones) | SIP-T58V/T58A/T56A/CP960:<br>Settings->Status->General<br><br>SIP VP-T49G/SIP-T48G/T48S:<br>Menu->Status->General   |
|                | features = 0<br>(02 for SIP VP-T49G/CP860 IP phones)   | SIP-T58V/T58A/T56A/CP960:<br>Settings->Features<br><br>SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T2   |

| Section Header | Parameters and Default Value                              | Configuration Items on the Phone User Interface  |
|----------------|---|--|
| [ GUI ]        |   | 9G/T27P/T27G/T23P/T23G/T21(P)<br>E2/T19(P) E2/CP860:<br>Menu->Features   |
|                | callcontrol_forward = 1<br>(11 for SIP VP-T49G IP phones) | SIP-T58V/T58A/T56A/CP960:<br>Settings->Features->Call Forward<br>SIP<br>VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/<br>T46S/T42G/T42S/T41P/T41S/T40P/T40G/T2<br>9G/T27P/T27G/T23P/T23G/T21(P)<br>E2/T19(P) E2/CP860:<br>Menu->Features->Call Forward                                 |
|                | always-forward = 0<br>(1 for SIP VP-T49G IP phones)       | SIP-T58V/T58A/T56A/CP960:<br>Settings->Features->Call Forward->Always Forward<br>SIP<br>VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/<br>T46S/T42G/T42S/T41P/T41S/T40P/T40G/T2<br>9G/T27P/T27G/T23P/T23G/T21(P)<br>E2/T19(P) E2/CP860:<br>Menu->Features->Call Forward->Always Forward |
|                | busy-forward = 0<br>(1 for SIP VP-T49G IP phones)         | SIP-T58V/T58A/T56A/CP960:<br>Settings->Features->Call Forward->Busy Forward<br>SIP<br>VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/<br>T46S/T42G/T42S/T41P/T41S/T40P/T40G/T2<br>9G/T27P/T27G/T23P/T23G/T21(P)<br>E2/T19(P) E2/CP860:<br>Menu->Features->Call Forward->Busy Forward     |
|                | NoAnswer-forward = 0<br>(1 for SIP VP-T49G IP phones)     | SIP-T58V/T58A/T56A/CP960:<br>Settings->Features->Call Forward->No Answer Forward<br>SIP<br>VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/<br>T46S/T42G/T42S/T41P/T41S/T40P/T40G/T2<br>9G/T27P/T27G/T23P/T23G/T21(P)   |

| Section Header | Parameters and Default Value   | Configuration Items on the Phone User Interface  |
|----------------|--|--|
| [ GUI ]        |  | E2/T19(P) E2/CP860:<br>Menu->Features->Call Forward->No Answer Forward   |
|                | call_waiting = 0<br>(1 for SIP VP-T49G IP phones)  | SIP-T58V/T58A/T56A/CP960:<br>Settings->Features->Call Waiting<br>SIP<br>VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P)<br>E2/T19(P) E2/CP860:<br>Menu->Features->Call Waiting   |
|                | auto-Answer= 0<br>(1 for SIP VP-T49G IP phones)  | SIP-T58V/T58A/T56A/CP960:<br>Settings->Features->Auto Answer<br>SIP<br>VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P)<br>E2/T19(P) E2/CP860:<br>Menu->Features->Auto Answer   |
|                | DSSKey = 0<br>(1 for SIP VP-T49G IP phones; not applicable to SIP-T19(P) E2/CP860 IP phones) | SIP-T58V/T58A/T56A/CP960:<br>Settings->Features->DSS Keys<br>SIP<br>VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P)<br>E2/T19(P) E2:<br>Menu->Features->DSS Keys   |
|                | key_as_send= 0<br>(12 for SIP VP-T49G IP phones; not applicable to CP960 IP phones)          | SIP-T58V/T58A/T56A:<br>Settings->Features->Key as Send<br>SIP VP-T49G/SIP-T48G/T48S:<br>Menu->Features->General->Key As Send<br>SIP-T54S/T52S/T46G/T46S/T29G:<br>Menu->Features->Others->General->Key As Send<br>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)<br>E2/CP860: |

| Section Header       | Parameters and Default Value   | Configuration Items on the Phone User Interface  |
|----------------------|--|--|
| [ GUI ]              |  | Menu->Features->Key As Send  |
|                      | hotline-number = 0<br>(1 for SIP VP-T49G IP phones)  | SIP-T58V/T58A/T56A/CP960:<br>Settings->Features->Hot Line<br>SIP VP-T49G/SIP-T48G/T48S:<br>Menu->Features->Hot Line->Hotline Number<br>SIP-T54S/T52S/T46G/T46S/T29G:<br>Menu->Features->Others->Hot Line->Hotline Number<br>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860:<br>Menu->Features->Hot Line->Hotline Number |
|                      | Features_Anonymous = 0<br>(1 for SIP VP-T49G IP phones)  | SIP-T58V/T58A/T56A/CP960:<br>Settings->Features->Anonymous SIP<br>VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G:<br>Menu->Features->Anonymous<br>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860:<br>Menu->Features->Anonymous Call   |
|                      | Features_Diagnostics = 0<br>(not applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/CP960 IP phones) | Menu->Features->Diagnostics  |
|                      | Diagnostics_Network = 0<br>(not applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/CP960 IP phones)  | Menu->Features->Diagnostics->Network   |
| Diagnostics_Ping = 0 | Menu->Features->Diagnostics->Network-  |  |

| Section Header | Parameters and Default Value   | Configuration Items on the Phone User Interface  |
|----------------|--|--|
|                | (not applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/CP960 IP phones)                               | >Ping  |
|                | Diagnostics_TraceRoute = 0<br>(not applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/CP960 IP phones) | Menu->Features->Diagnostics->Network->Trace Route  |
| [ GUI ]        | Features_AutoRD = 0<br>(1 for SIP VP-T49G IP phones)   | SIP-T58V/T58A/T56A/CP960:<br>Settings->Features->Auto Redial<br>SIP<br>VP-T49G/SIP-T48G/T48S/T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860:<br>Menu->Features->Auto Redial<br>SIP-T54S/T52S/T46G/T46S/T29G:<br>Menu->Features->Others->Auto Redial             |
|                | intercom = 0<br>(1 for SIP VP-T49G IP phones)  | SIP-T58V/T58A/T56A/CP960:<br>Settings->Features->Intercom<br>SIP<br>VP-T49G/SIP-T54S/T52S/T48G/T46G/T46S/T48S/T42G/T42S/T41P/T41S/T40P/T40G/T29GT27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860:<br>Menu->Features->Intercom   |
|                | call_completion = 0<br>(1 for SIP VP-T49G IP phones)   | SIP-T58V/T58A/T56A/CP960:<br>Settings->Features->Call Completion<br>SIP<br>VP-T49G/SIP-T54S/T52S/T48G/T48S/T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860:<br>Menu->Features->Call Completion<br>SIP-T46G/T46S/T29G:<br>Menu->Features->Others->Call Completion |

| Section Header | Parameters and Default Value   | Configuration Items on the Phone User Interface   |
|----------------|--|---|
| [ GUI ]        | history_save= 2  | SIP-T58V/T58A/T56A/CP960:<br>Settings->Features->History Record<br>SIP VP-T49G/SIP-T48G/T48S:<br>Menu->Features->General->History Record<br>SIP-T54S/T52S/T46G/T46S/T29G:<br>Menu->Features->Others->General->History Record<br>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860:<br>Menu->Features->History Setting |
|                | multipaginglist = 2<br>(10 for SIP VP-T49G IP phones)  | SIP-T58V/T58A/T56A/CP960:<br>Settings->Features->Paging List<br>SIP<br>VP-T49G/SIP-T48G/T48S/T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860:<br>Menu->Features->Paging List<br>SIP-T54S/T52S/T46G/T46S/T29G:<br>Menu->Features->Others->Paging List  |
|                | Main_Settings = 0<br>(not applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G IP phones) | Menu->Settings  |
|                | time_zone = 0  | SIP-T58V/T58A/T56A/CP960:<br>Settings->Basic->Time & Date->General->Time Zone<br>SIP VP-T49G/SIP-T48G/T48S:<br>Menu->Basic->Time & Date->General->Time Zone<br>SIP-T54S/T52S/T46G/T46S/T29G:<br>Menu->Basic->Time & Date->General->SNTP Settings>Time Zone  |

| Section Header | Parameters and Default Value                 | Configuration Items on the Phone User Interface   |
|----------------|--|---|
| [ GUI ]        |  | SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)<br>E2/CP860:<br>Menu->Settings->Basic Settings->Time & Date->SNTP Settings->Time Zone  |
|                | Basic_Time_Manual = 0                        | SIP-T58V/T58A/T56A/CP960:<br>Settings->Basic->Time & Date->General->Type (Manual Settings)<br>SIP VP-T49G/SIP-T48G/T48S:<br>Menu->Basic->Time & Date->General->Type (Manual Settings)<br>SIP-T54S/T52S/T46G/T46S/T29G:<br>Menu->Basic->Time & Date->General->Manual Settings<br>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)<br>E2/CP860:<br>Menu->Settings->Basic Settings->Time & Date->Manual Settings |
|                | display = 0<br>(1 for SIP VP-T49G IP phones) | SIP-T58V/T58A/T56A/CP960:<br>Settings->Basic->Display<br>SIP<br>VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G:<br>Menu->Basic->Display<br>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)<br>E2/CP860:<br>Menu->Settings->Basic Settings->Display   |
|                | sound = 0<br>(1 for SIP VP-T49G IP phones)   | SIP-T58V/T58A/T56A/CP960:<br>Settings->Basic->Sound<br>SIP<br>VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G:<br>Menu->Basic->Sound<br>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)   |

| Section Header | Parameters and Default Value  | Configuration Items on the Phone User Interface  |
|----------------|---|--|
| [ GUI ]        |   | E2/CP860:<br>Menu->Settings->Basic Settings->Sound   |
|                | key_tone = 0<br>(1 for SIP VP-T49G IP phones)   | SIP-T58V/T58A/T56A/CP960:<br>Settings->Basic->Sound->Key Tone<br>SIP<br>VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G: Menu->Basic->Sound->Key Tone<br>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)<br>E2/CP860:<br>Menu->Settings->Basic<br>Settings->Sound->Key Tone          |
|                | ring_type_setting = 0<br>(1 for SIP VP-T49G IP phones)  | SIP-T58V/T58A/T56A/CP960:<br>Settings->Basic->Sound->Ring Tones<br>SIP<br>VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G:<br>Menu->Basic->Sound->Ring Tones<br>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)<br>E2/CP860:<br>Menu->Settings->Basic<br>Settings->Sound->Ring Tones |
|                | blf_ring_setting = 0<br>(not applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/T19(P)E2/CP860/CP960 IP phones) | SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G:<br>Menu->Basic->Sound->BLF Ring Type<br>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2:<br>Menu->Settings->Basic<br>Settings->Sound->BLF Ring Type  |
|                | unlock_pin = 0<br>(2 for SIP VP-T49G IP phones)   | SIP-T58V/T58A/T56A/CP960:<br>Settings->Basic->Change PIN<br>SIP<br>VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G:<br>Menu->Basic->Change PIN  |



| Section Header | Parameters and Default Value  | Configuration Items on the Phone User Interface  |
|----------------|---|--|
| [ GUI ]        |   | SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)<br>E2/CP860:<br>Menu->Settings->Basic Settings->Change PIN  |
|                | check_key_guard_lock = 0<br>(not applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/CP960 IP phones)  | SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G:<br>Menu->Basic->Phone Lock<br>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2:<br>Menu->Settings->Basic Settings->Phone Lock               |
|                | Country = 0<br>(only applicable to CP860 IP phones)   | Menu->Settings->Basic Settings->Country  |
|                | bluetooth = 0<br>(1 for SIP VP-T49G IP phones; only applicable to SIP-T58V/T58A/T56A/T54S/T52S/SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T42S/T41S/T29G/T27G/CP960 IP phones) | SIP-T58V/T58A/T56A/CP960:<br>Settings->Basic->Bluetooth<br>SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G:<br>Menu->Basic->Bluetooth<br>SIP-T42S/T41S/T27G:<br>Menu->Settings->Basic Settings->Bluetooth |
|                | wifi = 0<br>(2 for SIP VP-T49G IP phones; only applicable to SIP-T58V/T58A/T56A/T54S/52S/SIP VP-T49G/SIP-T48G/T48S/T46G/T46S/T42S/T41S/T29G/T27G/CP960 IP phones)       | SIP-T58V/T58A/T56A/CP960:<br>Settings->Basic->Wi-Fi<br>SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G:<br>Menu->Basic->Wi-Fi<br>SIP-T42S/T41S/T27G:<br>Menu->Settings->Basic Settings->Wi-Fi             |
|                | account_label = 0<br>(02 for SIP VP-T49G IP phones)   | SIP-T58V/T58A/T56A/CP960:<br>Settings->Advanced->Accounts->Account X->Label  |

| Section Header | Parameters and Default Value                                 | Configuration Items on the Phone User Interface  |
|----------------|--|--|
| [ GUI ]        |  | <p>SIP VP-T49G/SIP-T48G/T48S:<br/>Menu-&gt;Advanced-&gt;Account-&gt;Account X-&gt;Label</p> <p>SIP-T54S/T52S/T46G/T46S/T29G:<br/>Menu-&gt;Advanced-&gt;Accounts-&gt;Account X-&gt;Label</p> <p>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)<br/>E2/CP860:<br/>Menu-&gt;Settings-&gt;Advanced<br/>Settings-&gt;Accounts-&gt;Account X-&gt;Label</p>   |
|                | <p>display_name = 0<br/>(02 for SIP VP-T49G IP phones)</p>   | <p>SIP-T58V/T58A/T56A/CP960:<br/>Settings-&gt;Advanced-&gt;Accounts-&gt;Account X-&gt;Display Name</p> <p>SIP VP-T49G/SIP-T48G/T48S:<br/>Menu-&gt;Advanced-&gt;Account-&gt;Account X-&gt;Display Name</p> <p>SIP-T54S/T52S/T46G/T46S/T29G:<br/>Menu-&gt;Advanced-&gt;Accounts-&gt;Account X-&gt;Display Name</p> <p>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)<br/>E2/CP860:<br/>Menu-&gt;Settings-&gt;Advanced<br/>Settings-&gt;Accounts-&gt;Account X-&gt;Display Name</p> |
|                | <p>register_name = 01<br/>(02 for SIP VP-T49G IP phones)</p> | <p>SIP-T58V/T58A/T56A/CP960:<br/>Settings-&gt;Advanced-&gt;Accounts-&gt;Account X-&gt;Register Name</p> <p>SIP VP-T49G/SIP-T48G/T48S:<br/>Menu-&gt;Advanced-&gt;Account-&gt;Account X-&gt;Register Name</p> <p>SIP-T54S/T52S/T46G/T46S/T29G:<br/>Menu-&gt;Advanced-&gt;Accounts-&gt;Account X-&gt;Register Name</p> <p>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)</p>  |

| Section Header                                   | Parameters and Default Value  | Configuration Items on the Phone User Interface  |
|--|---|--|
| [ GUI ]  |   | E2/CP860:<br>Menu->Settings->Advanced<br>Settings->Accounts->Account X->Register Name  |
|  | user_name = 01  | SIP-T58V/T58A/T56A/CP960:<br>Settings->Advanced->Accounts->Account X->User Name<br>SIP VP-T49G/SIP-T48G/T48S:<br>Menu->Advanced->Account->Account X->User Name<br>SIP-T54S/T52S/T46G/T46S/T29G:<br>Menu->Advanced->Accounts->Account X->User Name<br>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)<br>E2/CP860:<br>Menu->Settings->Advanced<br>Settings->Accounts->Account X->User Name |
|  | account_password = 01   | SIP-T58V/T58A/T56A/CP960:<br>Settings->Advanced->Accounts->Account X->Password<br>SIP VP-T49G/SIP-T48G/T48S:<br>Menu->Advanced->Account->Account X->Password<br>SIP-T54S/T52S/T46G/T46S/T29G:<br>Menu->Advanced->Accounts->Account X->Password<br>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)<br>E2/CP860:<br>Menu->Settings->Advanced<br>Settings->Accounts->Account X->Password     |
| sip_server = 2<br>(01 for SIP VP-T49G IP phones) | SIP-T58V/T58A/T56A/CP960:<br>Settings->Advanced->Accounts->Account X->SIP Server1/2 |  |

| Section Header | Parameters and Default Value  | Configuration Items on the Phone User Interface  |
|----------------|---|--|
| [ GUI ]        |   | <p>SIP VP-T49G/SIP-T48G/T48S:<br/>Menu-&gt;Advanced-&gt;Account-&gt;Account X-&gt;SIP Server1/2</p> <p>SIP-T54S/T52S/T46G/T46S/T29G:<br/>Menu-&gt;Advanced-&gt;Accounts-&gt;Account X-&gt;SIP Server1/2</p> <p>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860:<br/>Menu-&gt;Settings-&gt;Advanced Settings-&gt;Accounts-&gt;Account X-&gt;SIP Server1/2</p>   |
|                | <p>enabled-outbound-proxy-server = 2<br/>(01 for SIP VP-T49G IP phones)</p> | <p>SIP-T58V/T58A/T56A/CP960:<br/>Settings-&gt;Advanced-&gt;Accounts-&gt;Account X-&gt;Outbound Status</p> <p>SIP VP-T49G/SIP-T48G/T48S:<br/>Menu-&gt;Advanced-&gt;Account-&gt;Account X-&gt;Outbound Status</p> <p>SIP-T54S/T52S/T46G/T46S/T29G:<br/>Menu-&gt;Advanced-&gt;Accounts-&gt;Account X-&gt;Outbound Status</p> <p>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860:<br/>Menu-&gt;Settings-&gt;Advanced Settings-&gt;Accounts-&gt;Account X-&gt;Outbound Status</p>         |
|                | <p>outbound-proxy-server = 2<br/>(01 for SIP VP-T49G IP phones)</p>         | <p>SIP-T58V/T58A/T56A/CP960:<br/>Settings-&gt;Advanced-&gt;Accounts-&gt;Account X-&gt;Outbound Proxy1/2</p> <p>SIP VP-T49G/SIP-T48G/T48S:<br/>Menu-&gt;Advanced-&gt;Account-&gt;Account X-&gt;Outbound Proxy1/2</p> <p>SIP-T54S/T52S/T46G/T46S/T29G:<br/>Menu-&gt;Advanced-&gt;Accounts-&gt;Account X-&gt;Outbound Proxy1/2</p> <p>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860:<br/>Menu-&gt;Settings-&gt;Advanced Settings-&gt;Accounts-&gt;Account X-&gt;Outbound Proxy1/2</p> |

| Section Header | Parameters and Default Value  | Configuration Items on the Phone User Interface  |
|----------------|---|--|
| [ GUI ]        |   | P/T27G/T23P/T23G/T21(P) E2/T19(P)<br>E2/CP860:<br>Menu->Settings->Advanced<br>Settings->Accounts->Account<br>X->Outbound Proxy1/2  |
|                | STUN_server = 2<br>(02 for SIP VP-T49G IP phones)   | SIP-T58V/T58A/T56A/CP960:<br>Settings->Advanced->Accounts->Account<br>X->NAT Status<br>SIP VP-T49G/SIP-T48G/T48S:<br>Menu->Advanced->Account->Account<br>X->NAT Status<br>SIP-T54S/T52S/T46G/T46S/T29G:<br>Menu->Advanced->Accounts->Account<br>X->NAT Status<br>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27<br>P/T27G/T23P/T23G/T21(P) E2/T19(P)<br>E2/CP860:<br>Menu->Settings->Advanced<br>Settings->Accounts->Account X->NAT<br>Status |
|                | proxy-fallback-interval = 01<br>(only applicable to SIP-T58V/T58A/T56A/SIP VP-T49G IP phones) | SIP-T58V/T58A/T56A:<br>Settings->Advanced->Accounts->Account<br>X->Proxy Fallback Interval<br>CP960:<br>Settings->Advanced->Accounts->Account<br>X->Fallback Interval<br>SIP VP-T49G:<br>Menu->Advanced->Account->Account<br>X->Fallback Interval  |
|                | Adv_Network =0  | SIP-T58V/T58A/T56A/CP960:<br>Settings->Advanced->Network<br>SIP<br>VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/<br>T46S/T29G:<br>Menu->Advanced->Network<br>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27<br>P/T27G/T23P/T23G/T21(P) E2/T19(P)  |

| Section Header | Parameters and Default Value                         | Configuration Items on the Phone User Interface   |
|----------------|--|---|
| [ GUI ]        |  | E2/CP860:<br>Menu->Settings->Advanced<br>Settings->Network  |
|                | wan_port_title = 0<br>(02 for SIP VP-T49G IP phones) | SIP-T58V/T58A/T56A/CP960:<br>Settings->Advanced->Network->WAN Port<br>SIP<br>VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G:<br>Menu->Advanced->Network->WAN Port<br>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)<br>E2/CP860:<br>Menu->Settings->Advanced<br>Settings->Network->WAN Port |
|                | VLAN-items = 2<br>(02 for SIP VP-T49G IP phones)     | SIP-T58V/T58A/T56A/CP960:<br>Settings->Advanced->Network->VLAN<br>SIP<br>VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G:<br>Menu->Advanced->Network->VLAN<br>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)<br>E2/CP860:<br>Menu->Settings->Advanced<br>Settings->Network->VLAN             |
|                | wanport = 0<br>(02 for SIP VP-T49G IP phones)        | SIP-T58V/T58A/T56A/CP960:<br>Settings->Advanced->Network->VLAN->WAN Port<br>SIP<br>VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G:<br>Menu->Advanced->Network->VLAN->WAN Port<br>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)<br>E2/CP860:  |

| Section Header                                   | Parameters and Default Value  | Configuration Items on the Phone User Interface  |
|--|---|--|
| [ GUI ]  |   | Menu->Settings->Advanced<br>Settings->Network->VLAN->WAN Port  |
|  | pcport = 2<br>(02 for SIP VP-T49G IP phones; not applicable to CP960 IP phones)   | SIP-T58V/T58A/T56A:<br>Settings->Advanced->Network->VLAN->P<br>C Port<br>SIP<br>VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/<br>T46S/T29G:<br>Menu->Advanced->Network->VLAN->PC<br>Port<br>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27<br>P/T27G/T23P/T23G/T21(P) E2/T19(P)<br>E2/CP860:<br>Menu->Settings->Advanced<br>Settings->Network->VLAN->PC Port              |
|  | dhcpvlan = 2<br>(02 for SIP VP-T49G IP phones)  | SIP-T58V/T58A/T56A/CP960:<br>Settings->Advanced->Network->VLAN->D<br>HCP VLAN<br>SIP<br>VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/<br>T46S/T29G:<br>Menu->Advanced->Network->VLAN->DH<br>CP VLAN<br>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27<br>P/T27G/T23P/T23G/T21(P) E2/T19(P)<br>E2/CP860:<br>Menu->Settings->Advanced<br>Settings->Network->VLAN->DHCP VLAN |
| web-server = 2<br>(02 for SIP VP-T49G IP phones) | SIP-T58V/T58A/T56A/CP960:<br>Settings->Advanced->Network->Webserve<br>r Type<br>SIP<br>VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/<br>T46S/T29G:<br>Menu->Advanced->Network->Webserver<br>Type (Web Server)<br>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27<br>P/T27G/T23P/T23G/T21(P) E2/T19(P) |  |

| Section Header | Parameters and Default Value  | Configuration Items on the Phone User Interface   |
|----------------|---|---|
| [ GUI ]        |   | E2/CP860:<br>Menu->Settings->Advanced<br>Settings->Network->Web Server  |
|                | 8021x = 2<br>(02 for SIP VP-T49G IP phones)   | SIP-T58V/T58A/T56A/CP960:<br>Settings->Advanced->Network->802.1x<br>SIP<br>VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G:<br>Menu->Advanced->Network->802.1x<br>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)<br>E2/CP860:<br>Menu->Settings->Advanced<br>Settings->Network->802.1x |
|                | open-VPN = 2<br>(02 for SIP VP-T49G IP phones; not applicable to SIP-T19(P) E2 IP phones) | SIP-T58V/T58A/T56A/CP960:<br>Settings->Advanced->Network->VPN<br>SIP<br>VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G:<br>Menu->Advanced->Network->VPN<br>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/CP860:<br>Menu->Settings->Advanced<br>Settings->Network->VPN                       |
|                | open-lldp = 2<br>(02 for SIP VP-T49G IP phones)   | SIP-T58V/T58A/T56A/CP960:<br>Settings->Advanced->Network->LLDP<br>SIP<br>VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G:<br>Menu->Advanced->Network->LLDP<br>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)<br>E2/CP860:<br>Menu->Settings->Advanced<br>Settings->Network->LLDP       |
|                | network_cdp = 2<br>(02 for SIP VP-T49G IP phones)   | SIP-T58V/T58A/T56A/CP960:   |



| Section Header | Parameters and Default Value   | Configuration Items on the Phone User Interface  |
|----------------|--|--|
| [ GUI ]        | phones)  | Settings->Advanced->Network->CDP<br>SIP<br>VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G:<br>Menu->Advanced->Network->CDP<br>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)<br>E2/CP860:<br>Menu->Settings->Advanced<br>Settings->Network->CDP                              |
|                | network_nat = 2<br>(02 for SIP VP-T49G IP phones)  | SIP-T58V/T58A/T56A/CP960:<br>Settings->Advanced->Network->NAT<br>SIP<br>VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G:<br>Menu->Advanced->Network->NAT<br>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)<br>E2/CP860:<br>Menu->Settings->Advanced<br>Settings->Network->NAT |
|                | softkey Label = 0<br>(not applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G/CP960 IP phones) | SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)<br>E2/CP860:<br>Menu->Settings->Advanced<br>Settings->Softkey Label   |
|                | keyboard_lock = 02<br>(0 for CP960 IP phones; only applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/CP960 IP phones)               | SIP-T58V/T58A/T56A/CP960:<br>Settings->Advanced->Phone Lock<br>SIP VP-T49G:<br>Menu->Advanced->Phone Lock  |
|                | Adv_Reboot = 0<br>(02 for SIP VP-T49G IP phones)   | SIP-T58V/T58A/T56A/CP960:<br>Settings->Advanced->Reboot  |


| Section Header | Parameters and Default Value  | Configuration Items on the Phone User Interface   |
|----------------|---|---|
| [ GUI ]        | phones)   | SIP<br>VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G:<br>Menu->Advanced->Reboot<br>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)<br>E2/CP860:<br>Menu->Settings->Advanced<br>Settings->Reboot   |
|                | Adv_ResetToFac = 2  | SIP-T58V/T58A/T56A/CP960:<br>Settings->Advanced->Reset Config<br>SIP VP-T49G:<br>Menu->Advanced->Reset to Factory<br>SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G:<br>Menu->Advanced->Reset Config->Reset to Factory Settings<br>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)<br>E2/CP860:<br>Menu->Settings->Advanced<br>Settings->Reset Config->Reset to Factory Settings |
|                | Adv_ResetConfig = 0<br>(not applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/CP960 IP phones) | SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G:<br>Menu->Advanced->Reset Config<br>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)<br>E2/CP860:<br>Menu->Settings->Advanced<br>Settings->Reset Config  |
|                | ResetLocalConfig = 0<br>(not applicable to SIP VP-T49G IP phones)                         | SIP-T58V/T58A/T56A/CP960:<br>Settings->Advanced->Reset Config->Reset local settings (only appear when the parameter "static.auto_provision.custom.protect" is set to 1.)<br>SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29   |

| Section Header | Parameters and Default Value  | Configuration Items on the Phone User Interface   |
|----------------|---|---|
| [ GUI ]        |   | <p>G:<br/>Menu-&gt;Advanced-&gt;Reset Config-&gt;Reset local settings (only appear when the parameter "static.auto_provision.custom.protect" is set to 1.)</p> <p>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)<br/>E2/CP860:<br/>Menu-&gt;Settings-&gt;Advanced<br/>Settings-&gt;Reset Config-&gt;Reset local settings (only appear when the parameter "static.auto_provision.custom.protect" is set to 1.)</p>   |
|                | <p>ResetNonStaticConfig = 0<br/>(not applicable to SIP VP-T49G IP phones)</p> | <p>SIP-T58V/T58A/T56A/CP960:<br/>Settings-&gt;Advanced-&gt;Reset Config-&gt;Reset non-static settings (only appear when the parameter "static.auto_provision.custom.protect" is set to 1.)</p> <p>SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G:<br/>Menu-&gt;Advanced-&gt;Reset Config-&gt;Reset non-static settings (only appear when the parameter "static.auto_provision.custom.protect" is set to 1.)</p> <p>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)<br/>E2/CP860:<br/>Menu-&gt;Settings-&gt;Advanced<br/>Settings-&gt;Reset Config-&gt;Reset non-static settings (only appear when the parameter "static.auto_provision.custom.protect" is set to 1.)</p> |
|                | <p>ResetStaticConfig = 2<br/>(not applicable to SIP VP-T49G IP phones)</p>    | <p>SIP-T58V/T58A/T56A/CP960:<br/>Settings-&gt;Advanced-&gt;Reset Config-&gt;Reset static settings (only appear when the parameter</p>   |

| Section Header | Parameters and Default Value  | Configuration Items on the Phone User Interface  |
|----------------|---|--|
| [ GUI ]        |   | <p>"static.auto_provision.custom.protect" is set to 1.)</p> <p>SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G:</p> <p>Menu-&gt;Advanced-&gt;Reset Config-&gt;Reset static settings (only appear when the parameter "static.auto_provision.custom.protect" is set to 1.)</p> <p>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860:</p> <p>Menu-&gt;Settings-&gt;Reset Config-&gt;Advanced Settings-&gt;Reset static settings (only appear when the parameter "static.auto_provision.custom.protect" is set to 1.)</p> |
|                | <p>ResetUserDataUserCfg = 0<br/>(not applicable to SIP VP-T49G IP phones)</p>     | <p>SIP-T58V/T58A/T56A/CP960:</p> <p>Settings-&gt;Advanced-&gt;Reset Config-&gt;Reset userdata &amp; local config (only appear when the parameter "static.auto_provision.custom.protect" is set to 1.)</p> <p>Menu-&gt;Advanced-&gt;Reset Config-&gt;Reset userdata &amp; local config (only appear when the parameter "static.auto_provision.custom.protect" is set to 1.)</p>   |
|                | <p>ResetInternalSD = 0<br/>(only application to SIP-T58V/T58A/T56A IP phones)</p> | <p>SIP-T58V/T58A/T56A/CP960:</p> <p>Settings-&gt;Advanced-&gt;Reset Config-&gt;Reset built-in SD card (only appear when the parameter "static.auto_provision.custom.protect" is set to 1.)</p>   |
|                | <p>reset_default = 0<br/>(only applicable to SIP VP-T49G IP phones)</p>           | <p>SIP VP-T49G:</p> <p>Menu-&gt;Advanced-&gt;Reset Config-&gt;Reset Local Settings (only appear when the parameter "auto_provision.custom.protect" is set to 1.)</p>   |

| Section Header | Parameters and Default Value  | Configuration Items on the Phone User Interface   |
|----------------|---|---|
| [ GUI ]        | password = 0  | SIP-T58V/T58A/T56A:<br>Settings->Advanced->Set Password<br>SIP<br>VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G:<br>Menu->Advanced->Set Password (Change Password)<br>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)<br>E2/CP860:<br>Menu->Settings->Advanced Settings->Set Password (Change Password) |
|                | Adv_AES = 02<br>(only applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/CP860/CP960 IP phones) | SIP-T58V/T58A/T56A/CP960:<br>Settings->Advanced->Set AES Key<br>SIP VP-T49G:<br>Menu->Advanced->Set AES Key<br>CP860:<br>Menu->Settings->Advanced Settings->Set AES Key   |
|                | autoprovision = 2<br>(02 for SIP VP-T49G IP phones)                                       | SIP-T58V/T58A/T56A/CP960:<br>Settings->Advanced->Auto Provision<br>SIP<br>VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G:<br>Menu->Advanced->Auto Provision<br>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)<br>E2/CP860:<br>Menu->Settings->Advanced Settings->Auto Provision                         |
|                | international-forward = 2<br>(02 for SIP VP-T49G IP phones)                               | SIP-T58V/T58A/T56A/CP960:<br>Settings->Advanced->FWD International<br>SIP<br>VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G:<br>Menu->Advanced->FWD International   |

| Section Header | Parameters and Default Value  | Configuration Items on the Phone User Interface   |
|----------------|---|---|
| [ GUI ]        |   | SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)<br>E2/CP860:<br>Menu->Settings->Advanced<br>Settings->FWD International  |
|                | SMS= 0<br>(12 for SIP VP-T49G IP phones, not applicable to SIP-T58V/T58A/T56A/C P960 IP phones) | Menu->Message   |
|                | MSG_Voice = 0<br>(1 for SIP VP-T49G IP phones)  | SIP-T58V/T58A/T56A/CP960:<br>Message<br>SIP<br>VP-T49G/T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)<br>E2/CP860:<br>Menu->Message->Voice Mail  |
|                | viewvoicemail = 0<br>(1 for SIP VP-T49G IP phones)  | SIP-T58V/T58A/T56A/CP960:<br>Message->Voice Mail->View Voice Mail<br>SIP<br>VP-T49G/T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)<br>E2/CP860:<br>Menu->Message->Voice Mail->View Voice Mail    |
|                | setvoicemail = 0<br>(1 for SIP VP-T49G IP phones)   | SIP-T58V/T58A/T56A/CP960:<br>Message->Voice Mail->Set Voice Mail<br>SIP<br>VP-T49G/T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)<br>E2/CP860:<br>Menu->Message->Voice Mail->Set Voice Mail Code |


| Section Header | Parameters and Default Value  | Configuration Items on the Phone User Interface   |
|----------------|---|---|
| [ GUI ]        | usermodeentry = 0   | SIP-T58V/T58A/T56A:<br>User Mode<br>SIP<br>VP-T49G/T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)<br>E2/CP860:<br>Menu->User Mode  |
|                | NAT_traversal = 2<br>(02 for SIP VP-T49G IP phones; not applicable to SIP-T19(P) E2 IP phones)        | SIP-T58V/T58A/T56A/CP960:<br>Settings->Advanced->Accounts->Account X->NAT Status<br>SIP VP-T49G/SIP-T48G/T48S:<br>Menu->Advanced->Account->Account X->NAT Status<br>SIP-T54S/T52S/T46G/T46S/T29G:<br>Menu->Advanced->Accounts->Account X->NAT Status<br>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/CP860:<br>Menu->Settings->Advanced<br>Settings->Accounts->Account X->NAT Status |
|                | contrast_ctrl = 0<br>(not applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/SIP-T42G/T42S/T41P/T41S/CP960) | SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G:<br>Menu->Basic->Display->Contrast<br>CP860/SIP-T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2:<br>Menu->Settings->Basic<br>Settings->Display->Contrast   |
|                | local_call_log_list = 0<br>(01 for SIP VP-T49G IP phones)   | CP960:<br>History->All Local Calls<br>SIP-T58V/T58A/T56A:<br> -> All Local Calls<br>SIP VP-T49G:<br>Menu->History->All Local Calls<br>SIP-T48G/S:  |

| Section Header | Parameters and Default Value                     | Configuration Items on the Phone User Interface  |
|----------------|--|--|
| [ GUI ]        |  | Menu->History->Local Call Log<br>SIP-T54S/T52S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860:<br>Menu->History->All Calls<br>Menu->History->Missed Calls<br>Menu->History->Placed Calls<br>Menu->History->Received Calls<br>Menu->History->Forwarded Calls  |
|                | Adv_Account = 0<br>(2 for SIP VP-T49G IP phones) | SIP-T58V/T58A/T56A/CP960:<br>Settings->Advanced->Accounts<br>SIP VP-T49G/SIP-T48G/T48S:<br>Menu->Advanced->Account<br>SIP-T54S/T52S/T46G/T46S/T29G:<br>Menu->Advanced->Accounts<br>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860:<br>Menu->Settings->Advanced<br>Settings->Accounts                              |
|                | Basic_LANG = 0                                   | SIP-T58V/T58A/T56A/CP960:<br>Settings->Basic->Language & Input->Language<br>Settings->Basic->Language & Input->Current Input<br>SIP<br>VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G:<br>Menu->Basic->Language<br>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860:<br>Menu->Settings->Basic<br>Settings->Language |
|                | Basic_Setting_BackLight = 0                      | SIP-T58V/T58A/T56A/CP960:<br>Settings->Basic->Display->Backlight   |





| Section Header | Parameters and Default Value | Configuration Items on the Phone User Interface   |
|----------------|------------------------------|---|
| [ GUI ]        |                              | <p>SIP<br/>VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G:</p> <p>Menu-&gt;Basic-&gt;Display-&gt;Backlight</p> <p>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)<br/>E2/CP860:</p> <p>Menu-&gt;Settings-&gt;Basic<br/>Settings-&gt;Display-&gt;Backlight</p> <p>CP860:<br/>Menu-&gt;Settings-&gt;Basic<br/>Settings-&gt;Display-&gt;Backlight Settings</p>  |
|                | Basic_Time_Format = 0        | <p>SIP-T58V/T58A/T56A/CP960:<br/>Settings-&gt;Basic-&gt;Time &amp; Date-&gt;Time &amp; Date Format</p> <p>SIP<br/>VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G:</p> <p>Menu-&gt;Basic-&gt;Time &amp; Date-&gt;Time &amp; Date Format</p> <p>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)<br/>E2/CP860:</p> <p>Menu-&gt;Settings-&gt;Basic Settings-&gt;Time &amp; Date-&gt;Time &amp; Date Format</p>   |
|                | Basic_Time_SNTP = 0          | <p>SIP-T58V/T58A/T56A/CP960:<br/>Settings-&gt;Basic-&gt;Time &amp; Date-&gt;General-&gt;Type (SNTP Settings)</p> <p>SIP VP-T49G/SIP-T48G/T48S:<br/>Menu-&gt;Basic-&gt;Time&amp; Date-&gt;General-&gt;Type (SNTP Settings)</p> <p>SIP-T54S/T52S/T46G/T46S/T29G:<br/>Menu-&gt;Basic-&gt;Time &amp; Date-&gt;General-&gt;SNTP Settings</p> <p>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)<br/>E2/CP860:<br/>Menu-&gt;Settings-&gt;Basic Settings-&gt;Time &amp;</p> |

| Section Header | Parameters and Default Value   | Configuration Items on the Phone User Interface  |
|----------------|--|--|
| [ GUI ]        |  | Date->SNTP Settings  |
|                | MSG_Text = 0<br>(not applicable to SIP-T58V/T58A/T56A/C P960 IP phones)      | Menu->Message->Text Message  |
|                | Main_Contacts = 0<br>(not applicable to SIP-T58V/T58A/T56A/C P960 IP phones) | SIP<br>VP-T49G/T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)<br>E2/CP860:<br>Menu->Directory |
|                | SMS_Draftbox = 0<br>(not applicable to SIP-T58V/T58A/T56A/C P960 IP phones)  | Menu->Message->Text Message<br>->Draftbox  |
|                | SMS_Inbox = 0<br>(not applicable to SIP-T58V/T58A/T56A/C P960 IP phones)     | Menu->Message->Text Message<br>->Inbox   |
|                | SMS_NEW = 0<br>(not applicable to SIP-T58V/T58A/T56A/C P960 IP phones)       | Menu->Message->Text Message<br>->New Message   |
|                | SMS_Outbox = 0<br>(not applicable to SIP-T58V/T58A/T56A/C P960 IP phones)    | Menu->Message->Text Message<br>->Outbox  |
|                | SMS_Sentbox = 0<br>(not applicable to SIP-T58V/T58A/T56A/C P960 IP phones)   | Menu->Message->Text Message-><br>Sentbox   |
|                | Set_Adv = 0  | SIP-T58V/T58A/T56A/CP960:<br>Settings->Advanced<br>SIP<br>VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G:  |

| Section Header | Parameters and Default Value  | Configuration Items on the Phone User Interface   |
|----------------|---|---|
| [ GUI ]        |   | Menu->Advanced<br>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)<br>E2/CP860:<br>Menu->Settings->Advanced Settings  |
|                | Set_Basic = 0   | SIP-T58V/T58A/T56A/CP960:<br>Settings->Basic<br>SIP<br>VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G:<br>Menu->Basic<br>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)<br>E2/CP860:<br>Menu->Settings->Basic Settings  |
|                | blacklist_list = 0  | CP960:<br>Direcotry->Blacklist<br>SIP-T58V/T58A/T56A:<br> ->Blacklist<br>SIP<br>VP-T49G/SIP-T54S/T52S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)<br>E2/CP860:<br>Menu->Directory->Blacklist |
|                | call_info = 0<br>(not applicable to SIP-T58V/T58A/T56A/CP960 IP phones) | SIP<br>VP-T49G/T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)<br>E2/CP860:<br>Menu->History  |
|                | USBIdleRecordEnable = 0<br>(only applicable to CP860 IP phones)         | Menu->USB Record->Idle Record   |
|                | usb_record= 0<br>(only applicable to                                    | Menu->USB (Record)  |

| Section Header | Parameters and Default Value  | Configuration Items on the Phone User Interface  |
|----------------|---|--|
| [ GUI ]        | SIP-T54S/T52S/T48G/T48S/T46G/T46S/T42S/T41S/T29G/T27G IP phones)  |  |
|                | browse_usb_record= 0<br>(only applicable to SIP-T54S/T52S/T48G/T48S/T46G/T46S/T42S/T41S/T29G/T27G IP phones)  | Menu->USB (Record)->Browse Audio   |
|                | browse_usb_storage= 0<br>(only applicable to SIP-T54S/T52S/T48G/T48S/T46G/T46S/T42S/T41S/T29G/T27G IP phones) | Menu->USB (Record)->Storage Space  |
|                | dhcptimezone = 0  | SIP-T58V/T58A/T56A/CP960:<br>Settings->Basic->Time & Date->DHCP Time<br>SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G:<br>Menu->Basic->Time & Date->DHCP Time<br>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860:<br>Menu->Settings->Basic Settings->Time & Date->DHCP Time |
|                | line_active = 0<br>(2 for SIP VP-T49G IP phones)  | SIP-T58V/T58A/T56A/CP960:<br>Settings->Advanced->Accounts->Account X->Activation<br>SIP VP-T49G/SIP-T48G/T48S:<br>Menu->Advanced->Account->Account X->Activation<br>SIP-T54S/T52S/T46G/T46S/T29G:<br>Menu->Advanced->Accounts->Account X->Activation<br>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27                    |

| Section Header | Parameters and Default Value | Configuration Items on the Phone User Interface  |
|----------------|------------------------------|--|
| [ GUI ]        |                              | P/T27G/T23P/T23G/T21(P) E2/T19(P)<br>E2/CP860:<br>Menu->Settings->Advanced<br>Settings->Accounts->Account X<br>->Activation<br>CP860:<br>Menu->Settings->Advanced<br>Settings->Accounts->Account X ->Account Status  |
|                | local_contact_list = 0       | CP960:<br>Directory->Local Directory<br>SIP-T58V/T58A/T56A:<br> ->Local Directory<br>SIP VP-T49G/SIP-T48G/T48S:<br>Menu->Directory->All Contacts<br>SIP-T54S/T52S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860:<br>Menu->Directory->Local Directory |
|                | remote_contact_list = 0      | CP960:<br>Directory->Remote Phone Book<br>SIP-T58V/T58A/T56A:<br> ->Remote Phone Book<br>SIP<br>VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860:<br>Menu->Directory->Remote Phone book                               |
|                | status = 0                   | SIP-T58V/T58A/T56A/CP960:<br>Settings->Status<br>SIP<br>VP-T49G/T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860:<br>Menu->Status  |

| Section Header | Parameters and Default Value  | Configuration Items on the Phone User Interface  |
|----------------|---|--|
| [ GUI ]        | dnd = 0   | SIP-T58V/T58A/T56A/CP960:<br>Settings->Features->DND<br>SIP<br>VP-T49G/T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)<br>E2/CP860:<br>Menu->Features->DND |
|                | advanced_call_feature_default_account =0<br>(2 for SIP VP-T49G IP phones; only applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G/CP960 IP phones) | SIP-T58V/T58A/T56A/CP960:<br>Settings->Features->Default Account<br>SIP VP-T49G/SIP-T48G/T48S:<br>Menu->Features->Default Account<br>SIP-T54S/T52S/T46G/T46S/T29G:<br>Menu->Features->Others->Default Account    |
|                | advanced_call_feature_general = 0<br>(1 for SIP VP-T49G IP phones; only applicable to SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G IP phones)                                 | SIP VP-T49G/SIP-T48G/T48S:<br>Menu->Features->General<br>SIP-T54S/T52S/T46G/T46S/T29G:<br>Menu->Features->Others->General  |
|                | advanced_call_feature_list = 0<br>(1 for SIP VP-T49G IP phones; only applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G/CP960 IP phones)           | SIP-T58V/T58A/T56A/CP960:<br>Settings->Features<br>SIP<br>VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G:<br>Menu->Features  |

| Section Header | Parameters and Default Value   | Configuration Items on the Phone User Interface   |
|----------------|--|---|
| [ GUI ]        | date_and_time_general = 0<br>(only applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G/CP960 IP phones)                          | SIP-T58V/T58A/T56A/CP960:<br>Settings->Basic->Time &Date->General<br>SIP<br>VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G:<br>Menu->Basic->Time &Date->General |
|                | display_wallpaper = 0<br>(1 for SIP VP-T49G IP phones; only applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G/CP960 IP phones) | SIP-T58V/T58A/T56A/CP960:<br>Settings->Basic->Display->Wallpaper<br>SIP<br>VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G:<br>Menu->Basic->Display->Wallpaper   |
|                | display_dsskey_wallpaper = 0<br>(only applicable to SIP-T48G/T48S IP phones)   | Menu->Basic->Display->DSSKey Wallpaper  |
|                | screensaver = 0<br>(only applicable to SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G IP phones)   | Menu->Basic->Display->Screensaver   |
|                | camera_setting_interface = 00<br>(only applicable to SIP VP-T49G IP phones)  | Menu->Basic->Camera Setting   |
|                | usb_interface = 00<br>(only applicable to SIP VP-T49G IP phones)   | Menu->USB   |
|                | usb_browse_audio = 00<br>(only applicable to SIP   | Menu->USB->Browse Audio   |



| Section Header | Parameters and Default Value   | Configuration Items on the Phone User Interface |
|----------------|--|---|
|                | VP-T49G IP phones)   |   |
|                | usb_browse_video = 00<br>(only applicable to SIP VP-T49G IP phones)        | Menu->USB->Browse Video                         |
|                | usb_browse_photo = 00<br>(only applicable to SIP VP-T49G IP phones)        | Menu->USB->Browse Photo                         |
|                | usb_storage_property = 00<br>(only applicable to SIP VP-T49G IP phones)    | Menu->USB->Storage Space                        |
|                | hdmi = 00<br>(only applicable to SIP VP-T49G IP phones)                    | Menu->Basic->HDMI                               |
|                | video_setting_interface = 00<br>(only applicable to SIP VP-T49G IP phones) | Menu->Basic->Video Setting                      |
|                | Usb_record = 0<br>(only applicable to CP860 IP phones)                     | Menu->USB Record                                |
|                | Browse_usb_record = 0<br>(only applicable to CP860 IP phones)              | Menu->USB Record->Browse Audio                  |
|                | Browse_usb_storge = 0<br>(only applicable to CP860 IP phones)              | Menu->USB Record->Browse Space                  |
|                | app_account = 0<br>(only applicable to SIP-T58V/T58A/T56A IP phones)       | Settings->Basic->APP Accounts                   |

## Configuration Parameters for BroadSoft UC-One Version

The following table lists configuration items in the WebItemsLevel.cfg file for configurations only integrated with BroadSoft UC-One firmware version on the phone user interface of the



SIP-T58V/T58A/T56A/SIP  
 VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P  
 /T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860 IP phones.

| Section Header | Parameters and Default Value                                      | Configuration Items on the Phone User Interface   |
|----------------|---|---|
| [ GUI ]        | broadsoft_contact_list = 1<br>(0 for SIP VP-T49G/CP860 IP phones) | CP960:<br>Directory->Network Directory<br>SIP-T58V/T58A/T56A:<br> ->Network Directory<br>SIP<br>VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P)<br>E2/T19(P) E2/CP860:<br>Menu->Directory->Network Directory |
|                | broadsoft_calllog_list = 0  | CP960:<br>History->Network CallLog<br>SIP-T58V:<br> ->Network CallLog<br>SIP<br>VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40GT29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)<br>E2/CP860:<br>Menu->History->Network CallLog                    |
| [ GUI ]        | CallControl = 1<br>(0 for SIP VP-T49G IP phones)                  | SIP-T58V/T58A/T56A/CP960:<br>Settings->Features->Call Control<br>SIP<br>VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G:<br>Menu->Features->Call Control<br>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)<br>E2/CP860:<br>Menu->Call Control  |
|                | callcontrol_anywhere = 1<br>(11 for SIP VP-T49G IP                | SIP-T58V/T58A/T56A/CP960:<br>Settings->Features->Call Control->Anywhere   |

| Section Header | Parameters and Default Value  | Configuration Items on the Phone User Interface  |
|----------------|---|--|
| [ GUI ]        | phones)   | SIP<br>VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G:<br>Menu->Features->Call Control->Anywhere<br>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)<br>E2/CP860:<br>Menu->Call Control->Anywhere  |
|                | callcontrol_remoteoffice = 1<br>(11 for SIP VP-T49G IP phones)      | SIP-T58V/T58A/T56A/CP960:<br>Settings->Features->Call Control->Remote Office<br>SIP<br>VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G:<br>Menu->Features->Call Control->Remote Office<br>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)<br>E2/CP860:<br>Menu->Call Control->Remote Office    |
|                | callcontrol_dnd= 1<br>(11 for SIP VP-T49GIP phones)                 | SIP-T58V/T58A/T56A/CP960:<br>Settings->Features->Call Control->Do not Disturb<br>SIP<br>VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G:<br>Menu->Features->Call Control->Do not Disturb<br>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)<br>E2/CP860:<br>Menu->Call Control->Do Not Disturb |
|                | callcontrol_simultaneous ring = 1<br>(11 for SIP VP-T49G IP phones) | SIP-T58V/T58A/T56A/CP960:<br>Settings->Features->Call Control->Simultaneous Ring Personal<br>SIP<br>VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/  |

| Section Header | Parameters and Default Value  | Configuration Items on the Phone User Interface  |
|----------------|---|--|
|                |   | T46S/T29G:<br>Menu->Features->Call Control->Simultaneous Ring Personal<br>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)<br>E2/CP860:<br>Menu->Call Control->Simultaneous Ring Personal                |
|                | callcontrol_mobility = 1<br>(not applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/CP960 IP phones)            | SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G:<br>Menu->Features->Call Control->Mobility<br>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)<br>E2/CP860:<br>Menu->Call Control->Mobility                       |
|                | callcontrol_group_night_forward = 1<br>(not applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/CP960 IP phones) | SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G:<br>Menu->Features->Call Control->Group Night Forward<br>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)<br>E2/CP860:<br>Menu->Call Control->Group Night Forward |
|                | callcontrol_callwaiting = 1<br>(not applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/CP960 IP phones)         | SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G:<br>Menu->Features->Call Control->Call Waiting<br>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)<br>E2/CP860:<br>Menu->Call Control->Call Waiting               |
| [ GUI ]        | callcontrol_forward_selective = 1<br>(not applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/CP960 IP phones)   | SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G:<br>Menu->Features->Call Control->Call Forward<br>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)  |

| Section Header | Parameters and Default Value   | Configuration Items on the Phone User Interface   |
|----------------|--|---|
| [ GUI ]        |  | E2/CP860:<br>Menu->Call Control->Call Forward   |
|                | callcontrol_executive = 1<br><br>(not applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/CP960 IP phones)              | SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G:<br>Menu->Features->Call Control->Executive<br>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)<br>E2/CP860:<br>Menu->Call Control->Executive  |
|                | callcontrol_securityclassification = 1<br><br>(not applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/CP960 IP phones) | SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G:<br>Menu->Features->Call Control->Security Classification<br>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)<br>E2/CP860:<br>Menu->Call Control->Security Classification                                |
|                | callcontrol_executive_assistant = 1<br><br>(not applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/CP960 IP phones)    | SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G:<br>Menu->Features->Call Control->Executive-Assistant<br>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)<br>E2/CP860:<br>Menu->Call Control->Executive-Assistant  |
|                | callcontrol_hidenumbers = 1<br><br>(11 for SIP VP-T49G IP phones)  | SIP-T58V/T58A/T56A/CP960:<br>Settings->Features->Call Control->Hide Number<br>SIP VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G:<br>Menu->Features->Call Control->Hide Number<br>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)<br>E2/CP860: |

| Section Header | Parameters and Default Value  | Configuration Items on the Phone User Interface   |
|----------------|---|---|
|                |   | Menu->Call Control->Hide Number   |
|                | <p>callcontrol_anonymousejection = 1<br/>(11 for SIP VP-T49G IP phones)</p>   | <p>SIP-T58V/T58A/T56A/CP960:<br/>Settings-&gt;Features-&gt;Call Control-&gt;Anonymous Rejection</p> <p>SIP<br/>VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G:<br/>Menu-&gt;Features-&gt;Call Control-&gt;Anonymous Rejection</p> <p>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)<br/>E2/CP860:<br/>Menu-&gt;Call Control-&gt;Anonymous Rejection</p> |
|                | <p>callcontrol_initialacdstate = 1<br/>(11 for SIP VP-T49G IP phones, not applicable to SIP-T58V/T58A/T56A/CP960 IP phones)</p> | <p>SIP<br/>VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G:<br/>Menu-&gt;Features-&gt;Call Control-&gt;Initial ACD State</p> <p>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)<br/>E2/CP860:<br/>Menu-&gt;Call Control-&gt;Initial ACD State</p>   |
|                | <p>callcontrol_setacdstate =1<br/>(11 for SIP VP-T49G IP phones, not applicable to SIP-T58V/T58A/T56A/CP960 IP phones)</p>      | <p>SIP<br/>VP-T49G/SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G:<br/>Menu-&gt;Features-&gt;Call Control-&gt;ACD State</p> <p>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)<br/>E2/CP860:<br/>Menu-&gt;Call Control-&gt;ACD State</p>   |
|                | <p>callcontrol_securityclassification = 0<br/>(not applicable to SIP-T58V/T58A/T56A/SIP VP-T49G/CP860/CP960)</p>                | <p>SIP-T54S/T52S/T48G/T48S/T46G/T46S/T29G:<br/>Menu-&gt;Features-&gt;Call Control-&gt;Security Classification</p> <p>SIP-T42G/T42S/T41P/T41S/T40P/T40G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P)</p>   |

| Section Header | Parameters and Default Value | Configuration Items on the Phone User Interface          |
|----------------|------------------------------|--|
|                | IP phones)                   | E2/CP860:<br>Menu->Call Control->Security Classification |

## Configuration Parameters of Handset User Interface

The following table lists configuration items in the WebItemsLevel.cfg file with associated configurations on the handset user interface of the W56P IP DECT phones:

| Section Header | Parameters and Default Value | Configuration Items on the Handset User Interface   |
|----------------|------------------------------|---|
| [ GUI ]        | Menu_Status = 0              | OK->Status  |
|                | Base = 0                     | OK->Status->Base                                    |
|                | Handset = 0                  | OK->Status->Handset                                 |
|                | LineStatus = 0               | OK->Status->Line Status                             |
|                | Menu_Intercom = 0            | OK->Intercom  |
|                | Intercom_HSXS = 0            | OK->Intercom->Handset X                             |
|                | Intercom_ALLHS = 0           | OK->Intercom->All HS                                |
|                | Menu_VoiceMail = 0           | OK->Voice Mail                                      |
|                | Play_Message = 0             | OK->Voice Mail->Play Message                        |
|                | Set_Voice_Mail = 0           | OK->Voice Mail->Set Voice Mail                      |
|                | Set_Key_1 = 0                | OK->Voice Mail->Set Key 1                           |
|                | Menu_CallFeatures = 0        | OK->Call Features                                   |
|                | CallForward = 0              | OK->Call Features->Call Forware                     |
|                | AlwaysForward= 0             | OK->Call Features->LineX->Always(Disable/Enable)    |
| [ GUI ]        | BusyForward= 0               | OK->Call Features->LineX->Busy(Disable/Enable)      |
|                | NoAnswerForward= 0           | OK->Call Features->LineX->No Answer(Disable/Enable) |
|                | DND= 0                       | OK->Call Features->Do Not Disturb                   |
|                | CallWaiting= 0               | OK->Call Features->Call Waiting                     |
|                | AnonymousRejection = 0       | OK->Call Features->Anon.Call Rejection              |

| Section Header | Parameters and Default Value      | Configuration Items on the Handset User Interface |
|----------------|-----------------------------------|---|
| [ GUI ]        | AnonymousCall = 0                 | OK->Call Features->Anonymous Call                 |
|                | Menu_Directory = 0                | OK->Directory                                     |
|                | Local_Contact_List= 0             | OK->Directory->Local Directory                    |
|                | Remote_Contact_List= 0            | OK->Directory->Remote Dir                         |
|                | Broadsoft_Contact_List= 0         | OK->Directory->Network Directory                  |
|                | LDAP_Contact_List= 0              | OK->Directory->LDAP                               |
|                | Menu_Settings = 0                 | OK->Settings                                      |
|                | DateTime = 0                      | OK->Settings->Date & Time                         |
|                | Audio = 0                         | OK->Settings->Audio                               |
|                | Advisory_Tones = 0                | OK->Settings->Audio->Advisory Tones               |
|                | Ring_Tones = 0                    | OK->Settings->Audio->Ring Tones                   |
|                | Volume = 0                        | OK->Settings->Audio->Ring Tones->Volume           |
|                | Melodies = 0                      | OK->Settings->Audio->Ring Tones->Melodies         |
|                | Display = 0                       | OK->Settings->Display                             |
|                | Screen_Saver = 0                  | OK->Settings->Display->Screen Saver               |
|                | Wallpaper = 0                     | OK->Settings->Display->Wallpaper                  |
|                | Display_Backlight = 0             | OK->Settings->Display->Display Backlight          |
|                | Keypad_Light = 0                  | OK->Settings->Display->Keypad Light               |
|                | Time_Formate = 0                  | OK->Settings->Display->Time Format                |
|                | Date_Formate = 0                  | OK->Settings->Display->Date Format                |
|                | Input_Method = 0                  | OK->Settings->Display->Input Method               |
|                | Shortcut = 0                      | OK->Settings->Shortcut                            |
|                | Soft_Left = 0                     | OK->Settings->Shortcut->History                   |
|                | Soft_Right = 0                    | OK->Settings->Shortcut->Line Status               |
|                | Up = 0                            | OK->Settings->Shortcut->Intercom                  |
| Down = 0       | OK->Settings->Shortcut->Directory |   |
| Left = 0       | OK->Settings->Shortcut->Volume-   |   |

| Section Header | Parameters and Default Value | Configuration Items on the Handset User Interface |
|----------------|------------------------------|---|
|                | Right = 0                    | OK->Settings->Shortcut->Volume+                   |
|                | Language =0                  | OK->Settings->Language                            |
|                | Registration = 0             | OK->Settings->Registration                        |
|                | Register_Handset = 0         | OK->Settings->Registration->Register Handset      |
|                | De_reg_Handset = 0           | OK->Settings->Registration->De-reg. Handset       |
|                | Select_Base = 0              | OK->Settings->Registration->Select Base           |
|                | Telephony = 0                | OK->Settings->Telephony                           |
|                | Auto_Answer = 0              | OK->Settings->Telephony->Auto Answer              |
|                | Auto_Intercom = 0            | OK->Settings->Telephony->Auto Intercom            |
|                | Default_Line = 0             | OK->Settings->Telephony->Default Line             |
|                | Incoming_Lines = 02          | OK->Settings->Telephony->Incoming Lines           |
|                | Speed_Dial = 0               | OK->Settings->Telephony->Speed Dial               |
|                | Blacklist = 0                | OK->Settings->Telephony->Caller Blacklist         |
|                | SystemSettings= 0            | OK->Settings->System Settings                     |
|                | Network = 0                  | OK->Settings->System Settings->Network            |
|                | Handset_Reset = 0            | OK->Settings->System Settings->Handset Reset      |
|                | Change_Base_PIN = 02         | OK->Settings->System Settings->Change Base PIN    |
|                | Base_Reset_Local_Cfg = 02    | OK->Settings->System Settings->Base Reset         |
|                | Base_Restart = 02            | OK->Settings->System Settings->Base Restart       |
|                | Auto_Provision = 02          | OK->Settings->System Settings->Auto Provision     |
| [ GUI ]        | RPS = 02                     | OK->Settings->System Settings->RPS                |



| Section Header | Parameters and Default Value | Configuration Items on the Handset User Interface |
|----------------|------------------------------|---|
|                | Eco_Mode_Plus = 02           | OK->Settings->System Settings->Eco Mode+          |
|                | Eco_Mode = 0                 | OK->Settings->System Settings->Eco Mode           |
|                | Repeater_Mode = 02           | OK->Settings->System Settings->Repeater Mode      |
|                | HandsetName= 0               | OK->Settings->Handset Name                        |
|                | UpgradeFirmware= 2           | OK->Settings->Upgrade Firmware                    |
|                | Menu_History = 0             | OK->History                                       |
|                | All_Calls= 0                 | OK->History->All Calls                            |
|                | Missed_Calls= 0              | OK->History->Outgoing Calls                       |
|                | Outgoing_Calls= 0            | OK->History->Missed Calls                         |
|                | Accepted_Calls= 0            | OK->History->Accepted Calls                       |
|                | Menu_Usermode = 0            | OK->User Mode                                     |

## Appendix-B : Sample Configuration Files

### SIP-T58V/T58A/T56A/CP960 IP Phones

The default configuration item settings in factory WebItemsLevel.cfg for SIP-T58V/T58A/T56A IP phones running firmware version 80 or later are:

```
[ Status-Menu ]
Status-Basic = 0
Status-RTP = 0
Status-TalkStats = 0

[ Status ]
version = 0
network = 0
IPv4 = 0
IPv6 = 0
NetworkCommon = 0
AccountStatus = 0
Ext = 0
```

```
[ RTP-Status ]
rtcp-status = 12

[ Talk-Stats ]
talk-stats = 12

[ Account ]
account-register = 0
account-basic = 0
account-codec = 0
account-adv = 2

[ Account-Register ]
switch-account = 0
account_status = 0
line_active = 0
account_label = 0
display_name = 0
register_name = 01
user_name = 01
account_password = 01
enabled-outbound-proxy-server = 2
outbound-proxy-server = 2
transport-item = 2
backup-outbound-proxy-server = 2
proxy-fallback-interval = 2
NAT_traversal = 2
sip_server = 2

[ Account-Basic ]
switch-account = 0
proxy_require = 2
send_anonymous = 1
anonymous_rejection_enabled = 0
anonymous_call_enabled = 0
anonymous_call_OnCode = 1
anonymous_call_OffCode = 1
send_anonymous_rejection_code = 0
anonymous_rejection_OnCode = 1
anonymous_rejection_OffCode = 1
misscall-log = 0
auto-answer = 0
ring-type = 0
AccountBasicACBOnCode = 0
```

AccountBasicACBOffCode = 0

[ Account-Codec ]

switch-account = 0

codecs-group = 0

[ Account-Adv ]

switch-account = 0

UDP\_keep-alive = 2

local-SIP-port = 2

rport = 2

sip-session-timer = 2

subscribe-period = 2

DTMF\_items = 2

reliable\_retransmission = 2

subscribe-register = 2

MWI-items = 2

voice\_mail = 2

voice\_mail\_display = 2

caller-ID-header = 2

use-session-timer = 2

session-timer = 2

session-refresher = 2

user-equal-phone = 2

voice-encryption = 2

pstime-item = 2

share-line = 2

Call-Pull-Feature-Access-Code = 2

dialog-info-call-pickup = 2

BLF-list-URI = 2

BLFListCode = 2

BLFListBargeInCode = 2

BLF-List-Retrieve-Code = 2

BLA-number = 2

BLA-subscription-period = 2

SIP-send-MAC = 2

SIP-send-line = 2

SIP-Reg-retry-timer = 2

enable-signal-encode = 2

conference-type = 2

conference-uri = 2

ACD-subscrip-period = 2

Earlymedia = 2

SIPServerType = 2

```
Music-ServerURI = 2
Direct-Call-Pickup-Code = 2
Group-Call-Pickup-Code = 2
Distinctive-Ring-Tones = 2
UnregisterOnReboot = 2
Out-Dialog-BLF = 2
RTCP-Collector-Name = 2
RTCP-Collector-Address = 2
RTCP-Collector-Port = 2
Number-Of-Linekey = 2
AdvCPSource = 2
SRTP-Auth-Tag = 2
AdvCallParkNumber = 2
```

```
[ Network ]
```

```
network-basic = 0
network-pcport = 0
network-advanced = 2
shotlevel = 0
```

```
[ Network-Basic ]
```

```
ipaddress-mode = 0
ipv4config = 0
ipv6config = 0
wan-ppoe = 0
```

```
[ Network-PCPort ]
```

```
pcport-active = 0
```

```
[ Network-Advanced ]
```

```
LLDP-items = 2
CDP-items = 2
VLAN-items = 2
NAT-items = 2
port-link = 2
voice-QoS = 2
local-RTP-port = 2
web-server = 2
8021x = 2
span-to-pc-port = 2
reg-surge-prev = 2
ICMPv6_Status = 2
open-VPN = 2
reserve-port = 2
```

## [ DSSKey ]

linekey = 0

programmablekey = 0

extkey = 0

## [ LineKey ]

line-key = 0

Enable-Page-Tips = 0

## [ ProgramKey ]

programmable-key = 0

## [ ExtKey ]

ext-key = 0

## [ Features ]

features-forward = 0

features-general = 0

features-audio = 0

features-intercom = 0

features-transfer = 0

features-callpickup = 0

features-remote = 2

features-phonelock = 0

features-acd = 2

features-sms = 0

features-actionurl = 2

features-bluetooth = 0

features-powerled = 0

features-notifypop = 0

features-doorphone = 0

## [ Features-Doorphone ]

switch\_list = 0

device\_model = 0

display\_name = 0

phone\_number = 0

unlock\_pin = 0

full\_screen = 0

send\_audio = 0

send\_video = 0

## [ Forward&amp;DND ]

```
head-forward = 0
forward-mode = 0
forward-account = 0
always-forward = 0
always-forward-enabled = 0
always-forward-target = 0
always-forward-OnCode = 0
always-forward-OffCode = 0
busy-forward = 0
busy-forward-enabled = 0
busy-forward-target = 0
busy-forward-OnCode = 0
busy-forward-OffCode = 0
NoAnswer-forward = 0
NoAnswer-forward-enabled = 0
NoAnswer-forward-ringtimes = 0
NoAnswer-forward-target = 0
NoAnswer-forward-OnCode = 0
NoAnswer-forward-OffCode = 0
DND = 0
DND-Emergency = 0
DND-Authorized-Numbers = 0
DND-mode = 0
DND-account = 0
DND-Status = 0
DND-OnCode = 0
DND-OffCode = 0

forward-emergency = 0
forward-authorized-numbers = 0

[ General-Information ]
call_waiting = 0
auto-redial = 0
auto_redial_interval = 0
auto_redial_times = 0
key_as_send = 0
reserve-pound = 2
hotline-number = 0
hotline-delay = 0
busytone_delay = 0
return-code-refuse = 0
return-code-DND = 0
call_completion = 0
```

```
feature-key-synchronisation = 0
TimeOut-for-DialNow = 0
RFC-2543-Hold = 2
use-outbound-in-dialog = 2
IsDeal-180 = 2
logon-wizard = 2
PswPrefix = 0
PswLength = 0
PswDial = 0
SaveCallHistory = 2
SuppressDTMFDisplay = 1
SuppressDTMFDisplayDelay = 1
play-local-DTMF-tone = 0
DTMFRepetition = 0
MulticastCodec = 0
PlayHoldTone = 0
PlayHoldToneDelay = 0
AllowMute = 0
DualHeadset = 0
AutoAnswerDelay = 0
HeadsetPrior = 0
DTMFReplaceTran = 0
TranSendDTMF = 1
SendPoundKey = 0
FwdInternational = 0
Diversion-History-Info = 1
blf-led-mode = 0
ReLogOffTime = 2
call-number-filter = 0
allow-IP-call = 0
IP-direct-auto-answer = 0
calllog-show-num = 0
voicemail-tone = 0
DHCP-hostname = 0
EnableAutoFavorite = 0
reboot-in-talking = 0
Hide-Feature-Access-Codes = 0
display-method-on-dialing = 2
calllog-show-num = 0
auto-linekeys = 1
sip-trust-control = 2
enable-auto-answer-tone = 0
```

[ Features-Audio ]

```
call-waiting-tone = 0
button-sound = 0
redial_tone = 0
send-sound = 0
headset-send-volume = 1
handset-send-volume = 1
handfree-send-volume = 1
Ringer_Dev = 0

[ Features-Intercom ]
allow-intercom = 0
intercom-mute = 0
intercom-tone = 0
intercom-barge = 0

push-to-talk-mode

[ Features-Transfer ]
semi-attend-transfer = 0
blind-tran-onhook = 0
Semi-Attend-Trans-OnHook = 0
transfer-on-conference-hang-up = 0
TransferModeViaDsskey = 0

[ Features-Callpickup ]
Call-Pickup = 0

[ Features-Remote ]
ActionURLLimitIP = 2

[ Features-Lock ]
Lock_Enable = 0
keyboard_lock = 0
Phone_Unlock_PIN = 0
Phone_lock_time_out = 0
emergency_setting = 0

[ Features-ActionURL ]
setup-complete = 2
log-on = 2
log-off = 2
register-fail = 2
off-hook = 2
on-hook = 2
```



```
incoming-call = 2
outgoing-call = 2
call-establish = 2
Call-Terminated = 2
DND-On = 2
DND-Off = 2
Forward-On-Code = 2
Forward-Off-Code = 2
Busy-Forward-On = 2
Busy-Forward-Off = 2
No-Answer-Forward-On = 2
No-Answer-Forward-Off = 2
TransferCall = 2
Blind-transfer-call = 2
Attended-transfer-call = 2
Hold = 2
Unhold = 2
Mute = 2
Unmute = 2
Missed-call = 2
IPChange = 2
IdletoBusy = 2
BusytoIdle = 2
RejectIncomingCall = 2
AnswerNewInCall = 2
TransferFailed = 2
TransferFinished = 2
ForwardIncomingCall = 2
UCServer = 2
ReportIP = 2
AutopFinish = 2
OpenCallWait = 2
CloseCallWait = 2
Headset = 2
Handfree = 2
CancelCallOut = 2
RemoteBusy = 2
CallRemoteCanceled = 2
Held = 2
Unheld = 2

[ Features-Bluetooth ]
bluetooth-active = 0
```

```
[ Features-PowerLED ]
common-power-light-on = 0
ring-power-light-flash = 0
mail-power-light-flash = 0
mute-power-light-flash = 0
hold-power-light-flash = 0
talk-power-light-flash = 0

[ Features-NotifyPop ]
Display-Voice-Mail-Popup = 0
Display-Missed-Call-Popup = 0
Display-Forward-Call-Popup = 0

[ Settings ]
settings-preference = 0
settings-datetime = 0
settings-calldisplay = 0
settings-upgrade = 0
settings-autop = 2
settings-config = 0
settings-dialplan = 2
settings-voice = 2
settings-ring = 2
settings-tones = 2
settings-softkey = 2
settings-tr069 = 2
settings-voicemonitoring = 2
settings-sip = 2
settings-video = 0
settings-powersaving = 0

[ settings-powersaving ]
enable = 0
office_Monday = 0
office_Tuesday = 0
office_Wednesday = 0
office_Thursday = 0
office_Friday = 0
office_Saturday = 0
office_Sunday = 0
office_timeout = 0
off_timeout = 0
user_input_ext_timeout = 0
```

## [ Settings-Preference ]

web-language = 0

live-dialpad = 0

inter-digit-time = 0

backlight = 0

BacklightTime = 0

contrast\_ctrl = 0

watchdog = 2

ring\_type\_setting = 0

Wallpaper = 0

ExpWallpaper = 0

## [ Settings-PowerSaving ]

enable = 0

office\_timeout = 0

off\_timeout = 0

user\_input\_ext\_timeout = 0

office\_hour = 0

office\_Monday = 0

office\_Tuesday = 0

office\_Wednesday = 0

office\_Thursday = 0

office\_Friday = 0

office\_Saturday = 0

office\_Sunday = 0

idle\_timeout = 0

## [ Time&amp;Date ]

DHCP-Time = 0

time\_zone = 0

NTP\_priority = 0

prim\_server = 0

sec\_server = 0

update\_interval = 0

daylight-time = 0

time\_type = 0

daylight\_date= 0

offset = 0

manual-time = 0

manual-time-settings = 0

time\_format\_setting = 0

date\_format\_setting = 0

location = 0

```
daylight_week =0  
daylight_day =0  
  
[ Settings-CallDisplay ]  
Incoming-Call-Ringer-Animation = 0  
Call-Display-Method = 0
```

```
[ Settings-Upgrade ]  
version_info = 0  
reset_to_factory = 2  
reboot_device = 0  
upgrade_firmware = 0
```

```
version_info = 0  
reset = 0  
reset_local_settings = 0  
reset_nonstatic_settings = 0  
reset_static_settings = 2  
reset_userdata = 0  
reset_to_factory = 0  
reset_built_in_sdcard = 0  
reboot_device = 0  
upgrade_firmware = 0
```

```
[ Settings-AutoProvision ]  
pnp-active = 2  
dhcp-active = 2  
custom-option = 2  
DHCP-Option-Value = 2  
server-URL = 2  
account = 2  
password = 2  
common-AES-key = 2  
MAC-Oriented-AES-key = 2  
zero_active = 2  
wait_time = 2  
poweron-active = 2  
repeatedly-active = 2  
repeat-interval = 2  
weekly-active = 2  
autop-time = 2  
day-of-week = 2  
btn-autop-now = 2  
attempt-expired-time = 2
```

```
flexible-switch = 2
flexible-interval = 2
flexible-autotime = 2

[ Settings-Config ]
opt-configfile = 0
opt-factory-configfile = 0
export-cfg-config-file = 0
import-cfg-config-file = 0
pcap_trace = 0
syslog = 1
SystemLogLevel = 2
local-configfile = 1

[ Settings-DialPlan ]
replace-rule = 0
dial-now = 0
area-code = 0
block-out = 0
replace-rule-control = 0
dial-now-control = 0
area-code-control = 0
block-out-control = 0

[ Settings-Voice ]
echo-cancellation = 2
jitter-buffer = 2

[ Settings-Ring ]
personal-ring = 2

[ Settings-Tones ]
tone-items = 2

[ Softkey ]
Custom_SoftKey = 2
SoftKey_Type = 2
SoftKey_Select = 2

[ TR069 ]
head = 2
EnableTR069 = 2
```

```
ACSUsername = 2
ACSPassword = 2
ACSURL = 2
EnablePeriodicInform = 2
PeriodicInformInterval = 2
RequestUsername = 2
RequestPassword = 2

[ Settings-VoiceMonitoring ]
RTCP-Session-Report = 2
RTCP-Interval-Report = 2
RTCP-Interval-Period = 2
RTCP-Warning-Moslq = 2
RTCP-Critical-Moslq = 2
RTCP-Warning-Delay = 2
RTCP-Critical-Delay = 2
Display-VQReport-On-Web = 2
Display-VQReport-On-UI = 2
RTCP-Report-Options = 2

[ Settings-SIP ]
sip-session-timer = 2
local-SIP-port = 2
TLS-SIP-Port = 2

[ Settings-Video ]
video-active = 0

[ Contacts ]
contacts-basic = 0
contacts-remote = 1
contacts-callinfo = 0
contacts-LDAP = 1
contacts-broadsoft = 0
contacts-multicastIP = 1
contacts-favorite = 0

[ LocalPhoneBook ]
contact-list = 0
all-contacts-control = 0
import-export-contacts = 0
btnImportCSV = 0
btnExportCSV = 0
btnImportXML = 0
```

```
btnExportXML = 0
opt-contacts = 0

[ Contacts-Remote ]
remote-phonebook-list = 1
SRemoteNameEnable = 1
SRemoteNameFlashTime = 1

[ PhoneCallInfo ]
call-control = 0
dialed-list-title = 0
dialed-list-content = 0
missed-list-title = 0
missed-list-content = 0
received-list-title = 0
received-list-content = 0
forwarded-list-title = 0
forwarded-list-content = 0

[ LDAP ]
enable-LDAP = 0
LDAP-name-filter = 0
LDAP-number-filter = 0
LDAP-TLS-Mode = 0
server-address = 0
port = 0
base = 0
user-name = 0
password = 0
maxhits = 0
LDAP-name-attributes = 0
LDAP-number-attributes = 0
LDAP-display-name = 0
protocol = 0
LDAP-lookup-for-incoming-call = 0
LDAP-lookup-for-callout = 0
LDAP-sorting-results = 0

[ Contacts-Broadsoft ]
Directotries = 1
XSI = 1

[ MulticastIP ]
Receive_Priority = 1
```

```
MulticastIPConfig = 1
PagePriorityActive = 1
PagingList = 1

[ Contacts-Favorite ]
super-search = 0

[ Security ]
password = 0
trusted_cert = 2
server_cert = 2

[ TrustCerts ]
trust-certs-records = 2
btn-delete-certs = 2
only-accept-trusted-certs = 2
upload-trust-certs = 2
common-name-validation = 2
ca-certs = 2

[ ServerCerts ]
server-certs-records = 2
server-certs-upload = 2
server-certs-device-cert = 2

[ HiddenSetting ]
custom-factory-config = 2
DND-Active = 2
Forward-Active = 2
Broadsoft-Active = 2
Redirect-Active = 2
pushxml = 2

Metaswitch-Active = 0
Metaswitch-Login-Mode = 0
user-agent = 0

[ GUI ]
status = 0
status_list= 0
Status_IP = 0
Status_IPv6 = 0
Status_MAC = 0
Status_HW = 0
```



```
network = 0
Status_More_Phone = 0
Status_More_Account = 0
Status_More_RTP = 0
status_general = 0

features= 0
CallControl = 1
callcontrol_anywhere = 1
callcontrol_remoteoffice = 1
callcontrol_forward = 1
always-forward = 0
busy-forward = 0
NoAnswer-forward = 0
callcontrol_dnd = 1
callcontrol_hidenummer = 1
callcontrol_anonymousrejection = 1
callcontrol_simultaneousring = 1
call_waiting = 0
DSSKey = 0
key_as_send = 0
hotline-number = 0
Features_Anonymous = 0
Features_AutoRD = 0
intercom = 0
call_completion = 0
history_save = 2
multipaginglist = 2
time_zone = 0
Basic_Time_Manual = 0
display = 0
sound = 0
key_tone = 0
ring_type_setting = 0
unlock_pin = 0
bluetooth = 0
wifi = 12
account_label = 0
display_name = 0
register_name = 01
user_name = 01
account_password = 01
sip_server = 2
enabled-outbound-proxy-server = 2
```

```
outbound-proxy-server = 2
proxy-fallback-interval = 01
STUN_server = 2
auto-Answer = 0
Adv_Network = 0
wan_port_title = 0
VLAN-items = 2
wanport = 0
pcport = 2
dhcplan = 2
web-server = 2
8021x = 2
open-VPN = 2
open-lldp = 2
network_cdp = 2
network_nat = 2
keyboard_lock = 0
Adv_Reboot = 0
Adv_ResetToFac = 2
password = 0
Adv_AES = 02
autoprovision = 2
international-forward = 2
MSG_Voice = 0
viewvoicemail = 0
setvoicemail = 0
usermodeentry = 0
NAT_traversal = 2
callcontrol_initialacdstate = 1
callcontrol_setacdstate = 1
Main_Contacts = 0
local_contact_list = 0
remote_contact_list = 0
broadsoft_contact_list = 1
blacklist_list = 0
call_info = 0
local_call_log_list = 0
Adv_Account = 0
Basic_LANG = 0
Basic_Setting_BackLight = 0
Basic_Time_Format = 0
Basic_Time_SNTP = 0
Set_Adv = 0
Set_Basic = 0
```

```
dhcptimezone = 0
line_active = 0
dnd = 0
advanced_call_feature_default_account = 0
advanced_call_feature_list = 0
broadsoft_callog_list = 0
date_and_time_general = 0
phone_setting_list = 0
bluetooth = 0
display_wallpaper = 0
usb_interface = 0
usb_browse_audio = 0
usb_browse_video = 0
usb_browse_photo = 0
usb_storage_property = 0
app_account = 0
ResetLocalConfig = 02
reset_configuration = 02
```

## SIP VP-T49G IP Phones

The default configuration item settings in factory WebItemsLevel.cfg for SIP VP-T49G IP phones running firmware version 51.80.0.108 or later are:

```
[ Status-Menu ]
Status-Basic = 0
Status-RTP = 0
Status-TalkStats = 0

[ Status ]
version = 0
network = 0
IPv4 = 0
IPv6 = 0
NetworkCommon = 0
AccountStatus = 0
Ext = 0

[ RTP-Status ]
rtcp-status = 11

[ Talk-Stats ]
talk-stats = 0
```

```
[ Account ]
account-register = 0
account-basic = 0
account-codec = 0
account-adv = 0
account-direct=0

[ Account-Register ]
switch-account = 0
account_status = 0
line_active = 0
account_label = 0
display_name = 0
register_name = 01
user_name = 01
account_password = 2
enabled-outbound-proxy-server = 01
outbound-proxy-server = 01

transport-item = 2
backup-outbound-proxy-server = 01
NAT_traversal = 2
sip_server = 2
proxy-fallback-interval = 01

[ Account-Basic ]
switch-account = 0
proxy_require = 0
send_anonymous = 1
anonymous_call_enabled = 0
anonymous_call_OnCode = 1
anonymous_call_OffCode = 1
anonymous_rejection_enabled = 0
send_anonymous_rejection_code = 0
anonymous_rejection_OnCode = 1
anonymous_rejection_OffCode = 1
misscall-log = 0
auto-answer = 0
ring-type = 0

[ Account-Codec ]
switch-account = 0
codecs-group = 0
```

```
[ Account-Adv ]
switch-account = 0
UDP_keep-alive = 2
local-SIP-port = 2
rport = 2
sip-session-timer = 2
subscribe-period = 2
DTMF_items = 2
reliable_retransmission = 2
MWI-items = 2
voice_mail = 0
voice_mail_display = 2
caller-ID-header = 2
use-session-timer = 2
session-timer = 2
session-refresher = 2
user-equal-phone = 2
voice-encryption = 2
ptime-item = 2
share-line = 2
Call-Pull-Feature-Access-Code = 2
dialog-info-call-pickup = 2
BLF-list-URI = 2
BLFListCode = 2
BLFListBargeInCode = 2
BLF-List-Retrieve-Code = 2
BLA-number = 2
BLA-subscription-period = 2
SIP-send-MAC = 2
SIP-send-line = 2
SIP-Reg-retry-timer = 2
conference-type = 2
conference-uri = 2
Earlymedia = 2
SIPServerType = 2
Music-ServerURI = 2
Direct-Call-Pickup-Code = 2
Group-Call-Pickup-Code = 2
Distinctive-Ring-Tones = 2
UnregisterOnReboot = 2
Out-Dialog-BLF = 2
RTCP-Collector-Name = 2
RTCP-Collector-Address = 2
RTCP-Collector-Port = 2
```

Number-Of-Linekey = 1

subscribe-register = 2

[ Network ]

network-basic = 0

network-pcport = 0

network-advanced = 0

network-wifi = 0

shotlevel = 0

[ Network-Basic ]

ipaddress-mode = 2

ipv4config = 2

ipv6config = 2

wan-ppoe = 2

[ Network-PCPort ]

pcport-active = 0

[ Network-Advanced ]

LLDP-items = 2

CDP-items = 2

VLAN-items = 2

NAT-items = 2

port-link = 2

voice-QoS = 2

web-server = 2

8021x = 2

span-to-pc-port = 2

reg-surge-prev = 2

ICMPv6\_Status = 2

open-VPN = 2

reserve-port = 0

[Network-Wifi]

wifi-active = 2

wifi-list = 2

wifi-label = 2

wifi-ssid = 2

wifi-mode = 2

wifi-type = 2

wifi-psk = 2

wifi-edit = 2

wifi-status-detection-timeout = 0

[ DSSKey ]

memorykey = 0

linekey = 0

programmablekey = 0

extkey = 0

[ MemoryKey ]

memory-key = 0

[ LineKey ]

line-key = 0

Enable-Page-Tips = 0

Label-Length = 0

Label-Length-Shorten = 0

[ ProgramKey ]

programmable-key = 0

[ ExtKey ]

ext-key = 0

[ Features ]

features-forward = 0

features-general = 0

features-audio = 0

features-intercom = 0

features-transfer = 0

features-callpickup = 0

features-remote = 0

features-phonelock = 0

features-actionurl = 0

features-bluetooth = 0

features-poweredled = 0

features-notifypop = 0

[ Forward&DND ]

head-forward = 0

forward-mode = 0

forward-account = 0

always-forward = 0

always-forward-enabled = 0

```
always-forward-target = 0
always-forward-OnCode = 0
always-forward-OffCode = 0
busy-forward = 0
busy-forward-enabled = 0
busy-forward-target = 0
busy-forward-OnCode = 0
busy-forward-OffCode = 0
NoAnswer-forward = 0
NoAnswer-forward-enabled = 0
NoAnswer-forward-ringtimes = 0
NoAnswer-forward-target = 0
NoAnswer-forward-OnCode = 0
NoAnswer-forward-OffCode = 0
DND = 0
DND-Emergency = 0
DND-Authorized-Numbers = 0
DND-mode = 01
DND-account = 01
DND-Status = 01
DND-OnCode = 01
DND-OffCode = 01

forward-emergency = 0
forward-authorized-numbers = 0

[ General-Information ]
call_waiting = 0
auto-redial = 0
auto_redial_interval = 0
auto_redial_times = 0
key_as_send = 0
reserve-pound = 2
hotline-number = 0
hotline-delay = 0
busytone_delay = 0
return-code-refuse = 0
return-code-DND = 0
call_completion = 0
feature-key-synchronisation = 0
TimeOut-for-DialNow = 0
RFC-2543-Hold = 2
use-outbound-in-dialog = 2
IsDeal-180 = 2
```



```
logon-wizard = 2
PswPrefix = 2
PswLength = 2
PswDial = 2
SaveCallHistory = 2
SuppressDTMFDisplay = 1
SuppressDTMFDisplayDelay = 1
play-local-DTMF-tone = 0
DTMFRepetition = 0
MulticastCodec = 0
PlayHoldTone = 0
PlayHoldToneDelay = 0
AllowMute = 0
DualHeadset = 1
AutoAnswerDelay = 0
HeadsetPrior = 0
DTMFReplaceTran = 0
TranSendDTMF = 1
SendPoundKey = 0
FwdInternational = 0
Diversion-History-Info = 1
allow-trans-exist-call = 0
ReLogOffTime = 2
call-number-filter = 0
Use_Logo = 0
upload_logo = 0
allow-IP-call = 0
IP-direct-auto-answer = 0
calllog-show-num = 0
voicemail-tone = 0
DHCP-hostname = 0
EnableAutoFavorite = 0
reboot-in-talking = 0
Hide-Feature-Access-Codes = 0
display-method-on-dialing = 2
cloud_activae = 0
calllog-show-num = 0
auto-linekeys = 1
sip-trust-control = 2
enable-auto-answer-tone = 0

[ Features-Audio ]
call-waiting-tone = 0
button-sound = 0
```

```
redial_tone = 0
send-sound = 0
headset-send-volume = 1
handset-send-volume = 1
handfree-send-volume = 1
Ringer_Dev = 0

[ Features-Intercom ]
allow-intercom = 0
intercom-mute = 0
intercom-tone = 0
intercom-barge = 0

[ Features-Transfer ]
semi-attend-transfer = 0
blind-tran-onhook = 0
Semi-Attend-Trans-OnHook = 0
transfer-on-conference-hang-up = 0
TransferModeViaDsskey = 0

[ Features-Callpickup ]
Call-Pickup = 0
Call-Park = 0

[ Features-Remote ]
pushxml-server-addr = 2
XMLSIPNotify = 2
XMLBlockInCalling = 1
ActionURLimitIP = 2

[ Features-Lock ]
Lock_Enable = 2
keyboard_lock = 2
Phone_Unlock_PIN = 2
Phone_lock_time_out = 2
emergency_setting = 2

[ Features-ACD ]
ACD-auto-available = 2
ACD-auto-available-timer = 2

[ Features-SMS ]
send-sms = 0
```

[ Features-ActionURL ]

- setup-complete = 2
- log-on = 2
- log-off = 2
- register-fail = 2
- off-hook = 2
- on-hook = 2
- incoming-call = 2
- outgoing-call = 2
- call-establish = 2
- Call-Terminated = 2
- DND-On = 2
- DND-Off = 2
- Forward-On-Code = 2
- Forward-Off-Code = 2
- Busy-Forward-On = 2
- Busy-Forward-Off = 2
- No-Answer-Forward-On = 2
- No-Answer-Forward-Off = 2
- TransferCall = 2
- Blind-transfer-call = 2
- Attended-transfer-call = 2
- Hold = 2
- Unhold = 2
- Mute = 2
- Unmute = 2
- Missed-call = 2
- IPChange = 2
- IdletoBusy = 2
- BusytoIdle = 2
- RejectIncomingCall = 2
- AnswerNewInCall = 2
- TransferFailed = 2
- TransferFinished = 2
- ForwardIncomingCall = 2
- UCServer = 2
- ReportIP = 2
- AutopFinish = 2
- OpenCallWait = 2
- CloseCallWait = 2
- Headset = 2
- Handfree = 2
- CancelCallOut = 2
- RemoteBusy = 2

CallRemoteCanceled = 2

[ Features-Bluetooth ]

bluetooth-active = 0

[ Features-PowerLED ]

common-power-light-on = 0

ring-power-light-flash = 0

mail-power-light-flash = 0

mute-power-light-flash = 0

hold-power-light-flash = 0

talk-power-light-flash = 0

[ Features-NotifyPop ]

Display-Voice-Mail-Popup = 0

Display-Missed-Call-Popup = 0

Display-Forward-Call-Popup = 0

Display-Text-Message-Popup = 0

[ Settings ]

settings-preference = 0

settings-datetime = 0

settings-calldisplay = 0

settings-upgrade = 0

settings-autop = 0

settings-config = 0

settings-dialplan = 0

settings-voice = 0

settings-ring = 1

settings-tones = 0

settings-softkey = 2

settings-tr069 = 2

settings-voicemonitoring = 0

settings-sip = 1

settings-camera = 0

settings-video = 0

settings-powersaving = 0

[ Settings-Preference ]

web-language = 0

live-dialpad = 0

inter-digit-time = 0

UnusedBackLight = 0

backlight = 0

```
BacklightTime = 0
contrast_ctrl = 0
watchdog = 2
ring_type_setting = 0
Wallpaper = 0
screen-saver-wait-time = 0
screen-saver-type = 0

[ Time&Date ]
DHCP-Time = 0
time_zone = 0
NTP_priority = 0
prim_server = 0
sec_server = 0
update_interval = 0
daylight-time = 0
time_type = 0
daylight_date= 0
offset = 0
manual-time = 0
manual-time-settings = 0
time_format_setting = 0
date_format_setting = 0
location = 0

[ Settings-CallDisplay ]
Display-Contact-Photo = 0
Incoming-Call-Ringer-Animation = 0
Call-Display-Method = 0

[ Settings-Upgrade ]
version_info = 0
reset_to_factory = 1
reset_local_config = 0
reboot_device = 0
upgrade_firmware = 1

[ Settings-AutoProvision ]
pnp-active = 2
dhcp-active = 2
custom-option = 2
DHCP-Option-Value = 2
server-URL = 2
account = 2
```

```
password = 2
common-AES-key = 2
MAC-Oriented-AES-key = 2
zero_active = 2
wait_time = 2
poweron-active = 2
repeately-active = 2
repeat-interval = 2
weekly-active = 2
autop-time = 2
day-of-week = 2
btn-autop-now = 2
attempt-expired-time = 2

[ Settings-Config ]
opt-configfile = 1
opt-factory-configfile = 2
export-cfg-config-file = 2
import-cfg-config-file = 2
pcap_trace = 1
syslog = 1
SystemLogLevel = 2
ExportAllDiagnosticFiles = 2

[ Settings-DialPlan ]
replace-rule = 0
dial-now = 0
area-code = 0
block-out = 0
replace-rule-control = 0
dial-now-control = 0
area-code-control = 0
block-out-control = 0

[ Settings-Voice ]
echo-cancellation = 0
jitter-buffer = 0

[ Settings-Ring ]
personal-ring = 1

[ Settings-Tones ]
tone-items = 0
```

## [ Softkey ]

Custom\_SoftKey = 2

SoftKey\_Type = 2

SoftKey\_Select = 2

## [ TR069 ]

head = 2

EnableTR069 = 2

ACSUsername = 2

ACSPassword = 2

ACSURL = 2

EnablePeriodicInform = 2

PeriodicInformInterval = 2

RequestUsername = 2

RequestPassword = 2

## [ Settings-VoiceMonitoring ]

RTCP-Session-Report = 2

RTCP-Interval-Report = 2

RTCP-Interval-Period = 2

RTCP-Warning-Moslq = 2

RTCP-Critical-Moslq = 2

RTCP-Warning-Delay = 2

RTCP-Critical-Delay = 2

Display-VQReport-On-Web = 2

Display-VQReport-On-UI = 2

RTCP-Report-Options = 2

## [ Settings-SIP ]

sip-session-timer = 2

local-SIP-port = 2

TLS-SIP-Port = 2

## [ Settings-Camera ]

scene-mode = 2

manual-settings = 2

exposure = 2

status-bar-icon = 2

## [ Settings-Video ]

video-active = 0

auto-start-video = 0

auto-answer-video-mute = 0

uplink-bandwidth = 2

downlink-bandwidth = 2

[ Settings-PowerSaving ]

office\_hour = 2

office\_Monday = 2

office\_Tuesday = 2

office\_Wednesday = 2

office\_Thursday = 2

office\_Friday = 2

office\_Saturday = 2

office\_Sunday = 2

idle\_timeout = 2

office\_timeout = 2

off\_timeout = 2

user\_input\_ext\_timeout = 2

[ Contacts ]

contacts-basic = 0

contacts-remote = 0

contacts-callinfo = 0

contacts-LDAP = 0

contacts-broadsoft = 0

contacts-multicastIP = 0

contacts-favorite = 0

[ LocalPhoneBook ]

contact-list = 0

all-contacts-control = 0

import-export-contacts = 1

btnImportCSV = 1

btnExportCSV = 1

btnImportXML = 1

btnExportXML = 1

opt-contacts = 0

[ Contacts-Remote ]

remote-phonebook-list = 0

SRemoteNameEnable = 0

SRemoteNameFlashTime = 0

[ PhoneCallInfo ]

call-control = 0

dialed-list-title = 0

dialed-list-content = 0



```
missed-list-title = 0
missed-list-content = 0
received-list-title = 0
received-list-content = 0
forwarded-list-title = 0
forwarded-list-content = 0

[ LDAP ]
enable-LDAP = 0
LDAP-name-filter = 0
LDAP-number-filter = 0
LDAP-TLS-Mode = 0
server-address = 0
port = 0
base = 0
user-name = 0
password = 0
maxhits = 0
LDAP-name-attributes = 0
LDAP-number-attributes = 0
LDAP-display-name = 0
protocol = 0
LDAP-lookup-for-incoming-call = 0
LDAP-lookup-for-callout = 0
LDAP-sorting-results = 0

[ Contacts-Broadsoft ]
Directotries = 0
XSI = 0

[ MulticastIP ]
Receive_Priority = 0
MulticastIPConfig = 0
PagePriorityActive = 0
PagingList = 0

[ Contacts-Favorite ]
contacts-group = 0
super-search = 0

[ Security ]
password = 0
trusted_cert = 2
server_cert = 2
```

```
[ Password ]
set-password = 0

[ TrustCerts ]
trust-certs-records = 2
btn-delete-certs = 2
only-accept-trusted-certs = 2
upload-trust-certs = 2
common-name-validation = 2
ca-certs = 2

[ ServerCerts ]
server-certs-records = 2
server-certs-upload = 2
server-certs-device-cert = 2

[ HiddenSetting ]
custom-factory-config = 2
DND-Active = 2
Forward-Active = 2
Broadsoft-Active = 1
Redirect-Active = 1
UC-Active = 1
pushxml = 2

[ GUI ]
status_list= 0
Status_IP = 11
Status_IPv6 = 11
Status_MAC = 21
Status_HW = 01
Status_More = 01
network = 0
Status_More_Phone = 0
Status_More_Account = 0
Status_More_RTP = 02
status_general = 02

features= 02
CallControl = 0
callcontrol_anywhere = 11
callcontrol_remoteoffice = 11
callcontrol_forward = 11
```

```
always-forward = 1
busy-forward = 1
NoAnswer-forward = 1
callcontrol_dnd= 11
callcontrol_hidenumber = 11
callcontrol_anonymousrejection = 11
callcontrol_simultaneousring = 11

call_waiting = 1
DSSKey = 1
key_as_send= 12
hotline-number = 1
Features_Anonymous = 1
Features_AutoRD = 1
intercom = 1
call_completion = 1
history_save= 2

multipaginglist = 10

Main_Settings = 0

time_zone = 0
Basic_Time_Manual = 0
display = 10
sound = 1
key_tone = 1
ring_type_setting = 1
unlock_pin= 2

account_label = 02
display_name = 02
register_name = 02
user_name = 01
account_password = 01
sip_server = 01
enabled-outbound-proxy-server = 01
outbound-proxy-server = 01
STUN_server = 02
auto-Answer= 1
Adv_Network = 0
wan_port_title = 02
VLAN-items = 02
wanport = 02
```

```
pcport = 02
dhcpvlan = 02
web-server = 02
8021x = 02
open-VPN = 02
open-lldp = 02
network_cdp = 02
network_nat = 02
softkey Label = 02
keyboard_lock = 02
Adv_Reboot = 02
Adv_ResetToFac = 2
password = 0
Adv_AES = 02
autoprovision = 02
international-forward = 02

SMS= 12
MSG_Voice = 1
viewvoicemail = 1
setvoicemail = 1
usermodeentry = 0
NAT_traversal = 02
contrast_ctrl = 0

callcontrol_initialacdstate = 11
callcontrol_setacdstate = 11

Main_Contacts = 0
local_contact_list = 0
remote_contact_list = 0
broadsoft_contact_list = 0
blacklist_list = 0

call_info= 0
local_call_log_list = 01

Adv_Account = 2
Basic_LANG = 0
Basic_Setting_BackLight = 0
Basic_Time_Format = 0
Basic_Time_SNTP = 0
MSG_Text = 0
SMS_Draftbox = 0
```

```

SMS_Inbox = 0
SMS_NEW = 0
SMS_Outbox = 0
SMS_Sentbox = 0
Set_Adv = 0
Set_Basic = 0
dhcptimezone = 0
line_active = 2
status = 0
dnd= 0
advanced_call_feature_default_account = 2
advanced_call_feature_general = 1
advanced_call_feature_list = 1
broadsoft_callog_list = 0
date_and_time_general = 0
phone_setting_list = 02
reset_and_reboot_list = 02
display_wallpaper = 1
reset_default = 0
bluetooth = 1
wifi = 2

camera_setting_interface = 00
usb_interface = 00
usb_browse_audio = 00
usb_browse_video = 00
usb_browse_photo = 00
usb_storage_property = 00
hdmi = 00
video_setting_interface = 00
proxy-fallback-interval = 01

```

## SIP-T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2/CP860 IP Phones

The default configuration item settings in factory WebItemsLevel.cfg for SIP-T54S/T52S/T48G/T48S/T46G/T46S/T42G/T42S/T41P/T41S/T40P/T40G/T29G/T27P/T27G/T23P/T23G/T21(P) E2/T19(P) E2 IP phones running firmware version 81 or later are:

```

[ Status-Menu ]
Status-Basic = 0

```

```
Status-RTP = 0

[ Status ]
version = 0
network = 0
IPv4 = 0
IPv6 = 0
NetworkCommon = 0
AccountStatus = 0
Ext = 0
DeviceCertificate = 0

[ Account ]
account-register = 0
account-basic = 0
account-codec = 0
account-adv = 2

[ Account-Register ]
switch-account = 0
account_status = 0
line_active = 0
account_label = 0
display_name = 0
register_name = 01
user_name = 01
account_password = 01
enabled-outbound-proxy-server = 2
outbound-proxy-server = 2
backup-outbound-proxy-server = 2
proxy-fallback-interval = 2
NAT_traversal = 2
sip_server = 2
sip_server2 = 2
outbound-proxy-server-port = 2
backup-outbound-proxy-server-port = 2

[ Account-Basic ]
switch-account = 0
proxy_require = 2
send_anonymous = 1
anonymous_call_enabled = 0
anonymous_call_OnCode = 1
anonymous_call_OffCode = 1
```

```
anonymous_rejection_enabled = 0
anonymous_rejection_OnCode = 1
anonymous_rejection_OffCode = 1
misscall-log = 0
auto-answer = 0
ring-type = 0
send_anonymous_rejection_code = 0
```

[ Account-Codec ]

```
switch-account = 0
codecs-group = 0
```

[ Account-Adv ]

```
switch-account = 0
UDP_keep-alive = 2
local-SIP-port = 2
rport = 2
sip-session-timer = 2
subscribe-period = 2
DTMF_items = 2
reliable_retransmission = 2
MWI-items = 2
voice_mail = 2
caller-ID-header = 2
use-session-timer = 2
session-timer = 2
session-refresher = 2
user-equal-phone = 2
voice-encryption = 2
ptime-item = 2
share-line = 2
Call-Pull-Feature-Access-Code = 2
dialog-info-call-pickup = 2
BLF-list-URI = 2
BlfListCode = 2
BLFListBargeInCode = 2
BLF-List-Retrieve-Code = 2
BLA-number = 2
BLA-subscription-period = 2
SIP-send-MAC = 2
SIP-send-line = 2
SIP-Reg-retry-timer = 2
conference-type = 2
conference-uri = 2
```

```
ACD-subscrip-period = 2
Earlymedia = 2
SIPServerType = 2
Music-ServerURI = 2
Direct-Call-Pickup-Code = 2
Group-Call-Pickup-Code = 2
Distinctive-Ring-Tones = 2
UnregisterOnReboot = 2
Out-Dialog-BLF = 2
RTCP-Collector-Name = 2
RTCP-Collector-Address = 2
RTCP-Collector-Port = 2
voice_mail_display = 2
subscribe-register = 2
udp-keep-alive-type = 2
udp-keep-alive-interval = 2
Number-Of-Linekey = 2
```

```
[ Network ]
```

```
network-basic = 0
network-pcport = 0
network-advanced = 2
network-nat = 2
network-wifi = 0
shotlevel = 2
```

```
[ Network-Basic ]
```

```
ipaddress-mode = 0
ipv4config = 0
ipv6config = 0
```

```
[ Network-PCPort ]
```

```
pcport-active = 0
```

```
[ Network-Nat ]
```

```
manual = 2
manual-switch = 2
manual-ip = 2
ICE = 2
ICE-switch = 2
STUN = 2
STUN-switch = 2
STUN-server = 2
STUN-port = 2
```



```
TURN = 2
TURN-switch = 2
TURN-server = 2
TURN-port = 2
TURN-username = 2
TURN-password = 2
```

```
[ Network-Advanced ]
```

```
LLDP-items = 2
CDP-items = 2
VLAN-items = 2
port-link = 2
voice-QoS = 2
local-RTP-port = 2
web-server = 2
8021x = 2
span-to-pc-port = 2
reg-surge-prev = 2
ICMPv6_Status = 2
open-VPN = 2
```

```
[ Network-Wifi ]
```

```
wifi-active = 0
wifi-list = 0
wifi-label = 0
wifi-ssid = 0
wifi-mode = 0
wifi-type = 0
wifi-psk = 0
```

```
[ DSSKey ]
```

```
linekey = 0
programmablekey = 0
extkey = 0
```

```
[ LineKey ]
```

```
line-key = 0
Enable-Page-Tips = 0
Label-Length = 0
```

```
[ ProgramKey ]
```

```
programmable-key = 0
```

## [ ExtKey ]

ext-key = 0

## [ Features ]

features-forward = 0

features-general = 0

features-audio = 0

features-intercom = 0

features-transfer = 0

features-callpickup = 0

features-remote = 2

features-phonelock = 0

features-acd = 2

features-sms = 0

features-actionurl = 2

features-bluetooth = 0

features-powered = 0

features-notifypop = 0

## [ Forward&amp;DND ]

head-forward = 0

forward-mode = 0

forward-account = 0

always-forward = 0

always-forward-enabled = 0

always-forward-target = 0

always-forward-OnCode = 0

always-forward-OffCode = 0

busy-forward = 0

busy-forward-enabled = 0

busy-forward-target = 0

busy-forward-OnCode = 0

busy-forward-OffCode = 0

NoAnswer-forward = 0

NoAnswer-forward-enabled = 0

NoAnswer-forward-ringtimes = 0

NoAnswer-forward-target = 0

NoAnswer-forward-OnCode = 0

NoAnswer-forward-OffCode = 0

DND = 0

DND-Emergency = 0

DND-Authorized-Numbers = 0

```
DND-mode = 0
DND-account = 0
DND-Status = 0
DND-OnCode = 0
DND-OffCode = 0

forward-emergency = 0
forward-authorized-numbers = 0
```

[ General-Information ]

```
call_waiting = 0
auto-redial = 0
auto_redial_interval = 0
auto_redial_times = 0
key_as_send = 0
reserve-pound = 2
hotline-number = 0
hotline-delay = 0
busytone_delay = 0
return-code-refuse = 0
return-code-DND = 0
call_completion = 0
feature-key-synchronisation = 0
TimeOut-for-DialNow = 0
RFC-2543-Hold = 2
use-outbound-in-dialog = 2
IsDeal-180 = 2
logon-wizard = 2
PswPrefix = 0
PswLength = 0
PswDial = 0
SaveCallHistory = 2
SuppressDTMFDisplay = 1
SuppressDTMFDisplayDelay = 1
play-local-DTMF-tone = 0
DTMFRepetition = 0
MulticastCodec = 0
PlayHoldTone = 0
PlayHoldToneDelay = 0
AllowMute = 0
DualHeadset = 0
AutoAnswerDelay = 0
HeadsetPrior = 0
```

```
DTMFReplaceTran = 0
TranSendDTMF = 1
SendPoundKey = 0
FwdInternational = 0
Diversion-History-Info = 1
allow-trans-exist-call = 0
blf-led-mode = 0
ReLogOffTime = 2
call-number-filter = 0
Use_Logo = 0
upload_logo = 0
allow-IP-call = 0
IP-direct-auto-answer = 0
callog-show-num = 0
voicemail-tone = 0
DHCP-hostname = 0
EnableAutoFavorite = 0
reboot-in-talking = 0
Hide-Feature-Access-Codes = 0
display-method-on-dialing = 2
callog-show-num = 0
auto-linekeys = 1
sip-trust-control = 2
enable-auto-answer-tone = 0

[ Features-Audio ]
call-waiting-tone = 0
button-sound = 0
redial_tone = 0
send-sound = 0
headset-send-volume = 1
handset-send-volume = 1
handfree-send-volume = 1
Ringer_Dev = 0

[ Features-Intercom ]
allow-intercom = 0
intercom-mute = 0
intercom-tone = 0
intercom-barge = 0

[ Features-Transfer ]
semi-attend-transfer = 0
Semi-Attend-Trans-OnHook = 0
```

```
blind-tran-onhook = 0
transfer-on-conference-hang-up = 0
TransferModeViaDsskey = 0
```

```
[ Features-Callpickup ]
```

```
Call-Pickup = 0
Call-Park = 0
```

```
[ Features-Remote ]
```

```
pushxml-server-addr = 2
XMLSIPNotify = 2
XMLBlockInCalling = 2
ActionURLLimitIP = 2
CSTAControl = 2
```

```
[ Features-Lock ]
```

```
Lock_Enable = 0
keyboard_lock = 0
Phone_Unlock_PIN = 0
Phone_lock_time_out = 0
emergency_setting = 0
```

```
[ Features-ACD ]
```

```
ACD-auto-available = 2
ACD-auto-available-timer = 2
```

```
[ Features-ActionURL ]
```

```
setup-complete = 2
log-on = 2
log-off = 2
register-fail = 2
off-hook = 2
on-hook = 2
incoming-call = 2
outgoing-call = 2
call-establish = 2
Call-Terminated = 2
DND-On = 2
DND-Off = 2
Forward-On-Code = 2
Forward-Off-Code = 2
Busy-Forward-On = 2
Busy-Forward-Off = 2
No-Answer-Forward-On = 2
```

No-Answer-Forward-Off = 2

TransferCall = 2

Blind-transfer-call = 2

Attended-transfer-call = 2

Hold = 2

Unhold = 2

Mute = 2

Unmute = 2

Missed-call = 2

IPChange = 2

IdletoBusy = 2

BusytoIdle = 2

RejectIncomingCall = 2

AnswerNewInCall = 2

TransferFailed = 2

TransferFinished = 2

ForwardIncomingCall = 2

UCServer = 2

ReportIP = 2

AutopFinish = 2

OpenCallWait = 2

CloseCallWait = 2

Headset = 2

Handfree = 2

CancelCallOut = 2

RemoteBusy = 2

CallRemoteCanceled = 2

[ Features-Bluetooth ]

bluetooth-active = 0

[ Features-PowerLED ]

common-power-light-on = 0

ring-power-light-flash = 0

mail-power-light-flash = 0

mute-power-light-flash = 0

hold-power-light-flash = 0

talk-power-light-flash = 0

misscall-power-light-flash = 0

[ Features-NotifyPop ]

Display-Voice-Mail-Popup = 0

Display-Missed-Call-Popup = 0

Display-Forward-Call-Popup = 0

Display-Text-Message-Popup = 0

[ Settings ]

settings-preference = 0

settings-datetime = 0

settings-calldisplay = 0

settings-upgrade = 0

settings-autop = 2

settings-config = 0

settings-dialplan = 2

settings-voice = 2

settings-ring = 2

settings-tones = 2

settings-softkey = 2

settings-tr069 = 2

settings-voicemonitoring = 2

settings-sip = 2

settings-powersaving = 0

[ Settings-Preference ]

web-language = 0

live-dialpad = 0

inter-digit-time = 0

transparency = 0

UnusedBackLight = 0

backlight = 0

BacklightTime = 0

contrast\_ctrl = 0

watchdog = 2

ring\_type\_setting = 0

Wallpaper = 0

ScreenSaver = 0

ScreenSaverUpload = 0

[ Settings-PowerSaving ]

enable = 2

office\_timeout = 0

off\_timeout = 0

user\_input\_ext\_timeout = 0

office\_hour = 0

office\_Monday = 0

office\_Tuesday = 0

office\_Wednesday = 0

office\_Thursday = 0

```
office_Friday = 0
office_Saturday = 0
office_Sunday = 0
idle_timeout = 0

[ Time&Date ]
DHCP-Time = 0
time_zone = 0
NTP_priority = 0
prim_server = 0
sec_server = 0
update_interval = 0
daylight-time = 0
time_type = 0
daylight_date= 0
offset = 0
manual-time = 0
manual-time-settings = 0
time_format_setting = 0
date_format_setting = 0
location = 0

[ Settings-CallDisplay ]
Display-Contact-Photo = 0
Incoming-Call-Ringer-Animation = 0
Call-Display-Method = 0

[ Settings-Upgrade ]
version_info = 0
reset_to_factory = 2
reboot_device = 0
upgrade_firmware = 0
reset = 0
reset_local_settings = 0
reset_nonstatic_settings = 0
reset_static_settings = 2
reset_userdata = 0

[ Settings-AutoProvision ]
pnp-active = 2
dhcp-active = 2
custom-option = 2
DHCP-Option-Value = 2
server-URL = 2
```



```
account = 2
password = 2
common-AES-key = 2
MAC-Oriented-AES-key = 2
zero_active = 2
wait_time = 2
poweron-active = 2
repeatedly-active = 2
repeat-interval = 2
weekly-active = 2
autop-time = 2
day-of-week = 2
btn-autop-now = 2
attempt-expired-time = 2
weekly-upgrade-interval = 2
inactivity-time-expire = 2
flexible-switch = 2
flexible-interval = 2
flexible-autotime = 2
```

[ Settings-Config ]

```
opt-configfile = 0
opt-factory-configfile = 0
export-cfg-config-file = 0
import-cfg-config-file = 0
pcap_trace = 0
```

```
ExportAllDiagnosticFiles = 0
Local_Logging = 0
Local_Log_Switch = 0
Local_Log_Level = 0
Local_Log_Max_File_Size = 0
Local_Log_Export = 0
Syslog_Switch = 2
Syslog_Server = 2
Syslog_Transport_Type = 2
Syslog_Level = 2
Syslog_Facility = 2
Syslog_Prepend_Mac = 2
```

[ Settings-DialPlan ]

```
replace-rule = 0
dial-now = 0
```

```
area-code = 0
block-out = 0
replace-rule-control = 0
dial-now-control = 0
area-code-control = 0
block-out-control = 0

[ Settings-Voice ]
echo-cancellation = 2
jitter-buffer = 2

[ Settings-Ring ]
personal-ring = 2

[ Settings-Tones ]
tone-items = 2
tone-country = 2

[ Softkey ]
Custom_SoftKey = 2
SoftKey_Type = 2
SoftKey_Select = 2

[ TR069 ]
head = 2
EnableTR069 = 2
ACSUsername = 2
ACSPassword = 2
ACSURL = 2
EnablePeriodicInform = 2
PeriodicInformInterval = 2
RequestUsername = 2
RequestPassword = 2

[ Settings-VoiceMonitoring ]
RTCP-Session-Report = 2
RTCP-Interval-Report = 2
RTCP-Interval-Period = 2
RTCP-Warning-Mosq = 2
RTCP-Critical-Mosq = 2
RTCP-Warning-Delay = 2
RTCP-Critical-Delay = 2
Display-VQReport-On-Web = 2
Display-VQReport-On-UI = 2
```

RTCP-Report-Options = 2  
Voice-RTCP-XR-REPORT = 2

[ Settings-SIP ]

sip-session-timer = 2  
local-SIP-port = 2  
TLS-SIP-Port = 2

[ Contacts ]

contacts-basic = 0  
contacts-remote = 1  
contacts-callinfo = 0  
contacts-LDAP = 1  
contacts-broadsoft = 0  
contacts-multicastIP = 1  
contacts-favorite = 0

[ LocalPhoneBook ]

contact-list = 0  
all-contacts-control = 0  
import-export-contacts = 0  
btnImportCSV = 0  
btnExportCSV = 0  
btnImportXML = 0  
btnExportXML = 0  
opt-contacts = 0

[ Contacts-Remote ]

remote-phonebook-list = 1  
SRemoteNameEnable = 1  
SRemoteNameFlashTime = 1

[ PhoneCallInfo ]

call-control = 0  
dialed-list = 0  
missed-list = 0  
received-list = 0  
forwarded-list = 0

[ LDAP ]

enable-LDAP = 0  
LDAP-name-filter = 0

LDAP-number-filter = 0  
LDAP-TLS-Mode = 0  
server-address = 0  
port = 0  
base = 0  
user-name = 0  
password = 0  
maxhits = 0  
LDAP-name-attributes = 0  
LDAP-number-attributes = 0  
LDAP-display-name = 0  
protocol = 0  
LDAP-lookup-for-incoming-call = 0  
LDAP-lookup-for-callout = 0  
LDAP-sorting-results = 0

[ Apps ]

broadsoft-XSI = 1  
broadsoft-XMPP = 1

[ Broadsoft ]

XSI = 1  
Directories = 1  
XMPP-account = 1  
XMPP-username = 1  
XMPP-password = 1  
CallLog = 1

[ MulticastIP ]

Receive\_Priority = 1  
MulticastIPConfig = 1  
PagePriorityActive = 1  
PagingList = 1

[ Contacts-Favorite ]

contacts-group = 0  
super-search = 0

[ Security ]

password = 0  
trusted\_cert = 2  
server\_cert = 2

```
[ TrustCerts ]
trust-certs-records = 2
btn-delete-certs = 2
only-accept-trusted-certs = 2
upload-trust-certs = 2
common-name-validation = 2
ca-certs = 2
```

```
[ ServerCerts ]
server-certs-records = 2
server-certs-upload = 2
server-certs-device-cert = 2
```

```
[ HiddenSetting ]
custom-factory-config = 2
DND-Active = 2
Forward-Active = 2
Broadsoft-Active = 2
Redirect-Active = 2
UC-Active = 2
pushxml = 2
XSI-Active = 2
remote_pcap = 2
remote_pcap_switch = 2
remote_pcap_port = 2
remote_pcap_password = 2
```

```
[ GUI ]
status_list= 0
Status_IP = 0
Status_IPv6 = 0
Status_MAC = 0
Status_HW = 0
Status_More = 0
network = 0
Status_More_Phone = 0
Status_More_Account = 0
Status_More_RTP = 0
status_general = 0
softkey Label = 0
features= 0
CallControl = 1
callcontrol_anywhere = 1
callcontrol_remoteoffice = 1
```

```
callcontrol_forward = 1
always-forward = 0
busy-forward = 0
NoAnswer-forward = 0
callcontrol_dnd= 1
callcontrol_hidenummer = 1
callcontrol_anonymousrejection = 1
callcontrol_simultaneousring = 1
callcontrol_mobility =1
callcontrol_group_night_forward =1
callcontrol_callwaiting =1
callcontrol_forward_selective =1
callcontrol_executive =1
callcontrol_securityclassification =1
callcontrol_executive_assistant =1
call_waiting = 0
DSSKey = 0
key_as_send= 0
hotline-number = 0
Features_Anonymous = 0
Features_AutoRD = 0
intercom = 0
call_completion = 0
history_save= 2
multipaginglist = 2
Main_Settings= 0
time_zone = 0
Basic_Time_Manual = 0
display = 0
sound = 0
key_tone = 0
ring_type_setting = 0
unlock_pin= 0
account_label = 0
display_name = 0
register_name = 01
user_name = 01
account_password = 01
sip_server = 2
enabled-outbound-proxy-server = 2
outbound-proxy-server = 2
STUN_server = 2
auto-Answer= 0
```

```
Adv_Network = 0
wan_port_title = 0
VLAN-items = 2
wanport = 0
pcport = 2
dhcpvlan = 2
web-server = 2
8021x = 2
open-VPN = 2
open-lldp = 2
network_cdp = 2
network_nat = 2
keyboard_lock = 0
Adv_Reboot = 0
Adv_ResetToFac = 2
password = 0
autoprovision = 2
international-forward = 2

SMS= 0
MSG_Voice = 0
viewvoicemail = 0
setvoicemail = 0
usermodeentry = 0
NAT_traversal = 2
contrast_ctrl = 0
broadsoft_contact_list = 1
callcontrol_initialacdstate = 1
callcontrol_setacdstate = 1
Main_Contacts = 0
local_contact_list = 0
remote_contact_list = 0
blacklist_list = 0
call_info= 0
local_call_log_list = 0
Adv_Account = 0
Basic_LANG = 0
Basic_Setting_BackLight = 0
Basic_Time_Format = 0
Basic_Time_SNTP = 0
MSG_Text = 0
SMS_Draftbox = 0
SMS_Inbox = 0
```

```
SMS_NEW = 0
SMS_Outbox = 0
SMS_Sentbox = 0
Set_Adv = 0
Set_Basic = 0
dhcptimezone = 0
line_active = 0
status = 0
dnd= 0
advanced_call_feature_default_account = 0
advanced_call_feature_general = 0
advanced_call_feature_list = 0
broadsoft_calllog_list = 0
date_and_time_general = 0
bluetooth = 0
display_wallpaper = 0
reset_default = 0
wifi = 0
Features_Diagnostics = 0
Diagnostics_Network = 0
Diagnostics_Ping = 0
Diagnostics_TraceRoute = 0
display_dsskey_wallpaper = 0
usb_record= 0
browse_usb_record= 0
browse_usb_storage= 0
Adv_ResetConfig = 0
ResetLocalConfig = 0
ResetNonStaticConfig = 0
ResetStaticConfig = 2

callcontrol_securityclassification = 0
ResetUserDataUserCfg = 0
check_key_guard_lock = 0
screensaver = 0
blf_ring_setting = 0
Country = 0
USBIdleRecordEnable = 0
```

## W52P/W56P IP DECT Phones

The default configuration item settings in factory WebItemsLevel.cfg for W56P IP DECT phones running firmware version 81 or later are:



```
[ Status-Menu ]
Status-Basic = 0
Status-RTP = 0
Status-VoIP = 0

[ Status ]
version = 0
network = 0
IPv4 = 0
NetworkCommon = 0

[ Status-VoIP ]
registered-handset = 0
registered-new-handset = 0
voip-status = 0
paging = 0

[ Account ]
account-register = 0
account-basic = 0
account-codec = 0
account-adv = 0
account-assign = 0
account-handsetname = 0

[ Account-Register ]
switch-account = 0
account_status = 0
line_active = 0
account_label = 0
display_name = 0
register_name = 01
user_name = 01
account_password = 2
enabled-outbound-proxy-server = 01
outbound-proxy-server = 01
transport-item = 2
```

```
backup-outbound-proxy-server = 01
proxy-fallback-interval = 01
NAT_traversal = 2
sip_server = 2
outbound-proxy-server-port =2
backup-outbound-proxy-server-port =2
```

```
[ Account-Basic ]
```

```
switch-account = 0
proxy_require = 0
send_anonymous = 1
anonymous_call_enabled = 0
anonymous_call_OnCode = 1
anonymous_call_OffCode = 1
anonymous_rejection_enabled = 0
anonymous_rejection_OnCode = 1
anonymous_rejection_OffCode = 1
send_anonymous_rejection_code = 0
```

```
[ Account-Codec ]
```

```
switch-account = 0
codecs-group = 0
```

```
[ Account-Adv ]
```

```
switch-account = 0
UDP_keep-alive = 2
local-SIP-port = 2
rport = 2
sip-session-timer = 2
subscribe-period = 2
DTMF_items = 2
reliable_retransmission = 2
MWI-items = 2
voice_mail = 0
caller-ID-header = 2
use-session-timer = 2
session-timer = 2
```

```
session-refresher = 2
user-equal-phone = 2
voice-encryption = 2
ptime-item = 2
share-line = 2
SIP-send-MAC = 2
SIP-send-line = 2
SIP-Reg-retry-timer = 2
conference-type = 2
conference-uri = 2
SIPServerType = 2
UnregisterOnReboot = 2
RTCP-Collector-Name = 3
RTCP-Collector-Address = 3
RTCP-Collector-Port = 3
subscribe-register = 2

[ Account-Assign ]
incoming-lines = 0
outgoing-lines = 0

[ Account-Handsetname ]
handsetname = 1

[ Network ]
network-basic = 0
network-advanced = 0
shotlevel = 0
network-nat = 2

[ Network-Basic ]
ipaddress-mode = 2
ipv4config = 2
ipv6config = 2

[ Network-Nat ]
manual = 2
```

manual-switch = 2

manual-ip = 2

ICE = 2

ICE-switch = 2

STUN = 2

STUN-switch = 2

STUN-server = 2

STUN-port = 2

TURN = 2

TURN-switch = 2

TURN-server = 2

TURN-port = 2

TURN-username = 2

TURN-password = 2

[ Network-Advanced ]

LLDP-items = 2

VLAN-items = 2

NAT-items = 2

voice-QoS = 2

local-RTP-port = 2

web-server = 2

8021x = 2

reg-surge-prev = 2

open-VPN = 2

[ Features ]

features-forward = 0

features-general = 0

features-audio = 0

features-transfer = 0

features-callpickup = 0

features-phonelock = 0

features-powerled = 0

[ Forward&DND ]

head-forward = 0

```
forward-mode = 0
forward-account = 0
always-forward = 0
always-forward-enabled = 0
always-forward-target = 0
always-forward-OnCode = 0
always-forward-OffCode = 0
busy-forward = 0
busy-forward-enabled = 0
busy-forward-target = 0
busy-forward-OnCode = 0
busy-forward-OffCode = 0
NoAnswer-forward = 0
NoAnswer-forward-enabled = 0
NoAnswer-forward-ringtimes = 0
NoAnswer-forward-target = 0
NoAnswer-forward-OnCode = 0
NoAnswer-forward-OffCode = 0
DND = 0
DND-mode = 01
DND-account = 01
DND-Status = 01
DND-OnCode = 01
DND-OffCode = 01

[ General-Information ]
call_waiting = 0
key_as_send = 0
reserve-pound = 2
busytone_delay = 0
return-code-refuse = 0
return-code-DND = 0
feature-key-synchronisation = 0
TimeOut-for-DialNow = 0
RFC-2543-Hold = 2
use-outbound-in-dialog = 2
IsDeal-180 = 2
```

```
SaveCallHistory = 2
SuppressDTMFDisplay = 1
SuppressDTMFDisplayDelay = 1
FwdInternational = 0
Diversion-History-Info = 1
ReLogOffTime = 2
call-number-filter = 0
allow-IP-call = 0
voicemail-tone = 0
DHCP-hostname = 0
reboot-in-talking = 0
display-method-on-dialing = 2
sip-trust-control = 2
end-call-onhook = 0
```

```
[ Features-Audio ]
```

```
call-waiting-tone = 0
Ringer_Dev = 0
```

```
[ Features-Transfer ]
```

```
semi-attend-transfer = 0
Semi-Attend-Trans-OnHook = 0
blind-tran-onhook = 0
```

```
[ Features-Callpickup ]
```

```
Call-Park = 0
```

```
[ Features-Lock ]
```

```
emergency_setting = 2
```

```
[ Features-PowerLED ]
```

```
common-power-light-on = 0
ring-power-light-flash = 0
mail-power-light-flash = 0
miss-call-light-flash = 0
```

```
[ Settings ]
```

```
settings-preference = 0
settings-datetime = 0
settings-calldisplay = 0
settings-upgrade = 0
settings-autop = 0
settings-config = 0
settings-dialplan = 0
settings-voice = 0
settings-tones = 0
settings-tr069 = 2
settings-voicemonitoring = 3
settings-sip = 1

[ Settings-Preference ]
web-language = 0
watchdog = 2

[ Time&Date ]
DHCP-Time = 0
time_zone = 0
NTP_priority = 0
prim_server = 0
sec_server = 0
update_interval = 0
daylight-time = 0
time_type = 0
daylight_date = 0
offset = 0
manual-time = 0
manual-time-settings = 0
time_format_setting = 0
date_format_setting = 0
location = 0

[ Settings-CallDisplay ]
Incoming-Call-Ringer-Animation = 0
Call-Display-Method = 0
```

```
[ Settings-Upgrade ]
version_info = 0
reset_to_factory = 1
reset_local_config = 0
reboot_device = 0
upgrade_firmware = 1
upgrade_handset_firmware = 1

[ Settings-AutoProvision ]
pnp-active = 2
dhcp-active = 2
custom-option = 2
DHCP-Option-Value = 2
server-URL = 2
account = 2
password = 2
common-AES-key = 2
MAC-Oriented-AES-key = 2
poweron-active = 2
repeatedly-active = 2
repeat-interval = 2
weekly-active = 2
autop-time = 2
day-of-week = 2
btn-autop-now = 2
attempt-expired-time = 2
weekly-upgrade-interval = 2
inactivity-time-expire = 2
flexible-switch = 2
flexible-interval = 2
flexible-autotime = 2

[ Settings-Config ]
opt-configfile =0
opt-factory-configfile =0
export-cfg-config-file =0
```



```
import-cfg-config-file =0
pcap_trace =0
ExportAllDiagnosticFiles =0
Local_Logging =0
Local_Log_Switch =0
Local_Log_Level =0
Local_Log_Max_File_Size =0
Local_Log_Export =0
Syslog_Switch =2
Syslog_Server =2
Syslog_Transport_Type =2
Syslog_Level =2
Syslog_Facility =2
Syslog_Prepnd_Mac =2
```

```
[ Settings-DialPlan ]
```

```
replace-rule = 0
dial-now = 0
area-code = 0
block-out = 0
replace-rule-control = 0
dial-now-control = 0
area-code-control = 0
block-out-control = 0
```

```
[ Settings-Voice ]
```

```
echo-cancellation = 2
jitter-buffer = 2
```

```
[ Settings-Tones ]
```

```
tone-items = 2
tone-country =2
```

```
[ TR069 ]
```

```
head = 2
EnableTR069 = 2
ACSUsername = 2
```

```
ACSPassword = 2
ACSURL = 2
EnablePeriodicInform = 2
PeriodicInformInterval = 2
RequestUsername = 2
RequestPassword = 2

[ Settings-VoiceMonitoring ]
RTCP-Session-Report = 2
RTCP-Interval-Report = 2
RTCP-Interval-Period = 2
RTCP-Warning-Moslq = 2
RTCP-Critical-Moslq = 2
RTCP-Warning-Delay = 2
RTCP-Critical-Delay = 2
Display-VQReport-On-Web = 2
Display-VQReport-On-UI = 2
RTCP-Report-Options = 2

[ Settings-SIP ]
sip-session-timer = 2
local-SIP-port = 2
TLS-SIP-Port = 2

[ Contacts ]
contacts-basic = 0
contacts-remote = 0
contacts-LDAP = 0
contacts-broadsoft = 0
contacts-favorite = 0
contacts-multicastIP = 1

[ Contacts-Basic ]
download-contacts = 0
import-contacts = 0
export-contacts = 0
```

```
[ Contacts-Remote ]
remote-phonebook-list = 0
SRemoteNameEnable = 0
SRemoteNameFlashTime = 0

[ LDAP ]
enable-LDAP = 0
LDAP-name-filter = 0
LDAP-number-filter = 0
LDAP-TLS-Mode = 0
server-address = 0
port = 0
base = 0
user-name = 0
password = 0
maxhits = 0
LDAP-name-attributes = 0
LDAP-number-attributes = 0
LDAP-display-name = 0
protocol = 0
LDAP-lookup-for-incoming-call = 0
LDAP-lookup-for-callout = 0
LDAP-sorting-results = 0

[ MulticastIP ]
Receive_Priority = 1
MulticastIPConfig = 1
PagePriorityActive = 1
PagingList = 1

[ Contacts-Broadsoft ]
Directotries = 0
XSI = 0

[ Contacts-Favorite ]
contacts-group = 0
super-search = 0
```

```
[ Security ]
password = 0
trusted_cert = 2
server_cert = 2
base-pin = 0

[ BasePin ]
base-unit-pin = 0

[ TrustCerts ]
trust-certs-records = 2
btn-delete-certs = 2
only-accept-trusted-certs = 2
upload-trust-certs = 2
common-name-validation = 2
ca-certs = 2

[ ServerCerts ]
server-certs-records = 2
server-certs-upload = 2
server-certs-device-cert = 2

[ HiddenSetting ]
custom-factory-config = 2
DND-Active = 2
Forward-Active = 2
Broadsoft-Active = 1
Redirect-Active = 1

[ GUI ]
Menu_Status = 0
Base = 0
Handset = 0
LineStatus = 0

Menu_Intercom = 0
```

Intercom\_HSXS = 0

Intercom\_ALLHS = 0

Menu\_VoiceMail = 0

Play\_Message = 0

Set\_Voice\_Mail = 0

Set\_Key\_1 = 0

Menu\_CallFeatures = 0

CallForward = 0

AlwaysForward = 0

BusyForward = 0

NoAnswerForward = 0

DND = 0

CallWaiting = 0

AnonymousRejection = 0

AnonymousCall = 0

Menu\_Directory = 0

Local\_Contact\_List = 0

Remote\_Contact\_List = 0

Broadsoft\_Contact\_List = 0

LDAP\_Contact\_List = 0

Menu\_Settings = 0

DateTime = 0

Audio = 0

Advisory\_Tones = 0

Ring\_Tones = 0

Volume = 0

Melodies = 0

Display = 0

Screen\_Saver = 0

Color\_Schemes = 0

Wallpaper = 0

Display\_Backlight = 0

Keypad\_Light = 0  
Time\_Formate = 0  
Date\_Formate = 0  
Input\_Method = 0  
  
Shortcut = 0  
Soft\_Left = 0  
Soft\_Right = 0  
Up = 0  
Down = 0  
Left = 0  
Right = 0  
  
Language = 0  
  
Registration = 0  
De\_reg\_Hadndset = 0  
Select\_Base = 0  
  
Telephony = 0  
Auto\_Answer = 0  
Auto\_Intercom = 0  
Default\_Line = 0  
Incoming\_Lines = 02  
Speed\_Dial = 0  
Blacklist = 0  
  
SystemSettings = 0  
Network = 0  
Logon\_Wizard = 0  
Handset\_Reset = 0  
Change\_Base\_PIN = 02  
Base\_Reset = 02  
Base\_Reset\_Local\_Cfg = 02  
Base\_Restart = 02  
Auto\_Provision = 02  
RPS = 02

Eco\_Mode\_Plus = 02

Eco\_Mode = 0

Repeater\_Mode = 02

HandsetName = 0

UpgradeFirmware = 2

Menu\_History = 0

All\_Calls = 0

Missed\_Calls = 0

Outgoing\_Calls = 0

Accepted\_Calls = 0

Menu\_Usermode = 0

## Customer Feedback

We are striving to improve our documentation quality and we appreciate your feedback. Email your opinions and comments to [DocsFeedback@yealink.com](mailto:DocsFeedback@yealink.com).