


### Multiple Mounting Configuratuins

1. Screw the tapping screws to fix the main body of the universal joint on the wall.
2. Rotate the mounting base to lock the antenna body with the joint.
3. Fix the mounting base by rotate the rotating handle.
4. Adjust the ball joint to a proper angle and rotate the handle to fix the ball joint.


#### Wall mount

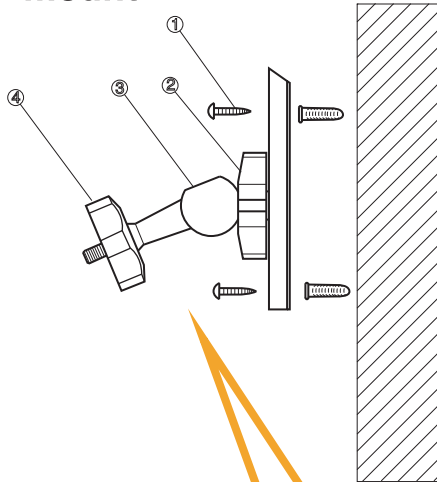

1. Taping screw
2. Rotate handle
3. Ball joint
4. Rotating handle



#### Pole mount

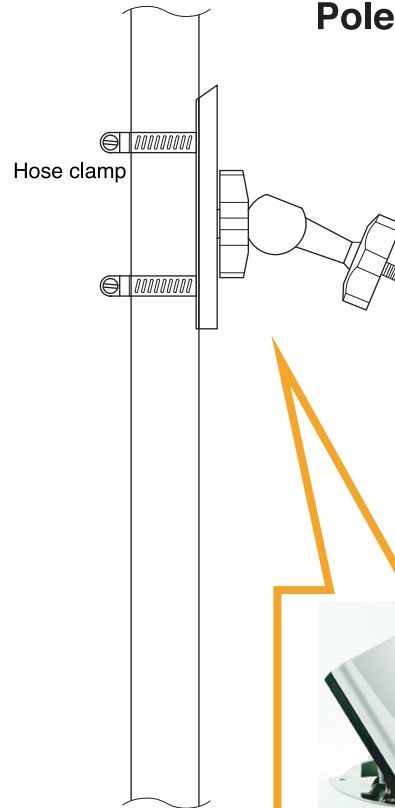

1. Tighten the hose clamp on a secure, fixed ironed pole, the diameter of the pole prefer to be less than 2 inches.
2. Rotate the mounting base to lock the antenna body with universal joint as the 3rd step of wall mount.
3. Loose the clamp and put the clamp through the oblong gap exsited on the iron base of the joint.
4. Tighten the clamp to a proper position you need.