



SBG3600-N Series

SBG3600-N000 / SBG3600-NB00

Wireless N Fiber WAN Small Business Gateway

Version 1.00
Edition 1, 04/2015

User's Guide

Default Login Details

| | |
|----------------|--------------------|
| LAN IP Address | http://192.168.1.1 |
| User Name | admin |
| Password | 1234 |

IMPORTANT!

READ CAREFULLY BEFORE USE.

KEEP THIS GUIDE FOR FUTURE REFERENCE.

Screenshots and graphics in this book may differ slightly from your product due to differences in your product firmware or your computer operating system. Every effort has been made to ensure that the information in this manual is accurate.

Related Documentation

- Quick Start Guide

The Quick Start Guide shows how to connect the SBG3600-N Series and access the Web Configurator wizards. It contains information on setting up your network and configuring for Internet access.

Contents Overview

| | |
|---|-----------|
| User's Guide | 16 |
| Introducing the SBG3600-N Series | 17 |
| The Web Configurator | 26 |
| Quick Start | 35 |
| Tutorials | 38 |
| Technical Reference | 98 |
| Status Screen | 99 |
| Broadband | 104 |
| Wireless | 137 |
| LAN | 168 |
| Routing | 188 |
| Quality of Service (QoS) | 194 |
| Network Address Translation (NAT) | 212 |
| Dynamic DNS Setup | 228 |
| AP Control | 232 |
| AP Profile | 237 |
| Interface Group | 253 |
| USB Service | 258 |
| Firewall | 261 |
| MAC Filter | 271 |
| User Access Control | 274 |
| Scheduler Rules | 277 |
| Certificates | 279 |
| IPSec VPN | 285 |
| PPTP VPN | 304 |
| L2TP VPN | 309 |
| Log | 315 |
| Network Status | 318 |
| ARP Table | 321 |
| Routing Table | 323 |
| IGMP Status | 325 |
| xDSL Statistics | 326 |
| LTE Statistics | 329 |
| AP Monitor | 332 |
| MyZyXEL | 336 |
| User Account | 338 |
| Remote Management | 342 |

| | |
|----------------------------|-----|
| TR-069 Client | 344 |
| SNMP | 346 |
| Time | 348 |
| E-mail Notification | 351 |
| Logs Setting | 353 |
| Firmware Upgrade | 356 |
| LTE Firmware Upgrade | 359 |
| Configuration | 361 |
| Diagnostic | 364 |
| Troubleshooting | 369 |

Table of Contents

| | |
|---|---------------|
| Contents Overview | 3 |
| Table of Contents | 5 |
| Part I: User's Guide | 16 |
| Chapter 1 | |
| Introducing the SBG3600-N Series | 17 |
| 1.1 Overview | 17 |
| 1.2 Applications for the SBG3600-N Series | 17 |
| 1.2.1 Internet Access | 17 |
| 1.2.2 Wireless LAN | 20 |
| 1.2.3 USB Support | 21 |
| 1.2.4 4G LTE Connection | 21 |
| 1.3 LEDs (Lights) | 22 |
| 1.4 Ways to Manage the SBG3600-N Series | 24 |
| 1.5 Good Habits for Managing the SBG3600-N Series | 24 |
| 1.6 The RESET Button | 25 |
| Chapter 2 | |
| The Web Configurator | 26 |
| 2.1 Overview | 26 |
| 2.1.1 Accessing the Web Configurator | 26 |
| 2.2 Web Configurator Layout | 28 |
| 2.2.1 Title Bar | 29 |
| 2.2.2 Main Window | 30 |
| 2.2.3 Navigation Panel | 30 |
| Chapter 3 | |
| Quick Start..... | 35 |
| 3.1 Overview | 35 |
| 3.2 Quick Start Setup | 35 |
| Chapter 4 | |
| Tutorials..... | 38 |
| 4.1 Overview | 38 |
| 4.2 Setting Up an ADSL PPPoE Connection | 38 |
| 4.3 Setting Up a GbE WAN connection | 41 |

| | |
|---|------------|
| 4.4 Setting Up a 3G WAN connection | 43 |
| 4.5 Setting Up a Secure Wireless Network | 43 |
| 4.5.1 Configuring the Wireless Network Settings | 44 |
| 4.5.2 Using WPS | 46 |
| 4.5.3 Without WPS | 50 |
| 4.6 Setting Up Multiple Wireless Groups | 51 |
| 4.7 Configuring Static Route for Routing to Another Network | 54 |
| 4.8 Configuring QoS Queue and Class Setup | 57 |
| 4.9 Access the SBG3600-N Series Using DDNS | 60 |
| 4.9.1 Registering a DDNS Account on www.dyndns.org | 60 |
| 4.9.2 Configuring DDNS on Your SBG3600-N Series | 61 |
| 4.9.3 Testing the DDNS Setting | 61 |
| 4.10 Configuring the MAC Address Filter | 61 |
| 4.11 Access Your Shared Files From a Computer | 63 |
| 4.12 Certificate Configuration for VPN | 64 |
| 4.13 Examples of Configuring IPsec VPN Rules | 67 |
| 4.13.1 Example 1: Use 3DES Encryption | 68 |
| 4.13.2 Example 2: Use AES128 Encryption | 70 |
| 4.13.3 Example 3: Configuring a Site-to-Site with Dynamic Peer Rule | 71 |
| 4.13.4 Example 4: Configuring a Remote Access Rule | 71 |
| 4.14 PPTP VPN Tutorial | 72 |
| 4.14.1 Configuring PPTP VPN Setup (Server) | 72 |
| 4.14.2 Configuring PPTP VPN on Windows (Client) | 73 |
| 4.14.3 Configuring PPTP VPN on Android Devices (Client) | 79 |
| 4.14.4 Configuring PPTP VPN in iOS Devices (Client) | 81 |
| 4.15 L2TP VPN Tutorial | 83 |
| 4.15.1 Configuring the Default_L2TPVPN IPsec VPN Rule (Server) | 83 |
| 4.15.2 Configuring the L2TP VPN Setup (Server) | 84 |
| 4.15.3 Configuring L2TP VPN in Windows (Client) | 85 |
| 4.15.4 Configuring L2TP VPN on Windows 7 | 86 |
| 4.15.5 Configuring L2TP VPN on Android Devices (Client) | 93 |
| 4.15.6 Configuring L2TP VPN in iOS Devices (Client) | 95 |
| Part II: Technical Reference..... | 98 |
| Chapter 5 | |
| Status Screen | 99 |
| 5.1 Overview | 99 |
| 5.2 The Status Screen | 99 |
| Chapter 6 | |
| Broadband..... | 104 |

| | |
|---|-----|
| 6.1 Overview | 104 |
| 6.1.1 What You Can Do in this Chapter | 104 |
| 6.1.2 What You Need to Know | 105 |
| 6.1.3 Before You Begin | 108 |
| 6.2 The Broadband Screen | 109 |
| 6.2.1 Add/Edit Internet Connection | 109 |
| 6.3 The 3G WAN Screen | 118 |
| 6.4 The LTE WAN Screen | 122 |
| 6.5 The Supported 3G/LTE USB Dongle Screen | 124 |
| 6.5.1 Add 3G Dongle Information | 125 |
| 6.6 The Advanced Screen | 126 |
| 6.7 The 802.1x Screen | 127 |
| 6.7.1 Edit 802.1x Settings | 128 |
| 6.8 The Multi-WAN Screen | 128 |
| 6.8.1 Add/Edit Multi-WAN | 129 |
| 6.8.2 How to Configure Multi-WAN for Load-Balancing and Fail-Over | 130 |
| 6.9 Technical Reference | 132 |

Chapter 7

Wireless 137

| | |
|---|-----|
| 7.1 Overview | 137 |
| 7.1.1 What You Can Do in this Chapter | 137 |
| 7.1.2 What You Need to Know | 138 |
| 7.2 The General Screen | 138 |
| 7.2.1 No Security | 141 |
| 7.2.2 Basic (WEP Encryption) | 141 |
| 7.2.3 More Secure (WPA(2)-PSK) | 143 |
| 7.2.4 WPA(2) Authentication | 144 |
| 7.3 The More AP Screen | 145 |
| 7.3.1 Edit More AP | 146 |
| 7.4 MAC Authentication | 148 |
| 7.5 The WPS Screen | 149 |
| 7.6 The WMM Screen | 150 |
| 7.7 The Others Screen | 151 |
| 7.8 The Channel Status Screen | 153 |
| 7.9 The Scheduling Screen | 153 |
| 7.9.1 Add New Rule/Edit | 154 |
| 7.10 Technical Reference | 155 |
| 7.10.1 Wireless Network Overview | 155 |
| 7.10.2 Additional Wireless Terms | 157 |
| 7.10.3 Wireless Security Overview | 157 |
| 7.10.4 Signal Problems | 159 |
| 7.10.5 BSS | 160 |

| | |
|--|------------|
| 7.10.6 MBSSID | 160 |
| 7.10.7 Preamble Type | 161 |
| 7.10.8 WiFi Protected Setup (WPS) | 161 |
| Chapter 8 | |
| LAN | 168 |
| 8.1 Overview | 168 |
| 8.1.1 What You Can Do in this Chapter | 168 |
| 8.1.2 What You Need To Know | 169 |
| 8.1.3 Before You Begin | 170 |
| 8.2 The LAN Setup Screen | 170 |
| 8.3 The Static DHCP Screen | 174 |
| 8.4 The UPnP Screen | 176 |
| 8.5 Installing UPnP in Windows Example | 176 |
| 8.5.1 Using UPnP in Windows XP Example | 178 |
| 8.5.2 Web Configurator Easy Access | 180 |
| 8.6 The Additional Subnet Screen | 183 |
| 8.7 The 5th Ethernet Port Screen | 184 |
| 8.8 Technical Reference | 184 |
| 8.8.1 LANs, WANs and the SBG3600-N Series | 184 |
| 8.8.2 DHCP Setup | 185 |
| 8.8.3 DNS Server Addresses | 185 |
| 8.8.4 LAN TCP/IP | 186 |
| Chapter 9 | |
| Routing | 188 |
| 9.1 Overview | 188 |
| 9.1.1 What You Can Do in this Chapter | 188 |
| 9.2 The Routing Screen | 189 |
| 9.2.1 Add/Edit Static Route | 189 |
| 9.3 The Policy Forwarding Screen | 190 |
| 9.3.1 Add/Edit Policy Forwarding | 191 |
| 9.4 The RIP Screen | 192 |
| Chapter 10 | |
| Quality of Service (QoS)..... | 194 |
| 10.1 Overview | 194 |
| 10.1.1 What You Can Do in this Chapter | 194 |
| 10.2 What You Need to Know | 195 |
| 10.3 The Quality of Service General Screen | 196 |
| 10.4 The Queue Setup Screen | 197 |
| 10.4.1 Adding a QoS Queue | 199 |
| 10.5 The Class Setup Screen | 199 |

| | |
|---|-----|
| 10.5.1 Add/Edit QoS Class | 200 |
| 10.6 The QoS Policer Setup Screen | 204 |
| 10.6.1 Add/Edit a QoS Policer | 205 |
| 10.7 The QoS Monitor Screen | 206 |
| 10.8 Technical Reference | 207 |

Chapter 11

Network Address Translation (NAT)..... 212

| | |
|--|-----|
| 11.1 Overview | 212 |
| 11.1.1 What You Can Do in this Chapter | 212 |
| 11.1.2 What You Need To Know | 212 |
| 11.2 The Port Forwarding Screen | 213 |
| 11.2.1 Add/Edit Port Forwarding | 215 |
| 11.3 The Applications Screen | 216 |
| 11.3.1 Add New Application | 217 |
| 11.4 The Port Triggering Screen | 217 |
| 11.4.1 Add/Edit Port Triggering Rule | 219 |
| 11.5 The Default Server Screen | 220 |
| 11.6 The ALG Screen | 221 |
| 11.7 The Address Mapping Screen | 221 |
| 11.7.1 Add/Edit Address Mapping Rule | 222 |
| 11.8 Technical Reference | 223 |
| 11.8.1 NAT Definitions | 223 |
| 11.8.2 What NAT Does | 224 |
| 11.8.3 How NAT Works | 225 |
| 11.8.4 NAT Application | 225 |

Chapter 12

Dynamic DNS Setup..... 228

| | |
|--|-----|
| 12.1 Overview | 228 |
| 12.1.1 What You Can Do in this Chapter | 228 |
| 12.1.2 What You Need To Know | 229 |
| 12.2 The DNS Entry Screen | 229 |
| 12.2.1 Add/Edit DNS Entry | 229 |
| 12.3 The Dynamic DNS Screen | 230 |
| 12.4 The Host Name Screen | 231 |

Chapter 13

AP Control..... 232

| | |
|--|-----|
| 13.1 Overview | 232 |
| 13.1.1 What You Can Do in this Chapter | 232 |
| 13.2 The Controller Screen | 232 |
| 13.3 The Managed AP List Screen | 233 |

| | |
|---|------------|
| 13.4 The Load Balancing Screen | 234 |
| 13.5 The Dynamic Channel Selection Screen | 235 |
| Chapter 14 | |
| AP Profile..... | 237 |
| 14.1 Overview | 237 |
| 14.1.1 What You Can Do in this Chapter | 237 |
| 14.1.2 What You Need To Know | 237 |
| 14.2 Radio Screen | 238 |
| 14.2.1 Add/Modify New Profile | 239 |
| 14.3 SSID Screen | 243 |
| 14.3.1 Add New Profile/Modify SSID Profile | 244 |
| 14.4 Security Screen | 245 |
| 14.4.1 Add/Modify Security Profile | 246 |
| 14.5 MAC Filtering Screen | 249 |
| 14.5.1 Add New Entry/Modify MAC Filtering Profile | 250 |
| 14.6 Layer-2 Isolation Overview | 250 |
| 14.7 Layer-2 Isolation Screen | 251 |
| 14.7.1 Add New Profile/Modify Layer-2 Isolation | 252 |
| Chapter 15 | |
| Interface Group..... | 253 |
| 15.1 Overview | 253 |
| 15.2 The Interface Group/VLAN Screen | 253 |
| 15.2.1 Interface Group Configuration | 254 |
| 15.2.2 Interface Grouping Criteria | 255 |
| Chapter 16 | |
| USB Service | 258 |
| 16.1 Overview | 258 |
| 16.1.1 What You Can Do in this Chapter | 258 |
| 16.1.2 What You Need To Know | 258 |
| 16.2 The File Sharing Screen | 259 |
| 16.2.1 Before You Begin | 259 |
| Chapter 17 | |
| Firewall | 261 |
| 17.1 Overview | 261 |
| 17.1.1 What You Can Do in this Chapter | 261 |
| 17.1.2 What You Need to Know | 262 |
| 17.2 The Firewall Screen | 263 |
| 17.3 The DoS Screen | 263 |
| 17.4 The Service Screen | 264 |

| | |
|--|------------|
| 17.4.1 Add/Edit a Service | 265 |
| 17.5 The Access Control Screen | 266 |
| 17.5.1 Add/Edit an ACL Rule | 267 |
| 17.6 The Zone Control Screen | 269 |
| Chapter 18 | |
| MAC Filter..... | 271 |
| 18.1 Overview | 271 |
| 18.2 The MAC Filter Screen | 272 |
| Chapter 19 | |
| User Access Control | 274 |
| 19.1 Overview | 274 |
| 19.2 The User Access Control Screen | 274 |
| 19.2.1 Add/Edit a User Access Control Rule | 275 |
| Chapter 20 | |
| Scheduler Rules..... | 277 |
| 20.1 Overview | 277 |
| 20.2 The Scheduler Rules Screen | 277 |
| 20.2.1 Add/Edit a Schedule | 277 |
| Chapter 21 | |
| Certificates | 279 |
| 21.1 Overview | 279 |
| 21.1.1 What You Can Do in this Chapter | 279 |
| 21.2 What You Need to Know | 279 |
| 21.3 The Local Certificates Screen | 279 |
| 21.3.1 Create Certificate Request | 280 |
| 21.3.2 Load Signed Certificate | 282 |
| 21.4 The Trusted CA Screen | 283 |
| 21.4.1 Import Trusted CA Certificate | 283 |
| Chapter 22 | |
| IPSec VPN..... | 285 |
| 22.1 Overview | 285 |
| 22.2 What You Can Do in this Chapter | 285 |
| 22.3 What You Need To Know | 286 |
| 22.4 The Setup Screen | 286 |
| 22.4.1 Add/Edit VPN Rule | 287 |
| 22.4.2 The VPN Connection Add/Edit Screen | 287 |
| 22.4.3 The Default_L2TPVPN IPSec VPN Rule | 295 |
| 22.5 The IPSec VPN Monitor Screen | 295 |

| | |
|--|------------|
| 22.6 The Radius Screen | 296 |
| 22.7 Technical Reference | 297 |
| 22.7.1 IPSec Architecture | 297 |
| 22.7.2 Encapsulation | 298 |
| 22.7.3 IKE Phases | 299 |
| 22.7.4 Negotiation Mode | 300 |
| 22.7.5 IPSec and NAT | 300 |
| 22.7.6 VPN, NAT, and NAT Traversal | 301 |
| 22.7.7 ID Type and Content | 302 |
| 22.7.8 Pre-Shared Key | 303 |
| 22.7.9 Diffie-Hellman (DH) Key Groups | 303 |
| Chapter 23 | |
| PPTP VPN | 304 |
| 23.1 Overview | 304 |
| 23.2 What You Can Do in this Chapter | 304 |
| 23.3 PPTP VPN Setup | 305 |
| 23.4 The PPTP VPN Monitor Screen | 306 |
| 23.5 PPTP VPN Troubleshooting Tips | 306 |
| Chapter 24 | |
| L2TP VPN | 309 |
| 24.1 Overview | 309 |
| 24.1.1 What You Can Do in this Chapter | 309 |
| 24.2 L2TP VPN Screen | 309 |
| 24.3 The L2TP VPN Monitor Screen | 311 |
| 24.4 L2TP VPN Troubleshooting Tips | 311 |
| Chapter 25 | |
| Log | 315 |
| 25.1 Overview | 315 |
| 25.1.1 What You Can Do in this Chapter | 315 |
| 25.1.2 What You Need To Know | 315 |
| 25.2 The System Log Screen | 316 |
| 25.3 The Security Log Screen | 316 |
| Chapter 26 | |
| Network Status | 318 |
| 26.1 Overview | 318 |
| 26.1.1 What You Can Do in this Chapter | 318 |
| 26.2 The WAN Status Screen | 318 |
| 26.3 The LAN Status Screen | 319 |
| 26.4 The DHCP Client Screen | 320 |

| | |
|--|------------|
| Chapter 27 | |
| ARP Table | 321 |
| 27.1 Overview | 321 |
| 27.1.1 How ARP Works | 321 |
| 27.2 ARP Table Screen | 321 |
| Chapter 28 | |
| Routing Table | 323 |
| 28.1 Overview | 323 |
| 28.2 The Routing Table Screen | 323 |
| Chapter 29 | |
| IGMP Status | 325 |
| 29.1 Overview | 325 |
| 29.2 The IGMP Group Status Screen | 325 |
| Chapter 30 | |
| xDSL Statistics | 326 |
| 30.1 The xDSL Statistics Screen | 326 |
| Chapter 31 | |
| LTE Statistics | 329 |
| 31.1 The LTE Statistics Screen | 329 |
| Chapter 32 | |
| AP Monitor | 332 |
| 32.1 Overview | 332 |
| 32.1.1 What You Can Do in this Chapter | 332 |
| 32.2 AP List Screen | 332 |
| 32.3 Radio List Screen | 333 |
| 32.4 Station List Screen | 334 |
| Chapter 33 | |
| MyZyXEL | 336 |
| 33.1 MyZyXEL Overview | 336 |
| 33.2 The License Status Screen | 336 |
| Chapter 34 | |
| User Account | 338 |
| 34.1 Overview | 338 |
| 34.2 The User Account Screen | 338 |
| 34.2.1 Add/Edit a User Account | 339 |
| 34.3 The Radius Screen | 340 |

| | |
|--|------------|
| Chapter 35 | |
| Remote Management..... | 342 |
| 35.1 Overview | 342 |
| 35.2 The Remote MGMT Screen | 342 |
| Chapter 36 | |
| TR-069 Client..... | 344 |
| 36.1 Overview | 344 |
| 36.2 The TR-069 Client Screen | 344 |
| Chapter 37 | |
| SNMP | 346 |
| 37.1 The SNMP Agent Screen | 346 |
| Chapter 38 | |
| Time | 348 |
| 38.1 Overview | 348 |
| 38.2 The Time Screen | 348 |
| Chapter 39 | |
| E-mail Notification | 351 |
| 39.1 Overview | 351 |
| 39.2 The Email Notification Screen | 351 |
| 39.2.1 Email Notification Edit | 351 |
| Chapter 40 | |
| Logs Setting | 353 |
| 40.1 Overview | 353 |
| 40.2 The Log Setting Screen | 353 |
| 40.2.1 Example E-mail Log | 354 |
| Chapter 41 | |
| Firmware Upgrade | 356 |
| 41.1 Overview | 356 |
| 41.2 The Firmware Screen | 356 |
| Chapter 42 | |
| LTE Firmware Upgrade..... | 359 |
| 42.1 Overview | 359 |
| 42.2 The Firmware Screen | 359 |
| Chapter 43 | |
| Configuration | 361 |

| | |
|--|------------|
| 43.1 Overview | 361 |
| 43.2 The Configuration Screen | 361 |
| 43.3 The Reboot Screen | 363 |
| Chapter 44 | |
| Diagnostic | 364 |
| 44.1 Overview | 364 |
| 44.1.1 What You Can Do in this Chapter | 364 |
| 44.2 What You Need to Know | 364 |
| 44.3 Ping & TraceRoute & NsLookup | 365 |
| 44.4 802.1ag | 365 |
| 44.5 OAM Ping Test | 366 |
| Chapter 45 | |
| Troubleshooting..... | 369 |
| 45.1 Power, Hardware Connections, and LEDs | 369 |
| 45.2 SBG3600-N Series Access and Login | 370 |
| 45.3 Internet Access | 372 |
| 45.4 Wireless Connection | 373 |
| 45.5 USB Device Connection | 374 |
| 45.6 UPnP | 375 |
| Appendix A Setting up Your Computer's IP Address | 376 |
| Appendix B IP Addresses and Subnetting | 396 |
| Appendix C Pop-up Windows, JavaScript and Java Permissions | 404 |
| Appendix D Wireless LANs..... | 411 |
| Appendix E IPv6 | 424 |
| Appendix F Services | 432 |
| Appendix G Legal Information | 436 |
| Appendix H Customer Support | 443 |
| Index | 449 |

PART I

User's Guide

Introducing the SBG3600-N Series

1.1 Overview

The SBG3600-N Series is a secure VPN (Virtual Private Network), multi-WAN gateway that provides high-speed Internet access for business users. It features not only VDSL2/ADSL2+ Bonding functionality, but also one Gigabit Ethernet (GbE) WAN with Small Form Factor Pluggable (SFP) interface. SFP is also known as Fiber Optics interface. The GbE WAN with SFP is a dual-personality design (GbE + Fiber) which enables increased bandwidth and extended coverage. Namely, the SBG3600-N Series can adopt varied network environment and enable service providers to flexibly install this device for VDSL, Fiber and 3G or 4G LTE, in addition to provide load-balancing to ensure seamless Internet connectivity.

FEATURES

- Four GbE Ports for LAN Connection
- One USB Port for 3G Connection and File Sharing
- One SIM Card Slot for 4G LTE Connection
- One SFP Port for Fiber Optic Internet Connection
- One GbE WAN Port
- Two VDSL2/ADSL2+ (SBG3600-N only) Integrated Ports (Bonding)
- One VDSL2/ADSL2+ (SBG3600-NB only) Port
- Integrated Firewall with Secure Network Management
- IP secure VPN

Only use firmware for your SBG3600-N Series's specific model. Refer to the label on the bottom of your SBG3600-N Series.

Note: SFP and GbE connections cannot be used at the same time.

1.2 Applications for the SBG3600-N Series

Here are some example uses for which the SBG3600-N Series is well suited.

1.2.1 Internet Access

Your SBG3600-N Series provides multiple Internet access methods (up to two at a time), and you can use them in the following combinations, if your ISP supports them.

- ADSL2+ and VDSL, connect the DSL1 and/or DSL2 port using a phone cable to a DSL or MODEM on a splitter or your telephone jack. For single DSL connection, use only DSL1 port. For DSL bonding connection, use both DSL1 and DSL2 port at the same time. Refer to [Section 6.2 on page 109](#) for the **Network Setting > Broadband** screen. When using the DSL1/DSL2 ports and VDSL connection is not available, then the ADSL2+ will automatically be the network interface. You need to enable bonding feature if you want to use the bonding state. See ([Section 6.6 on page 126](#)) for details.
- DSL and GbE, connect the DSL port to the DSL or MODEM as described above and connect the GbE port to a broadband router (if available) using an Ethernet cable. The 3G USB dongle or the built-in 4G LTE module is the failover or a backup connection in case both the DSL and GbE fails. You can set the load balance and failover in SBG3600-N Series to prioritize and redirect all traffic to the backup connection in case the Internet access is down by clicking **Network Settings > Broadband > Multi-WAN**
- DSL and Fiber (SFP), connect the the DSL port to the DSL or MODEM and connect the SFP port using a Fiber Optical module, also known as a mini-GBIC transceiver, to a Switch or Router. The 3G USB dongle or the built-in 4G LTE module is the failover or backup connection. Set load balance as described above and see the SBG3600-N Series's Quick Start Guide for details on how to install and remove a mini-GBIC transceiver.
- DSL, 3G and 4G LTE, connect the DSL port to the DSL or MODEM, connect the USB port using a USB 3G dongle and insert a 4G LTE SIM card into the SIM card slot. The Fiber/Ethernet is the failover. You can set the load balance/failover as described above.
- Fiber, 3G and 4G LTE, connect the SFP port using a mini-GBIC transceiver, the USB port using a USB 3G dongle as described above and insert a 4G LTE SIM card into the SIM card slot. The DSL is the failover in case both Fiber, 3G and 4G LTE is unavailable.
- GbE, 3G and 4G LTE, connect the GbE port to a broadband router and the USB port using a USB 3G dongle and insert a 4G LTE SIM card into the SIM card slot. The DSL is the failover in case both Fiber, 3G and 4G LTE is unavailable.
- WLAN or Wireless Internet access, Refer to [Section 1.2.2 on page 20](#) for more information.

Note: There can only be one failover interface configured at any one time.

The below table is a summary of the SBG3600-N Series Multi-WAN combinations and failover.

| DSL | SFP/ETHERNET WAN | 3G | 4G LTE |
|----------|------------------|----------|----------|
| Active | Active | Active | Failover |
| Active | Active | Failover | Active |
| Active | Failover | Active | Active |
| Failover | Active | Active | Active |

The following figure shows the possible internet access scenarios described above.

Computers can connect to the SBG3600-N Series's LAN ports (or wirelessly).

Figure 1 SBG3600-N Series's Internet Access Application

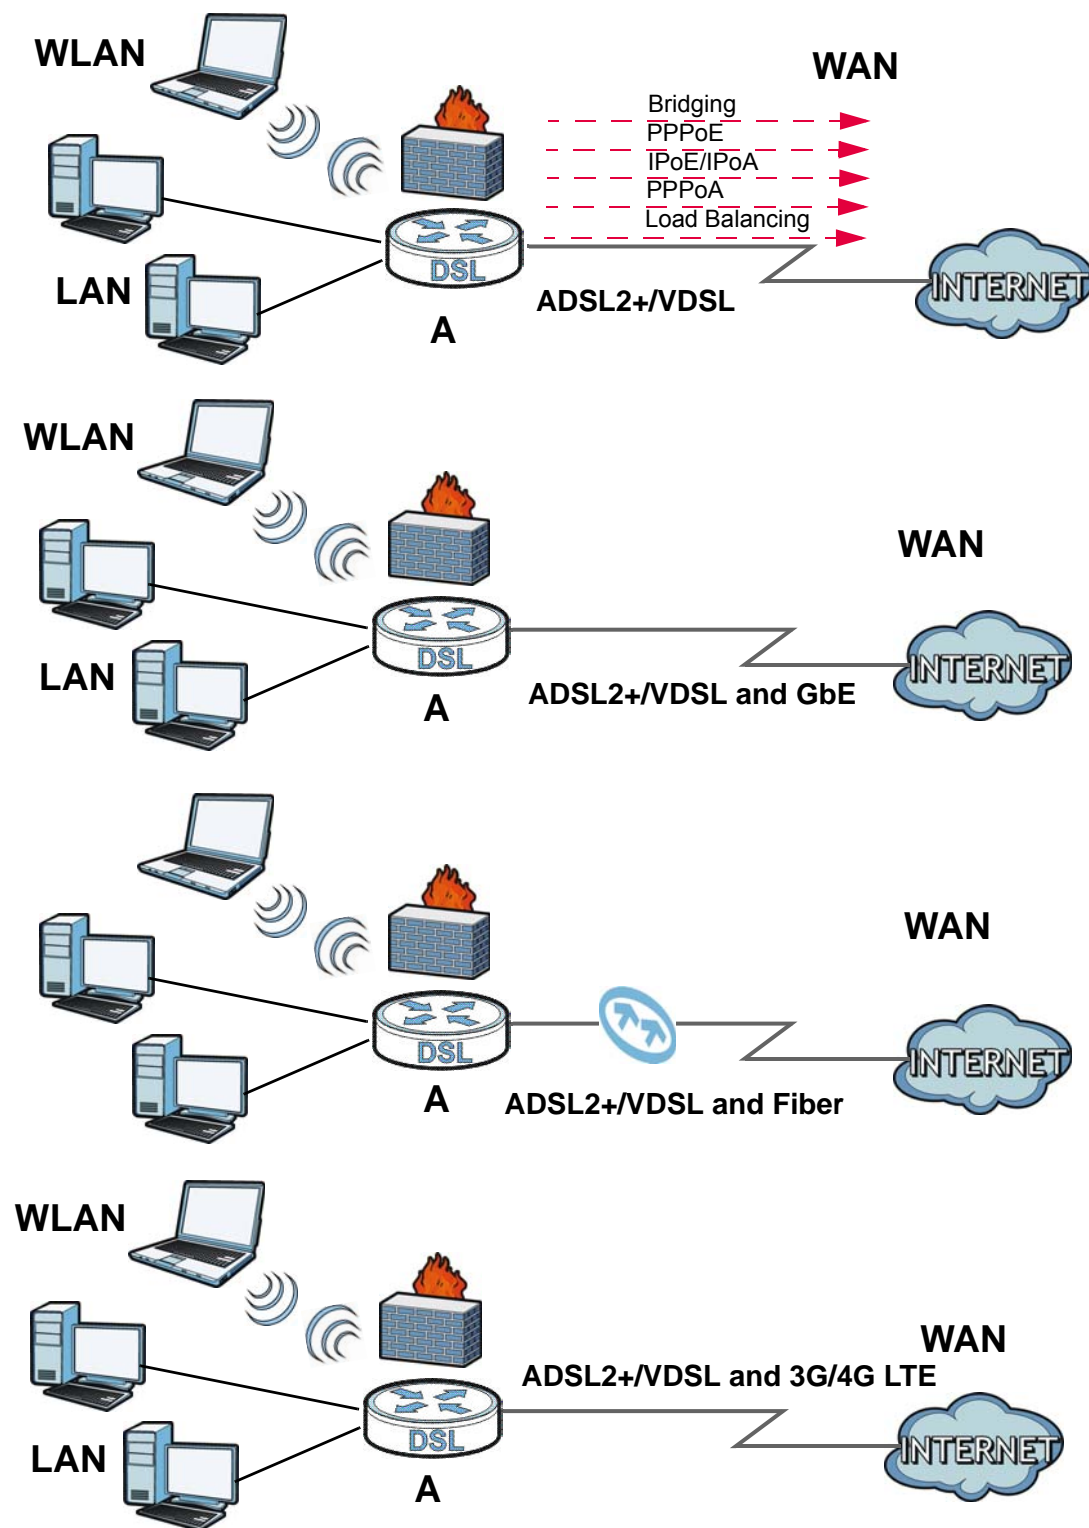
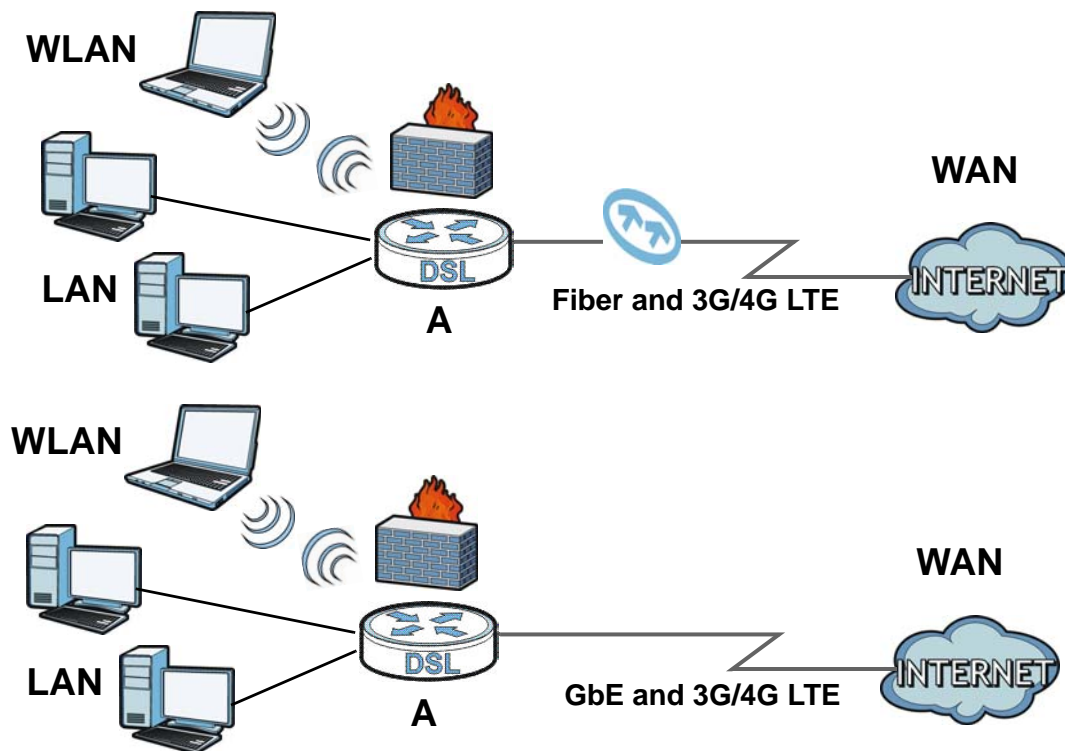



Figure 2 SBG3600-N Series's Internet Access Application (Continue)

You can also configure IP filtering on the SBG3600-N Series for secure Internet access. Go to **Security > MAC Filter** to do this task. When the IP filter is on, all incoming traffic from the Internet to your network is blocked by default unless it is initiated from your network. This means that probes from the outside to your network are not allowed, but you can safely browse the Internet and download files.

1.2.2 Wireless LAN

The SBG3600-N Series is a wireless Access Point (AP) for wireless clients, such as notebook computers or PDAs and iPads. It allows them to connect to the Internet without having to rely on inconvenient Ethernet cables.

You can configure your wireless network in either the built-in Web Configurator.

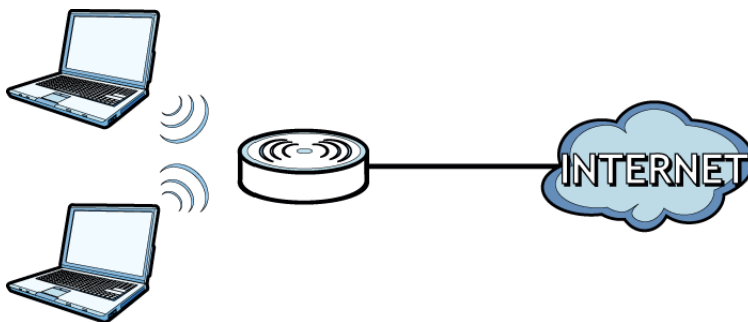Figure 3 Wireless Access Example

Using the WLAN Button

If the wireless network is turned off, press the **WLAN** button at the back of the SBG3600-N Series. Once the **WLAN** LED turns green, the wireless network is active.

1.2.3 USB Support

The USB port of the SBG3600-N Series is used for 3G USB dongle and file-sharing.


3G USB Dongle

Connect a 3G USB dongle with an active SIM card to the USB port. See the product page on ZyXEL's website for the list of 3G USB dongles that are compatible. To set up a 3G connection, click **Network Settings > Broadband > 3G WAN**, and to add new 3G USB dongles, click **Network Settings > Broadband > Add new 3G Dongle**.

File Sharing

Use the built-in USB 2.0 port to share files on a USB memory stick or a USB hard drive (**B**). You can connect one USB hard drive to the SBG3600-N Series at a time. Use FTP to access the files on the USB device.

Figure 4 USB File Sharing Application

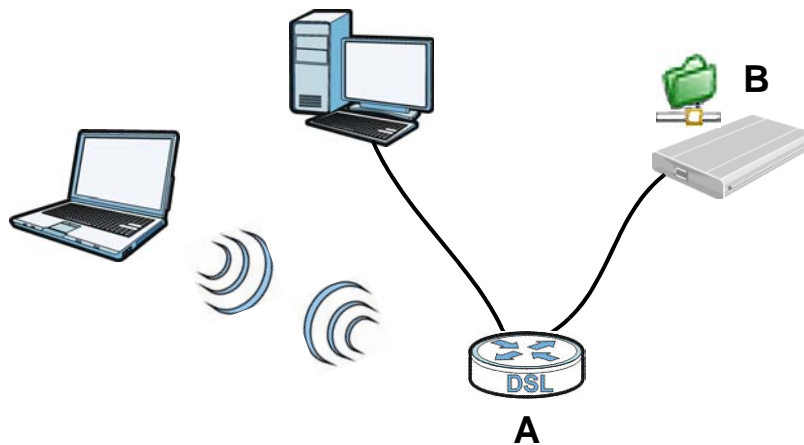

1.2.4 4G LTE Connection


The SBG3600-N Series comes with a built-in 4G LTE module for 4G LTE connections. To set up a 4G LTE connection using the built-in LTE module, just insert a 4G LTE SIM card into the SIM card slot at the back of the SBG3600-N Series.

Note: You must insert the 4G LTE SIM card into the card slot before turning on the SBG3600-N Series.

1.3 LEDs (Lights)

The following graphic displays the labels of the LEDs.

Figure 5 LEDs on the SBG3600-N Series

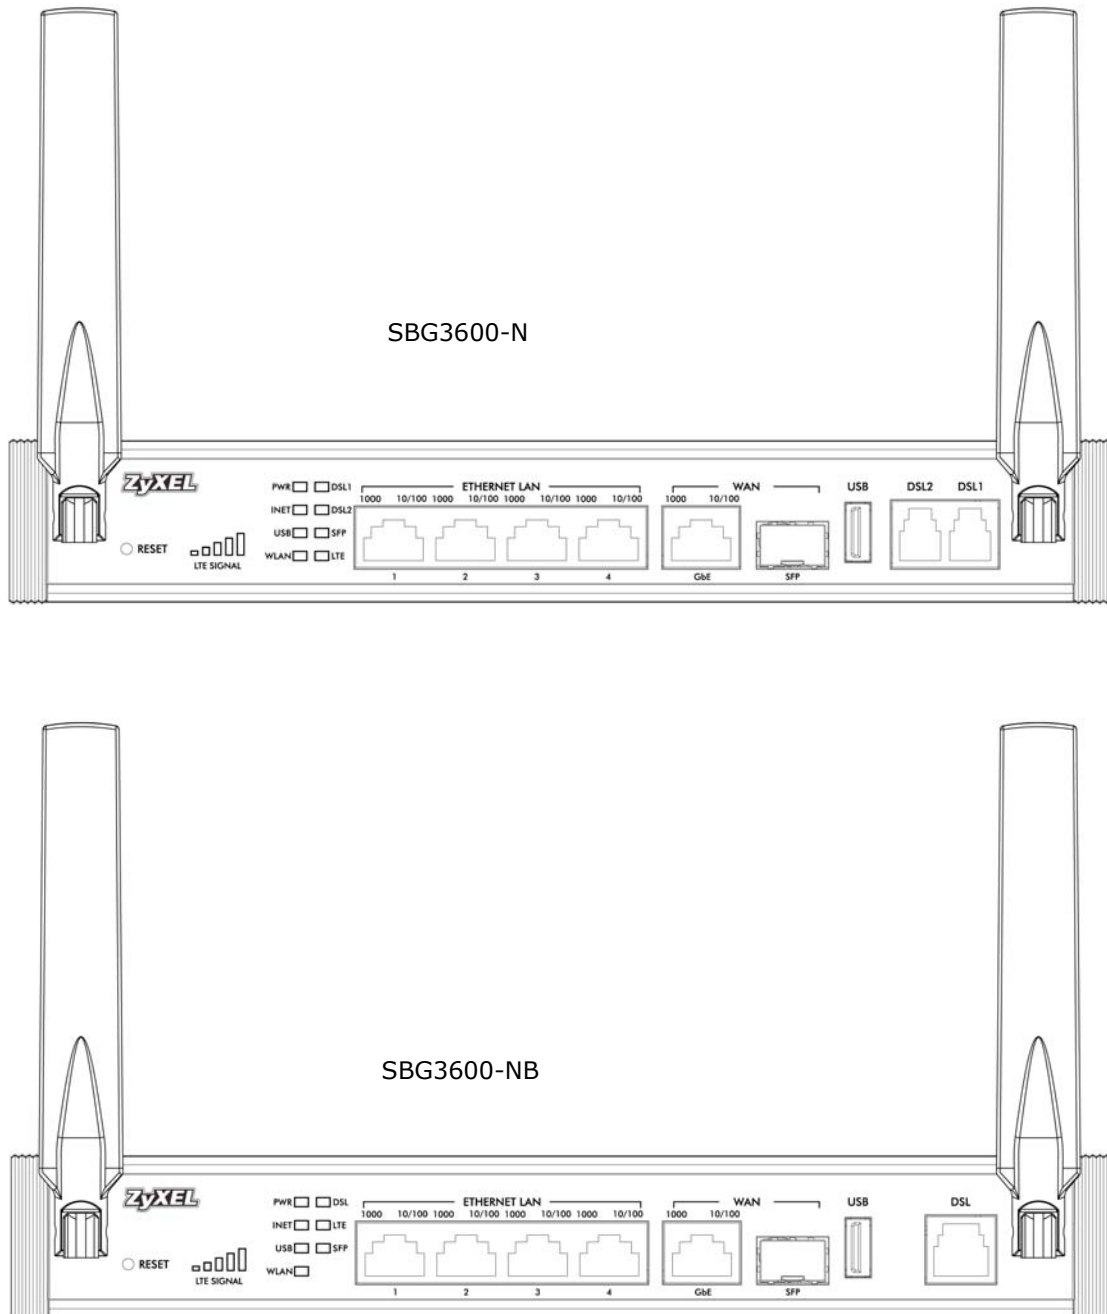

None of the LEDs are on if the SBG3600-N Series is not receiving power.

Table 1 LED Descriptions

| LED | COLOR | STATUS | DESCRIPTION |
|---|--------|-------------|--|
| LTE SIGNAL | Green | On (5 bars) | Signal strength: Excellent 0 > RSRP (Reference Signal Receiving Power) >= -77 dBm |
| | | On (4 bars) | Signal strength: Good -77 > RSRP >= -86 dBm |
| | | On (3 bars) | Signal strength: Fair -86 > RSRP >= -92 dBm |
| | | On (2 bars) | Signal strength: Poor -92 > RSRP >= -101 dBm |
| | | On (1 bars) | Signal strength: Very poor -101 > RSRP >= -108 dBm |
| | | Off | No service. RSRP < -108 dBm |
| PWR | Green | On | The SBG3600-N Series is receiving power and ready for use. |
| | | Blinking | The SBG3600-N Series is self-testing. |
| | | Off | The SBG3600-N Series is not receiving power. |
| | Red | On | The SBG3600-N Series detected an error while self-testing, or there is a device malfunction. |
| | | Off | The SBG3600-N Series is not receiving power. |
| INET | Green | On | The SBG3600-N Series has an IP connection but no traffic. Your device has a WAN IP address (either static or assigned by a DHCP server), PPP negotiation was successfully completed (if used) and the DSL connection is up. |
| | | Blinking | The SBG3600-N Series is sending or receiving IP or 3G traffic. |
| | | Off | There is no Internet connection or the gateway is in bridged mode. |
| | Red | On | The SBG3600-N Series failed to establish an IP connection. No WAN IP address (either static or assigned by a DHCP server), PPPoE negotiation failed (if used) and there's no DSL connection. |
| USB | Green | On | The SBG3600-N Series recognizes a 3G/USB connection. |
| | | Blinking | The SBG3600-N Series is sending/receiving data to /from the USB device connected to it. |
| | | Off | The SBG3600-N Series does not detect a 3G/USB connection. |
| WLAN | Green | On | The wireless network is activated. |
| | | Blinking | The SBG3600-N Series is communicating with other wireless clients and is setting up a WPS connection. |
| | | Off | The wireless network is not activated. |
| DSL1/DSL2 (SBG3600-N) DSL (SBG3600-NB) | Green | On | The ADSL2+ line is up. |
| | | Blinking | The SBG3600-N Series is initializing the ADSL2+ line. |
| | | Off | The ADSL2+ line is down. |
| | Orange | On | The VDSL line is up. |
| | | Blinking | The SBG3600-N Series is initializing the VDSL line. |
| | | Off | The VDSL line is down. |

Table 1 LED Descriptions (continued)

| LED | COLOR | STATUS | DESCRIPTION |
|------------------|------------------------------|-----------------|--|
| SFP | Green | On | The Fiber connection is working. |
| | | Blinking | The SBG3600-N Series is sending or receiving data to/from the Fiber link. |
| | | Off | There is no Fiber link. |
| LTE | Green | On | The SBG3600-N Series is authenticated and registered with a 4G LTE network. |
| | | Blinking (slow) | The SBG3600-N Series is looking for an available 4G LTE network. |
| | | Blinking (fast) | LTE network entry is in progress. |
| | | Off | There is no SIM card inserted or the PIN code is not correct. |
| ETHERNET LAN 1-4 | Left LED (1000) Green | On | The SBG3600-N Series has a successful Ethernet connection with a device on the Local Area Network (LAN). |
| | | Blinking | The SBG3600-N Series is sending or receiving data to/from the LAN. |
| | | Off | The SBG3600-N Series does not have an Ethernet connection with the LAN. |
| | Right LED (10/100) Orange | On | The SBG3600-N Series has a successful Ethernet connection with a device on the Local Area Network (LAN). |
| | | Blinking | The SBG3600-N Series is sending or receiving data to/from the LAN. |
| | | Off | The SBG3600-N Series does not have an Ethernet connection with the LAN. |
| WAN | Left LED (1000) Green | On | The Gigabit Ethernet connection is working. |
| | | Blinking | The SBG3600-N Series is sending or receiving data to/from the Gigabit Ethernet link. |
| | | Off | There is no Gigabit Ethernet link. |
| | Right LED (10/100) Orange | On | The Gigabit Ethernet connection is working. |
| | | Blinking | The SBG3600-N Series is sending or receiving data to/from the Gigabit Ethernet link. |
| | | Off | There is no Gigabit Ethernet link. |

1.4 Ways to Manage the SBG3600-N Series

Use any of the following methods to manage the SBG3600-N Series.

- Web Configurator. This is recommended for everyday management of the SBG3600-N Series using a (supported) web browser.
- TR-069. This is an auto-configuration server used to remotely configure your SBG3600-N Series.

1.5 Good Habits for Managing the SBG3600-N Series

Do the following things regularly to make the SBG3600-N Series more secure and to manage the SBG3600-N Series more effectively.

- Change the password. Use a password that's not easy to guess and that consists of different types of characters, such as numbers and letters. The password must have at least six characters.
- Write down the password and put it in a safe place.
- Back up the configuration (and make sure you know how to restore it). Restoring an earlier working configuration may be useful if the device becomes unstable or even crashes. If you forget your password, you will have to reset the SBG3600-N Series to its factory default settings. If you backed up an earlier configuration file, you would not have to totally re-configure the SBG3600-N Series. You could simply restore your last configuration.

1.6 The RESET Button

If you forget your password or cannot access the web configurator, you will need to use the **RESET** button at the front of the device to reload the factory-default configuration file. This means that you will lose all configurations that you had previously and the password will be reset to "1234".

- 1 Make sure the **POWER** LED is on (not blinking).
- 2 To set the device back to the factory default settings, press the **RESET** button for ten seconds or until the **POWER** LED begins to blink and then release it. When the **POWER** LED begins to blink, the defaults have been restored and the device restarts.

The Web Configurator

2.1 Overview

The web configurator is an HTML-based management interface that allows easy device setup and management of the SBG3600-N Series via Internet browser. Use Internet Explorer 8.0 and later versions with JavaScript enabled, or Mozilla Firefox 3 and later versions or Safari 2.0 and later versions or Google Chrome and later versions. The recommended screen resolution is 1024 by 768 pixels.


In order to use the web configurator you need to allow:

- Web browser pop-up windows from your device. Web pop-up blocking is enabled by default in Windows XP SP (Service Pack) 2.
- JavaScript (enabled by default).
- Java permissions (enabled by default).

See [Appendix C on page 404](#) if you need to make sure these functions are allowed in Internet Explorer.

2.1.1 Accessing the Web Configurator

- 1 Make sure your SBG3600-N Series hardware is properly connected (refer to the Quick Start Guide).
- 2 Launch your web browser. If the SBG3600-N Series does not automatically re-direct you to the login screen, go to <http://192.168.1.1>.
- 3 A password screen displays. To access the administrative web configurator and manage the SBG3600-N Series, type the default username **admin** and password **1234** in the password screen and click **Login**. If advanced account security is enabled (see [Section 34.2 on page 338](#)) the number of dots that appears when you type the password changes randomly to prevent anyone watching the password field from knowing the length of your password. If you have changed the password, enter your password and click **Login**.

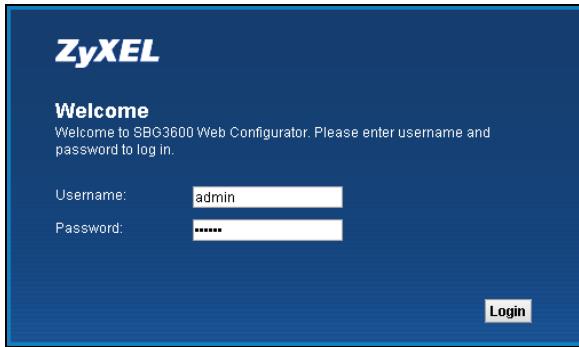Figure 6 Password ScreenThe image shows the ZyXEL login screen. It has a dark blue background with the ZyXEL logo at the top left. Below the logo, the word "Welcome" is displayed in white. Underneath, a message says "Welcome to SBG3600 Web Configurator. Please enter username and password to log in." There are two input fields: "Username:" with the text "admin" and "Password:" with masked characters "*****". A "Login" button is located at the bottom right of the form area.

ZyXEL


Welcome
Welcome to SBG3600 Web Configurator. Please enter username and password to log in.

Username:

Password:

Login

- 4 The following screen displays prompting you to change the password. It is strongly recommended you change the default password. Enter a new password, minding the rules in the screen, retype it to confirm and click **Apply**.

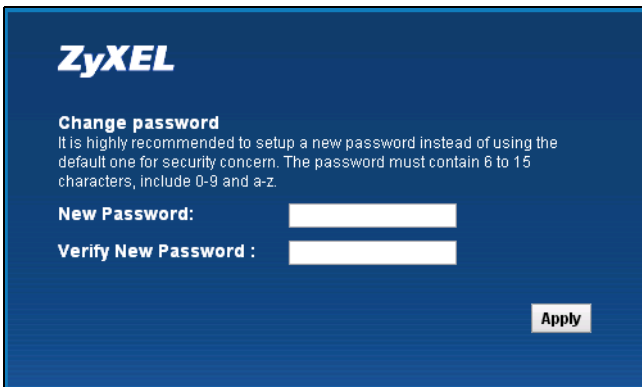Figure 7 Change Password ScreenThe image shows the ZyXEL change password screen. It has a dark blue background with the ZyXEL logo at the top left. Below the logo, the text "Change password" is displayed. A message states: "It is highly recommended to setup a new password instead of using the default one for security concern. The password must contain 6 to 15 characters, include 0-9 and a-z." There are two input fields: "New Password:" and "Verify New Password :". An "Apply" button is located at the bottom right of the form area.

ZyXEL

Change password
It is highly recommended to setup a new password instead of using the default one for security concern. The password must contain 6 to 15 characters, include 0-9 and a-z.


New Password:

Verify New Password :

Apply


- 5 The Password screen re-appears. Enter the new password and click **Login**. Next, **Status** page appears, where you can view the SBG3600-N Series's interface and system information.
- 6 Click the **Quick Start** button on top of the page to configure the SBG3600-N Series's time zone, basic Internet access, and wireless settings. See [Chapter 3 on page 35](#) for more information.

Figure 8 Status

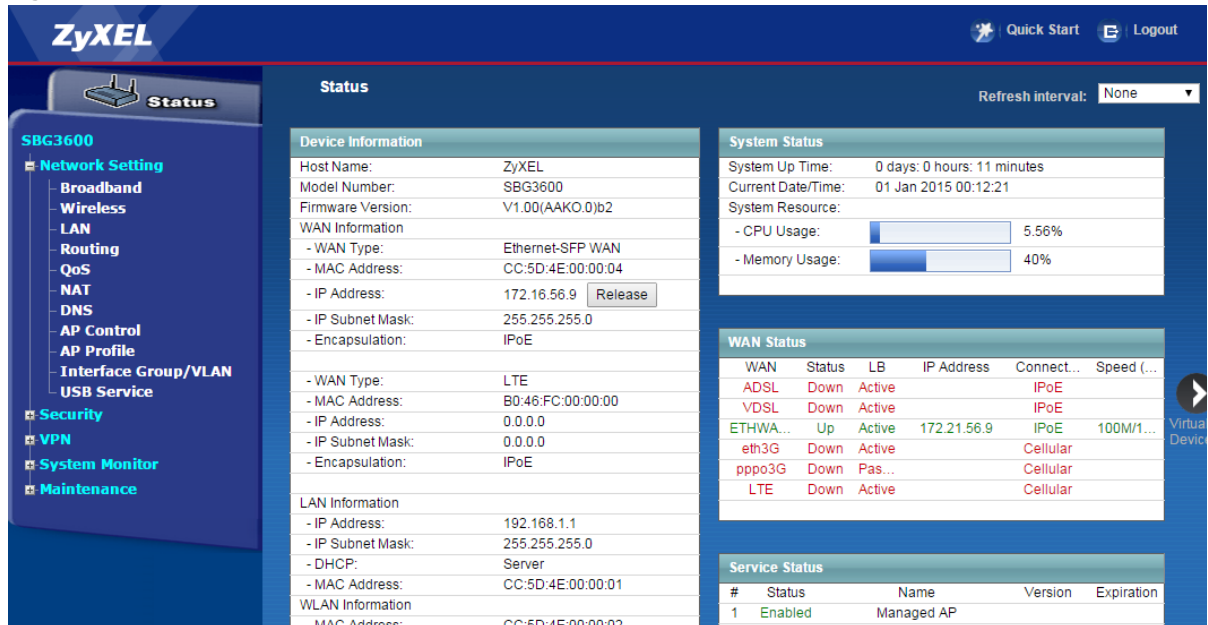

2.2 Web Configurator Layout

Figure 9 Screen Layout

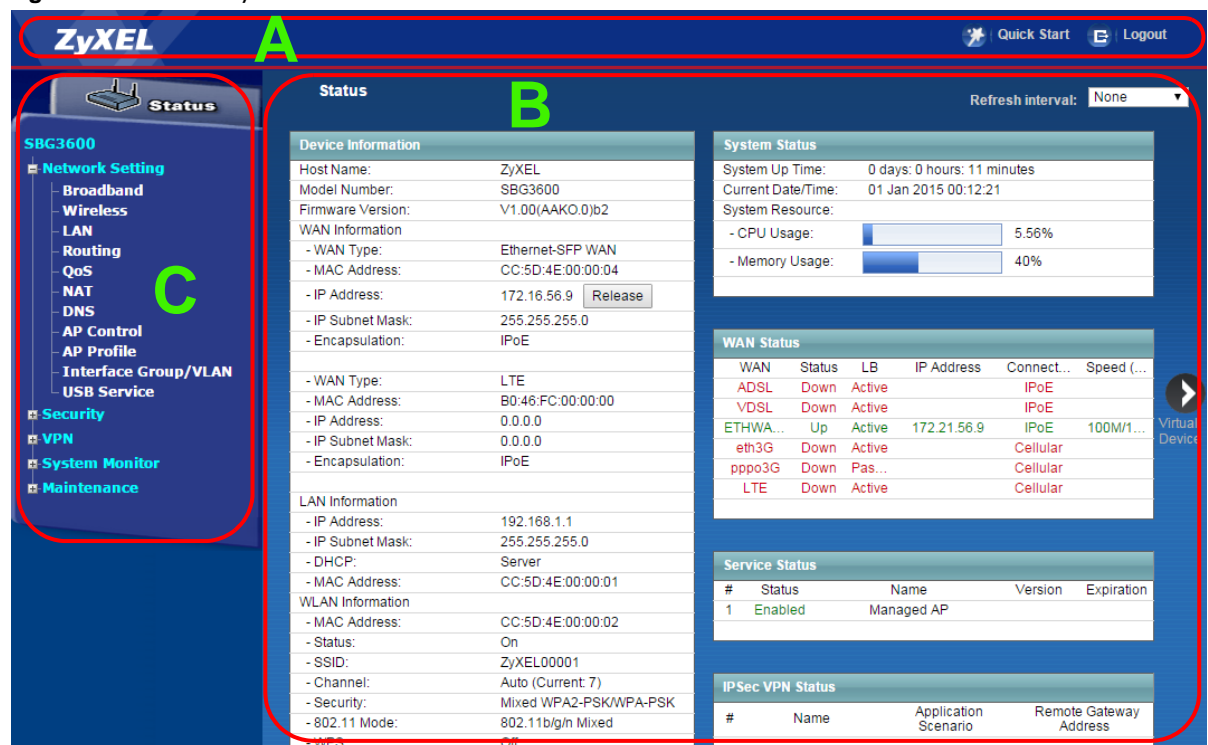

As illustrated above, the main screen is divided into these parts:

- A - title bar

- **B** - main window
- **C** - navigation panel



2.2.1 Title Bar

The title bar provides some icons in the upper right corner.



The icons provide the following functions.

Table 2 Web Configurator Icons in the Title Bar

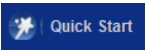
| ICON | DESCRIPTION |
|---|--|
|  | Quick Start: Click this icon to open screens where you can configure the SBG3600-N Series's time zone Internet access, and wireless settings. |
|  | Logout: Click this icon to log out of the web configurator. |

2.2.2 Main Window

The main window displays information and configuration fields. It is discussed in the rest of this document. See [Chapter 5 on page 99](#) for more information about the **Status** screen.

If you click **Virtual Device** on the **Status** screen, a graphic shows the connection status of the Device's ports. The connected interfaces are in color and disconnected interfaces are gray.

Figure 10 Virtual Device

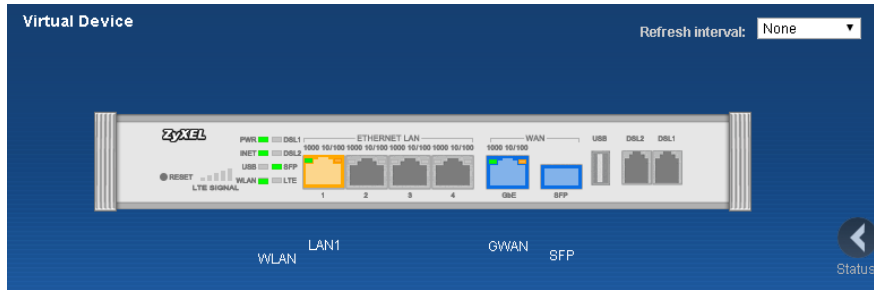

2.2.3 Navigation Panel

Use the menu items on the navigation panel to open screens to configure SBG3600-N Series features. The following tables describe each menu item.

Table 3 Navigation Panel Summary

| LINK | TAB | FUNCTION |
|-----------------|-----------------------------|---|
| Status | | Click this to go to the main Web Configurator screen. |
| Network Setting | | |
| Broadband | Broadband | Use this screen to view and configure ISP parameters, WAN IP address assignment, and other advanced properties. You can also add new WAN connections. |
| | 3G WAN | Use this screen to configure 3G WAN connection settings. |
| | LTE WAN | Use this screen to configure 4G LTE connection settings. |
| | Supported 3G/LTE USB Dongle | Use this screen to view or add a new 3G dongle. |
| | Advanced | Use this screen to enable or disable PTM over ADSL, Annex M, and DSL PhyR functions. |
| | 802.1x | Use this screen to view and configure the IEEE 802.1x settings on the SBG3600-N Series. |
| | Multi-WAN | Use this screen to configure the multiple WAN load balance and fail-over rules to distribute traffic among different interfaces. |

Table 3 Navigation Panel Summary (continued)

| LINK | TAB | FUNCTION |
|----------|--------------------|--|
| Wireless | General | Use this screen to configure the wireless LAN settings and WLAN authentication/security settings. |
| | More AP | Use this screen to configure multiple BSSs on the SBG3600-N Series. |
| | MAC Authentication | Use this screen to block or allow wireless traffic from wireless devices of certain SSIDs and MAC addresses to the SBG3600-N Series. |
| | WPS | Use this screen to configure and view your WPS (Wi-Fi Protected Setup) settings. |
| | WMM | Use this screen to enable or disable Wi-Fi MultiMedia (WMM). |
| | Others | Use this screen to configure advanced wireless settings. |
| | Channel Status | Use this screen to scan wireless LAN channel noises and view the results. |
| | Scheduling | Use this screen to set a schedule to turn off wireless LAN for power saving purposes. |
| LAN | LAN Setup | Use this screen to configure LAN TCP/IP settings, and other advanced properties. |
| | Static DHCP | Use this screen to assign specific IP addresses to individual MAC addresses. |
| | UPnP | Use this screen to turn UPnP and UPnP NAT-T on or off. |
| | Additional Subnet | Use this screen to configure IP alias and public static IP. |
| | 5th Ethernet Port | Use this screen to configure the Ethernet WAN port as a LAN port. |
| Routing | Static Route | Use this screen to view and set up static routes on the SBG3600-N Series. |
| | Policy Forwarding | Use this screen to configure policy routing on the SBG3600-N Series. |
| | RIP | Use this screen to set up RIP settings on the SBG3600-N Series. |
| QoS | General | Use this screen to enable QoS and traffic prioritizing. You can also configure the QoS rules and actions. |
| | Queue Setup | Use this screen to configure QoS queues. |
| | Class Setup | Use this screen to define a classifier. |
| | Policer Setup | Use these screens to configure QoS policers. |
| | Monitor | Use this screen to view QoS packets statistics. |
| NAT | Port Forwarding | Use this screen to make your local servers visible to the outside world. |
| | Applications | Use this screen to configure servers behind the SBG3600-N Series. |
| | Port Triggering | Use this screen to change your SBG3600-N Series's port triggering settings. |
| | Default Server | Use this screen to configure a default server which receives packets from ports that are not specified in the Port Forwarding screen. |
| | ALG | Use this screen to enable or disable NAT ALG and SIP ALG. |
| | Address Mapping | Use this screen to change your Device's address mapping settings. |
| DNS | DNS Entry | Use this screen to view and configure DNS routes. |
| | Dynamic DNS | Use this screen to allow a static hostname alias for a dynamic IP address. |
| | Host Name | Use this screen to configure a unique name for the SBG3600-N Series in your network. |

Table 3 Navigation Panel Summary (continued)

| LINK | TAB | FUNCTION |
|----------------------|----------------------|--|
| AP Control | Controller | Use this screen to configure how the SBG3600-N Series handles APs that newly connect to the network. |
| | Managed AP List | Use this screen to manage all of the APs connected to the SBG3600-N Series. |
| | Load Balancing | Use this screen to configure wireless network traffic load balancing between the APs on your network. |
| | DCS | Use this screen to configure dynamic radio channel selection on managed APs. |
| AP Profile | Radio | Use this screen to create radio profiles for the APs on your network. |
| | SSID | Use this screen to create and manage SSID configurations that can be used by the APs. |
| | Security | Use this screen to manage wireless security configurations that can be used by your SSIDs. |
| | MAC Filtering | Use this screen to create and manage MAC filtering profiles that can be used by your SSIDs. |
| | Layer-2 Isolation | Use this screen to create and manage layer-2 isolation profiles that can be used by your SSIDs. |
| Interface Group/VLAN | Interface Group/VLAN | Use this screen to create a new interface group, which is a new LAN bridge interface (subnet). |
| USB Service | USB Service | Use this screen to enable file sharing via the SBG3600-N Series. |
| Security | | |
| Firewall | General | Use this screen to configure the security level of your firewall. |
| | DoS | Use this screen to activate protection against Denial of Service (DoS) attacks. |
| | Service | Use this screen to add Internet services and configure firewall rules. |
| | Access Control | Use this screen to enable specific traffic directions for network services. |
| | Zone Control | Use this screen to set the firewall's default actions based on the direction of travel of packets. |
| MAC Filter | MAC Filter | Use this screen to block or allow traffic from devices of certain MAC addresses to the SBG3600-N Series. |
| User Access Control | User Access Control | Use this screen to block web sites with the specific URL. |
| Scheduler Rule | Scheduler Rule | Use this screen to configure the days and times when a configured restriction (such as User Access control) is enforced. |
| Certificates | Local Certificates | Use this screen to view a summary list of certificates and manage certificates and certification requests. |
| | Trusted CA | Use this screen to view and manage the list of the trusted CAs. |
| VPN | | |
| IPSec VPN | Setup | Use this screen to display and manage the SBG3600-N Series's IPSec VPN rules (tunnels). |
| | Monitor | Use this screen to display and manage active IPSec VPN connections. |
| | Radius | Use this screen to configure the RADIUS server the SBG3600-N Series can use in authenticating users. |
| PPTP VPN | Setup | Use this screen to configure the PPTP VPN settings in the SBG3600-N Series. |
| | Monitor | Use this screen to view settings for PPTP clients. |

Table 3 Navigation Panel Summary (continued)

| LINK | TAB | FUNCTION |
|--------------------|--------------------|---|
| L2TP VPN | Setup | Use this screen to configure the SBG3600-N Series's L2TP VPN settings. |
| | Monitor | Use this screen to view settings for L2TP clients. |
| System Monitor | | |
| Log | System Log | Use this screen to view the status of events that occurred to the SBG3600-N Series. You can export or e-mail the logs. |
| | Security Log | Use this screen to view the login record of the SBG3600-N Series. You can export or e-mail the logs. |
| Network Status | WAN | Use this screen to view the status of all network traffic going through the WAN port of the SBG3600-N Series. |
| | LAN | Use this screen to view the status of all network traffic going through the LAN ports of the SBG3600-N Series. |
| | DHCP Client | Use this screen to view the status of all wired and wireless devices connected to the SBG3600-N Series. You can also set screen refresh time to see updates on new devices. |
| ARP Table | ARP Table | Use this screen to view the ARP table. It displays the IP and MAC address of each DHCP connection. |
| Routing Table | Routing Table | Use this screen to view the routing table. |
| IGMP Group Status | IGMP Group Status | Use this screen to view the status of all IGMP settings on the SBG3600-N Series. |
| xDSL Statistics | xDSL Statistics | Use this screen to view the SBG3600-N Series's xDSL traffic statistics. |
| LTE Statistics | LTE Statistics | Use this screen to view the SBG3600-N Series's LTE traffic statistics. |
| AP Monitor | AP List | Use this screen to display which APs are currently connected to the SBG3600-N Series. |
| | Radio List | Use this screen to display statistics about wireless radio transmitters in each of the APs connected to the SBG3600-N Series. |
| | Station List | Use this screen to display statistics pertaining to the connected stations (or "wireless clients"). |
| Maintenance | | |
| MyZyXEL | MyZyXEL | Use this screen to see the status of the service license that is available to the SBG3600-N Series. |
| User Account | User Account | Use this screen to manage user accounts, which includes configuring the username, password, retry times, file sharing, captive portal, and customizing the login message. |
| | Radius | Use this screen to configure the RADIUS server the SBG3600-N Series can use in authenticating users. |
| Remote MGMT | Remote MGMT | Use this screen to enable specific traffic directions for network services. |
| TR-069 Client | TR-069 Clients | Use this screen to configure the SBG3600-N Series to be managed by an Auto Configuration Server (ACS). |
| SNMP | SNMP | Use this screen to enable/disable and configure settings for SNMP. |
| Time | Time | Use this screen to change your SBG3600-N Series's time and date. |
| Email Notification | Email Notification | Use this screen to configure up to two mail servers and sender addresses on the SBG3600-N Series. |
| Log Setting | Log Setting | Use this screen to change your SBG3600-N Series's log settings. |
| Firmware Upgrade | Firmware Upgrade | Use this screen to upload firmware and WWAN package to your device. |

Table 3 Navigation Panel Summary (continued)

| LINK | TAB | FUNCTION |
|----------------------|------------------------------|--|
| LTE Firmware Upgrade | LTE Firmware Upgrade | Use this screen to upload firmware for the built-in LTE module. |
| Configuration | Configuration | Use this screen to backup and restore your device's configuration (settings) or reset the factory default settings. |
| Reboot | Reboot | Use this screen to reboot the SBG3600-N Series without turning the power off. |
| Diagnostic | Ping & Traceroute & Nslookup | Use this screen to identify problems with the DSL connection. You can use Ping, TraceRoute, or Nslookup to help you identify problems. |
| | 802.1ag | Use this screen to configure CFM (Connectivity Fault Management) MD (maintenance domain) and MA (maintenance association), perform connectivity tests and view test reports. |
| | OAM Ping | Use this screen to view information to help you identify problems with the DSL connection. |

Quick Start

3.1 Overview


Use the **Quick Start** screens to configure the SBG3600-N Series's time zone, basic Internet access, and wireless settings.

Note: See the technical reference chapters (starting on [page 98](#)) for background information on the features in this chapter.

3.2 Quick Start Setup

- 1 The **Quick Start** wizard appears automatically after login. Or you can click the **Quick Start** icon in the top right corner of the web configurator to open the quick start screens. Select the time zone of the SBG3600-N Series's location and click **Next**.

Figure 11 Time Zone

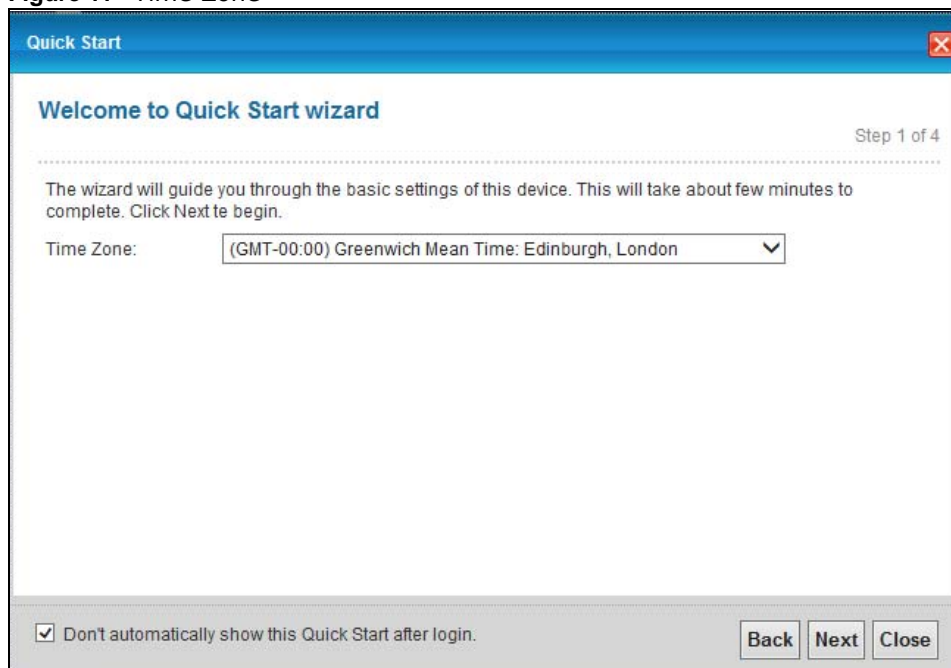

- 2 Select your current WAN interface to configure its settings.

Figure 12 WAN Interface Selection

The screenshot shows a window titled "Quick Start" with a sub-header "WAN Interface Selection". It is labeled "Step 2 of 4". The text inside says: "The following lists are current WAN interfaces, please select one of the interfaces to configure." Below this, there is a label "WAN Interfaces:" followed by a dropdown menu currently showing "ADSL". At the bottom, there is a checkbox labeled "Don't automatically show this Quick Start after login." which is checked. To the right of the checkbox are three buttons: "Back", "Next", and "Close".

- 3 Enter your Internet connection information in this screen. The screen and fields to enter may vary depending on your current connection type. Click **Next**.

Figure 13 Internet Connection

The screenshot shows a window titled "Quick Start" with a sub-header "Internet Connection". It is labeled "Step 3 of 4". The text inside says: "The selected wan interface is ADSL. Please configure the value of it." The window is divided into several sections:

- General**: "Encapsulation:" with a dropdown menu showing "IPoE".
- ATM PVC Configuration**: "VPI [0-255]:" with a text box containing "0", "VCI [32-65535]:" with a text box containing "33", and "Encapsulation Mode:" with a dropdown menu showing "LLC/SNAP-BRIDGING".
- IP Address**: Two radio buttons, "Obtain an IP Address Automatically" (selected) and "Static IP Address". Below are three text boxes: "IP Address :" (0.0.0.0), "Subnet Mask :" (0.0.0.0), and "Gateway IP address :" (0.0.0.0).
- DNS server**: "DNS :" with two radio buttons, "Dynamic" (selected) and "Static". Below are two text boxes: "DNS Server 1 :" and "DNS Server 2 :".

At the bottom, there is a checkbox labeled "Don't automatically show this Quick Start after login." which is checked. To the right of the checkbox are three buttons: "Back", "Next", and "Close".

- 4 Turn the wireless LAN on or off. If you keep it on, record the security settings so you can configure your wireless clients to connect to the SBG3600-N Series. Click **Save**.

Figure 14 Internet Connection

The screenshot shows a web-based configuration window titled 'Quick Start' with a blue header bar. Below the header, the title 'Wireless Setting' is displayed in blue. In the top right corner, it says 'Step 4 of 4'. The main content area contains the text: 'The following settings are the current wireless settings which your wireless client devices need in order to get connected to this device.' Below this text, there are four configuration items: 'Wireless Service:' with radio buttons for 'Enable' (selected) and 'Disable'; 'Wireless Network Name (SSID):' with the value 'ZyXEL5F5B4'; 'Security:' with the value 'WPA2-PSK'; and 'Password:' with the value 'BEB5388CF95AB2935277'. At the bottom of the window, there is a checkbox labeled 'Don't automatically show this Quick Start after login.' which is checked. To the right of the checkbox are three buttons: 'Back', 'Save', and 'Close'.

- 5 Your SBG3600-N Series saves your settings and attempts to connect to the Internet.

4.1 Overview

This chapter shows you how to use the SBG3600-N Series's various features.


- [Setting Up an ADSL PPPoE Connection](#), see [page 38](#)
- [Setting Up a GbE WAN connection](#), see [page 41](#)
- [Setting Up a 3G WAN connection](#), see [page 43](#)
- [Setting Up a Secure Wireless Network](#), see [page 43](#)
- [Setting Up Multiple Wireless Groups](#), see [page 51](#)
- [Configuring Static Route for Routing to Another Network](#), see [page 54](#)
- [Configuring QoS Queue and Class Setup](#), see [page 57](#)
- [Access the SBG3600-N Series Using DDNS](#), see [page 60](#)
- [Configuring the MAC Address Filter](#), see [page 61](#)
- [Access Your Shared Files From a Computer](#), see [page 63](#)
- [Certificate Configuration for VPN](#), see [page 64](#)
- [Examples of Configuring IPSec VPN Rules](#), see [page 67](#)
- [PPTP VPN Tutorial](#), see [page 72](#)
- [L2TP VPN Tutorial](#), see [page 83](#)







4.2 Setting Up an ADSL PPPoE Connection

This tutorial shows you how to set up your Internet connection using the Web Configurator.

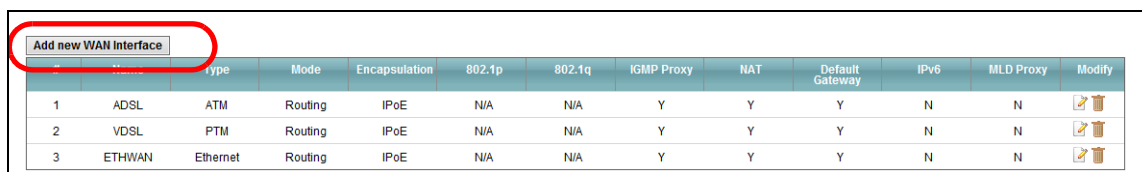If you connect to the Internet through an ADSL connection, use the information from your Internet Service Provider (ISP) to configure the SBG3600-N Series. Be sure to contact your service provider for any information you need to configure the **Broadband** screens.

- 1 Click **Network Setting > Broadband** to open the following screen. Click **Add New WAN Interface**.

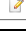

| | Name | Type | Mode | Encapsulation | 802.1p | 802.1q | IGMP Proxy | NAT | Default Gateway | IPv6 | MLD Proxy | Modify |
|---|--------|----------|---------|---------------|--------|--------|------------|-----|-----------------|------|-----------|---|
| 1 | ADSL | ATM | Routing | IPoE | N/A | N/A | Y | Y | Y | N | N |   |
| 2 | VDSL | PTM | Routing | IPoE | N/A | N/A | Y | Y | Y | N | N |   |
| 3 | ETHWAN | Ethernet | Routing | IPoE | N/A | N/A | Y | Y | Y | N | N |   |

- 2 In this example, the DSL connection has the following information.

| | |
|------------------------------|---|
| General | |
| Name | MyDSLConnection |
| Type | ADSL |
| Connection Mode | Routing |
| Encapsulation | PPPoE |
| IPv6/IPv4 Mode | IPv4 |
| ATM PVC Configuration | |
| VPI/VCI | 36/48 |
| Encapsulation Mode | LLC/SNAP-Bridging |
| Service Category | UBR without PCR |
| Account Information | |
| PPP User Name | 1234@DSL-Ex.com |
| PPP Password | ABCDEF! |
| PPPoE Service Name | MyDSL |
| Static IP Address | 192.168.1.32 |
| Others | PPPoE Passthrough: Disabled NAT: Enabled IGMP Multicast Proxy: Enabled Apply as Default Gateway: Enabled |

- 3 Select the **Active** check box. Enter the **General** and **ATM PVC Configuration** settings as provided above.

Set the **Type** to **ADSL over ATM**.






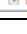




Choose the **Encapsulation** specified by your DSL service provider. For this example, the service provider requires a username and password to establish Internet connection. Therefore, select **PPPoE** as the WAN encapsulation type.

Set the **IPv6/IPv4 Mode** to **IPv4 Only**.

- 4 Enter the account information provided to you by your DSL service provider.
- 5 Configure this rule as your default Internet connection by selecting the **Apply as Default Gateway** check box. Then select DNS as **Static** and enter the DNS server addresses provided to you, such as **192.168.5.2** (DNS server1)/**192.168.5.1** (DNS server2).
- 6 Leave the rest of the fields to the default settings.
- 7 Click **Apply** to save your settings.

| | |
|--|---|
| General | |
| Active | <input type="checkbox"/> |
| Name : | MyDSLConnection |
| Type : | ADSL over ATM |
| Mode : | Routing |
| Encapsulation: | PPPoE |
| IPv6/IPv4 Mode: | IPv4 Only |
| ATM PVC Configuration | |
| VPI [0-255]: | 36 |
| VCI [32-65535]: | 48 |
| DSL Link Type: | EoA |
| Encapsulation Mode: | LLC/SNAP-BRIDGING |
| Service Category: | UBR Without PCR |
| PPP Information | |
| PPP User Name : | 1234@DSL-Ex.cor |
| PPP Password : | ABCDEF! |
| PPP Auto Connect : | <input type="checkbox"/> |
| IDLE Timeout [minutes]: | |
| PPPoE Service Name : | MyDSL |
| PPPoE Passthrough : | <input type="checkbox"/> |
| IP Address | |
| <input type="radio"/> Obtain an IP Address Automatically | |
| <input checked="" type="radio"/> Static IP Address | |
| IP Address : | 192.168.1.32 |
| Subnet Mask : | 0.0.0.0 |
| Gateway IP address : | 0.0.0.0 |
| Routing Feature | |
| NAT Enable : | <input checked="" type="checkbox"/> |
| FullFeature NAT Enable : | <input type="checkbox"/> |
| NatSet : | 1 |
| IGMP Proxy Enable : | <input checked="" type="checkbox"/> |
| Apply as Default Gateway : | <input checked="" type="checkbox"/> |
| DNS server | |
| DNS : | <input type="radio"/> Dynamic <input checked="" type="radio"/> Static |
| DNS Server 1 : | 192.168.5.6 |
| DNS Server 2 : | 192.168.5.7 |
| Tunnel | |
| Enable 6RD : | <input type="radio"/> Enable <input checked="" type="radio"/> Disable |
| 6RD Type : | <input checked="" type="radio"/> DHCP <input type="radio"/> Static |
| 6RD Border Relay Server IP : | |
| 6RD IPv6 Prefix : | |
| QoS | |
| Egress Traffic Rate Limit : | (kbps) |
| MTU | |
| MTU Size : | 1492 MTU [68-1492] |
| Apply Cancel | |

- 8 You should see a summary of your new DSL connection setup in the **Broadband** screen as follows.

| Add new WAN Interface | | | | | | | | | | | | |
|-----------------------|-----------------|----------|---------|---------------|--------|--------|------------|-----|-----------------|------|-----------|---|
| # | Name | Type | Mode | Encapsulation | 802.1p | 802.1q | IGMP Proxy | NAT | Default Gateway | IPv6 | MLD Proxy | Modify |
| 1 | ADSL | ATM | Routing | IPoE | N/A | N/A | Y | Y | Y | N | N |   |
| 2 | MyDSLConnection | ATM | Routing | PPPoE | N/A | N/A | Y | Y | N | N | N |   |
| 3 | VDSL | PTM | Routing | IPoE | N/A | N/A | Y | Y | Y | N | N |   |
| 4 | ETHWAN | Ethernet | Routing | IPoE | N/A | N/A | Y | Y | Y | N | N |   |
| 5 | MyETHER | Ethernet | Routing | PPPoE | 0 | 1 | N | Y | N | N | N |   |







Try to connect to a website to see if you have correctly set up your Internet connection. Be sure to contact your service provider for any information you need to configure the WAN screens.

4.3 Setting Up a GbE WAN connection

This tutorial shows you how to set up your Gigabit Ethernet WAN connection using the Web Configurator.

If you connect to the Internet through an Ethernet connection, use the information from your Internet Service Provider (ISP) to configure the SBG3600-N Series. Be sure to contact your service provider for any information you need to configure the **Broadband** screens.

- 1 Click **Network Setting > Broadband** to open the following screen.

| Add new WAN Interface | | | | | | | | | | | | |
|-----------------------|--------|----------|---------|---------------|--------|--------|------------|-----|-----------------|------|-----------|---|
| # | Name | Type | Mode | Encapsulation | 802.1p | 802.1q | IGMP Proxy | NAT | Default Gateway | IPv6 | MLD Proxy | Modify |
| 1 | ADSL | ATM | Routing | IPoE | N/A | N/A | Y | Y | Y | N | N |   |
| 2 | VDSL | PTM | Routing | IPoE | N/A | N/A | Y | Y | Y | N | N |   |
| 3 | ETHWAN | Ethernet | Routing | IPoE | N/A | N/A | Y | Y | Y | N | N |   |

- 2 Next, click **Add New WAN Interface** to open the following screen.









| | |
|--|---|
| General | |
| Active | <input type="checkbox"/> |
| Name : | MyETHER |
| Type : | Ethernet |
| Mode : | Routing |
| Encapsulation: | PPPoE |
| IPv6/IPv4 Mode: | IPv4 Only |
| PPP Information | |
| PPP User Name : | 1234@ETHER-EX |
| PPP Password : | |
| PPP Auto Connect : | <input checked="" type="checkbox"/> |
| IDLE Timeout [minutes]: | 5 |
| PPPoE Service Name : | etheritest |
| PPPoE Passthrough : | <input checked="" type="checkbox"/> |
| IP Address | |
| <input type="radio"/> Obtain an IP Address Automatically | |
| <input checked="" type="radio"/> Static IP Address | |
| IP Address : | 192.168.1.40 |
| Subnet Mask : | 0.0.0.0 |
| Gateway IP address : | 0.0.0.0 |
| Routing Feature | |
| NAT Enable : | <input checked="" type="checkbox"/> |
| FullFeature NAT Enable : | <input type="checkbox"/> |
| NatSet : | 1 |
| IGMP Proxy Enable : | <input type="checkbox"/> |
| Apply as Default Gateway : | <input type="checkbox"/> |
| DNS server | |
| DNS : | <input type="radio"/> Dynamic <input checked="" type="radio"/> Static |
| DNS Server 1 : | 192.168.5.5 |
| DNS Server 2 : | 192.168.5.6 |
| Tunnel | |
| Enable 6RD : | <input type="radio"/> Enable <input checked="" type="radio"/> Disable |
| 6RD Type : | <input checked="" type="radio"/> DHCP <input type="radio"/> Static |
| 6RD Border Relay Server IP : | |
| 6RD IPv6 Prefix : | |
| VLAN | |
| Active : | <input checked="" type="checkbox"/> |
| 802.1p : | 0 |
| 802.1q : | 1 (0~4094) |
| QoS | |
| Egress Traffic Rate Limit : | 300 (kbps) |
| MTU | |
| MTU Size : | 1492 MTU [68-1492] |
| <input type="button" value="Apply"/> <input type="button" value="Cancel"/> | |

In this example, the Ethernet connection has the following information.

| General | |
|---------------------------|----------|
| Name | MyETHER |
| Type | Ethernet |
| Mode | Routing |
| Service and Encapsulation | PPPoE |
| IPv6/IPv4 Mode | IPv4 |
| Account Information | |
| 802.1p | 0 |
| 802.1q | 1 |
| QoS | 300 kbps |

| | |
|----------------------|---|
| PPP User Name | 1234@ETHER-Ex.com |
| PPP Password | ABCDEF! |
| PPP Auto Connect | Enabled |
| PPPoE Service name | ethertest |
| PPPoE Passthrough | Enabled |
| MTU | 1492 |
| IP Address | 192.168.1.40 |
| Primary DNS Server | 192.168.5.5 |
| Secondary DNS Server | 192.168.5.6 |
| Others | PPPoE Passthrough: Disabled NAT: Enabled IGMP Multicast Proxy: Enabled Apply as Default Gateway: Enabled |

You should see a summary of your new Ethernet connection setup in the **Broadband** screen as follows.

| Add new WAN Interface | | | | | | | | | | | | |
|-----------------------|---------|-----------|---------|----------|--------|--------|------------|-----|-----------------|------|-----------|---|
| # | Name | Type | Mode | Encap... | 802.1p | 802.1q | IGMP Proxy | NAT | Default Gateway | IPv6 | MLD Proxy | Modify |
| 1 | ADSL | ATM | Routing | IPoE | N/A | N/A | Y | Y | Y | N | N |   |
| 2 | VDSL | PTM | Routing | IPoE | N/A | N/A | Y | Y | Y | N | N |   |
| 3 | ETHW... | Ethern... | Routing | IPoE | N/A | N/A | Y | Y | Y | N | N |   |
| 4 | MyET... | Ethern... | Routing | PPPoE | 0 | 1 | N | Y | N | N | N |   |

4.4 Setting Up a 3G WAN connection

See the **3G WAN** screen ([Section 6.3 on page 118](#)) for setting up a 3G WAN connection. Make sure you insert a valid SIM card (with active data plan) into the 3G USB dongle before you insert the USB dongle to the USB port of your computer.

4.5 Setting Up a Secure Wireless Network

Thomas wants to set up a wireless network so that he can use his notebook to access the Internet. In this wireless network, the SBG3600-N Series serves as an access point (AP), and the notebook is the wireless client. The wireless client can access the Internet through the AP.



Thomas has to configure the wireless network settings on the SBG3600-N Series. Then he can set up a wireless network using WPS ([Section 4.5.2 on page 46](#)) or manual configuration ([Section 4.5.3 on page 50](#)).

4.5.1 Configuring the Wireless Network Settings

This example uses the following parameters to set up a wireless network.

| | |
|-----------------------|-----------------------------|
| SSID | Example |
| Security Mode | WPA-PSK |
| Pre-Shared Key | DoNotStealMyWirelessNetwork |
| 802.11 Mode | 802.11b/g/n Mixed |

- 1 Click **Network Setting** > **Wireless** to open the **General** screen. Select **More Secure** as the security level and **WPA2-PSK** as the security mode. Configure the screen using the provided parameters (see [page 44](#)). Click **Apply**.

Wireless Network Setup

Wireless ☒ Enable ☐ Disable (settings are invalid when disabled)

Disable/Enable wifi button ☒ Enable ☐ Disable

Band : 2.4GHz

Channel : Auto Current: 11 [more...](#)

Wireless Network Settings

Wireless Network Name(SSID) : ZyxEL5F5B4

Max clients: 32

☐ Hide SSID

☐ Enhanced Multicast Forwarding

Max. Upstream Bandwidth: Kbps

Max. Downstream Bandwidth: Kbps

Notes:

1. Max. Upstream Bandwidth: This field allows user to configure the maximum bandwidth of this SSID to WAN.
2. Max. Downstream Bandwidth: This field allows user to configure the maximum bandwidth of WAN to this SSID.
3. If Max. Upstream/Downstream Bandwidth is empty, the CPE sets the value automatically.

BSSID: 10:7B:EF:75:F5:B5

Security Level

No Security Basic **More Secure (Recommended)**

Security Mode: WPA2-PSK

☒ Generate password automatically

Enter 8-63 characters (a-z, A-Z, 0-9 and special characters), other characters are not allowed.

Password: BEB5388CF95AB2935277 [more...](#)

Apply Cancel

- 2 Go to the **Wireless > Others** screen and select **802.11b/g/n Mixed** in the **802.11 Mode** field. Click **Apply**.

Wireless Advanced Setup

RTS/CTS Threshold : 2347

Fragmentation Threshold : 2346

Auto Channel Timer : 0 min

Output Power : 100%

Beacon Interval : 100 ms

DTIM Interval : 1 ms

802.11 Mode : 802.11b/g/n Mixed

802.11 Protection : Auto

Preamble : Long

Apply Cancel

Thomas can now use the WPS feature to establish a wireless connection between his notebook and the SBG3600-N Series (see [Section 4.5.2 on page 46](#)). He can also use the notebook's wireless client to search for the SBG3600-N Series (see [Section 4.5.3 on page 50](#)).

4.5.2 Using WPS

This section shows you how to set up a wireless network using WPS. It uses the SBG3600-N Series as the AP and ZyXEL NWD210N as the wireless client which connects to the notebook.

Note: The wireless client must be a WPS-aware device (for example, a WPS USB adapter or PCMCIA card).

There are two WPS methods to set up the wireless client settings:

- **Push Button Configuration (PBC)** - simply press a button. This is the easier of the two methods.
- **PIN Configuration** - configure a Personal Identification Number (PIN) on the SBG3600-N Series. A wireless client must also use the same PIN in order to download the wireless network settings from the SBG3600-N Series.

Push Button Configuration (PBC)

- 1 Make sure that your SBG3600-N Series is turned on and your notebook is within the cover range of the wireless signal.
- 2 Make sure that you have installed the wireless client driver and utility in your notebook.
- 3 In the wireless client utility, go to the WPS setting page. Enable WPS and press the WPS button (**Start** or **WPS** button).
- 4 Log into SBG3600-N Series's web configurator and go to the **Network Setting > Wireless > WPS** screen. Enable the WPS function and click **Apply**. Then click the **Connect** button.

Note: You must enable the **Wireless** function in the **Network Setting > Wireless > General** screen before you can enable the WPS function.

WPS Setup

WPS : ☒ **Enable** ☐ Disable (The settings in this screen are invalid if you select this.)

| Method 1 | Method 2 | Method 3 |
|---|--|--|
| <p>Push Button Configuration</p> <p>1. Click "Connect".</p> <p>Connect</p> <p>2. Activate WPS on the wireless client within 2 minutes after clicking "Connect".</p> | <p>Register Wireless Client's PIN Number</p> <p>1. Enter the PIN of your wireless client and click "Register".</p> <p><input type="text"/> Register</p> <p>2. Activate WPS on the wireless client within 2 minutes after clicking "Connect".</p> | <p>Enter AP's PIN Number in Wireless Client</p> <p>Current state: Unconfigured</p> <p>1. Enter current PIN 15624291 on your wireless client.</p> <p>Generate New PIN Number</p> |

Notes:

1. This function only works on the first SSID.
2. Click the "Release Configuration" button to have the WPS status changed to "Unconfigured". Otherwise, WPS status is in "Configured" mode.


Apply **Cancel**

Note: Your SBG3600-N Series has a WPS button located on its front panel as well as a WPS button in its configuration utility. Both buttons have exactly the same function: you can use one or the other.

Note: It doesn't matter which device's WPS you enable first, but you must enable the second device's WPS within two minutes of enabling the first one.

The SBG3600-N Series sends the proper configuration settings to the wireless client. This may take up to two minutes. The wireless client is then able to communicate with the SBG3600-N Series securely.

The following figure shows you an example of how to set up a wireless network and its security.

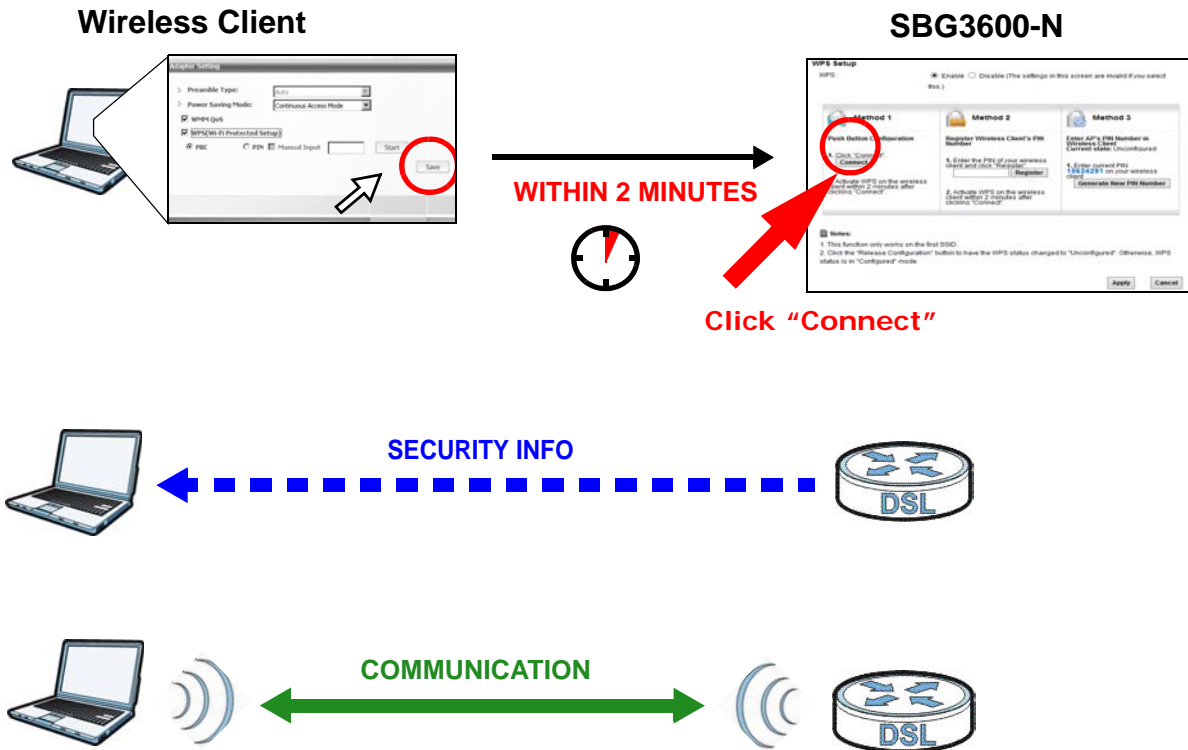




PIN Configuration

When you use the PIN configuration method, you need to use both the SBG3600-N Series's web configurator and the wireless client's utility.

- 1 Launch your wireless client's configuration utility. Go to the WPS settings and select the PIN method to get a PIN number.
- 2 Log into SBG3600-N Series's web configurator and go to the **Network Setting > Wireless > WPS** screen. Enable the WPS function and click **Apply**.

WPS Setup

WPS : ☒ Enable ☐ Disable (The settings in this screen are invalid if you select this.)

| Method 1 | Method 2 | Method 3 |
|---|--|---|
|  Method 1 Push Button Configuration 1. Click "Connect". <input type="button" value="Connect"/> 2. Activate WPS on the wireless client within 2 minutes after clicking "Connect". |  Method 2 Register Wireless Client's PIN Number 1. Enter the PIN of your wireless client and click "Register". <input type="text"/> <input type="button" value="Register"/> 2. Activate WPS on the wireless client within 2 minutes after clicking "Connect". |  Method 3 Enter AP's PIN Number in Wireless Client Current state: Unconfigured 1. Enter current PIN 15624291 on your wireless client. <input type="button" value="Generate New PIN Number"/> |


Notes:

1. This function only works on the first SSID.
2. Click the "Release Configuration" button to have the WPS status changed to "Unconfigured". Otherwise, WPS status is in "Configured" mode.

- 3 Enter the PIN number of the wireless client and click the **Register** button. Activate WPS function on the wireless client utility screen within two minutes.

The SBG3600-N Series authenticates the wireless client and sends the proper configuration settings to the wireless client. This may take up to two minutes. The wireless client is then able to communicate with the SBG3600-N Series securely.

The following figure shows you how to set up a wireless network and its security on a SBG3600-N Series and a wireless client by using PIN method.

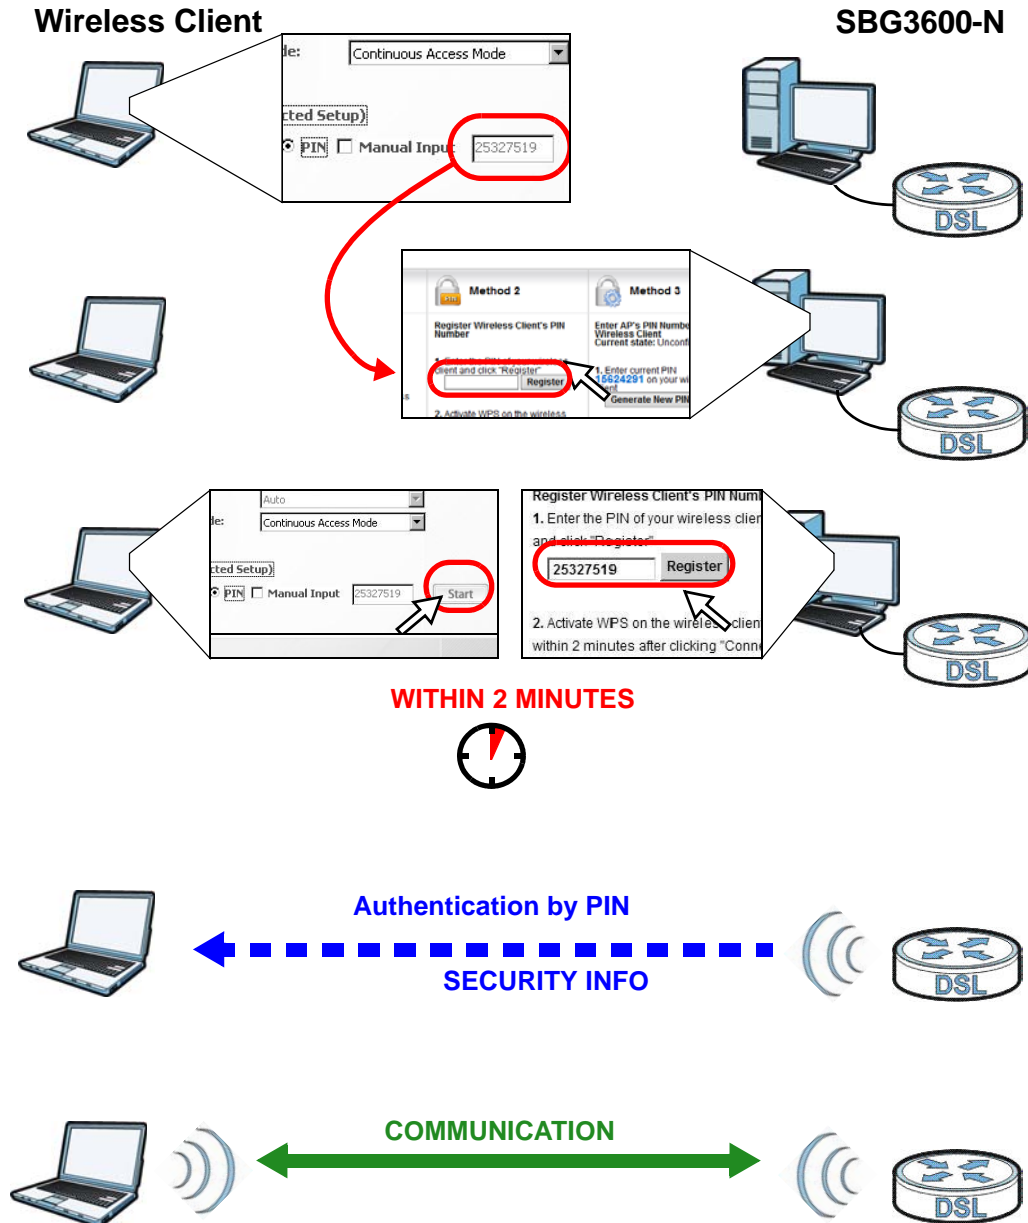


4.5.3 Without WPS

Use the wireless adapter's utility installed on the notebook to search for the "Example" SSID. Then enter the "DoNotStealMyWirelessNetwork" pre-shared key to establish an wireless Internet connection.

Note: The SBG3600-N Series supports IEEE 802.11b, IEEE 802.11g, and IEEE 802.11n wireless clients. Make sure that your notebook or computer's wireless adapter supports one of these standards.

4.6 Setting Up Multiple Wireless Groups

Company A wants to create different wireless network groups for different types of users as shown in the following figure. Each group has its own SSID and security mode.

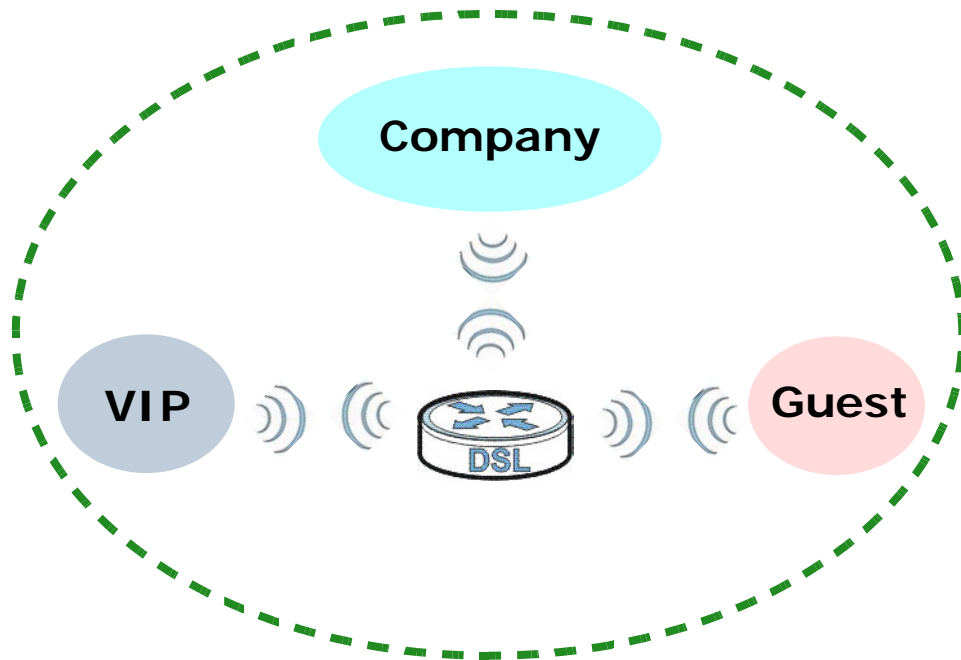

- Employees in Company A will use a general **Company** wireless network group.
- Higher management level and important visitors will use the **VIP** group.
- Visiting guests will use the **Guest** group, which has a lower security mode.

Company A will use the following parameters to set up the wireless network groups.

| | COMPANY | VIP | GUEST |
|-----------------------|----------------|-------------|---------------|
| SSID | Company | VIP | Guest |
| Security Level | More Secure | More Secure | Basic |
| Security Mode | WPA2-PSK | WPA2-PSK | Static WEP |
| Pre-Shared Key | ForCompanyOnly | ForVIPOnly | Guest12345678 |

- 1 Click **Network Setting > Wireless** to open the **General** screen. Use this screen to set up the company's general wireless network group. Configure the screen using the provided parameters and click **Apply**.

Wireless Network Setup

Wireless: ☒ Enable ☐ Disable (settings are invalid when disabled)

Disable/Enable wifi button: ☒ Enable ☐ Disable

Band: 2.4GHz

Channel: Auto Current: 11 [more...](#)

Wireless Network Settings

Wireless Network Name(SSID): Company

Max clients: 32

☐ Hide SSID

☐ Enhanced Multicast Forwarding

Max. Upstream Bandwidth: Kbps

Max. Downstream Bandwidth: Kbps

Notes:

1. Max. Upstream Bandwidth: This field allows user to configure the maximum bandwidth of this SSID to WAN.
2. Max. Downstream Bandwidth: This field allows user to configure the maximum bandwidth of WAN to this SSID.
3. If Max. Upstream/Downstream Bandwidth is empty, the CPE sets the value automatically.

Security Level

No Security Basic **More Secure (Recommended)**

Security Mode: WPA2-PSK

☐ Generate password automatically

Enter 8-63 characters (a-z, A-Z, 0-9 and special characters), other characters are not allowed.

Password: [more...](#)

- 2 Click **Network Setting > Wireless > More AP** to open the following screen. Click the **Edit** icon to configure the second wireless network group.

| # | Status | SSID | Security | Guest WLAN | Modify |
|---|--------|-------------------|----------|------------|--------|
| 1 | | ZyXEL5F5B4_Guest1 | WPA-PSK | N/A | |
| 2 | | ZyXEL5F5B4_Guest2 | WPA-PSK | N/A | |
| 3 | | ZyXEL5F5B4_Guest3 | WPA-PSK | N/A | |

- 3 Configure the screen using the provided parameters and click **Apply**.

Wireless Network Setup

Wireless : ☒ Enable ☐ Disable (The settings in this screen are invalid if you select this.)

Wireless Network Settings

Wireless Network Name(SSID):

Max clients:

☐ Hide SSID

☐ Enhanced Multicast Forwarding

☐ Guest WLAN

Max. Upstream Bandwidth : Kbps

Max. Downstream Bandwidth : Kbps

Notes:

1. Max. Upstream Bandwidth: This field allows user to configure the maximum bandwidth of this SSID to WAN.
2. Max. Downstream Bandwidth: This field allows user to configure the maximum bandwidth of WAN to this SSID.
3. If Max. Upstream/Downstream Bandwidth is empty, the CPE sets the value automatically.

Security Level

No Security Basic **More Secure (Recommended)**

Security Mode:

☐ Generate password automatically

Enter 8-63 characters (a-z, A-Z, 0-9, '-', '_' and ':'), other characters are not allowed.

Password: [more...](#)

- 4 In the **More AP** screen, click the **Edit** icon to configure the third wireless network group.

| # | Status | SSID | Security | Guest WLAN | Modify |
|---|--------|--------|----------|------------|--------|
| 1 | | VIP | WPA2-PSK | N/A | |
| 2 | | Guest2 | WPA-PSK | N/A | |
| 3 | | Guest3 | WPA-PSK | N/A | |

- 5 Configure the screen using the provided parameters and click **Apply**.

Wireless Network Setup

Wireless : ☒ Enable ☐ Disable (The settings in this screen are invalid if you select this.)

Wireless Network Settings

Wireless Network Name(SSID):

Max clients:

☐ Hide SSID

☐ Enhanced Multicast Forwarding

☐ Guest WLAN

Max. Upstream Bandwidth : Kbps

Max. Downstream Bandwidth : Kbps

Notes:

1. Max. Upstream Bandwidth: This field allows user to configure the maximum bandwidth of this SSID to WAN.
2. Max. Downstream Bandwidth: This field allows user to configure the maximum bandwidth of WAN to this SSID.
3. If Max. Upstream/Downstream Bandwidth is empty, the CPE sets the value automatically.

BSSID: 62:7B:EF:75:F5:B7

Security Level

No Security Basic More Secure (Recommended)

Security Mode: WEP

☒ Generate password automatically

64-bit: Enter 5 ASCII characters or 10 hex characters ("0-9", "A-F")

128-bit: Enter 13 ASCII characters or 26 hex characters ("0-9", "A-F")

Select one password as your active password.

☒ Password 1: 1ED1C8BEB5388CF95AB2935277 [less](#)







☐ Password 2: *****

☐ Password 3: *****

☐ Password 4: *****

WEP Encryption:


- 6 Check the status of **VIP** and **Guest** in the **More AP** screen. The yellow bulbs signify that the SSIDs are active and ready for wireless access.

| # | Status | SSID | Security | Guest WLAN | Modify |
|---|---|--------|----------|------------|---|
| 1 |  | VIP | WPA2-PSK | N/A |  |
| 2 |  | Guest | WEP | N/A |  |
| 3 |  | Guest3 | WPA-PSK | N/A |  |


4.7 Configuring Static Route for Routing to Another Network

In order to extend your Intranet and control traffic flowing directions, you may connect a router to the SBG3600-N Series's LAN. The router may be used to separate two department networks. This tutorial shows how to configure a static routing rule for two network routings.

In the following figure, router **R** is connected to the SBG3600-N Series's LAN. **R** connects to two networks, **N1** (192.168.1.x/24) and **N2** (192.168.10.x/24). If you want to send traffic from computer **A** (in **N1** network) to computer **B** (in **N2** network), the traffic is sent to the SBG3600-N Series's WAN default gateway by default. In this case, **B** will never receive the traffic.

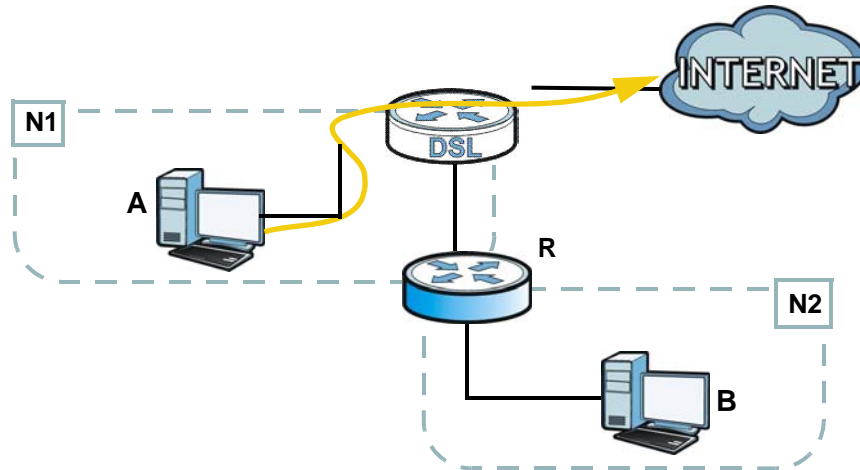

You need to specify a static routing rule on the SBG3600-N Series to specify **R** as the router in charge of forwarding traffic to **N2**. In this case, the SBG3600-N Series routes traffic from **A** to **R** and then **R** routes the traffic to **B**.

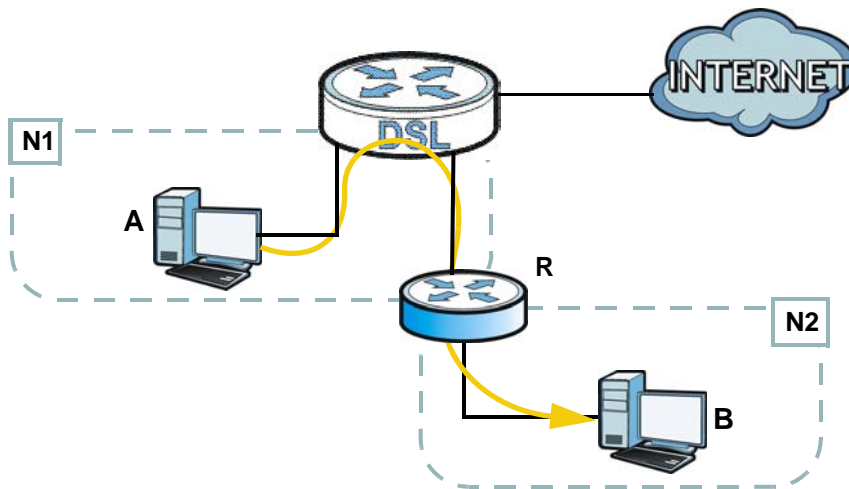

This tutorial uses the following example IP settings:

Table 4 IP Settings in this Tutorial


| DEVICE / COMPUTER | IP ADDRESS |
|----------------------------|--------------|
| The SBG3600-N Series's WAN | 172.16.1.1 |
| The SBG3600-N Series's LAN | 192.168.1.1 |
| IP Type | IPv4 |
| Use Interface | ADSL/atm0 |
| A | 192.168.1.34 |

Table 4 IP Settings in this Tutorial

| DEVICE / COMPUTER | IP ADDRESS |
|-------------------|---------------|
| R's N1 | 192.168.1.253 |
| R's N2 | 192.168.10.2 |
| B | 192.168.10.33 |


To configure a static route to route traffic from **N1** to **N2**:

- 1 Log into the SBG3600-N Series's Web Configurator in advanced mode.
- 2 Click **Network Setting > Routing**.
- 3 Click **Add new static route** in the **Static Route** screen.

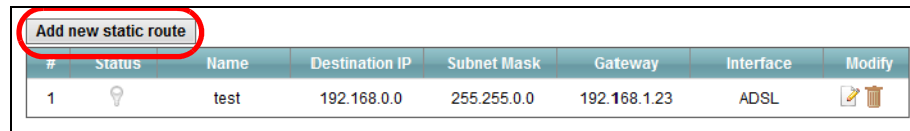

| Add new static route | | | | | | | |
|-----------------------------|--------|------|----------------|-------------|--------------|-----------|--------|
| # | Status | Name | Destination IP | Subnet Mask | Gateway | Interface | Modify |
| 1 | | test | 192.168.0.0 | 255.255.0.0 | 192.168.1.23 | ADSL | |

- 4 Configure the **Static Route Setup** screen using the following settings:
 - 4a Select the **Active** check box. Enter the **Route Name** as **R**.
 - 4b Set **IP Type** to **IPv4**.
 - 4c Type **192.168.10.0** and subnet mask **255.255.255.0** for the destination, **N2**.
 - 4d Select **Enable** in the **Use Gateway IP Address** field. Type **192.168.1.253** (**R's N1** address) in the **Gateway IP Address** field.
 - 4e Select **ADSL/atm0** as the **Use Interface**.

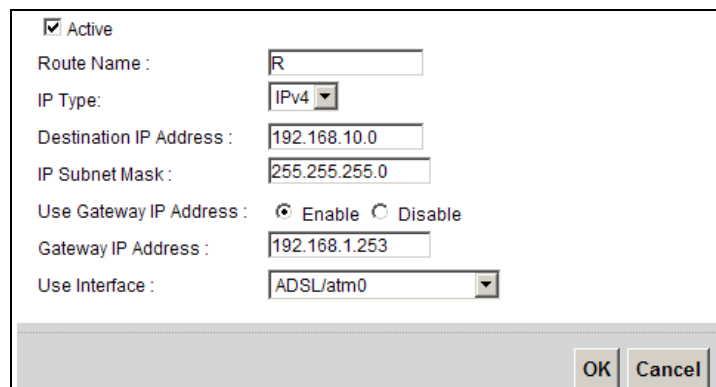

☒ Active
 Route Name :
 IP Type:
 Destination IP Address :
 IP Subnet Mask :
 Use Gateway IP Address : ☒ Enable ☐ Disable
 Gateway IP Address :
 Use Interface :

- 4a Click **OK**.

Now **B** should be able to receive traffic from **A**. You may need to additionally configure **B's** firewall settings to allow specific traffic to pass through.

4.8 Configuring QoS Queue and Class Setup

This section contains tutorials on how you can configure the QoS screen.


Let's say you are a team leader of a small sales branch office. You want to prioritize e-mail traffic because your task includes sending urgent updates to clients at least twice every hour. You also upload data files (such as logs and e-mail archives) to the FTP server throughout the day. Your colleagues use the Internet for research, as well as chat applications for communicating with other branch offices.

In the following figure, your Internet connection has an upstream transmission bandwidth of 10,000 kbps. For this example, you want to configure QoS so that e-mail traffic gets the highest priority with at least 5,000 kbps. You can do the following:

- Configure a queue to assign the highest priority queue (1) to e-mail traffic going to the WAN interface, so that e-mail traffic would not get delayed when there is network congestion.
- Note the IP address (192.168.1.23 for example) and/or MAC address (AA:FF:AA:FF:AA:FF for example) of your computer and map it to queue 7.

Note: QoS is applied to traffic flowing out of the SBG3600-N Series.

Traffic that does not match this class is assigned a priority queue based on the internal QoS mapping table on the SBG3600-N Series.

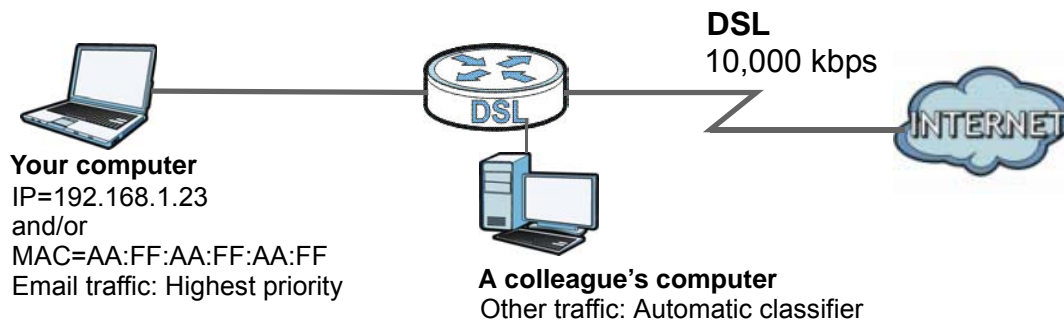

- 1 Click **Network Setting > QoS > General** and select **Enable**. Set your **WAN Managed Upstream Bandwidth** to 10,000 kbps (or leave this blank to have the SBG3600-N Series automatically determine this figure). Click **Apply**.

QoS ☒ Enable ☐ Disable (settings are invalid when disabled)

WAN Managed Upstream Bandwidth : (kbps)

LAN Managed Downstream Bandwidth : (kbps)

Upstream traffic priority Assigned by:

Note:

You can assign the upstream bandwidth manually. If the field is empty, the CPE sets the value automatically.

If Enable QoS checkbox is selected, choose a default DSCP mark to automatically mark incoming traffic without reference to a particular classifier.

If the setting of WAN managed upstream bandwidth is greater than current WAN interface linkup rate, then the WAN managed upstream bandwidth will become current WAN interface linkup rate.

- 2 Click **Queue Setup > Add new Queue** to create a new queue. In the screen that opens, check **Active** and enter or select the following values:

- **Name:** E-mail
- **Interface:** WAN
- **Priority:** 1 (High)
- **Weight:** 8
- **Rate Limit:** 5,000 (kbps)

☒ Active

Name :

Interface :

Priority :

Weight :

Buffer Management :

Rate Limit : (kbps)

- 3 Click **Class Setup > Add new Classifier** to create a new class. Check **Active** and follow the settings as shown in the screen below.

Please follow the guidance through step 1~5 to configure a QoS rule

Step1: Class Configuration

☒ Active

Class Name :

Classification Order :

Step2: Criteria configuration

Use the configurations below to specify the characteristics of a data flow need to be managed by this QoS rule

- Basic**

From Interface :

Ether Type :
- Source**

☒ Address Subnet Netmask ☐ Exclude

☐ Port Range ~ ☐ Exclude

☒ MAC MAC Mask ☐ Exclude
- Destination**

☐ Address Subnet Netmask ☐ Exclude

☐ Port Range ~ ☐ Exclude

☐ MAC MAC Mask ☐ Exclude
- Others**

☐ Service ☐ Exclude

☒ IP protocol ☐ Exclude

☐ DHCP ☐ Exclude

☐ Packet Length ~ ☐ Exclude

☐ DSCP (0~63) ☐ Exclude

☐ 802.1P ☐ Exclude

☐ VLAN ID (0~4094) ☐ Exclude

☐ TCP ACK ☐ Exclude

Step3: Packet modification

The content of the packet can be modified by applying the following settings:

DSCP Mark : (0~63)

802.1P Mark :

VLAN ID : (0~4094)

Step4: Policy Forwarding

This module can route or bridge packets to certain interface according to the class settings:

Forward To Interface :

Step5: Outgoing queue selection

Outgoing queue decide the priority of the traffic and how traffic should be shaped in the WAN interface. Choose "None" if you don't want to apply outgoing queue

To Queue Index :


| | |
|-----------------------|--|
| Class Name | Give a class name to this traffic, such as E-mail in this example. |
| From Interface | This is the interface from which the traffic will be coming from. Select LAN1 for this example. |
| Ether Type | Select IP to identify the traffic source by its IP address or MAC address. |
| IP Address | Type the IP address of your computer - 192.168.1.23 . Type the IP Subnet Mask if you know it. |
| MAC Address | Type the MAC address of your computer - AA:FF:AA:FF:AA:FF . Type the MAC Mask if you know it. |
| To Queue Index | Link this to an item in the Network Setting > QoS > Queue Setup screen, which is the E-mail queue created in this example. |

This maps e-mail traffic coming from port 25 to the highest priority, which you have created in the previous screen (see the **IP Protocol** field). This also maps your computer's IP address and MAC address to the **E-mail** queue (see the **Source** fields).

- 4 Verify that the queue setup works by checking **Network Setting > QoS > Monitor**. This shows the bandwidth allotted to e-mail traffic compared to other network traffic.

4.9 Access the SBG3600-N Series Using DDNS

If you connect your SBG3600-N Series to the Internet and it uses a dynamic WAN IP address, it is inconvenient for you to manage the device from the Internet. The SBG3600-N Series's WAN IP address changes dynamically. Dynamic DNS (DDNS) allows you to access the SBG3600-N Series using a domain name.

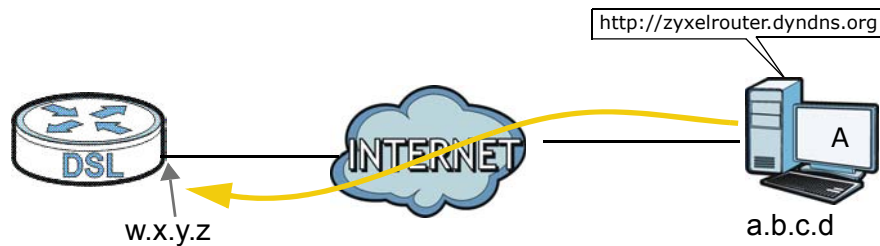

To use this feature, you have to apply for DDNS service at www.dyndns.org.

This tutorial covers:

- [Registering a DDNS Account on \[www.dyndns.org\]\(http://www.dyndns.org\)](#)
- [Configuring DDNS on Your SBG3600-N Series](#)
- [Testing the DDNS Setting](#)

Note: If you have a private WAN IP address, then you cannot use DDNS.

4.9.1 Registering a DDNS Account on www.dyndns.org


- 1 Open a browser and type **<http://www.dyndns.org>**.
- 2 Apply for a user account. This tutorial uses **UserName1** and **12345** as the username and password.
- 3 Log into www.dyndns.org using your account.
- 4 Add a new DDNS host name. This tutorial uses the following settings as an example.
 - Hostname: **zyxelrouter.dyndns.org**
 - Service Type: **Host with IP address**
 - IP Address: Enter the WAN IP address that your SBG3600-N Series is currently using. You can find the IP address on the SBG3600-N Series's Web Configurator **Status** page.

Then you will need to configure the same account and host name on the SBG3600-N Series later.

4.9.2 Configuring DDNS on Your SBG3600-N Series

Configure the following settings in the **Network Setting > DNS > Dynamic DNS** screen.

- Select **Enable Dynamic DNS**.
- Select **www.DynDNS.com** as the service provider.
- Type **zyxelrouter.dyndns.org** in the **Host Name** field.
- Enter the user name (**UserName1**) and password (**12345**).

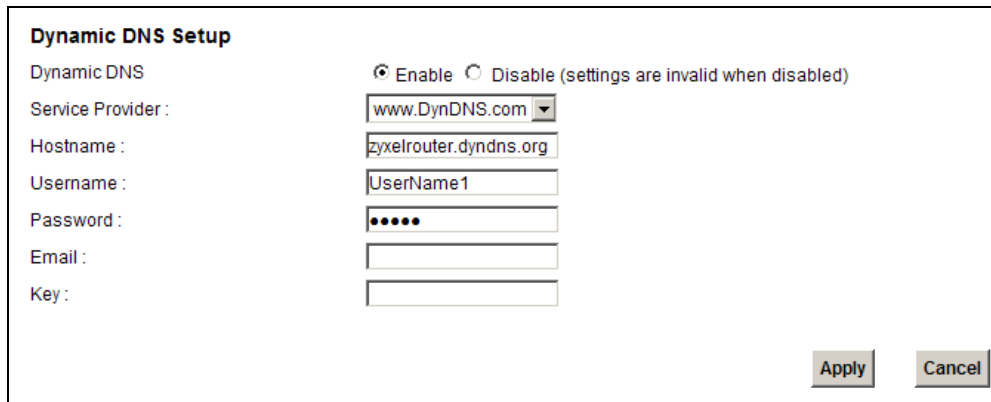

Click **Apply**.

4.9.3 Testing the DDNS Setting


Now you should be able to access the SBG3600-N Series from the Internet. To test this:

- 1 Open a web browser on the computer (using the IP address **a.b.c.d**) that is connected to the Internet.
- 2 Type **http://zyxelrouter.dyndns.org** and press [Enter].
- 3 The SBG3600-N Series's login page should appear. You can then log into the SBG3600-N Series and manage it.

4.10 Configuring the MAC Address Filter

Thomas noticed that his daughter Josephine spends too much time surfing the web and downloading media files. He decided to prevent Josephine from accessing the Internet so that she can concentrate on preparing for her final exams.

Josephine's computer connects wirelessly to the Internet through the SBG3600-N Series. Thomas decides to use the **Security > MAC Filter** screen to grant wireless network access to his computer but not to Josephine's computer.

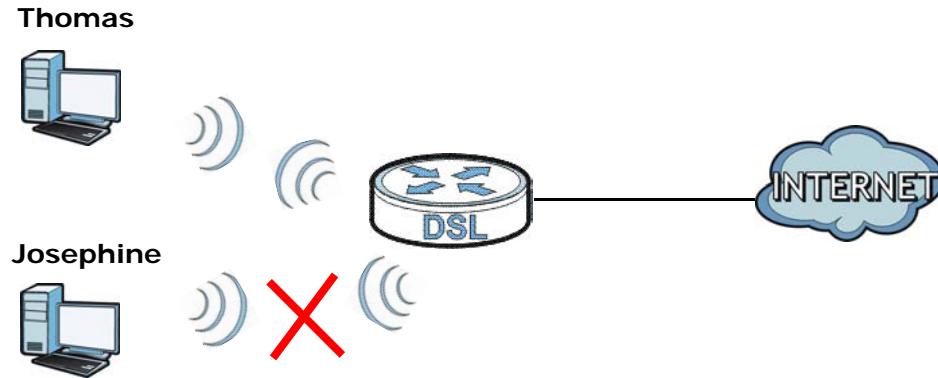

- 1 Click **Security > MAC Filter** to open the **MAC Filter** screen. Select the **Enable** check box to activate MAC filter function.
- 2 Select **Allow**. Then enter the host name and MAC address of Thomas' computer in this screen. Click **Apply**.

MAC Address Filter : ☒ Enable ☐ Disable (settings are invalid when disabled)

| Set | Allow | Host name | MAC Address |
|-----|-------------------------------------|-----------|-------------------|
| 1 | <input checked="" type="checkbox"/> | Thomas | 00:24:21:AB:1F:00 |
| 2 | <input type="checkbox"/> | | |
| 3 | <input type="checkbox"/> | | |
| 4 | <input type="checkbox"/> | | |
| 5 | <input type="checkbox"/> | | |
| 6 | <input type="checkbox"/> | | |
| 7 | <input type="checkbox"/> | | |
| 30 | <input type="checkbox"/> | | |
| 31 | <input type="checkbox"/> | | |
| 32 | <input type="checkbox"/> | | |

Note:
Only devices listed here are granted access to the network.



Apply Cancel

Thomas can also grant access to the computers of other members of his family and friends. However, Josephine and others not listed in this screen will no longer be able to access the Internet through the SBG3600-N Series.

4.11 Access Your Shared Files From a Computer

Here is how to enable the Samba feature on the SBG3600-N Series and access a file storage device connected to the SBG3600-N Series's USB port.

- 1 Log into the web configurator and go to the **Maintenance > User Account** screen. Click the **Edit** icon on the account you are currently using. In this example, the account in use is **admin**. Click the Edit icon next to it.

| # | User Name | Retry Times | Idle Timeout | Lock Period | Group | Modify |
|---|-----------|-------------|--------------|-------------|---------------|---|
| 1 | admin | 0 | 10 min(s) | 15 min(s) | Administrator |  |
| 2 | zyuser | 0 | 10 min(s) | 15 min(s) | User |  |

Web Captive Portal :
☐ Enable ☒ Disable

Customize Login Message :

Note:
 1. Click Edit for more user account configurations.
 2. Enable Web Captive Portal will redirect to login page when access Internet from LAN to WAN Web sites at first time of a day.
 3. You can customize the message displayed in login page (maximum 255 characters).

Apply Cancel

- 2 Set the **File Sharing Service (SAMBA)** feature to **Enable** to allow uses to access shared files in USB storage. Enter **mnt** as the **File Share Name**. Click **Apply**.

User Name : admin

New Password : (6~15 words)

Verify New Password :

Retry Times : 0 (0~5), 0 : Not limit

Idle Timeout : 60 Minute(s) (1~60)

Lock Period : 90 Minute(s) (15~90)

Group : Administrator

File Sharing Service (SAMBA) ☒ Enable ☐ Disable

File Share Name : mnt


File Share Directory : /

File Sharing Writable : ☒ Yes ☐ No

Note:
 1. Password must require a minimum length of 6 characters (mixed alphabetic and numeric).
 2. File Share Name specifies the shared source name. The user should connect the Device along with the File Share Name.
 3. File Share Directory indicates the shared root directory.

Apply Cancel

- 3 In this example, the FileZilla program is used to browse shared files. In FileZilla, enter the IP address of the SBG3600-N Series (the default is 192.168.1.1), your account's user name and password and port 21 and click **Quickconnect**. A screen asking for password authentication appears.

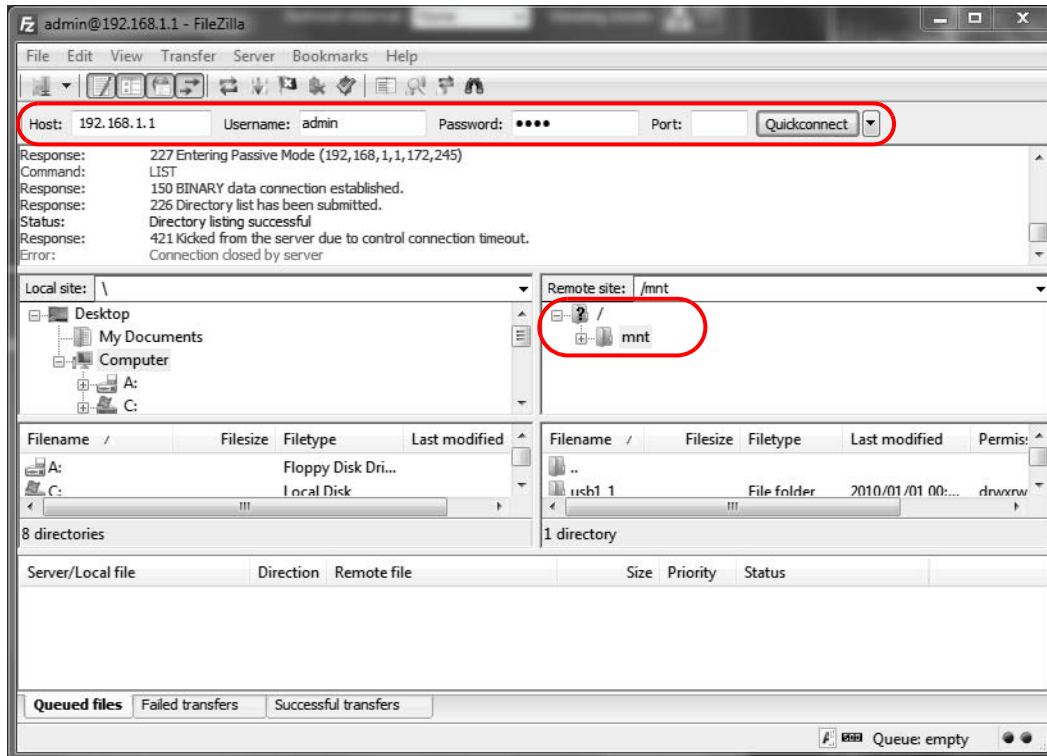


- 4 Once you log in the USB device displays in the **mnt** folder.


4.12 Certificate Configuration for VPN

You may generate a self-signed Certification Authority (CA) certificate using a third party tool or get an official CA certificate from any trusted certificate agent. In this tutorial, a self-signed CA certificate (cacert.pem) was created by using the openssl command in Fedora 10.


- 1 First, you need to import the CA certificate. Go to the **Security > Certificates > Trusted CA** screen and click **Import Certificate**.

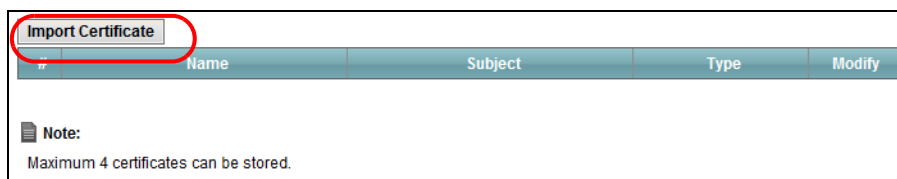

- 2 Browse the directory in Fedora, or another system, which contains your CA certificate (e.g., cacert.pem), then click **OK**.

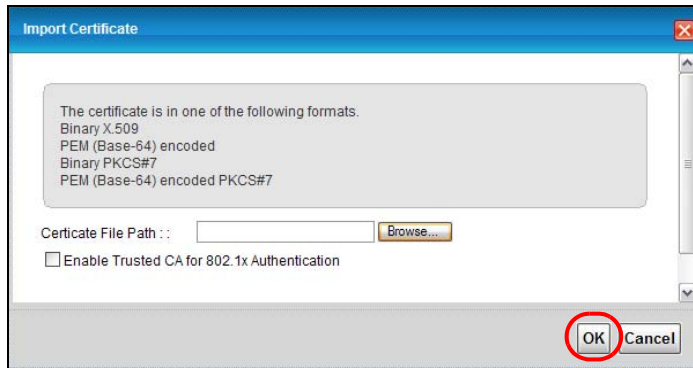

- 3 In the **Security > Certificates > Local Certificates** screen, click **Create Certificate Request**.

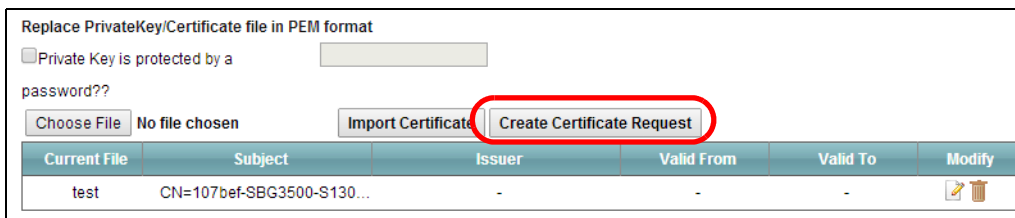

- 4 Enter your information as shown in the following screen and click **Apply**.

To generate a certificate signing request you need to include Common Name, Organization Name, State/Province Name, and the 2-letter Country Code for the certificate.

Certificate Name:

Common Name: ☒ Auto ☐ Customize

Organization Name:

State/Province Name:

Country/Region Name:

Apply Cancel

- 5 The contents of the certificate display in the **View Certificate** screen. Copy the **Signing Request** section and paste it to a file (for example, sbg.req) in Fedora, or another system, which contains your original CA certificate.

View Certificate

Certificate Details

Certificate signing request successfully created. Note a request is not yet functional - have it signed by a Certificate Authority and load the signed certificate to this device.


| | |
|------------------------|--|
| Name | SBG |
| Type | request |
| Subject | CN=cc5d4e-SBG3600-S090Y00000000/O=ZyXEL/ST=HsinChu/C=TW |
| Signing Request | -----BEGIN CERTIFICATE REQUEST----- MIIBITCBwlBADBWMSUwYDQVQQDBxjYzVknGutU0JHMzYwMC1TMDkwWTAwMDAw |

Load_Signed **Close**


- 6 In Fedora, issue the following openssl command to generate the host certificate for the SBG3600-N Series:

```
openssl ca -config ./openssl.conf -policy policy_anything -out sbg.pem
-infiles sbg.req
```

- 7 Click the **Load_Signed** button in the **View Certificate** screen.
- 8 Cut the contents of sbg.pem (only the binary portion between BEGIN CERTIFICATE and END CERTIFICATE). You can use "vi" or your favorite text editor to cut the portion, but do not use the "cat" command.
- 9 Paste it to the indicated part of the **Certificate** section in the **View Certificate** screen. Click **Apply**.

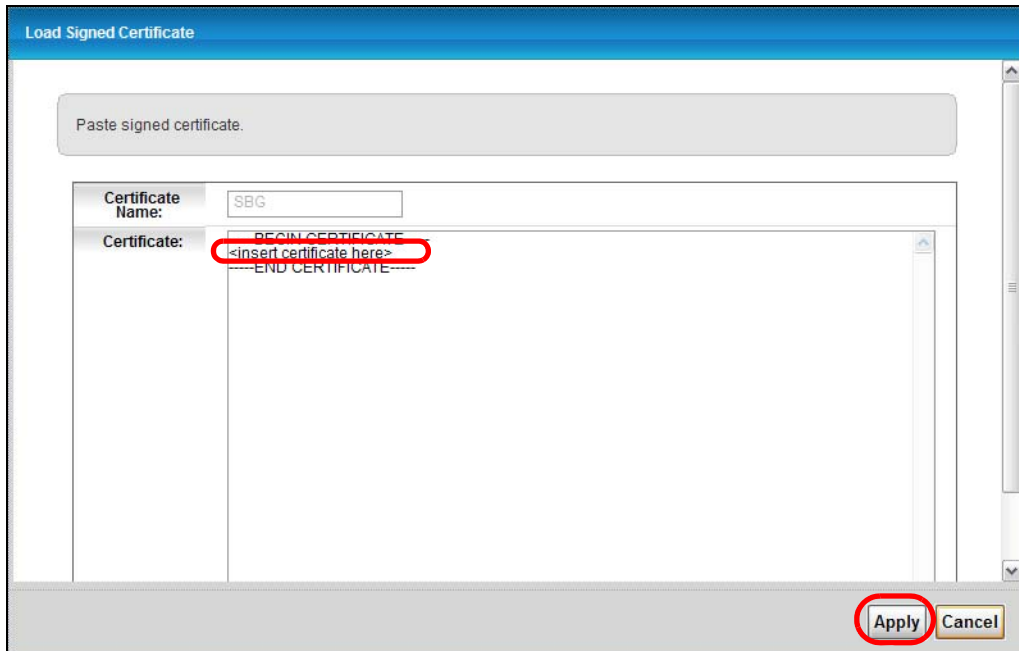

- 10 Now you may configure VPN to use the new certificate for authentication in the **VPN > IPSec VPN > Setup** screen.

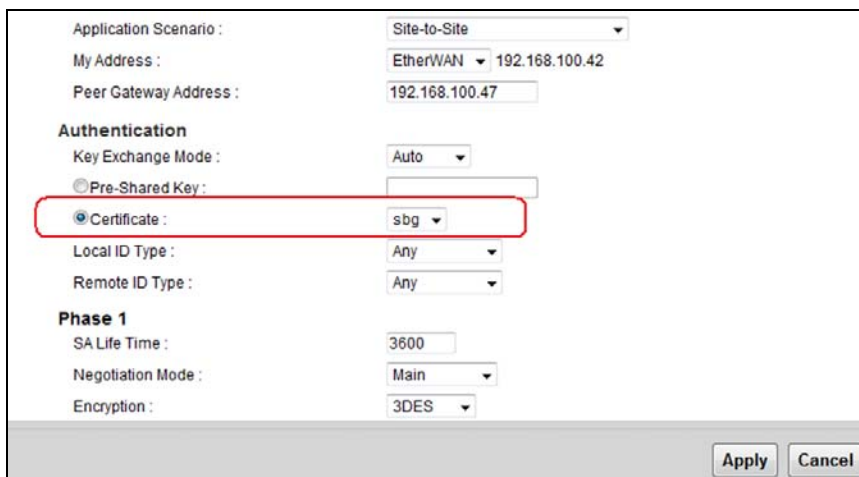

4.13 Examples of Configuring IPSec VPN Rules

The first two examples show how to configure Site-to-Site rules with pre-shared secrets. The first example uses 3DES encryption and the second one uses AES128.

The third example shows how to configure a Site-to-Site with Dynamic Peer rule using pre-shared secret keys.

Finally, the fourth example shows how to configure remote access using pre-shared secrets.

4.13.1 Example 1: Use 3DES Encryption

- 1 Click the **Add New Entry** button in the **VPN > IPSec VPN > Setup** screen and enter the following parameters:

| | |
|-----------------------|---------------|
| General | |
| Connection Name | vpn1 |
| Application Scenario | Site-to-Site |
| My Address | ETHWAN |
| Peer Gateway Address | 22.23.24.25 |
| Authentication | |
| Key Exchange Mode | Auto |
| Pre-Shared Key | 1234567890 |
| Phase 1 | |
| SA Life Time | 28800 |
| Negotiation Mode | Main |
| Encryption | 3DES |
| Authentication | SHA1 |
| Key Group | DH2 |
| Phase 2 | |
| SA Life Time | 3600 |
| Tunnel Mode | ESP |
| Encapsulation | Tunnel |
| Encryption | 3DES |
| Authentication | SHA1 |
| PFS | DH2 |
| Policy | |
| Local IP Type | Subnet |
| Local IP Address | 192.168.1.0 |
| Local Subnet Mask | 255.255.255.0 |
| Remote IP Type | Subnet |
| Remote IP Address | 172.23.9.0 |
| Remote Subnet Mask | 255.255.255.0 |

General

Enable : ☒

Connection Name : vpn1

Natted-up : ☐

NAT Traversal (NAT-T) : ☒

Application Scenario : Site-to-Site

My Address : ETHWAN 0.0.0.0

Primary Peer Gateway Address : 22.23.24.25 22.23.24.25

Secondary Peer Gateway Address : 12.13.14.15 12.13.14.15

Fall Back to Primary Peer Gateway ☐

when possible :

Authentication

Key Exchange Mode : Auto

Pre-Shared Key : 1234567890

Certificate :

Local ID Type : Any

Remote ID Type : Any

Phase 1

SA Life Time : 28800

Negotiation Mode : Main

Encryption : 3DES

Authentication : SHA1

Add

| Encryption | Authentication | Modify |
|------------|----------------|--------|
| AES192 | SHA1 | |

Key Group : DH2

Dead Peer Detection (DPD) : ☒

Extended Authentication (XAUTH) ☐

Phase 2

SA Life Time : 3600

Tunnel Mode : ESP

Encapsulation : Tunnel

Encryption : 3DES Add Reset

AES192

Authentication : SHA1 Add Reset

SHA1

Perfect Forward Secrecy (PFS) : ☒ DH2

Policy

Local IP Type : Subnet

Local IP Address : 192.168.1.0

Local Subnet Mask : 255.255.255.0

Remote IP Type : Subnet

Remote IP Address : 172.23.9.0

Remote Subnet Mask : 255.255.255.0

Force SBG Go VPN ☐

Tunnel :

Apply Cancel

You can see the new IPSec VPN rule you've just created in the **VPN > IPSec VPN > Monitor** screen.

| Add New Entry | | | | | | | |
|---------------|--------|------------------|------------------------|-----------------------|---------------------|---------------------|--------|
| # | Enable | Name | Remote Gateway Address | Local Gateway Address | Remote Policy | Local Policy | Modify |
| 1 | | Default_L2TPV... | Dynamic | Any | N/A | N/A | |
| 2 | | vpn1 | 22.23.24.25 | 0.0.0.0 | 172.23.9.0 / 255... | 192.168.1.0 / 25... | |

4.13.2 Example 2: Use AES128 Encryption

Here is another example of creating a Gateway-to-Gateway IPsec VPN rule with pre-shared secrets.

- 1 Click the **Add New Entry** button in the **VPN > IPsec VPN > Setup** screen.
- 2 Enter **vpn2** as the **Connection Name**. Remove the existing encryption by clicking **Remove** icon or **Reset** button. Then select **AES128** and click the **Add** button in the **Encryption** fields of phase 1 and 2. Other parameters are the same as example 1's.

The screenshot shows the 'VPN > IPsec VPN > Setup' screen. The 'Connection Name' is 'vpn2'. The 'Encryption' field in Phase 1 is set to 'AES128'. The 'Encryption' field in Phase 2 is also set to 'AES128'. The 'Add' button next to the Phase 2 'Encryption' field is highlighted. The 'Remove' icon (trash can) is visible in the table below the Phase 1 'Encryption' field.

General

Enable : ☒

Connection Name : vpn2

Nailed-up : ☐

NAT Traversal (NAT-T) : ☒

Application Scenario : Site-to-Site

My Address : ETHWAN 0.0.0.0

Primary Peer Gateway Address : 22.23.24.25 22.23.24.25

Secondary Peer Gateway Address : 12.13.14.15 12.13.14.15

Fall Back to Primary Peer Gateway ☐

when possible :

Authentication

Key Exchange Mode : Auto

Pre-Shared Key : 1234567890

Certificate :

Local ID Type : Any

Remote ID Type : Any

Phase 1

SA Life Time : 28800

Negotiation Mode : Main

Encryption : AES128

Authentication :

Add

| Encryption | Authentication | Modify |
|------------|----------------|----------------------------------|
| AES192 | SHA1 | <input type="button" value="v"/> |

Key Group : DH2

Dead Peer Detection (DPD) : ☒

Extended Authentication (XAUTH) : ☐

Phase 2

SA Life Time : 86400

Tunnel Mode : ESP

Encapsulation : Tunnel

Encryption : AES128 **Add** **Reset**

AES192

Authentication : **Add** **Reset**

SHA1

☒ Perfect Forward Secrecy (PFS) : DH2

Policy

Local IP Type : Subnet

Local IP Address : 192.160.1.0

Local Subnet Mask : 255.255.255.0

Remote IP Type : Subnet

Remote IP Address : 172.23.9.0

Remote Subnet Mask : 255.255.255.0

Apply **Cancel**

- 3 You can see the new IPSec VPN rule you've just created in the **VPN > IPSec VPN > Monitor** screen.

| Add New Entry | | | | | | | |
|---------------|--------|------|------------------------|-----------------------|-----------------------|----------------------|--------|
| # | Enable | Name | Remote Gateway Address | Local Gateway Address | Remote Policy | Local Policy | Modify |
| 3 | | vpn2 | 22.23.24.25 | 0.0.0.0 | 172.23.9.0 / 255.2... | 192.160.1.0 / 255... | |

4.13.3 Example 3: Configuring a Site-to-Site with Dynamic Peer Rule

Select **Site-to-Site with Dynamic Peer** in the **Application Scenario** field in the **General** section. Other parameters are the same as example 1's.

General

Enable : ☒

Connection Name :

Nailed-up : ☐

NAT Traversal (NAT-T) : ☒

Application Scenario : Site-to-Site with Dynamic Peer

My Address : ETHWAN 14.15.16.17

Authentication

☒ Pre-Shared Key : hr5xb84l6aa9r6

☐ Certificate :

Local ID Type : Any

Remote ID Type : Any

4.13.4 Example 4: Configuring a Remote Access Rule

Select **Remote Access** in the **Application Scenario** field in the **General** section. Other parameters are the same as example 1's.

General

Enable : ☒

Connection Name :

Nailed-up : ☐

NAT Traversal (NAT-T) : ☒

Application Scenario : Remote Access

My Address : ETHWAN 14.15.16.17

Authentication

☒ Pre-Shared Key : hr5xb84l6aa9r6

☐ Certificate :

Local ID Type : Any

Remote ID Type : Any


Note: The **Peer Gateway Address** is not shown in the screen because it is an unknown IP address to the remote access VPN client.

Note: The policy for the remote VPN client is not shown in the screen because it is an unknown to the remote access VPN client.

4.14 PPTP VPN Tutorial

The example uses the following settings in setting up a basic PPTP VPN tunnel.

Figure 15 PPTP VPN Example

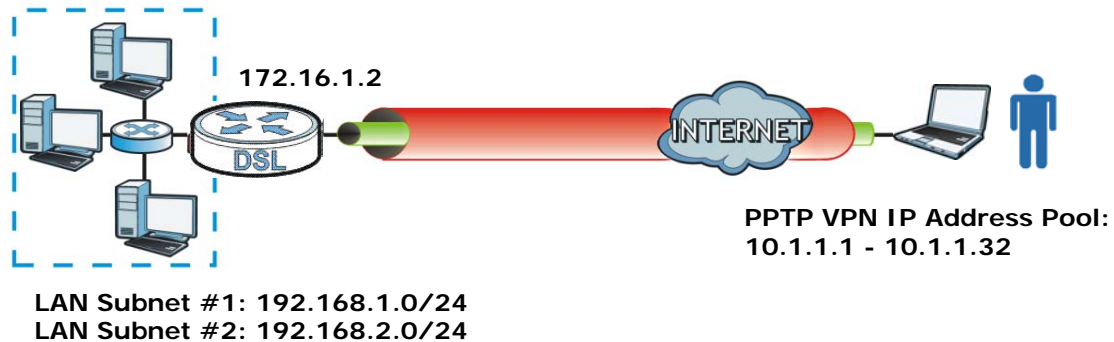

- The SBG3600-N Series has a static IP address of **172.16.1.2** for the DSL WAN interface.
- The remote user has a dynamic IP address and connects through the Internet.
- Use the default IP address pool to assign the remote users a point-to-point IP addresses from **10.1.1.1** to **10.1.1.32** for use in the PPTP VPN tunnel.
- The access group configuration allows the remote user to access only the **LAN subnet #1 192.168.1.0/24**.

4.14.1 Configuring PPTP VPN Setup (Server)

1. Go to the **VPN > PPTP VPN > Setup** screen and configure the following.

- Select the **Enable** checkbox.
- Set **Access Group 1** to **192.168.1.0/255.255.255.0**.
- Select **DNS** as **User Defined** and enter a DNS server address. The DNS server address in this example is **8.8.8.8**.
- Click **Apply**.

PPTP Setup

Enable : ☒

Local WAN Interface : Any

IP Address Pool : 10.1.1.1 - 10.1.1.32 (Subnet Mask : 255.255.255.0)

Access Group (Optional) :

Group 1 : IP Address: 192.168.1.0 Subnet Mask: 255.255.255.0

Group 2 : IP Address: Subnet Mask:

Note:

1. Maximum number of IP address is limited to 32.
2. Each PPTP connection will use two IP addresses from the IP Address Pool. Thus, the maximum concurrent PPTP connections will be limited to 16.
3. Modifying Local WAN Interface, IP Address Pool, Access Group will disconnect all existing PPTP VPN connections.
4. If no Access Group is configured, by default all LAN groups can be accessed.

Authentication Method : default

Keep Alive Timer : 60

DNS Server (Optional) : User Defined
8.8.8.8

WINS Server (Optional) :

Note:

1. Keep Alive Timer modification will not take effect until you restart PPTP VPN.
2. DNS Server and WINS Server modification will be applied to new PPTP VPN connections only.

Apply Cancel


4.14.2 Configuring PPTP VPN on Windows (Client)

The following sections cover how to configure PPTP in remote user computers using Windows 7, Vista and XP. The example settings in these sections match the PPTP VPN configuration example in [Section 4.14 on page 72](#).

On Windows 7

On Windows 7, do the following to establish a PPTP VPN connection.


- 1 Click **Start > Control Panel > Network and Sharing Center > Setup a new connection or network > Connect to a workplace**. Click **Next**.
- 2 Select **No, create a new connection**. Click **Next**.

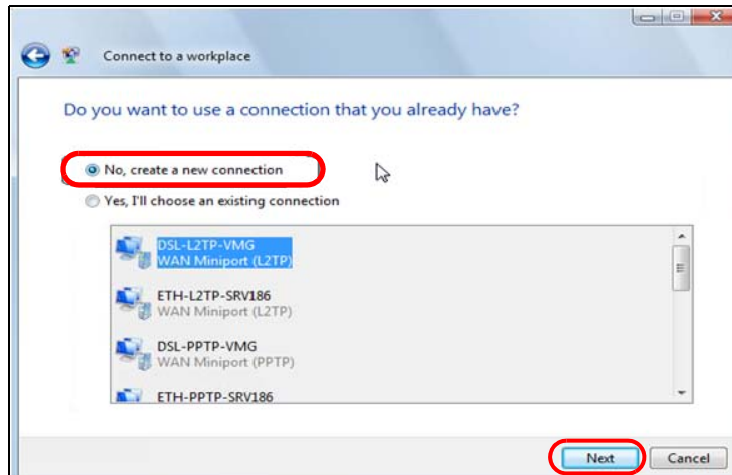


- 3 Select **Use my Internet connection (VPN)**.




- 4 Enter the domain name or WAN IP Address that you want to connect to (**172.16.1.2** in this example) and give this connection a name. Select **Don't connect now; just set it up so I can connect later**. Click **Next**.

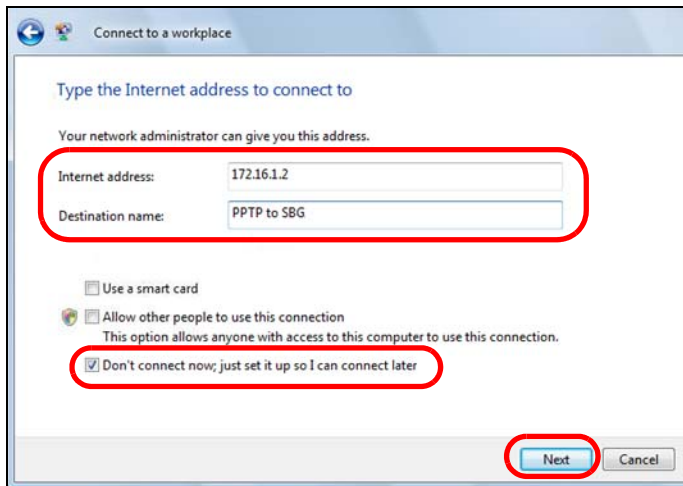


- 5 Click **Create**. Enter the user name and password later.

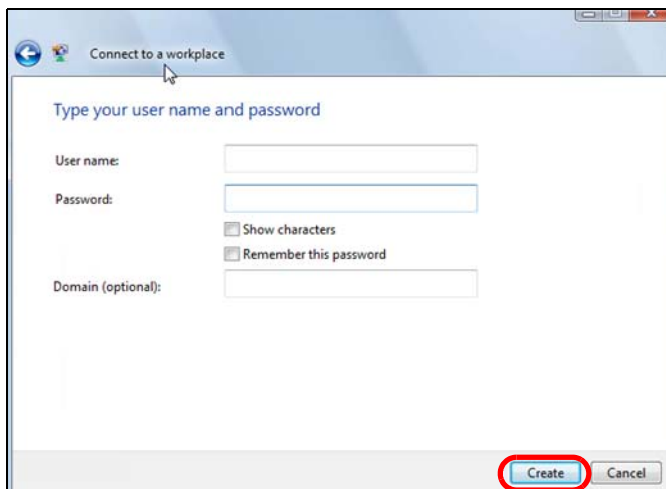


- 6 Click **Close**. Do not connect yet.

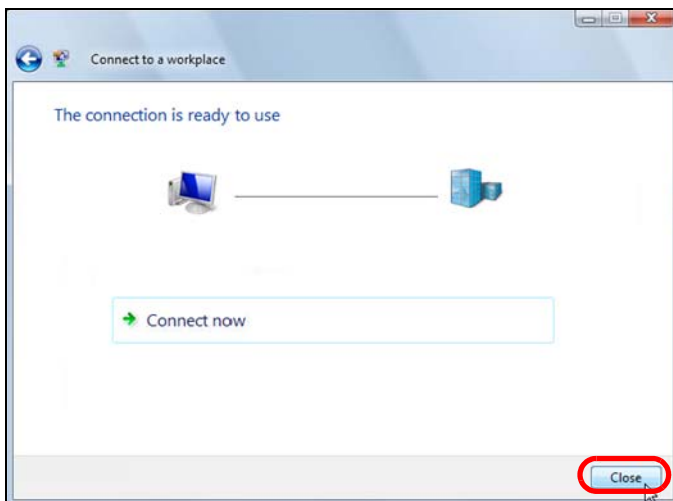

- Click the **Network** icon in your system tray, then click **Connect to a Network and Sharing Center** on Windows 7.

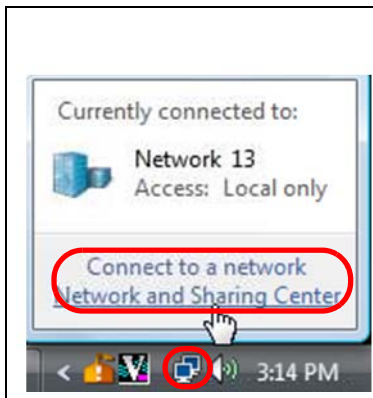

- Click **Change adapter settings**.

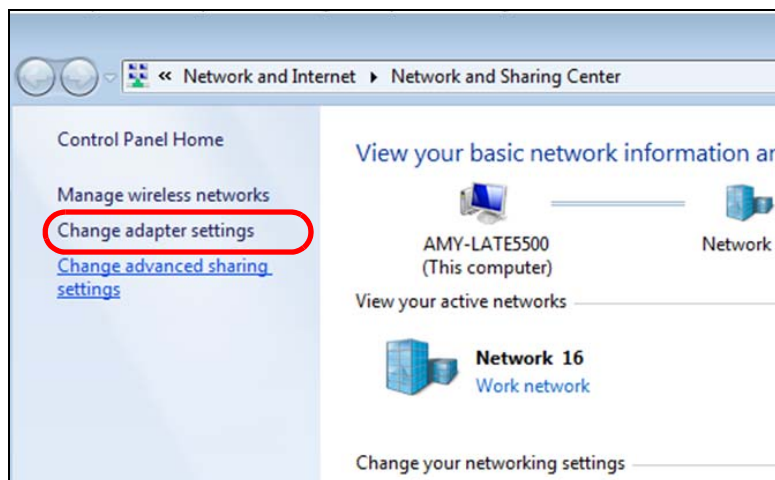

- Double-click the new connection icon.




- 10 The connection screen appears. Click **Properties**.



- 11 The **Properties** window appears. Click **Security**.

- 12 Select **Point to Point Tunneling Protocol (PPTP)** as the **Type of VPN**. Select **Maximum strength encryption (disconnect if server declines)** and the **Allow these protocols** radio button. Select **Microsoft CHAP Version 2 (MS-CHAP v2)** and clear all of the other check boxes. Do not click **OK** yet.

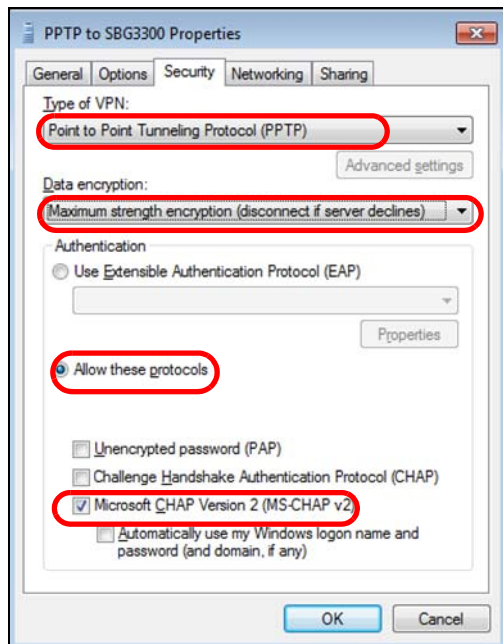


- 13 In the **Connect** window, enter the username and password of your SBG3600-N Series's account. Click **Connect**.




Note: The user account must have been configured in the **Maintenance > User Account** screen. Refer to [Chapter 34 on page 338](#).


- 14 A window appears while the username and password are verified. The connection is then established.
- 15 The **Network and Sharing Center** windows appear. You can view the connection status or disconnect the connection. Click **View Status** to open the connection status screen.

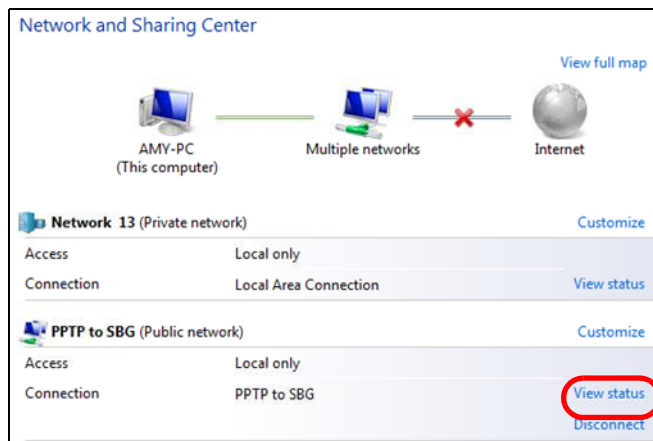

- 16 Click the **Network** icon in your system tray, then right click the PPTP connection and select **Status** to open the connection status screen.

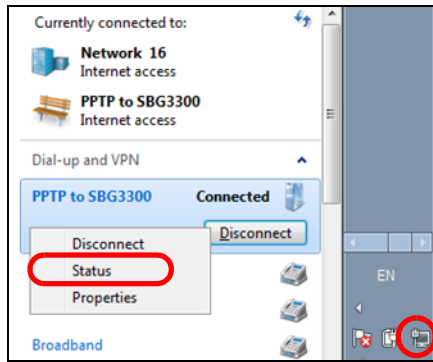

- 17 From the status screen, you can disconnect this connection. Or you can click **Details** to see the connection details. The address 10.1.1.1 and 10.1.1.17 are addresses allocated from the PPTP **IP Address Pool** you configured on the SBG3600-N Series (10.1.1.1 - 10.1.1.32).

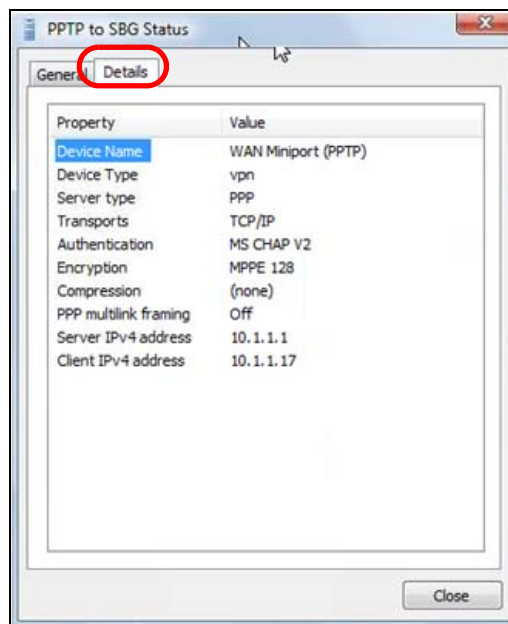


- 18 Access a server or other network resource on subnet 192.168.1.0 behind the SBG3600-N Series to make sure your access works.

4.14.3 Configuring PPTP VPN on Android Devices (Client)

The following sections cover how to configure the built-in PPTP client in remote user's Android devices. Due to GUI difference among various Android devices, the figures may not exactly match what your Android device displays. The example settings in these sections match the PPTP VPN configuration example in [Section 4.14 on page 72](#).


- 1 On your Android device, select **Home > Settings > Wireless and network > VPN settings**.

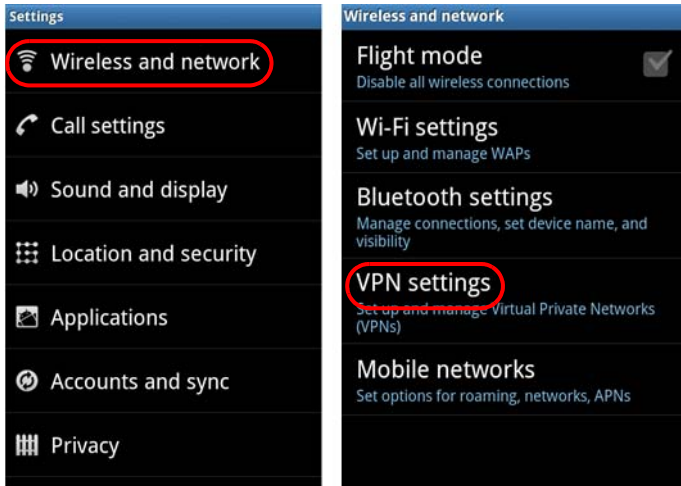

- 2 Select **Add VPN > Add PPTP VPN**.



- 3 Fill out the following fields.
 - **VPN Name:** Enter a name for your VPN configuration.
 - **Set VPN Server:** This is the WAN IP address of the SBG3600-N Series, in this example, **172.16.1.2**
 - **Enable Encryption:** checked.
 - **DNS search domains:** not used.
- 4 The new configuration will appear on the **VPN settings** screen. You can click the VPN name to begin PPTP connection.

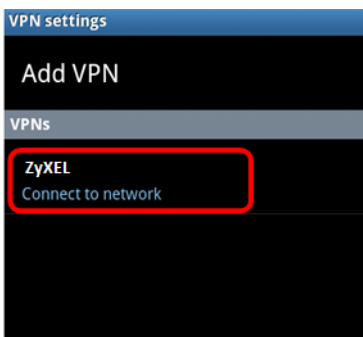

- 5 Enter the username and password of your user account configured on the SBG3600-N Series.

Note: The user account must have been configured in the **Maintenance > User Account** screen. Refer to [Chapter 34 on page 338](#).

- 6 You can see **Connected** when the PPTP VPN connection has been established. Click the connection name to get connection details. There you can also disconnect.



4.14.4 Configuring PPTP VPN in iOS Devices (Client)

The following sections cover how to configure the built-in PPTP client in iOS devices (iPhone, iPad, iPod Touch, etc). Due to GUI difference among various iOS devices, the figures may not match what your iOS device displays. The example settings in these sections match the PPTP VPN configuration example in [Section 4.14 on page 72](#).

- 1 On your iOS device, select **Home > Settings > General > Network**.



- 2 Select **VPN > Add VPN Configuration....**



- 3 Select the **PPTP** tab. Enter the following fields.
 - **Description:** Enter a name for your VPN configuration.
 - **Server:** This is the WAN IP address of the SBG3600-N Series, in this example, **172.16.1.2**.
 - **Account:** This is the user account created on SBG3600-N Series for accessing the network via VPN.
 - **RSA SecurID:** Not used in this configuration.
 - **Password:** This is the password for account.
 - **Secret:** This is your pre-shared key for your VPN connection, in this example, **1234567890**.
 - **Send All Traffic:** This example uses the route-all configuration (**ON**).



- 4 Save the configuration.
- 5 The saved configuration will appear on the **VPN** screen. Select it and then slide the VPN bar to the **ON** position. Your iOS device will begin PPTP connection.




4.15 L2TP VPN Tutorial

This section illustrates how to set up a basic L2TP VPN tunnel between the SBG3600-N Series and a remote client.

The example uses the following settings in setting up a basic L2TP VPN tunnel.

Figure 16 L2TP VPN Example

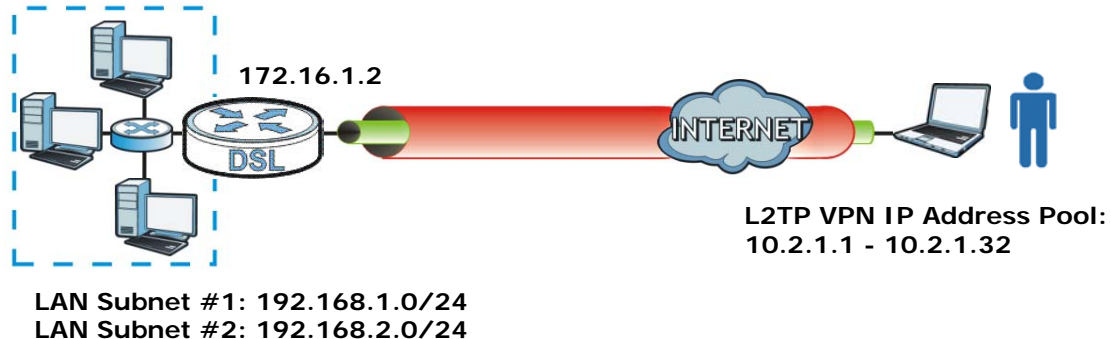

- The SBG3600-N Series has a static IP address of **172.16.1.2** for the DSL WAN interface.
- The remote user has a dynamic IP address and connects through the Internet.
- Use the default IP address pool to assign the remote users a point-to-point IP addresses from **10.2.1.1** to **10.2.1.32** for use in the L2TP VPN tunnel.
- The access group configuration allows the remote L2TP user to access only the LAN subnet **192.168.2.0/24**.

4.15.1 Configuring the Default_L2TPVPN IPSec VPN Rule (Server)

- 1 Go to the **VPN > IPSec VPN** screen which lists the VPN rules. Click the **Edit** icon of the **Default_L2TPVPN** entry.

| Add New Entry | | | | | | | |
|---------------|-------------------------------------|-----------------|------------------------|-----------------------|-----------------------|----------------------|--------|
| # | Enable | Name | Remote Gateway Address | Local Gateway Address | Remote Policy | Local Policy | Modify |
| 1 | <input checked="" type="checkbox"/> | Default_L2TPVPN | Dynamic | Any | N/A | N/A | |
| 2 | <input checked="" type="checkbox"/> | vpn1 | 22.23.24.25 | 0.0.0.0 | 172.23.9.0 / 255.2... | 192.168.1.0 / 255... | |
| 3 | <input checked="" type="checkbox"/> | vpn2 | 22.23.24.25 | 0.0.0.0 | 172.23.9.0 / 255.2... | 192.160.1.0 / 255... | |

- 2 Select the **Enable** checkbox.
- 3 Select **Pre-Shared Key** and configure a password. This example uses **1234567890**.
- 4 Click **Apply**.

General

Enable : ☒

Connection Name : Default_L2TPVPN

Nailed-up : ☐

NAT Traversal (NAT-T) : ☒

Application Scenario : Remote Access

My Address : Any

Authentication

☒ Pre-Shared Key : 1234567890

☐ Certificate :

Local ID Type : Any

Remote ID Type : Any

Phase 1

Apply Cancel

4.15.2 Configuring the L2TP VPN Setup (Server)

- 1 Go to the **VPN > L2TP VPN > Setup** screen and configure the following:
 - Select the **Enable** checkbox.
 - Set **Access Group 1** to **192.168.2.0/255.255.255.0**.
 - Select **DNS** as **User Defined** and enter a DNS server address. The DNS server address in this example is **8.8.8.8**.
 - Click **Apply**.

L2TP Setup

Enable : ☒

VPN Connection : Default_L2TPVPN (WAN Interface : any)

IP Address Pool : 10.2.1.1 - 10.2.1.32 (Subnet Mask : 255.255.255.0)

Access Group (Optional) :

Group 1 : IP Address: 192.168.2.0 Subnet Mask: 255.255.255.0

Group 2 : IP Address: Subnet Mask:

Note:

1. Maximum number of IP address is limited to 32.
2. Each L2TP connection will use two IP addresses from the IP Address Pool. Thus, the maximum concurrent L2TP connections will be limited to 16.
3. Modifying IP Address Pool and Access Group will disconnect all existing L2TP/IPSec VPN connections.
4. If no Access Group is configured, by default all LAN groups can be accessed.

Authentication Method : default

Keep Alive Timer : 60

DNS Server (Optional) : User Defined 8.8.8.8

WINS Server (Optional) :

Note:

1. Keep Alive Timer modification will not take effect until you restart L2TP/IPSec VPN.
2. DNS Server and WINS Server modification will be applied to new L2TP/IPSec VPN connections only.

Apply Cancel

4.15.3 Configuring L2TP VPN in Windows (Client)


The following sections cover how to configure L2TP on the remote user computers using Windows 7, . The example settings in these sections match the L2TP VPN configuration example in [Section on page 83](#).

4.15.3.1 Enabling IPSec Service in Windows


By default, a Windows computer should have IPSec service enabled. However, before you configure the client, it is suggested to make sure the computer is running the Microsoft IPSec service.

For Windows 7

- 1 Click the **Start** button and enter "services" in the text box. Then click **Services** under the **Programs** window.

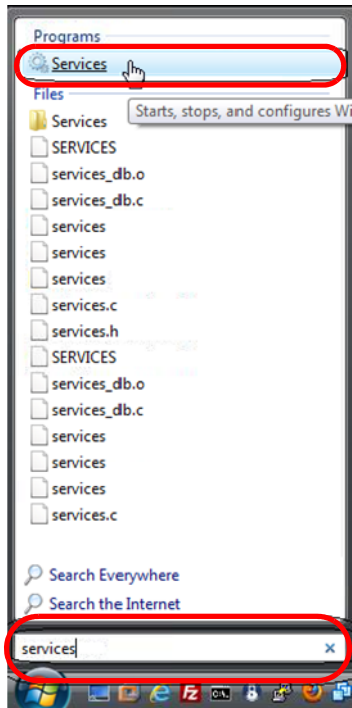


- 2 In the **Services** window, scroll down to find **IPsec Policy Agent**. Make sure the status is **Started**. If not, click **Start the service** in the left panel.

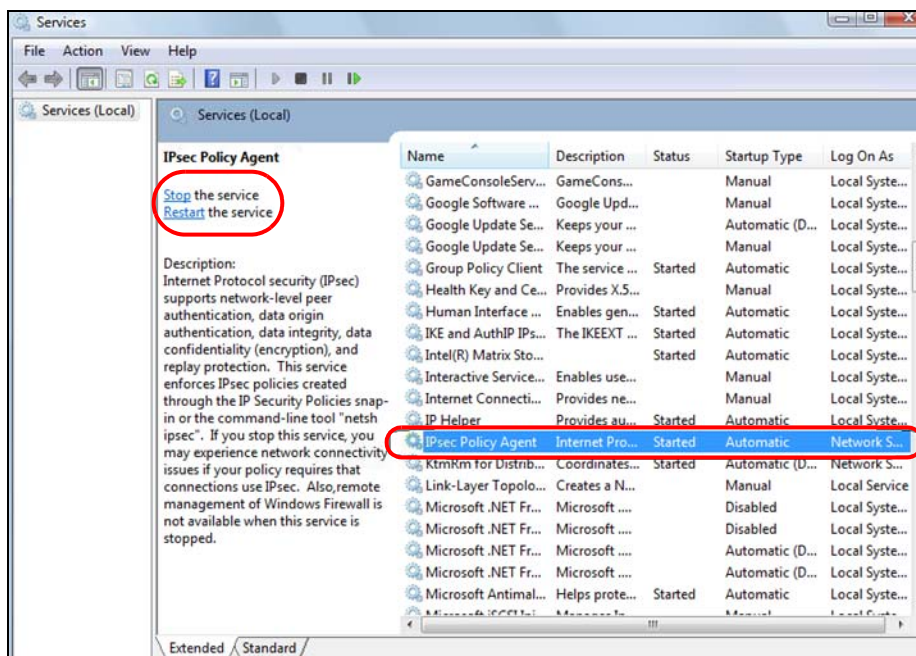


4.15.4 Configuring L2TP VPN on Windows 7

In Windows 7 do the following to establish an L2TP VPN connection.


- 1 Click **Start > Control Panel > Network and Internet**.

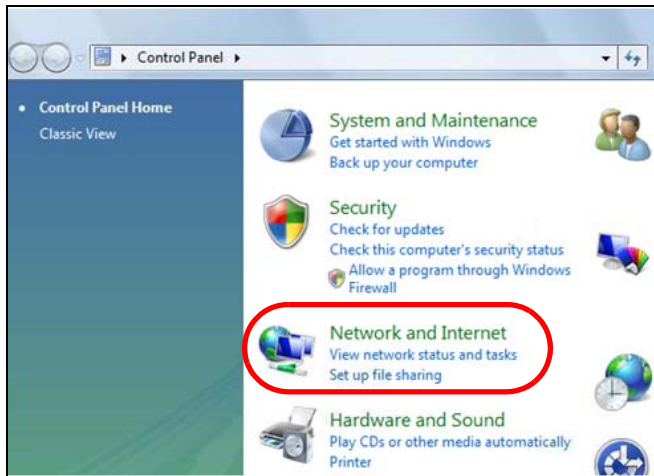

- 2 Click **Network and Sharing Center > Setup a new connection or network > Connect to a workplace**. Click **Next**.

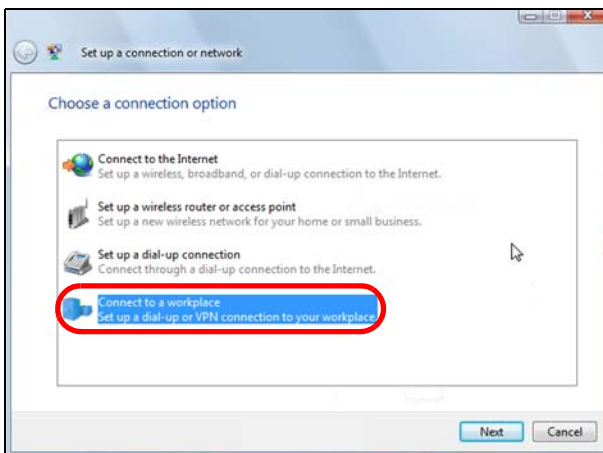


- 3 Select **No, create a new connection**. Click **Next**.

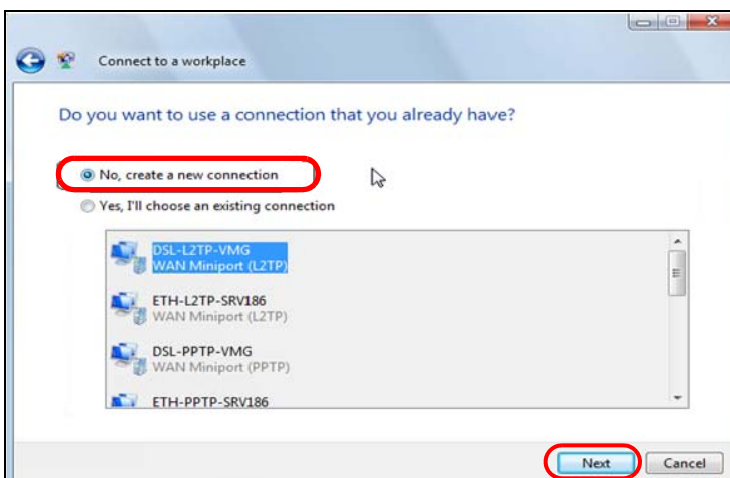


4 Select **Use my Internet connection (VPN)**.




5 Enter the domain name or WAN IP Address that you want to connect to (172.16.1.2 in this example) and give this connection a name. Select **Don't connect now; just set it up so I can connect later**. Click **Next**.

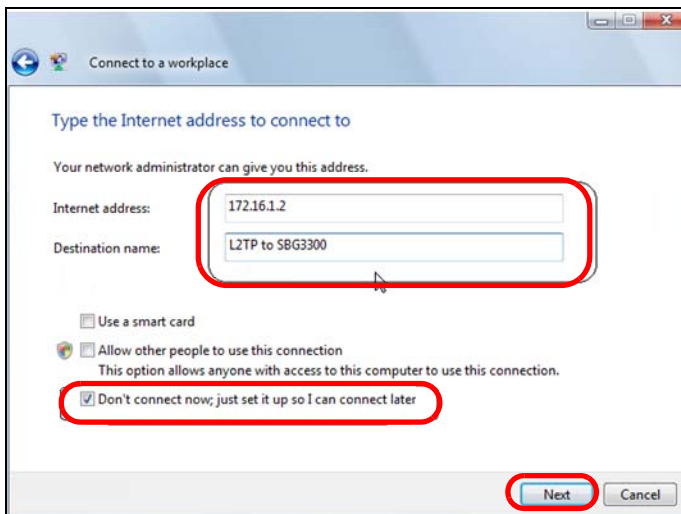


6 Click **Create**. Enter the user name and password later.

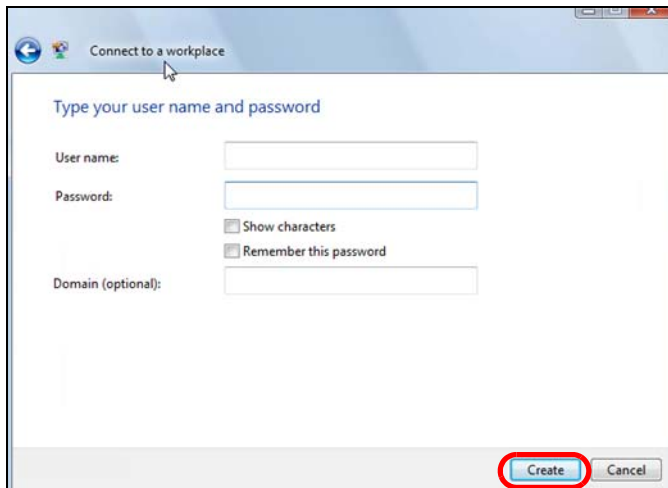


- 7 Click **Close**. Do not connect yet.

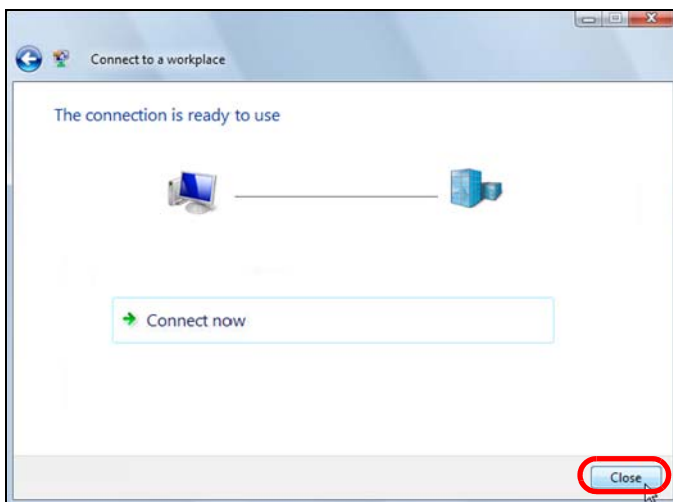


- 8 Click the **Network** icon in your system tray, then click **Open Network and Sharing Center**.

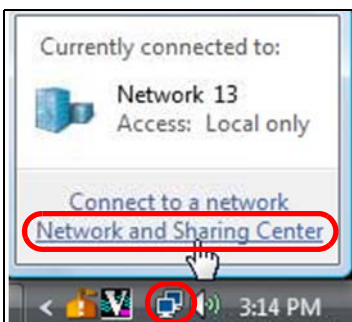

- 9 Click **Change adapter settings**.

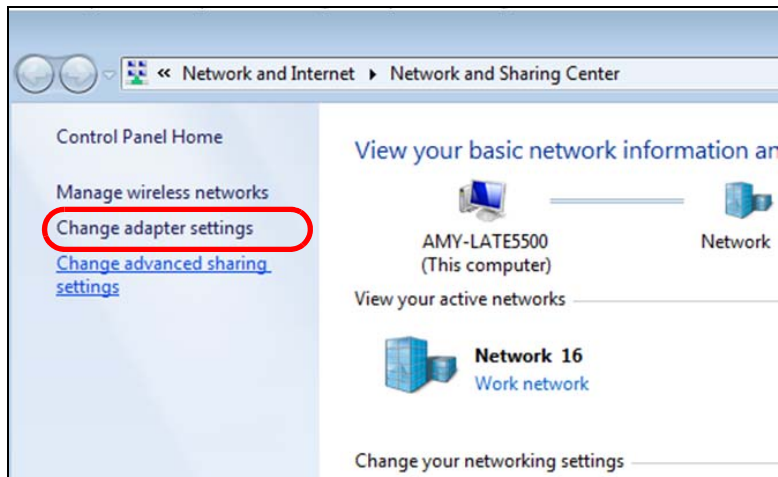


10 Double-click the new connection icon.

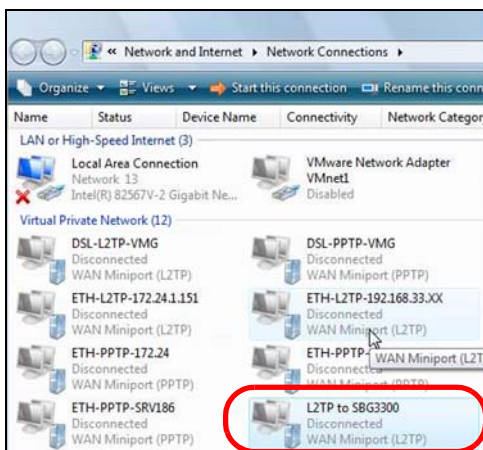


11 The connection screen appears. Click **Properties**.



- 12 The **Properties** window appears. Click **Security**.
- 13 Select **Layer 2 Tunneling Protocol with IPsec (L2TP/IPsec)** as the **Type of VPN**. Select the **Optional encryption (connect even if no encryption)** and the **Allow these protocols** radio button. Select **Microsoft CHAP Version 2 (MS-CHAP v2)** and clear all of other check boxes. Do not click **OK** yet.

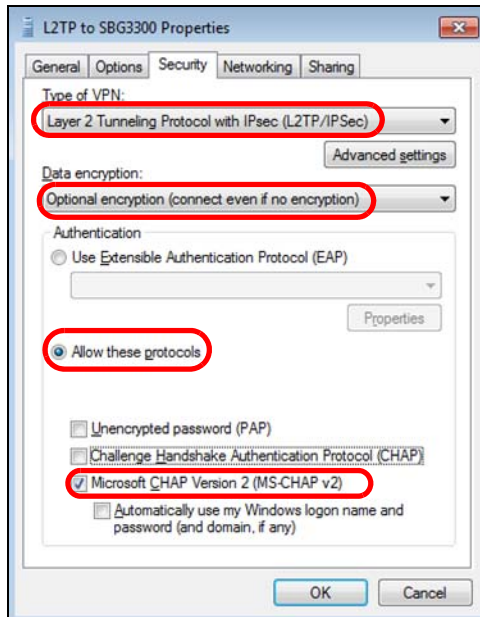

- 14 Click **Advanced settings**. Select the **Use preshared key for authentication** radio button. Enter the pre-shared key used in the IPsec configuration that the SBG3600-N Series is using for **Default_L2TPVPN** IPsec VPN rule. In this example, enter **1234567890**. Click **OK** to return to the **Connect** window.

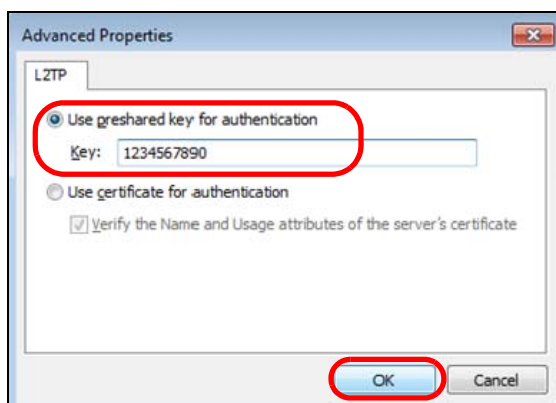


- 15 Enter the username and password of your user account configured on the SBG3600-N Series. Click **Connect**.


Note: The user account must have been configured in the **Maintenance > User Account** screen. Refer to [Chapter 34 on page 338](#).



- 16 A window appears while the username and password are verified. The connection is then established.
- 17 Click the **Network** icon in your system tray, then right click the L2TP connection and select **Status** to open the connection status screen.

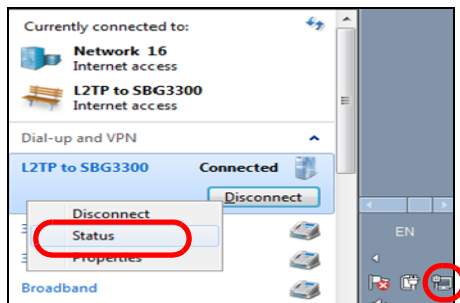


- 18 From the status screen, you can disconnect this connection. Or you can click **Details** to see the connection details. The address 10.2.1.2 and 10.2.1.12 are addresses allocated from the L2TP **IP Address Pool** you configured on the SBG3600-N Series (10.2.1.1 - 10.2.1.32).

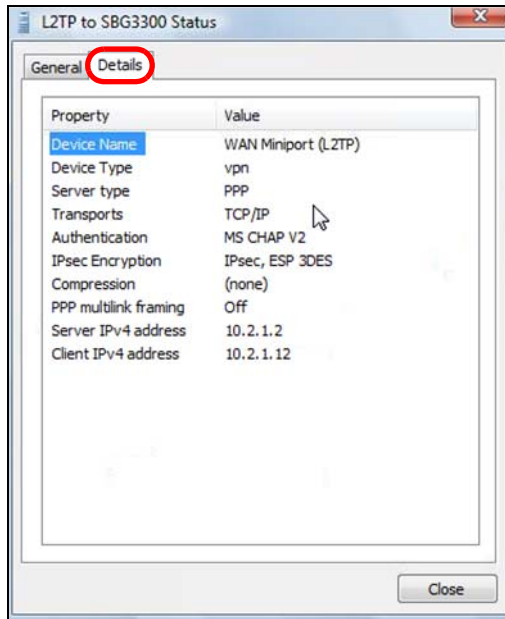


4.15.5 Configuring L2TP VPN on Android Devices (Client)


The following sections cover how to configure the built-in L2TP client in remote user's Android devices. Due to GUI differences among various Android devices, the figures may not exactly match what your Android device displays. The example settings in these sections match the L2TP VPN configuration example in [Section on page 83](#).

- 1 On your Android device, select **Home > Settings > More > VPN**.

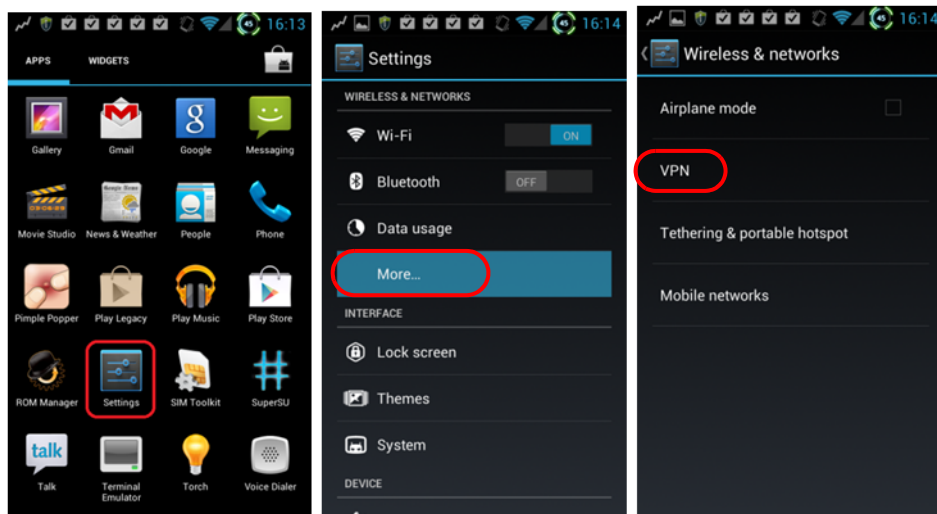


- 2 Select **Add VPN profile**.

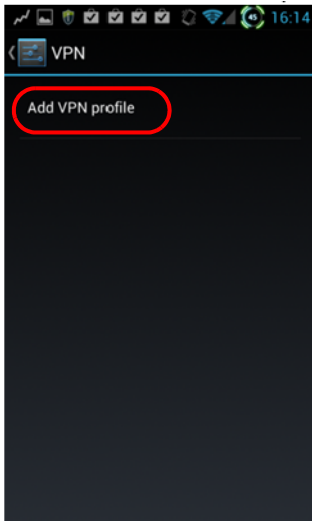

On some Android versions, you may have to tap the  button instead


3 The **Edit VPN profile** screen appears. Fill out the following fields.

- **Name:** Enter a name for your VPN configuration.
- **Type:** Select **L2TP/IPSec PSK**.
- **Server address:** This is the WAN IP address of the SBG3600-N Series, in this example, **172.16.1.2**
- **L2TP secret** and **IPSec identifier:** Not used.
- **IPSec pre-shared key:** This is your pre-shared key for your VPN connection, in this example, **1234567890**.

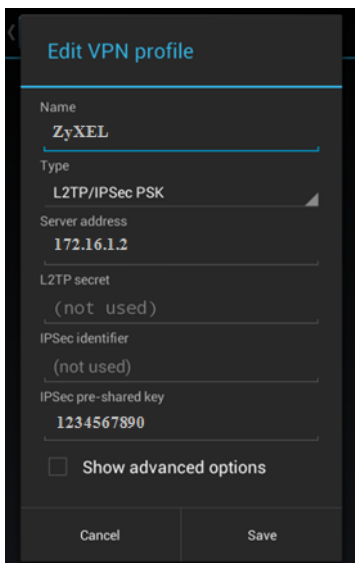

4 Save the configuration.


5 The saved configuration appears on the **VPN** screen. Click the VPN name to use the L2TP connection.

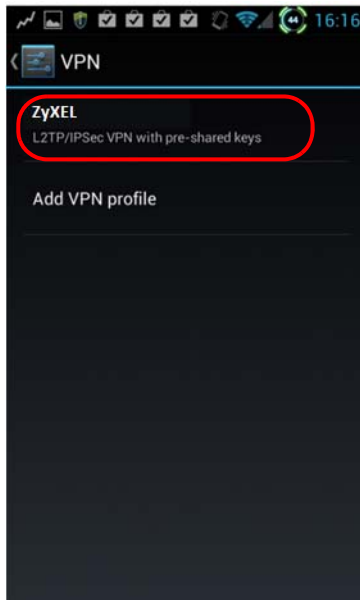

- 6 Enter the username and password of your user account configured on the SBG3600-N Series.

Note: The user account must have been configured in the **Maintenance > User Account** screen. Refer to [Chapter 34 on page 338](#).

- 7 You can see **Connected** when the L2TP VPN connection has been established. Click the connection name to get connection details. There you can also disconnect.

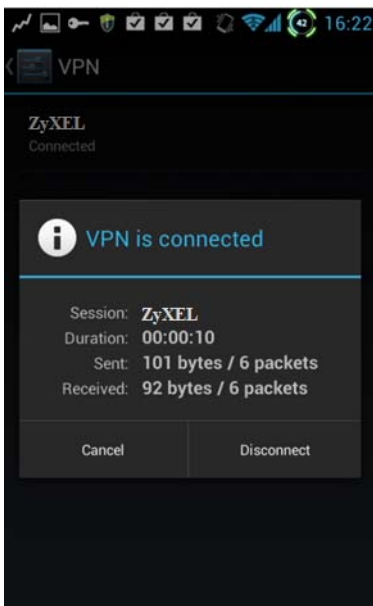

4.15.6 Configuring L2TP VPN in iOS Devices (Client)

The following sections cover how to configure the built-in L2TP client in iOS devices (iPhone, iPad, iPod Touch, etc). Due to GUI difference among various iOS devices, the figures may not match what

your iOS device displays. The example settings in these sections matches the L2TP VPN configuration example in [Section on page 83](#).

- 1 On your iOS device, select **Home** > **Settings** > **General** > **Network**.



- 2 Select **VPN** > **Add VPN Configuration....**



- 3 Select the **L2TP** tab. Enter the following fields.
 - **Description:** Enter a name for your VPN configuration.
 - **Server:** This is the WAN IP address of the SBG3600-N Series, in this example, **172.16.1.2**.
 - **Account:** This is the user account created on SBG3600-N Series for accessing the network via VPN.
 - **RSA SecurID:** Not used in this configuration.
 - **Password:** This is the password for account.
 - **Secret:** This is your pre-shared key for your VPN connection, in this example, **1234567890**.
 - **Send All Traffic:** This example uses the route-all configuration (**ON**).



- 4 Save the configuration.
- 5 The saved configuration appears on the **VPN** screen. Select it and then slide the VPN bar to the **ON** position. Your iOS device will begin L2TP connection.



PART II

Technical Reference

Status Screen


5.1 Overview

After you log into the Web Configurator, the **Status** screen appears. You can use the **Status** screen to look at the current status of the Device, system resources, and interfaces (LAN, WAN, and WLAN).

5.2 The Status Screen

Use this screen to view the status of the SBG3600-N Series. Click **Status** to open this screen.

Figure 17 Status Screen

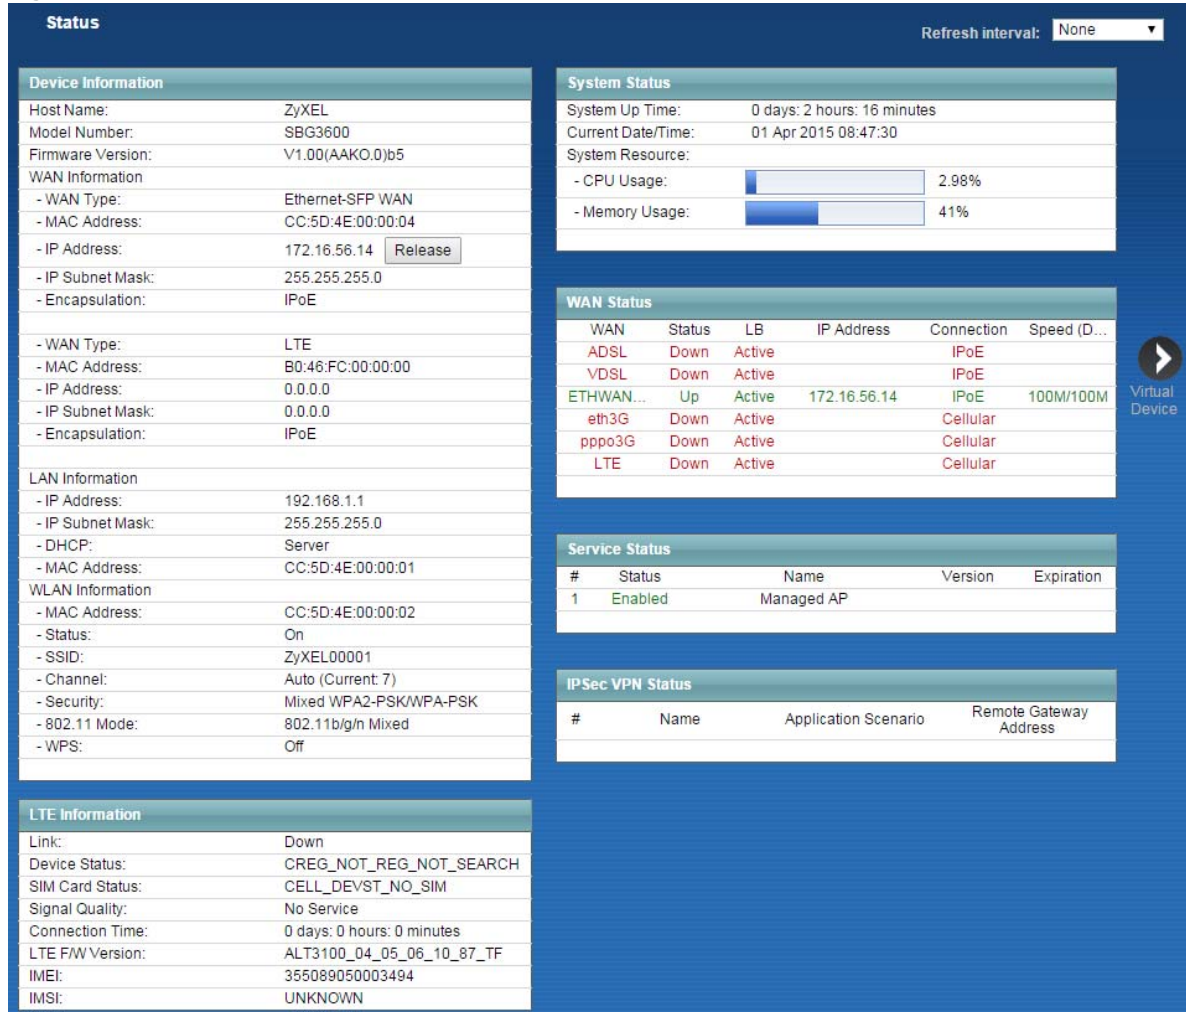

Each field is described in the following table.

Table 5 Status Screen

| LABEL | DESCRIPTION |
|--|---|
| Refresh Interval | Select how often you want the SBG3600-N Series to update this screen. |
| Device Information | |
| Host Name | This field displays the SBG3600-N Series system name. It is used for identification. |
| Model Number | This shows the model number of your SBG3600-N Series. |
| Firmware Version | This is the current version of the firmware inside the SBG3600-N Series. |
| WAN Information (These fields display when you have a WAN connection.) | |
| WAN Type | This field displays the current WAN connection type. |
| MAC Address | This shows the WAN Ethernet adapter MAC (Media Access Control) Address of your SBG3600-N Series. |
| IP Address | This field displays the current IP address of the SBG3600-N Series in the WAN. Click Release to release your IP address to 0.0.0.0. If you want to renew your IP address, click Renew . |
| IP Subnet Mask | This field displays the current subnet mask in the WAN. |

Table 5 Status Screen (continued)

| LABEL | DESCRIPTION |
|------------------|--|
| Encapsulation | This field displays the current encapsulation method. |
| LAN Information | |
| IP Address | This is the current IP address of the SBG3600-N Series in the LAN. |
| IP Subnet Mask | This is the current subnet mask in the LAN. |
| DHCP | <p>This field displays what DHCP services the SBG3600-N Series is providing to the LAN. Choices are:</p> <p>Server - The SBG3600-N Series is a DHCP server in the LAN. It assigns IP addresses to other computers in the LAN.</p> <p>Relay - The SBG3600-N Series acts as a surrogate DHCP server and relays DHCP requests and responses between the remote server and the clients.</p> <p>None - The SBG3600-N Series is not providing any DHCP services to the LAN.</p> |
| MAC Address | This shows the LAN Ethernet adapter MAC (Media Access Control) Address of your SBG3600-N Series. |
| WLAN Information | |
| MAC Address | This shows the wireless adapter MAC (Media Access Control) Address of your SBG3600-N Series. |
| Status | This displays whether WLAN is activated. |
| SSID | This is the descriptive name used to identify the SBG3600-N Series in a wireless LAN. |
| Channel | This is the channel number used by the SBG3600-N Series now. |
| Security | This displays the type of security mode the SBG3600-N Series is using in the wireless LAN. |
| 802.11 Mode | This displays the type of 802.11 mode the SBG3600-N Series is using in the wireless LAN. |
| WPS | This displays whether WPS is activated. |
| LTE Information | |
| Link | This displays whether the LTE connection is up or down. |
| Device Status | <p>This displays the status of the built-in LTE module or the LTE device attached to the SBG3600-N Series.</p> <p>CREG_NOT_REG_NOT_SEARCH: The LTE device didn't find any available LTE network.</p> <p>CREG_NOT_REG_DO_SEARCH: The LTE device is searching for an available LTE network.</p> <p>CREG_REGISTERED_HOME: The LTE device is registered and successfully connected to the LTE network.</p> |

Table 5 Status Screen (continued)

| LABEL | DESCRIPTION |
|-------------------|---|
| SIM Card Status | <p>This displays the status of the inserted SIM card.</p> <p>SIMCARD_STATUS_NO_SIMCARD: There is no SIM card inserted.</p> <p>SIMCARD_STATUS_NON_LTE_SIM_READY: PIN code authentication is disabled on the SIM card. Or the SIM card has PIN code authentication enabled, and you entered the correct PIN code. But the SIM card does not support 4G LTE.</p> <p>SIMCARD_STATUS_LTE_SIM_READY: PIN code authentication is disabled on the SIM card. Or the SIM card has PIN code authentication enabled, and you entered the correct PIN code.</p> <p>SIMCARD_STATUS_PIN_LOCKED: You entered the PIN code incorrectly three times, the SIM card has been blocked by your ISP and you cannot use the account to access the Internet. You will need to contact your ISP to get a PUK (PIN Unlock Key) code.</p> <p>SIMCARD_STATUS_PUK_LOCKED: You entered the PUK code incorrectly ten times, the SIM card has been blocked by your ISP and you cannot use the account to access the Internet.</p> |
| Signal Quality | This displays the current LTE signal quality (Excellent, Good, Fair, Poor, Very Poor or No Service). See Table 1 on page 23 for more information. |
| Connection Time | This displays how long the LTE connection has been up since it last connected. |
| LTE F/W Version | This displays the firmware version of the LTE module on the SBG3600-N Series. |
| IMEI | This displays the International Mobile Equipment Number (IMEI) which is the serial number of the built-in LTE module. IMEI is a unique 15-digit number used to identify a mobile device. |
| IMSI | This displays the International Mobile Subscriber Identity (IMSI) stored in the SIM (Subscriber Identity Module) card. The SIM card is installed in a mobile device and used for authenticating a customer to the carrier network. IMSI is a unique 15-digit number used to identify a user on a network. |
| System Status | |
| System Up Time | This field displays how long the SBG3600-N Series has been running since it last started up. The SBG3600-N Series starts up when you plug it in, when you restart it (Maintenance > Reboot), or when you reset it. |
| Current Date/Time | This field displays the current date and time in the SBG3600-N Series. You can change this in Maintenance > Time Setting . |
| System Resource | |
| CPU Usage | This field displays what percentage of the SBG3600-N Series's processing ability is currently used. When this percentage is close to 100%, the SBG3600-N Series is running at full load, and the throughput is not going to improve anymore. If you want some applications to have more throughput, you should turn off other applications (for example, using QoS; see Chapter 10 on page 194). |
| Memory Usage | This field displays what percentage of the SBG3600-N Series's memory is currently used. Usually, this percentage should not increase much. If memory usage does get close to 100%, the SBG3600-N Series is probably becoming unstable, and you should restart the device. See Section 43.2 on page 361 , or turn off the device (unplug the power) for a few seconds. |
| WAN Status | |
| WAN | This field displays the name of the WAN interface on the SBG3600-N Series. |
| Status | The field displays Up when the SBG3600-N Series is using the interface and Down when the SBG3600-N Series is |
| LB | The field displays whether the interface is in Active or Passive load-balancing mode. |
| IP Address | The field displays the IP address of the interface. |

Table 5 Status Screen (continued)

| LABEL | DESCRIPTION |
|------------------------|--|
| Connection | The field displays the connection type of the interface. |
| Speed (DL/UL) | The field displays the downstream/upstream transmission rate of the interface's connection. |
| Service Status | |
| # | This is the index number of the licensed service. |
| Status | This is the current status of the licensed service. |
| Name | This identifies the licensed service. |
| Version | This is the version number of the service. |
| Expiration | If the service license is valid, this shows when it will expire. n/a displays if the service license does not have a limited period of validity. This field is blank if the service is not licensed or has expired. |
| IPSec VPN Status | |
| # | This is the VPN policy index number. |
| Name | This field displays the identification name for the IPSec SA. |
| Application Scenario | This field displays the scenario type for the IPSec SA. |
| Remote Gateway Address | This field displays the remote gateway Address used in the SA. |


Broadband

6.1 Overview

This chapter discusses the SBG3600-N Series's **Broadband** screens. Use these screens to configure your SBG3600-N Series for Internet access.

A WAN (Wide Area Network) connection is an outside connection to another network or the Internet. It connects your private networks, such as a LAN (Local Area Network) and other networks, so that a computer in one location can communicate with computers in other locations.


Figure 18 LAN and WAN

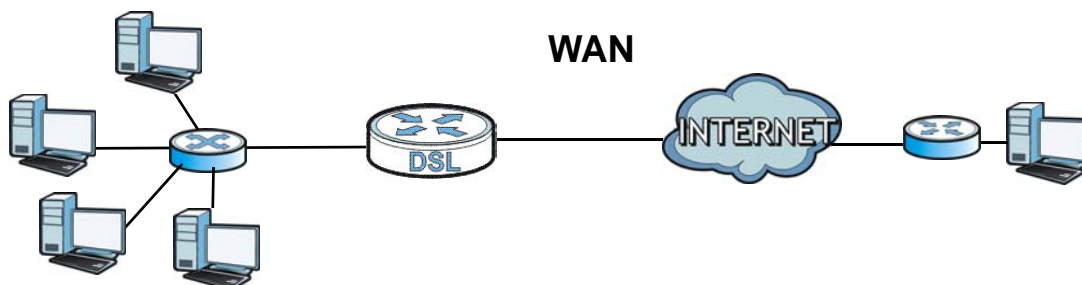

3G and 4G LTE standards for the sending and receiving of voice, video, and data in a mobile environment.

You can attach a 3G wireless adapter to the USB port or insert a 4G LTE SIM card and set the SBG3600-N Series to use this 3G/4G LTE connection as your WAN or a backup when the wired WAN connection fails.

Figure 19 3G/4G LTE WAN Connection

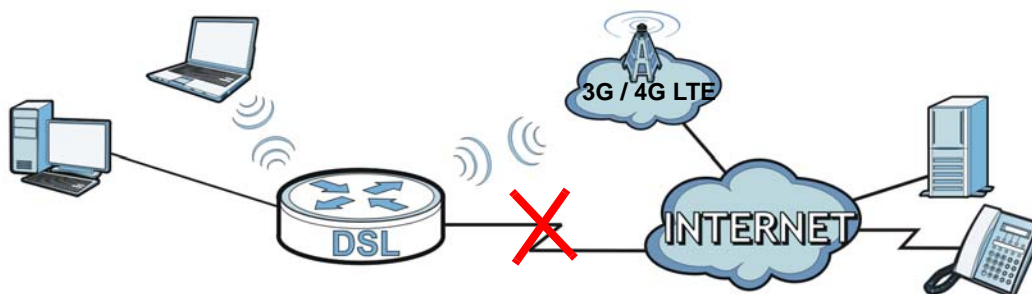

6.1.1 What You Can Do in this Chapter

- Use the **Broadband** screen to view, remove or add a WAN interface. You can also configure the WAN settings on the SBG3600-N Series for Internet access ([Section 6.2 on page 109](#)).

- Use the **3G WAN** screen to configure 3G WAN connection settings ([Section 6.3 on page 118](#)).
- Use the **LTE WAN** screen to configure 4G LTE WAN connection settings ([Section 6.4 on page 122](#)).
- Use the **Supported 3G/LTE USB Dongle** screen to view or add a new 3G USB dongle that is supported by the SBG3600-N Series ([Section 6.5 on page 124](#)).
- Use the **Advanced** screen to enable or disable PTM over ADSL, Annex M, and DSL PhyR functions ([Section 6.5.1 on page 125](#)).
- Use the **802.1x** screen to view and configure the IEEE 802.1x settings on the SBG3600-N Series ([Section 6.7 on page 127](#)).
- Use the **Multi-WAN** screen to configure the multiple WAN load-balancing and fail-over rules to distribute traffic among different interfaces ([Section 6.8 on page 128](#)).

Table 6 WAN Setup Overview

| LAYER-2 INTERFACE | | INTERNET CONNECTION | | |
|--------------------|---------------|---------------------|---------------|---|
| CONNECTION | DSL LINK TYPE | MODE | ENCAPSULATION | CONNECTION SETTINGS |
| ADSL/VDSL over PTM | N/A | Routing | PPPoE | PPP information, IPv4/IPv6 IP address, routing feature, DNS server, VLAN, QoS, and MTU |
| | | | IPoE | IPv4/IPv6 IP address, routing feature, DNS server, VLAN, QoS, and MTU |
| | | Bridge | N/A | VLAN and QoS |
| ADSL over ATM | EoA | Routing | PPPoE/PPPoA | ATM PCV configuration, PPP information, IPv4/IPv6 IP address, routing feature, DNS server, VLAN, QoS, and MTU |
| | | | IPoE/IPoA | ATM PCV configuration, IPv4/IPv6 IP address, routing feature, DNS server, VLAN, QoS, and MTU |
| | | Bridge | N/A | ATM PCV configuration, and QoS |
| GbE | N/A | Routing | IPoE/PPPoE | PPP information, IPv4/IPv6 IP address, routing feature, DNS server, VLAN, QoS, and MTU |
| | | Bridge | N/A | VLAN and QoS |
| 3G | N/A | Nailed Up | PPP/IPoE | Dial string, APN (Access Point Name), IP address, DNS server |
| | | On Demand | PPP/IPoE | Dial string, APN, Maximum idle time out, DNS server, IP address |
| 4G LTE | N/A | Routing | IPoE | APN |

6.1.2 What You Need to Know

The following terms and concepts may help as you read this chapter.

Encapsulation Method

Encapsulation is used to include data from an upper layer protocol into a lower layer protocol. To set up a WAN connection to the Internet, you need to use the same encapsulation method used by your ISP (Internet Service Provider). If your ISP offers a dial-up Internet connection using PPPoE (PPP

over Ethernet), they should also provide a username and password (and service name) for user authentication.

WAN IP Address

The WAN IP address is an IP address for the SBG3600-N Series, which makes it accessible from an outside network. It is used by the SBG3600-N Series to communicate with other devices in other networks. It can be static (fixed) or dynamically assigned by the ISP each time the SBG3600-N Series tries to access the Internet.

If your ISP assigns you a static WAN IP address, they should also assign you the subnet mask and DNS server IP address(es).

ATM

Asynchronous Transfer Mode (ATM) is a WAN networking technology that provides high-speed data transfer. ATM uses fixed-size packets of information called cells. With ATM, a high QoS (Quality of Service) can be guaranteed. ATM uses a connection-oriented model and establishes a virtual circuit (VC) between Finding Out More

PTM

Packet Transfer Mode (PTM) is packet-oriented and supported by the VDSL2 standard. In PTM, packets are encapsulated directly in the High-level Data Link Control (HDLC) frames. It is designed to provide a low-overhead, transparent way of transporting packets over DSL links, as an alternative to ATM.

3G

3G (Third Generation) is a digital, packet-switched wireless technology. Bandwidth usage is optimized as multiple users share the same channel and bandwidth is only allocated to users when they send data. It allows fast transfer of voice and non-voice data and provides broadband Internet access to mobile devices.

4G

4G is the fourth generation of the mobile telecommunications technology and a successor of 3G. Both the WiMAX and Long Term Evolution (LTE) standards are the 4G candidate systems. 4G only supports all-IP-based packet-switched telephony services and is required to offer gigabit speed access.

IPv6 Introduction

IPv6 (Internet Protocol version 6), is designed to enhance IP address size and features. The increase in IPv6 address size to 128 bits (from the 32-bit IPv4 address) allows up to 3.4×10^{38} IP addresses. The SBG3600-N Series can use IPv4/IPv6 dual stack to connect to IPv4 and IPv6 networks, and supports IPv6 rapid deployment (6RD).

IPv6 Addressing

The 128-bit IPv6 address is written as eight 16-bit hexadecimal blocks separated by colons (:). This is an example IPv6 address `2001:0db8:1a2b:0015:0000:0000:1a2f:0000`.

IPv6 addresses can be abbreviated in two ways:

- Leading zeros in a block can be omitted. So
`2001:0db8:1a2b:0015:0000:0000:1a2f:0000` can be written as
`2001:db8:1a2b:15:0:0:1a2f:0`.
- Any number of consecutive blocks of zeros can be replaced by a double colon. A double colon can only appear once in an IPv6 address. So
`2001:0db8:0000:0000:1a2f:0000:0000:0015` can be written as
`2001:0db8::1a2f:0000:0000:0015`, `2001:0db8:0000:0000:1a2f::0015`,
`2001:db8::1a2f:0:0:15` or `2001:db8:0:0:1a2f::15`.

IPv6 Prefix and Prefix Length

Similar to an IPv4 subnet mask, IPv6 uses an address prefix to represent the network address. An IPv6 prefix length specifies how many most significant bits (start from the left) in the address compose the network address. The prefix length is written as "/x" where x is a number. For example,

```
2001:db8:1a2b:15::1a2f:0/32
```

means that the first 32 bits (`2001:db8`) is the subnet prefix.


IPv6 Subnet Masking

Both an IPv6 address and IPv6 subnet mask compose of 128-bit binary digits, which are divided into eight 16-bit blocks and written in hexadecimal notation. Hexadecimal uses four bits for each character (1 ~ 10, A ~ F). Each block's 16 bits are then represented by four hexadecimal characters. For example, `FFFF:FFFF:FFFF:FFFF:FC00:0000:0000:0000`.

IPv6 Rapid Deployment

Use IPv6 Rapid Deployment (6rd) when the local network uses IPv6 and the ISP has an IPv4 network. When the SBG3600-N Series has an IPv4 WAN address and you set **IPv6/IPv4 Mode** to **IPv4 Only**, you can enable 6rd to encapsulate IPv6 packets in IPv4 packets to cross the ISP's IPv4 network.


The SBG3600-N Series generates a global IPv6 prefix from its IPv4 WAN address and tunnels IPv6 traffic to the ISP's Border Relay router (BR in the figure) to connect to the native IPv6 Internet. The local network can also use IPv4 services. The SBG3600-N Series uses its configured IPv4 WAN IP to route IPv4 traffic to the IPv4 Internet.

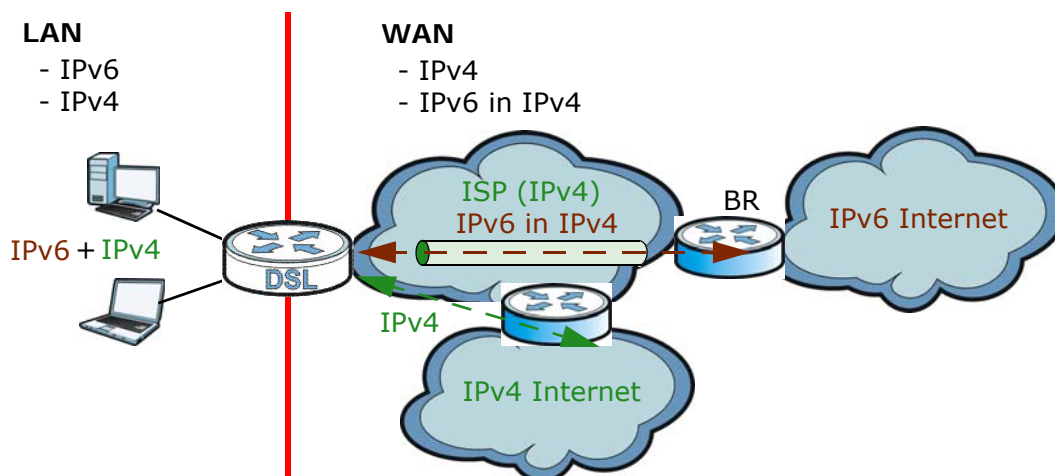Figure 20 IPv6 Rapid Deployment

Dual Stack Lite

Use Dual Stack Lite when local network computers use IPv4 and the ISP has an IPv6 network. When the SBG3600-N Series has an IPv6 WAN address and you set **IPv6/IPv4 Mode** to **IPv6 Only**, you can enable Dual Stack Lite to use IPv4 computers and services.

The SBG3600-N Series tunnels IPv4 packets inside IPv6 encapsulation packets to the ISP's Address Family Transition Router (AFTR in the graphic) to connect to the IPv4 Internet. The local network can also use IPv6 services. The SBG3600-N Series uses its configured IPv6 WAN IP to route IPv6 traffic to the IPv6 Internet.

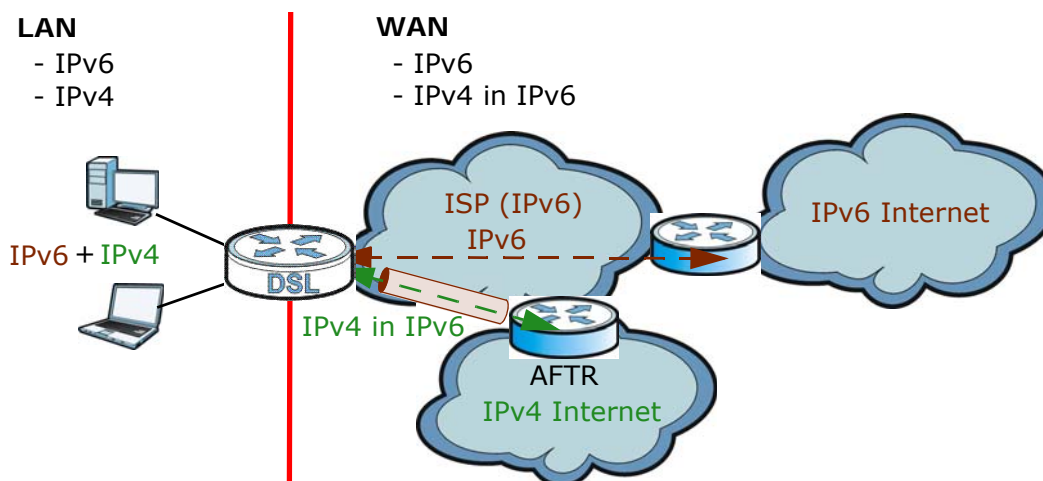Figure 21 Dual Stack Lite







6.1.3 Before You Begin

You need to know your Internet access settings such as encapsulation and WAN IP address. Get this information from your ISP.

6.2 The Broadband Screen

Use this screen to change your SBG3600-N Series's Internet access settings. Click **Network Setting > Broadband** from the menu. The summary table shows you the configured WAN services (connections) on the SBG3600-N Series.

Figure 22 Network Setting > Broadband

| Add new WAN Interface | | | | | | | | | | | | |
|-----------------------|--------|----------|---------|---------------|--------|--------|------------|-----|-----------------|------|-----------|---|
| # | Name | Type | Mode | Encapsulation | 802.1p | 802.1q | IGMP Proxy | NAT | Default Gateway | IPv6 | MLD Proxy | Modify |
| 1 | ADSL | ATM | Routing | IPoE | N/A | N/A | Y | Y | Y | N | N |   |
| 2 | VDSL | PTM | Routing | IPoE | N/A | N/A | Y | Y | Y | N | N |   |
| 3 | ETHWAN | Ethernet | Routing | IPoE | N/A | N/A | Y | Y | Y | N | N |   |

The following table describes the labels in this screen.

Table 7 Network Setting > Broadband

| LABEL | DESCRIPTION |
|-----------------------|--|
| Add new WAN Interface | Click this button to create a new connection. |
| # | This is the index number of the entry. |
| Name | This is the service name of the connection. |
| Type | This shows whether it is an ATM, PTM, or Ethernet connection. |
| Mode | This shows whether the connection is in routing or bridge mode. |
| Encapsulation | This is the method of encapsulation used by this connection. |
| 802.1p | This indicates the 802.1p priority level assigned to traffic sent through this connection. This displays N/A when there is no priority level assigned. |
| 802.1q | This indicates the VLAN ID number assigned to traffic sent through this connection. This displays N/A when there is no VLAN ID number assigned. |
| IGMP Proxy | This shows whether the SBG3600-N Series act as an IGMP proxy on this connection. |
| NAT | This shows whether NAT is activated or not for this connection. |
| Default Gateway | This shows whether the SBG3600-N Series use the WAN interface of this connection as the system default gateway. |
| IPv6 | This shows whether IPv6 is activated or not for this connection. IPv6 is not available when the connection uses the bridging service. |
| MLD Proxy | This shows whether Multicast Listener Discovery (MLD) is activated or not for this connection. MLD is not available when the connection uses the bridging service. |
| Modify | Click the Edit icon to configure the WAN connection. Click the Delete icon to remove the WAN connection. |

6.2.1 Add/Edit Internet Connection

Click **Add new WAN Interface** in the **Broadband** screen or the **Edit** icon next to an existing WAN interface to configure a WAN connection. The screen varies depending on the interface type, mode, encapsulation, and IPv6/IPv4 mode you select.

6.2.1.1 Routing Mode

Use **Routing** mode if your ISP give you one IP address only and you want multiple computers to share an Internet account.

The following example screen displays when you select the **ADSL over ATM** connection type, **Routing** mode, and **PPPoE** encapsulation. The screen varies when you select other interface type, encapsulation, and IPv6/IPv4 mode.

Figure 23 Network Setting > Broadband: Routing Mode (ADSL over ATM)

| | |
|--|--|
| General | |
| Active | <input type="checkbox"/> |
| Name : | <input type="text"/> |
| Type : | ADSL over ATM ▼ |
| Mode : | Routing ▼ |
| Encapsulation: | PPPoE ▼ |
| IPv6/IPv4 Mode: | IPv6/IPv4 DualStack ▼ |
| ATM PVC Configuration | |
| VPI [0-255]: | 0 |
| VCI [32-65535]: | 33 |
| DSL Link Type: | EoA ▼ |
| Encapsulation Mode: | LLC/SNAP-BRIDGING ▼ |
| Service Category: | UBR Without PCR ▼ |
| PPP Information | |
| PPP User Name : | <input type="text"/> |
| PPP Password : | <input type="text"/> |
| PPP Auto Connect : | <input checked="" type="checkbox"/> |
| IDLE Timeout (minutes): | 5 |
| PPPoE Service Name : | <input type="text"/> |
| PPPoE Passthrough : | <input type="checkbox"/> |
| IP Address | |
| <input checked="" type="radio"/> Obtain an IP Address Automatically | |
| <input type="radio"/> Static IP Address | |
| IP Address : | 0.0.0.0 |
| Subnet Mask : | 0.0.0.0 |
| Gateway IP address : | 0.0.0.0 |
| Routing Feature | |
| NAT Enable : | <input type="checkbox"/> |
| IGMP Proxy Enable : | <input type="checkbox"/> |
| Apply as Default Gateway : | <input type="checkbox"/> |
| DNS server | |
| DNS : | <input checked="" type="radio"/> Dynamic <input type="radio"/> Static |
| DNS Server 1 : | <input type="text"/> |
| DNS Server 2 : | <input type="text"/> |
| IPv6 Address | |
| IPv6 Address: | <input type="radio"/> Automatic <input checked="" type="radio"/> Static <input type="radio"/> None |
| WAN IPv6 Address : | <input type="text"/> |
| Prefix Length : | <input type="text"/> |
| Next Hop : | <input type="text"/> |
| IPv6 Routing Feature | |
| MLD Proxy Enable : | <input type="checkbox"/> |
| Apply as Default Gateway : | <input type="checkbox"/> |
| IPv6 DNS Server : | |
| IPv6 DNS : | <input checked="" type="radio"/> Dynamic <input type="radio"/> Static |
| IPv6 DNS Server 1 : | <input type="text"/> |
| IPv6 DNS Server 2 : | <input type="text"/> |
| QoS | |
| Egress Traffic Rate Limit : | <input type="text"/> (kbps) |
| MTU | |
| MTU Size : | 1492 MTU [68-1492] |
| <input type="button" value="Apply"/> <input type="button" value="Cancel"/> | |

The following table describes the labels in this screen.

Table 8 Network Setting > Broadband: Routing Mode

| LABEL | DESCRIPTION |
|---|--|
| General | |
| Active | Select this to activate the WAN configuration settings. |
| Name | Specify a descriptive name for this connection. |
| Type | <p>Select whether it is ADSL/VDSL over PTM, ADSL over ATM, or Ethernet connection.</p> <ul style="list-style-type: none"> • ADSL/VDSL over PTM: The SBG3600-N Series uses the VDSL technology for data transmission over the DSL port. • ADSL over ATM: The SBG3600-N Series uses the ADSL technology for data transmission over the DSL port. • Ethernet: The SBG3600-N Series transmits data over the Ethernet WAN port. Select this if you have a DSL router or modem in your network already. |
| Mode | Select Routing if your ISP give you one IP address only and you want multiple computers to share an Internet account. |
| Encapsulation | <p>Select the method of encapsulation used by your ISP from the drop-down list box. This option is available only when you select Routing in the Mode field.</p> <ul style="list-style-type: none"> • PPP over Ethernet (PPPoE): PPPoE (Point to Point Protocol over Ethernet) provides access control and billing functionality in a manner similar to dial-up services using PPP. Select this if you have a username and password for Internet access. • IP over Ethernet (IPoE): In this type of Internet connection, IP packets are routed between the Ethernet interface and the WAN interface and then formatted so that they can be understood in a bridged environment. • PPP over ATM (PPPoA): PPPoA allows just one PPPoA connection over a PVC. • IP over ATM (IPoA): IPoA allows just one RFC 1483 routing connection over a PVC. <p>If your connection type is ADSL/VDSL over PTM or Ethernet, the choices are PPPoE and IPoE.</p> <p>If your connection type is ADSL over ATM, the choices are PPPoE, PPPoA, IPoE and IPoA.</p> |
| IPv6/IPv4 Mode | <p>Select IPv4 Only if you want the Device to run IPv4 only.</p> <p>Select IPv6/IPv4 DualStack to allow the Device to run IPv4 and IPv6 at the same time.</p> <p>Select IPv6 Only if you want the Device to run IPv6 only.</p> |
| ATM PVC Configuration (These fields appear when the Type is set to ADSL over ATM .) | |
| VPI | The valid range for the VPI is 0 to 255. Enter the VPI assigned to you. |
| VCI | The valid range for the VCI is 32 to 65535 (0 to 31 is reserved for local management of ATM traffic). Enter the VCI assigned to you. |
| DSL Link Type | <p>This field is not editable. The selection depends on the setting in the Encapsulation field.</p> <p>EoA (Ethernet over ATM) uses an Ethernet header in the packet, so that you can have multiple services/connections over one PVC. You can set each connection to have its own MAC address or all connections share one MAC address but use different VLAN IDs for different services. EoA supports ENET ENCAP (IPoE), PPPoE and RFC1483/2684 bridging encapsulation methods.</p> <p>PPPoA (PPP over ATM) allows just one PPPoA connection over a PVC.</p> <p>IPoA (IP over ATM) allows just one RFC 1483 routing connection over a PVC.</p> |

Table 8 Network Setting > Broadband: Routing Mode (continued)

| LABEL | DESCRIPTION |
|-----------------------|--|
| Encapsulation Mode | <p>Select the method of multiplexing used by your ISP from the drop-down list box. Choices are:</p> <ul style="list-style-type: none"> • LLC/SNAP-BRIDGING: In LLC encapsulation, bridged PDUs are encapsulated by identifying the type of the bridged media in the SNAP header. This is available only when you select IPoE or PPPoE in the Select DSL Link Type field. • VC/MUX: In VC multiplexing, each protocol is carried on a single ATM virtual circuit (VC). To transport multiple protocols, the SBG3600-N Series needs separate VCs. There is a binding between a VC and the type of the network protocol carried on the VC. This reduces payload overhead since there is no need to carry protocol information in each Protocol Data Unit (PDU) payload. • LLC/ENCAPSULATION: More than one protocol can be carried over the same VC. This is available only when you select PPPoA in the Encapsulation field. • LLC/SNAP-ROUTING: In LLC encapsulation, an IEEE 802.2 Logical Link Control (LLC) header is prefixed to each routed PDU to identify the PDUs. The LLC header can be followed by an IEEE 802.1a SubNetwork Attachment Point (SNAP) header. This is available only when you select IPoA in the Encapsulation field. |
| Service Category | <p>Select UBR Without PCR or UBR With PCR for applications that are non-time sensitive, such as e-mail.</p> <p>Select CBR (Continuous Bit Rate) to specify fixed (always-on) bandwidth for voice or data traffic.</p> <p>Select Non Realtime VBR (non real-time Variable Bit Rate) for connections that do not require closely controlled delay and delay variation.</p> <p>Select Realtime VBR (real-time Variable Bit Rate) for applications with bursty connections that require closely controlled delay and delay variation.</p> |
| Peak Cell Rate | <p>Divide the DSL line rate (bps) by 424 (the size of an ATM cell) to find the Peak Cell Rate (PCR). This is the maximum rate at which the sender can send cells. Type the PCR here. This field is not available when you select UBR Without PCR.</p> |
| Sustainable Cell Rate | <p>The Sustainable Cell Rate (SCR) sets the average cell rate (long-term) that can be transmitted. Type the SCR, which must be less than the PCR. Note that system default is 0 cells/sec.</p> <p>This field is available only when you select Non Realtime VBR or Realtime VBR.</p> |
| Maximum Burst Size | <p>Maximum Burst Size (MBS) refers to the maximum number of cells that can be sent at the peak rate. Type the MBS, which is less than 65535.</p> <p>This field is available only when you select Non Realtime VBR or Realtime VBR.</p> |
| PPP Information | <p>This is available only when you select PPPoE or PPPoA in the Mode field.</p> |
| PPP User Name | <p>Enter the user name exactly as your ISP assigned. If assigned a name in the form user@domain where domain identifies a service name, then enter both components exactly as given.</p> |
| PPP Password | <p>Enter the password associated with the user name above.</p> |
| PPP Auto Connect | <p>Select this option if you do not want the connection to time out.</p> |
| IDLE Timeout | <p>This value specifies the time in minutes that elapses before the router automatically disconnects from the PPPoE server.</p> <p>This field is not configurable if you select PPP Auto Connect.</p> |
| PPPoE Service Name | <p>Enter the name of your PPPoE service here.</p> |

Table 8 Network Setting > Broadband: Routing Mode (continued)

| LABEL | DESCRIPTION |
|------------------------------------|---|
| PPPoE Passthrough | <p>This field is available when you select PPPoE encapsulation.</p> <p>In addition to the SBG3600-N Series's built-in PPPoE client, you can enable PPPoE pass through to allow up to ten hosts on the LAN to use PPPoE client software on their computers to connect to the ISP via the SBG3600-N Series. Each host can have a separate account and a public WAN IP address.</p> <p>PPPoE pass through is an alternative to NAT for application where NAT is not appropriate.</p> <p>Disable PPPoE pass through if you do not need to allow hosts on the LAN to use PPPoE client software on their computers to connect to the ISP.</p> |
| IP Address | This is available only when you select IPv4 Only or IPv6/IPv4 DualStack in the IPv6/IPv4 Mode field. |
| Obtain an IP Address Automatically | A static IP address is a fixed IP that your ISP gives you. A dynamic IP address is not fixed; the ISP assigns you a different one each time you connect to the Internet. Select this if you have a dynamic IP address. |
| Static IP Address | Select this option if the ISP assigned a fixed IP address. |
| IP Address | Enter the static IP address provided by your ISP. |
| Subnet Mask | Enter the subnet mask provided by your ISP. |
| Gateway IP Address | Enter the gateway IP address provided by your ISP. |
| Routing Feature | This is available only when you select IPv4 Only or IPv6/IPv4 DualStack in the IPv6/IPv4 Mode field. |
| NAT Enable | Select this option to activate NAT on this connection. |
| IGMP Proxy Enable | <p>Internet Group Multicast Protocol (IGMP) is a network-layer protocol used to establish membership in a Multicast group - it is not used to carry user data.</p> <p>Select this option to have the SBG3600-N Series act as an IGMP proxy on this connection. This allows the SBG3600-N Series to get subscribing information and maintain a joined member list for each multicast group. It can reduce multicast traffic significantly.</p> |
| Apply as Default Gateway | Select this option to have the SBG3600-N Series use the WAN interface of this connection as the system default gateway. |
| DNS Server | This is available only when you select IPv4 Only or IPv6/IPv4 DualStack in the IPv6/IPv4 Mode field. |
| DNS | <p>Select Dynamic if you want the SBG3600-N Series use the DNS server addresses assigned by your ISP.</p> <p>Select Static if you want the SBG3600-N Series use the DNS server addresses you configure manually.</p> |
| DNS Server 1 | Enter the first DNS server address assigned by the ISP. |
| DNS Server 2 | Enter the second DNS server address assigned by the ISP. |
| IPv6 Address | This is available only when you select IPv6/IPv4 DualStack or IPv6 Only in the IPv6/IPv4 Mode field. |
| IPv6 Address | <p>Select Automatic if you want to have the SBG3600-N Series use the IPv6 prefix from the connected router's Router Advertisement (RA) to generate an IPv6 address.</p> <p>Select the Get IPv6 Address From DHCPv6 Server checkbox if you want to obtain an IPv6 address from a DHCPv6 server. The IP address assigned by a DHCPv6 server has priority over the IP address automatically generated by the SBG3600-N Series using the IPv6 prefix from an RA. This option is available only when you choose to get your IPv6 address automatically.</p> <p>Select Static if you have a fixed IPv6 address assigned by your ISP.</p> |

Table 8 Network Setting > Broadband: Routing Mode (continued)

| LABEL | DESCRIPTION |
|----------------------------|--|
| WAN IPv6 Address | Enter the IPv6 address assigned by your ISP. |
| Prefix Length | Enter the address prefix length to specify how many most significant bits in an IPv6 address compose the network address. |
| Next Hop | Enter the IP address of the next-hop gateway. The gateway is a router or switch on the same segment as your SBG3600-N Series's interface(s). The gateway helps forward packets to their destinations. |
| IPv6 Routing Feature | You can enable IPv6 routing features in the following section. |
| MLD Proxy Enable | Select this checkbox to have the SBG3600-N Series act as an MLD proxy on this connection. This allows the SBG3600-N Series to get subscription information and maintain a joined member list for each multicast group. It can reduce multicast traffic significantly. |
| Apply as Default Gateway | Select this option to have the SBG3600-N Series use the WAN interface of this connection as the system default gateway. |
| IPv6 DNS Server | Configure the IPv6 DNS server in the following section. |
| IPv6 DNS | Select Dynamic to have the SBG3600-N Series get the IPv6 DNS server addresses from the ISP automatically. Select Static to have the SBG3600-N Series use the IPv6 DNS server addresses you configure manually. |
| IPv6 DNS Server 1 | Enter the first IPv6 DNS server address assigned by the ISP. |
| IPv6 DNS Server 2 | Enter the second IPv6 DNS server address assigned by the ISP. |
| Tunnel | The IPv6 rapid deployment fields display when you set the IPv6/IPv4 Mode field to IPv4 Only . See IPv6 Rapid Deployment on page 107 for more information. |
| Enable 6RD | Enable IPv6 rapid deployment to tunnel IPv6 traffic from the local network through the ISP's IPv4 network. |
| 6RD Type | Select Static if you have the IPv4 address of the relay server, otherwise select DHCP to have the SBG3600-N Series detect it automatically through DHCP. |
| 6RD Border Relay Server IP | When you set the 6RD Type to Static , specify the relay server IPv4 address. |
| 6RD IPv6 Prefix | Enter an IPv6 prefix for tunneling IPv6 traffic to the ISP's Border Relay router and connecting to the native IPv6 Internet. |
| Tunnel | The Dual Stack Lite fields display when you set the IPv6/IPv4 Mode field to IPv6 Only . Enable Dual Stack Lite to let local computers use IPv4 through an ISP's IPv6 network. See Dual Stack Lite on page 108 for more information. |
| Enable DS-Lite | Enable Dual Stack Lite to let local computers use IPv4 through an ISP's IPv6 network. |
| DS-Lite Relay Server IP | Specify the transition router's IPv6 address. |
| VLAN | These fields appear when the Type is set to ADSL/VDSL over PTM . |
| Active | Select this option to add the VLAN tag (specified below) to the outgoing traffic through this connection. |
| 802.1p | IEEE 802.1p defines up to 8 separate traffic types by inserting a tag into a MAC-layer frame that contains bits to define class of service. Select the IEEE 802.1p priority level (from 0 to 7) to add to traffic through this connection. The greater the number, the higher the priority level. |

Table 8 Network Setting > Broadband: Routing Mode (continued)

| LABEL | DESCRIPTION |
|------------|--|
| 802.1q | Type the VLAN ID number (from 1 to 4094) for traffic through this connection. |
| QoS | |
| Rate Limit | Enter the rate limit for the connection. This is the maximum transmission rate allowed for traffic on this connection. |
| MTU | |
| MTU Size | Enter the MTU (Maximum Transfer Unit) size for this traffic. |
| Apply | Click Apply to save your changes back to the SBG3600-N Series. |
| Cancel | Click Cancel to exit this screen without saving. |

6.2.1.2 Bridge Mode

Select **Bridge** mode if your ISP provides you more than one IP address and you want the connected computers to get individual IP address from ISP's DHCP server directly. The screen varies depending on the interface type you select.

If you select **ADSL/VDSL over PTM** or **Ethernet** as the interface type, the following screen appears.

Figure 24 Network Setting > Broadband: Bridge Mode (ADSL/VDSL over PTM or Ethernet)

The following table describes the fields in this screen.

Table 9 Network Setting > Broadband: Bridge Mode (ADSL/VDSL over PTM or Ethernet)

| LABEL | DESCRIPTION |
|---------|--|
| General | |
| Active | Select this to activate the WAN configuration settings. |
| Name | Enter a service name of the connection. |
| Type | Select ADSL/VDSL over PTM as the interface that you want to configure. The SBG3600-N Series uses the VDSL technology for data transmission over the DSL port. |

Table 9 Network Setting > Broadband: Bridge Mode (ADSL/VDSL over PTM or Ethernet)

| LABEL | DESCRIPTION |
|------------|--|
| Mode | Select Bridge when your ISP provides you more than one IP address and you want the connected computers to get individual IP address from ISP's DHCP server directly. If you select Bridge , you cannot use routing functions, such as QoS, Firewall, DHCP server and NAT on traffic from the selected LAN port(s). |
| VLAN | This section is available only when you select ADSL/VDSL over PTM in the Type field. |
| Active | Select this to add the VLAN Tag (specified below) to the outgoing traffic through this connection. |
| 802.1p | IEEE 802.1p defines up to 8 separate traffic types by inserting a tag into a MAC-layer frame that contains bits to define class of service. Select the IEEE 802.1p priority level (from 0 to 7) to add to traffic through this connection. The greater the number, the higher the priority level. |
| 802.1q | Type the VLAN ID number (from 0 to 4094) for traffic through this connection. |
| QoS | |
| Rate Limit | Enter the rate limit for the connection. This is the maximum transmission rate allowed for traffic on this connection. |
| Apply | Click Apply to save your changes. |
| Cancel | Click Cancel to exit this screen without saving. |

If you select **ADSL over ATM** as the interface type, the following screen appears.

Figure 25 Network Setting > Broadband: Bridge Mode (ADSL over ATM)

The following table describes the fields in this screen.

Table 10 Network Setting > Broadband: Bridge Mode (ADSL over ATM)

| LABEL | DESCRIPTION |
|---------|---|
| General | |
| Active | Select this to activate the WAN configuration settings. |

Table 10 Network Setting > Broadband: Bridge Mode (ADSL over ATM) (continued)

| LABEL | DESCRIPTION |
|---|---|
| Name | Enter a service name of the connection. |
| Type | Select ADSL over ATM as the interface for which you want to configure here. The SBG3600-N Series uses the ADSL technology for data transmission over the DSL port. |
| Mode | Select Bridge when your ISP provides you more than one IP address and you want the connected computers to get individual IP address from ISP's DHCP server directly. If you select Bridge , you cannot use routing functions, such as QoS, Firewall, DHCP server and NAT on traffic from the selected LAN port(s). |
| ATM PVC Configuration (These fields appear when the Type is set to ADSL over ATM .) | |
| VPI | The valid range for the VPI is 0 to 255. Enter the VPI assigned to you. |
| VCI | The valid range for the VCI is 32 to 65535 (0 to 31 is reserved for local management of ATM traffic). Enter the VCI assigned to you. |
| DSL Link Type | <p>This field is not editable. The selection depends on the setting in the Encapsulation field.</p> <p>EoA (Ethernet over ATM) uses an Ethernet header in the packet, so that you can have multiple services/connections over one PVC. You can set each connection to have its own MAC address or all connections share one MAC address but use different VLAN IDs for different services. EoA supports ENET ENCAP (IPoE), PPPoE and RFC1483/2684 bridging encapsulation methods.</p> <p>PPPoA (PPP over ATM) allows just one PPPoA connection over a PVC.</p> <p>IPoA (IP over ATM) allows just one RFC 1483 routing connection over a PVC.</p> |
| Encapsulation Mode | <p>Select the method of multiplexing used by your ISP from the drop-down list box. Choices are:</p> <ul style="list-style-type: none"> • LLC/SNAP-BRIDGING: In LCC encapsulation, bridged PDUs are encapsulated by identifying the type of the bridged media in the SNAP header. This is available only when you select IPoE or PPPoE in the Select DSL Link Type field. • VC/MUX: In VC multiplexing, each protocol is carried on a single ATM virtual circuit (VC). To transport multiple protocols, the SBG3600-N Series needs separate VCs. There is a binding between a VC and the type of the network protocol carried on the VC. This reduces payload overhead since there is no need to carry protocol information in each Protocol Data Unit (PDU) payload. • LLC/ENCAPSULATION: More than one protocol can be carried over the same VC. This is available only when you select PPPoA in the Encapsulation field. • LLC/SNAP-ROUTING: In LCC encapsulation, an IEEE 802.2 Logical Link Control (LLC) header is prefixed to each routed PDU to identify the PDUs. The LLC header can be followed by an IEEE 802.1a SubNetwork Attachment Point (SNAP) header. This is available only when you select IPoA in the Encapsulation field. |
| Service Category | <p>Select UBR Without PCR or UBR With PCR for applications that are non-time sensitive, such as e-mail.</p> <p>Select CBR (Continuous Bit Rate) to specify fixed (always-on) bandwidth for voice or data traffic.</p> <p>Select Non Realtime VBR (non real-time Variable Bit Rate) for connections that do not require closely controlled delay and delay variation.</p> <p>Select Realtime VBR (real-time Variable Bit Rate) for applications with bursty connections that require closely controlled delay and delay variation.</p> |
| Peak Cell Rate | Divide the DSL line rate (bps) by 424 (the size of an ATM cell) to find the Peak Cell Rate (PCR). This is the maximum rate at which the sender can send cells. Type the PCR here. This field is not available when you select UBR Without PCR . |
| Sustainable Cell Rate | <p>The Sustainable Cell Rate (SCR) sets the average cell rate (long-term) that can be transmitted. Type the SCR, which must be less than the PCR. Note that system default is 0 cells/sec.</p> <p>This field is available only when you select Non Realtime VBR or Realtime VBR.</p> |

Table 10 Network Setting > Broadband: Bridge Mode (ADSL over ATM) (continued)

| LABEL | DESCRIPTION |
|--------------------|--|
| Maximum Burst Size | Maximum Burst Size (MBS) refers to the maximum number of cells that can be sent at the peak rate. Type the MBS, which is less than 65535. This field is available only when you select Non Realtime VBR or Realtime VBR . |
| QoS | |
| Rate Limit | Enter the rate limit for the connection. This is the maximum transmission rate allowed for traffic on this connection. |
| Apply | Click Apply to save your changes. |
| Cancel | Click Cancel to exit this screen without saving. |

6.3 The 3G WAN Screen

Use this screen to configure your 3G settings. Click **Network Setting > Broadband > 3G WAN**.

Note: The actual data rate you obtain varies depending the 3G USB dongle you use, the signal strength to the service provider's base station, and so on.

Figure 26 Network Setting > Broadband > 3G WAN

3G Connection Settings

Card description : N/A

Username : (Optional)

Password : (Optional)

PIN : (Optional)(Only for unlock PIN next time)
(PIN remaining authentication times: N/A)

Dial string : *99#

APN : internet

Connection : Nailed UP

☒ Obtain an IP Address Automatically
☐ Use the following static IP address
 IP Address :

☒ Obtain DNS info dynamically
☐ Use the following static DNS IP address
 Primary DNS server :
 Secondary DNS server :

Note:
Entering the wrong PIN code 3 times will lock SIM card.

Budget Setup

Enable Budget Control ☐ Enable ☒ Disable

☐ Time Budget: hours per month
☐ Data Budget: Mbytes Download/Upload per month
☐ Data Budget: kPackets Download/Upload per month

Reset all budget counters on last day of per month

Actions before over budget:

☐ Enable % of time budget
☐ Enable % of data budget (Mbytes)
☐ Enable % of data budget (Packets)

Actions when over budget:

Current 3G connection keep

Actions:

☐ Enable Email Notification
 Mail Server:
 Over Budget Email Title:
 Send Notification to Email: false
 Interval: minute(s)

☐ Enable Log: Interval minute(s)

Note:
Budget Control is an approximate value.

The following table describes the labels in this screen.

Table 11 Network Setting > Broadband > 3G WAN

| LABEL | DESCRIPTION |
|---|---|
| 3G Connection Settings | |
| Card description | This field displays the manufacturer and model name of your 3G card if you inserted one in the SBG3600-N Series. Otherwise, it displays N/A . |
| Username | Type the user name (of up to 64 ASCII printable characters) given to you by your service provider. |
| Password | Type the password (of up to 64 ASCII printable characters) associated with the user name above. |
| PIN | <p>A PIN (Personal Identification Number) code is a key to a 3G card. Without the PIN code, you cannot use the 3G card.</p> <p>If your ISP enabled PIN code authentication, enter the 4-digit PIN code (0000 for example) provided by your ISP. If you enter the PIN code incorrectly, the 3G card may be blocked by your ISP and you cannot use the account to access the Internet.</p> <p>If your ISP disabled PIN code authentication, leave this field blank.</p> |
| Dial string | <p>Enter the phone number (dial string) used to dial up a connection to your service provider's base station. Your ISP should provide the phone number.</p> <p>For example, *99# is the dial string to establish a GPRS or 3G connection in Taiwan.</p> |
| APN | <p>Enter the APN (Access Point Name) provided by your service provider. Connections with different APNs may provide different services (such as Internet access or MMS (Multi-Media Messaging Service)) and charge method.</p> <p>You can enter up to 32 ASCII printable characters. Spaces are allowed.</p> |
| Connection | <p>Select Nailed UP if you do not want the connection to time out.</p> <p>Select on Demand if you do not want the connection up all the time and specify an idle time-out in the Max Idle Timeout field.</p> |
| Max Idle Timeout | This value specifies the time in minutes that elapses before the SBG3600-N Series automatically disconnects from the ISP. |
| Obtain an IP Address Automatically | Select this option If your ISP did not assign you a fixed IP address. |
| Use the following static IP address | Select this option If the ISP assigned a fixed IP address. |
| IP Address | Enter your WAN IP address in this field if you selected Use the following static IP address . |
| Obtain DNS info dynamically | Select this to have the SBG3600-N Series get the DNS server addresses from the ISP automatically. |
| Use the following static DNS IP address | Select this to have the SBG3600-N Series use the DNS server addresses you configure manually. |
| Primary DNS server | Enter the first DNS server address assigned by the ISP. |
| Secondary DNS server | Enter the second DNS server address assigned by the ISP. |
| Budget Setup | |
| Enable Budget Control | Click the radio buttons Enable to activate budget control or Disable to deactivate budget control. |

Table 11 Network Setting > Broadband > 3G WAN (continued)

| LABEL | DESCRIPTION |
|-------------------------------------|---|
| Time Budget | Click the check box Time Budget to set the number of hours that the user account is allowed per month. |
| Data Budget | Click the check box Data Budget to set the amount of data in Mbytes or kPackets that is allowed for transmission for the user account. Choose Upload or Download from the drop-down list to indicate the data stream direction. |
| Reset all budget counters on | You can choose Last or a Specific day of the month to reset all budget counters by choosing the options from the drop-down list. |
| Reset time and data budget counters | Click the Reset time and data budget counters button to reset the counters effective immediately. The below window will appear to prompt you for confirmation. Click Confirm for yes and Cancel for no. <div data-bbox="487 630 1128 955" data-label="Image"> </div> |
| Actions before over budget | |
| Enable | Click the Enable check box and type a number (1-99) in the % box to set the amount of data streams in time, Mbytes and Packets of the data budget. |
| Actions when over budget | |
| Current 3G connection | Choose Keep or Drop from the drop-down list to indicate whether to keep or drop the 3G connection when the data transmission is over the set budget. |
| Enable Email notification | Click the Enable Email Notification check box to activate email notification when the data transmission is over the set budget. |
| Mail Server | Click the mail server IP address from the drop-down list. You need to set the mail server before this step at Maintenance > Email Notification . |
| Over budget email title | Type in a string of characters (0-130) for the email title that will be sent when the 3G data transmission usage is over the set budget. |
| Send notification to email | Type in the email address that corresponds to the mail server you set in Maintenance > Email Notification . |
| Interval | Type a number (0-130 characters) for the frequency of the email notifications. |
| Enable Log | Click the Enable Log check box to have the SBG3600-N Series generate a log report when the 3G data transmission usage is over the set budget. Type a number (0-9999) in the Minutes field to indicate the frequency of the log generation. |
| Apply | Click Apply to save your changes back to the SBG3600-N Series. |
| Cancel | Click Cancel to return to the previous configuration. |

6.4 The LTE WAN Screen

Use this screen to configure your 4G LTE settings. Click **Network Setting > Broadband > LTE WAN**.

Note: The actual data rate you obtain varies depending the 4G LTE SIM card you use, the signal strength to the service provider's base station, and so on.

Figure 27 Network Setting > Broadband > LTE WAN

Connection Settings

PIN : (Optional)(Only for unlock PIN next time)
(PIN remaining authentication times:)

Note:
Entering the wrong PIN code 3 times will lock SIM card.

APN Settings

☒ Obtain APN automatically
☐ Use the following Access Point Name
APN :

Note:
Must insert SIMCARD before power on the device.
Any changes will take 10-15 seconds after apply.

Budget Setup

Enable Budget Control ☐ Enable ☒ Disable
☐ Time Budget: hours per month
☐ Data Budget: Mbytes Download/Upload per month
Reset all budget counters on last day of per month

Actions before over budget:
☐ Enable % of time budget
☐ Enable % of data budget (Mbytes)

Actions when over budget:
Current LTE connection keep

Actions:
☐ Enable Email Notification
Mail Server:
Over Budget Email Title:
Send Notification to Email: false
Interval: minute(s)
☐ Enable Log: Interval minute(s)

Note:
Budget Control is an approximate value.

The following table describes the labels in this screen.

Table 12 Network Setting > Broadband > LTE WAN

| LABEL | DESCRIPTION |
|-------------------------------------|--|
| Connection Settings | |
| PIN | A PIN (Personal Identification Number) code is a key to a SIM card. If PIN code authentication is enabled on the inserted SIM card, enter the 4-digit PIN code (0000 for example) provided by your ISP to unlock the SIM card. |
| PIN remaining authentication times | This shows how many times (3 by default) you can enter the PIN code. If you enter the PIN code incorrectly three times, the SIM card will be blocked by your ISP and you cannot use the account to access the Internet. You will need to contact your ISP to get a PUK code. |
| APN Settings | |
| Obtain APN automatically | Select this option to get the APN automatically from the service provider. |
| Use the following Access Point Name | Select this option to enter the APN manually. |
| APN | Enter the APN (Access Point Name) provided by your service provider. Connections with different APNs may provide different services (such as Internet access or MMS (Multi-Media Messaging Service)) and charge method. You can enter up to 32 ASCII printable characters. Spaces are allowed. |
| Budget Setup | |
| Enable Budget Control | Select Enable to set a monthly limit for the user account of the inserted SIM card. You must insert a SIM card before you enable budget control on the SBG3600-N Series. You can set a limit on the total traffic and/or call time. The SBG3600-N Series takes the actions you specified when a limit is exceeded during the month. |
| Time Budget | Select this check box and specify the amount of time (in hours) that the 4G LTE connection can be used within one month. Note: If you change the value after you configure and enable budget control, the SBG3600-N Series resets the statistics. |
| Data Budget | Select this check box and specify how much downstream and/or upstream data (in Mega bytes) can be transmitted via the 4G LTE connection within one month. Select Download to set a limit on the downstream traffic (from the ISP to the SBG3600-N Series). Select Upload to set a limit on the upstream traffic (from the SBG3600-N Series to the ISP). Select Download/Upload to set a limit on the total traffic in both directions. Note: If you change the value after you configure and enable budget control, the SBG3600-N Series resets the statistics. |
| Reset all budget counters on | Select Last or a Specific day of the month and enter the date on which the SBG3600-N Series resets the budget every month. If the date you selected is not available in a month, such as 30th or 31th, the SBG3600-N Series resets the budget on the last day of the month. |
| Reset time and data budget counters | Click this button to reset the time and data budgets immediately. The count starts over with the 4G LTE connection's full configured monthly time and data budgets. This does not affect the normal monthly budget restart. |
| Actions before over budget | |

Table 12 Network Setting > Broadband > LTE WAN (continued)

| LABEL | DESCRIPTION |
|------------------------------|---|
| Enable % of time/data budget | Select Enable and enter a number from 1 to 99 in the percentage fields to set the amount of data streams in time and Mbytes of the data budget. Note: You must enable budget control and select Time Budget and/or Data Budget before you can specify the percentage. |
| Actions when over budget | |
| Current LTE connection | Specify the actions the SBG3600-N Series takes when the time or data limit is exceeded. Select Keep to maintain the existing 4G/LTE connection or Drop to disconnect it. |
| Actions | |
| Enable Email Notification | Select this option to send an e-mail notification when the data transmission is over the set budget. |
| Mail Server | Select the mail server name or IP address from the drop-down list. You should have configured a mail server in the Maintenance > Email Notification screen. |
| Over Budget Email Title | Enter a string of characters (0-130) for the email title that will be sent when the 4G LTE data transmission usage is over the set budget. |
| Send Notification to Email | Enter the email address that corresponds to the mail server you select. |
| Interval | Type a number (0-130 characters) for the frequency of the email notifications. |
| Enable Log | Select this option to have the SBG3600-N Series generate a log report when the 4G LTE data transmission usage is over the set budget. Type a number (0-9999) in the Minutes field to indicate the frequency of the log generation. |
| Apply | Click Apply to save your changes back to the SBG3600-N Series. |
| Cancel | Click Cancel to return to the previous configuration. |

6.5 The Supported 3G/LTE USB Dongle Screen













Use the **Supported 3G/LTE USB Dongle** screen to view and manage the list of 3G USB dongles the SBG3600-N Series can use for a 3G WAN connection.

Note: To update the supported 3G USB dongle list, download the latest WWAN package from the ZyXEL website and upload it to the SBG3600-N Series using the **Maintenance > Firmware Upgrade** screen.

Note: When users insert a 3G USB dongle in the SBG3600-N Series, the SBG3600-N Series checks the USB dongle list and set the USB dongle to act as the correct cellular interface (ppp3G, eth3G or LTE) according to the device VID and PID.

Click **Network Setting > Broadband > Supported 3G/LTE USB Dongle** to display the following screen.

Figure 28 Network Setting > Broadband > Supported 3G/LTE USB Dongle
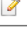
| Add New Entry | | | | | | |
|---------------|-----------------|----------------|------|-------|--|---|
| # | Default VID:PID | Target VID:PID | Port | Class | Message Content | Modify |
| 1 | 12d1 : 1526 | : | | | 555342431234567800000000000000011062000000100000000000000000000 |   |
| 2 | 12d1 : 14fe | : | | | 555342431234567800000000000000011062000000100000000000000000000 |   |
| 3 | 1c9e : 98ff | : | | | 555342431234567800000000080000606f504025270000000000000000000000 |   |
| 4 | 12d1 : 1446 | : | | | 555342431234567800000000000000011060000000000000000000000000000 |   |
| 5 | 12d1 : 1520 | : | | | 555342431234567800000000000000011060000000000000000000000000000 |   |
| 6 | 12d1 : 14c1 | : | | | 555342431234567800000000000000011060000000000000000000000000000 |   |

The following table describes the labels in this screen.

Table 13 Network Setting > Network Setting > Supported 3G/LTE USB Dongle

| LABEL | DESCRIPTION |
|-----------------|--|
| Add New Entry | Click this to go to a screen where you can manually enter information for a new 3G USB dongle and add it. See Section 6.5.1 on page 125 for more information |
| # | This is the number of the entry. |
| Default VID:PID | This is the default vendor ID and product ID of the 3G USB dongle. |
| Target VID:PID | This is the target vendor ID and product ID of the 3G USB dongle. |
| Port | This is the specified device port of the 3G USB dongle. |
| Class | This is the target device class of the 3G USB dongle. |
| Message Content | This shows the input message content of the 3G USB dongle. |
| Modify | Click the Edit icon to modify the information of a 3G USB dongle. Click the Delete icon to remove it. |

6.5.1 Add 3G Dongle Information

Click **Add New Entry** in the **Supported 3G/LTE USB Dongle** screen to show the following. Enter the information for a new 3G USB dongle to add it manually.

Figure 29 Add 3G Dongle Information

Add 3G dongle information

Default VID : (mandatory)
Default PID : (mandatory)
Target VID : (optional)
Target PID : (optional)
Port Number : (optional)
Class : (optional)
Message Content : (optional)

Apply Cancel

The following table describes the labels in this screen.

Table 14 Add 3G Dongle Information

| LABEL | DESCRIPTION |
|-----------------|---|
| Default VID | Enter the default vendor ID of the 3G USB dongle. |
| Default PID | Enter the default product ID of the 3G USB dongle. |
| Target VID | Enter the target vendor ID of the 3G USB dongle. |
| Target PID | Enter the target product ID of the 3G USB dongle. |
| Port Number | Enter the specified device port of the 3G USB dongle. |
| Class | Enter the target device class of the 3G USB dongle. |
| Message Content | Enter the input message content of the 3G USB dongle. |
| Apply | Click Apply to save your changes. |
| Cancel | Click Cancel to exit this screen without saving. |

6.6 The Advanced Screen

Use the **Advanced** screen to enable or disable DSL bonding, PTM over ADSL, Annex M, and DSL PhyR functions. The SBG3600-N Series supports the PhyR retransmission scheme. PhyR is a retransmission scheme designed to provide protection against noise on the DSL line. It improves voice, video and data transmission resilience by utilizing a retransmission buffer.

Click **Network Setting > Broadband > Advanced** to display the following screen.

Figure 30 Network Setting > Broadband > Advanced

DSL Bonding

State : ☐ Enable ☒ Disable

xDSL setup

PTM over ADSL : ☐ Enable ☒ Disable

Annex M : ☐ Enable ☒ Disable

PhyR US : ☐ Enable ☒ Disable

PhyR DS : ☒ Enable ☐ Disable

Apply Cancel

The following table describes the labels in this screen.

Table 15 Network Setting > Network Setting > Advanced

| LABEL | DESCRIPTION |
|---------------|--|
| State | Select Enable to activate DSL bonding state and use both DSL1 and DSL2 ports at the same time to increase data transfer rate. |
| PTM over ADSL | Select Enable to use PTM over ADSL. Since PTM has less overhead than ATM, some ISPs use PTM over ADSL for better performance. |
| Annex M | You can enable Annex M for the SBG3600-N Series to use double upstream mode to increase the maximum upstream transfer rate. |





Table 15 Network Setting > Network Setting > Advanced (continued)

| LABEL | DESCRIPTION |
|---------|--|
| PhyR US | Enable or disable PhyR US (upstream) for upstream transmission to the WAN. PhyR US should be enabled if data being transmitted upstream is sensitive to noise. However, enabling PhyR US can decrease the US line rate. Enabling or disabling PhyR will require the CPE to retrain. For PhyR to function, the DSLAM must also support PhyR and have it enabled. |
| PhyR DS | Enable or disable PhyR DS (downstream) for downstream transmission from the WAN. PhyR DS should be enabled if data being transmitted downstream is sensitive to noise. However, enabling PhyR DS can decrease the DS line rate. Enabling or disabling PhyR will require the CPE to retrain. For PhyR to function, the DSLAM must also support PhyR and have it enabled. |
| Apply | Click Apply to save your changes back to the SBG3600-N Series. |
| Cancel | Click Cancel to return to the previous configuration. |

6.7 The 802.1x Screen

You can view and configure the 802.1x authentication settings in the **802.1x** screen. Click **Network Setting > Broadband > 802.1x** to display the following screen.

Figure 31 Network Setting > Broadband > 802.1x

| 802.1x Authentication List. | | | | | | | | |
|-----------------------------|---|-----------|--------------|------------|---------------------|-------------|------------|---|
| # | Status | Interface | EAP Identity | EAP method | Bidirectional Au... | Certificate | Trusted CA | Modify |
| 1 |  | N/A | N/A | EAP-TLS | NO | N/A | N/A |  |
| 2 |  | N/A | N/A | EAP-TLS | NO | N/A | N/A |  |

Note:
You need to add the WAN interface first before you can modify the authentication rules.

The following table describes the labels in this screen.

Table 16 Network Setting > Network Setting > 802.1x

| LABEL | DESCRIPTION |
|------------------------------|--|
| # | This is the index number of the entry. |
| Status | This field displays whether the authentication is active or not. A yellow bulb signifies that this authentication is active. A gray bulb signifies that this authentication is not active. |
| Interface | This is the interface that uses the authentication. This displays N/A when there is no interface assigned. |
| EAP Identity | This shows the EAP identity of the authentication. This displays N/A when there is no EAP identity assigned. |
| EAP method | This shows the EAP method used in the authentication. This displays N/A when there is no EAP method assigned. |
| Bidirectional Authentication | This shows whether bidirectional authentication is allowed. |
| Certificate | This shows the certificate used for this authentication. This displays N/A when there is no certificate assigned. |
| Trusted CA | This shows the Trusted CA used for this authentication. This displays N/A when there is no Trusted CA assigned. |
| Apply | Click Apply to save your changes back to the SBG3600-N Series. |
| Cancel | Click Cancel to return to the previous configuration. |

6.7.1 Edit 802.1x Settings

Use this screen to edit a 802.1x authentication's settings. Click the **Edit** icon next to the rule you want to edit. The screen shown next appears.

Figure 32 802.1x: Add/Edit

The following table describes the labels in this screen.

Table 17 802.1x: Add/Edit











| LABEL | DESCRIPTION |
|-------------------------------------|---|
| Active | This field allows you to activate/deactivate the authentication. Select this to enable the authentication. Clear this to disable this authentication without having to delete the entry. |
| Interface | Select the interface that uses the authentication. |
| EAP Identity | Enter the EAP identity of the authentication. |
| EAP method | This is the EAP method used for this authentication. |
| Enable Bidirectional Authentication | Select this to allow bidirectional authentication. |
| Certificate | Select the certificate you want to assign to the authentication. You need to import the certificate in the Security > Certificates > Local Certificates screen. |
| Trusted CA | Select the Trusted CA you want to assign to the authentication. You need to import the certificate in the Security > Certificates > Trusted CA screen. |
| Apply | Click Apply to save your changes. |
| Cancel | Click Cancel to exit this screen without saving. |

6.8 The Multi-WAN Screen

Use the **Multi-WAN** screen to configure the multiple WAN load-balance and fail-over rules to distribute traffic among different interfaces. This helps to increase overall network throughput and reliability. Load-balancing divides traffic loads between multiple interfaces. This allows you to improve quality of service and maximize bandwidth utilization for multiple ISP links.

You can only configure one rule for each interface. Click **Network Setting > Broadband > Multi-WAN** to display the following screen.

Figure 33 Network Setting > Broadband > Multi-WAN

| Add New Entry | | | | |
|---------------|------------|---------|--------|---|
| # | Interface | Mode | Weight | Modify |
| 1 | VDSL | active | 1 |   |
| 2 | ADSL | active | 1 |   |
| 3 | ETHWAN-SFP | active | 2 |   |
| 4 | ppp3G | passive | 0 |   |
| 5 | eth3G | active | 1 |   |

The following table describes the labels in this screen.

Table 18 Network Setting > Network Setting > Multi-WAN

| LABEL | DESCRIPTION |
|---------------|---|
| Add New Entry | Click this button to add a previously removed multi-WAN rule entry. By default, adding new WAN interfaces to the system will generate a corresponding rule entry on this page in active mode with a weight of 1. Each interface can have only one rule. If the interface you want to configure already has a rule, you can edit it, or you can delete it before configuring a new rule. |
| # | This is the index number of the entry. |
| Interface | This is the interface that uses the rule. |
| Mode | This shows whether the rule is Active or Passive . |
| Weight | This shows the weight of the rule. |
| Modify | Click the Edit icon to configure the multi-WAN rule. Click the Delete icon to remove the multi-WAN rule. |

6.8.1 Add/Edit Multi-WAN

Click **Add New Entry** in the **Multi-WAN** screen or the **Edit** icon next to an existing multi-WAN rule to configure it.

Figure 34 Multi-WAN: Add/Edit

The following table describes the labels in this screen.

Table 19 Multi-WAN: Add/Edit

| LABEL | DESCRIPTION |
|-----------|---|
| Interface | If you are adding a new entry, select the interface that you want to configure this rule for. The list shows the interfaces that have not configured multi-WAN rules. If no interface is shown in the list, this means all interfaces already have existing rules. You must delete an old rule before adding a new one. |
| Mode | Select whether you want to configure the rule as Active or Passive . If you choose Active , the SBG3600-N Series always attempt to use this connection. If you choose Passive , the SBG3600-N Series only use this connection when all of the connections set to active are down. You can only set one interface to passive mode. Note: The mode of the 3G interface using PPP authentication (pppo3G) is locked to passive and cannot be changed to active. To set another interface to passive mode, the 3G interface must be deleted first. |
| Weight | The SBG3600-N Series uses the Weighted Round Robin (WRR) algorithm to send traffic through each WAN interface in turn. If you choose Active in the Mode field, specify the weight (1~10) for the interface. The weights of the different member interfaces form a ratio. This ratio determines how much traffic the SBG3600-N Series sends through each member interface. The higher an interface's weight is (relative to the weights of the interfaces), the more traffic the SBG3600-N Series sends through that interface. |
| Apply | Click Apply to save your changes. |
| Cancel | Click Cancel to exit this screen without saving. |











6.8.2 How to Configure Multi-WAN for Load-Balancing and Fail-Over

This example shows you how to configure multi-WAN for three WAN connections: an Ethernet WAN connection, an ADSL WAN connection, and a 3G (cellular) WAN connection. The available bandwidth for the Ethernet WAN connection is 3 Mbps, and the available bandwidth for the ADSL WAN connection is 1 Mbps.

As these two wired WAN connections have different bandwidths, you can set multi-WAN to send traffic over these WAN connections in a 3:1 ratio. Most 3G WAN connections charge the user for the amount of data sent, so you can set multi-WAN to send traffic over the 3G WAN connection only if all other WAN connections are unavailable.

6.8.2.1 Configuring Multi-WAN

- 1 Click **Network Setting > Broadband > Multi-WAN**. By default, all available WAN connections on the SBG3600-N Series are in active mode with a weight of 1, except for the 3G WAN connection which is set to passive mode.
- 2 Click the **Delete** icon next to the VDSL WAN connection as it is not needed in this example.
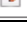
| Add New Entry | | | | |
|---------------|------------|---------|--------|---|
| # | Interface | Mode | Weight | Modify |
| 1 | VDSL | active | 1 |   |
| 2 | ADSL | active | 1 |   |
| 3 | ETHWAN-SFP | active | 2 |   |
| 4 | ppp3G | passive | 0 |   |
| 5 | eth3G | active | 1 |   |

- 3 Click the **Edit** icon next to the **ETHWAN-SFP** WAN connection. This brings up the edit window. Change the weight field to **3** and click the **Apply** button.

General

Interface : ETHWAN-SFP ▼

Mode : Active ▼

Weight : 3

Connectivity Check

Enable : ☒

Check Method : ICMP ▼

Period : 30

Timeout : 5









Tolerance : 5

Target Port : 1

Target IP : ☒ WAN default gateway ☐ User defined address

Apply Cancel

- 4 You have finished the configuration. When both the ETHWAN-SFP and ADSL connections are up, the SBG3600-N Series will send traffic over these two connections in a 3:1 ratio. When only one of these two connections are up, the SBG3600-N Series will use that connection exclusively. Only when both of these two connections are down will the SBG3600-N Series use the 3G connection.

| Add New Entry | | | | |
|---------------|------------|---------|--------|---|
| # | Interface | Mode | Weight | Modify |
| 1 | ADSL | active | 1 |   |
| 2 | ETHWAN-SFP | active | 3 |   |
| 3 | pppo3G | passive | 0 |   |
| 4 | eth3G | active | 1 |   |

6.8.2.2 What Can Go Wrong?

- There can only be one WAN connection configured as passive mode at a time. If there is already a WAN connection configured as passive mode, you will not be able to add or edit another WAN connection in passive mode until the aforementioned WAN connection is changed to active mode or deleted.
- The SBG3600-N Series will automatically add newly created WAN connections (from the **Network Setting > Broadband > Broadband** screen) to the multi-WAN configuration as active mode with a weight of 1. If you are creating a new WAN connection for other purposes (such as exclusive VPN use), you will need to delete that WAN connection from the multi-WAN configuration. Deleting a WAN connection from the multi-WAN screen does not delete the WAN connection from the **Broadband** page.
- A WAN connection can only be listed once in the multi-WAN configuration table. If you are trying to add a new entry but do not see the desired WAN connection in the **Interface** drop-down list, it is probably already in the multi-WAN configuration. The **Interface** drop-down list in the **Add/Edit** screen only includes WAN connections which currently exist on the SBG3600-N Series but are not currently configured in multi-WAN.

6.9 Technical Reference

The following section contains additional technical information about the SBG3600-N Series features described in this chapter.

Encapsulation

Be sure to use the encapsulation method required by your ISP. The SBG3600-N Series can work in bridge mode or routing mode. When the SBG3600-N Series is in routing mode, it supports the following methods.

IP over Ethernet

IP over Ethernet (IPoE) is an alternative to PPPoE. IP packets are being delivered across an Ethernet network, without using PPP encapsulation. They are routed between the Ethernet interface and the WAN interface and then formatted so that they can be understood in a bridged environment. For instance, it encapsulates routed Ethernet frames into bridged Ethernet cells.

PPP over ATM (PPPoA)

PPPoA stands for Point to Point Protocol over ATM Adaptation Layer 5 (AAL5). A PPPoA connection functions like a dial-up Internet connection. The SBG3600-N Series encapsulates the PPP session based on RFC1483 and sends it through an ATM PVC (Permanent Virtual Circuit) to the Internet

Service Provider's (ISP) DSLAM (digital access multiplexer). Please refer to RFC 2364 for more information on PPPoA. Refer to RFC 1661 for more information on PPP.

PPP over Ethernet (PPPoE)

Point-to-Point Protocol over Ethernet (PPPoE) provides access control and billing functionality in a manner similar to dial-up services using PPP. PPPoE is an IETF standard (RFC 2516) specifying how a personal computer (PC) interacts with a broadband modem (DSL, cable, wireless, etc.) connection.

For the service provider, PPPoE offers an access and authentication method that works with existing access control systems (for example RADIUS).

One of the benefits of PPPoE is the ability to let you access one of multiple network services, a function known as dynamic service selection. This enables the service provider to easily create and offer new IP services for individuals.

Operationally, PPPoE saves significant effort for both you and the ISP or carrier, as it requires no specific configuration of the broadband modem at the customer site.

By implementing PPPoE directly on the SBG3600-N Series (rather than individual computers), the computers on the LAN do not need PPPoE software installed, since the SBG3600-N Series does that part of the task. Furthermore, with NAT, all of the LANs' computers will have access.

ATM Traffic Classes

These are the basic ATM traffic classes defined by the ATM Forum Traffic Management 4.0 Specification.

Constant Bit Rate (CBR)

Constant Bit Rate (CBR) provides fixed bandwidth that is always available even if no data is being sent. CBR traffic is generally time-sensitive (doesn't tolerate delay). CBR is used for connections that continuously require a specific amount of bandwidth. A PCR is specified and if traffic exceeds this rate, cells may be dropped. Examples of connections that need CBR would be high-resolution video and voice.

Variable Bit Rate (VBR)

The Variable Bit Rate (VBR) ATM traffic class is used with bursty connections. Connections that use the Variable Bit Rate (VBR) traffic class can be grouped into real time (VBR-RT) or non-real time (VBR-nRT) connections.

The VBR-RT (real-time Variable Bit Rate) type is used with bursty connections that require closely controlled delay and delay variation. It also provides a fixed amount of bandwidth (a PCR is specified) but is only available when data is being sent. An example of an VBR-RT connection would be video conferencing. Video conferencing requires real-time data transfers and the bandwidth requirement varies in proportion to the video image's changing dynamics.

The VBR-nRT (non real-time Variable Bit Rate) type is used with bursty connections that do not require closely controlled delay and delay variation. It is commonly used for "bursty" traffic typical on LANs. PCR and MBS define the burst levels, SCR defines the minimum level. An example of an VBR-nRT connection would be non-time sensitive data file transfers.

Unspecified Bit Rate (UBR)

The Unspecified Bit Rate (UBR) ATM traffic class is for bursty data transfers. However, UBR doesn't guarantee any bandwidth and only delivers traffic when the network has spare bandwidth. An example application is background file transfer.

IP Address Assignment

A static IP is a fixed IP that your ISP gives you. A dynamic IP is not fixed; the ISP assigns you a different one each time. The Single User Account feature can be enabled or disabled if you have either a dynamic or static IP. However the encapsulation method assigned influences your choices for IP address and default gateway.

Introduction to VLANs

A Virtual Local Area Network (VLAN) allows a physical network to be partitioned into multiple logical networks. Devices on a logical network belong to one group. A device can belong to more than one group. With VLAN, a device cannot directly talk to or hear from devices that are not in the same group(s); the traffic must first go through a router.

In Multi-Tenant Unit (MTU) applications, VLAN is vital in providing isolation and security among the subscribers. When properly configured, VLAN prevents one subscriber from accessing the network resources of another on the same LAN, thus a user will not see the printers and hard disks of another user in the same building.

VLAN also increases network performance by limiting broadcasts to a smaller and more manageable logical broadcast domain. In traditional switched environments, all broadcast packets go to each and every individual port. With VLAN, all broadcasts are confined to a specific broadcast domain.

Introduction to IEEE 802.1Q Tagged VLAN

A tagged VLAN uses an explicit tag (VLAN ID) in the MAC header to identify the VLAN membership of a frame across bridges - they are not confined to the switch on which they were created. The VLANs can be created statically by hand or dynamically through GVRP. The VLAN ID associates a frame with a specific VLAN and provides the information that switches need to process the frame across the network. A tagged frame is four bytes longer than an untagged frame and contains two bytes of TPID (Tag Protocol Identifier), residing within the type/length field of the Ethernet frame) and two bytes of TCI (Tag Control Information), starts after the source address field of the Ethernet frame).

The CFI (Canonical Format Indicator) is a single-bit flag, always set to zero for Ethernet switches. If a frame received at an Ethernet port has a CFI set to 1, then that frame should not be forwarded as it is to an untagged port. The remaining twelve bits define the VLAN ID, giving a possible maximum number of 4,096 VLANs. Note that user priority and VLAN ID are independent of each other. A frame with VID (VLAN Identifier) of null (0) is called a priority frame, meaning that only the priority level is significant and the default VID of the ingress port is given as the VID of the frame. Of the 4096 possible VIDs, a VID of 0 is used to identify priority frames and value 4095 (FFF) is reserved, so the maximum possible VLAN configurations are 4,094.

| TPID | User Priority | CFI | VLAN ID |
|---------|---------------|-------|---------|
| 2 Bytes | 3 Bits | 1 Bit | 12 Bits |

Multicast

IP packets are transmitted in either one of two ways - Unicast (1 sender - 1 recipient) or Broadcast (1 sender - everybody on the network). Multicast delivers IP packets to a group of hosts on the network - not everybody and not just 1.

Internet Group Multicast Protocol (IGMP) is a network-layer protocol used to establish membership in a Multicast group - it is not used to carry user data. IGMP version 2 (RFC 2236) is an improvement over version 1 (RFC 1112) but IGMP version 1 is still in wide use. If you would like to read more detailed information about interoperability between IGMP version 2 and version 1, please see sections 4 and 5 of RFC 2236. The class D IP address is used to identify host groups and can be in the range 224.0.0.0 to 239.255.255.255. The address 224.0.0.0 is not assigned to any group and is used by IP multicast computers. The address 224.0.0.1 is used for query messages and is assigned to the permanent group of all IP hosts (including gateways). All hosts must join the 224.0.0.1 group in order to participate in IGMP. The address 224.0.0.2 is assigned to the multicast routers group.

At start up, the SBG3600-N Series queries all directly connected networks to gather group membership. After that, the SBG3600-N Series periodically updates this information.

DNS Server Address Assignment

Use Domain Name System (DNS) to map a domain name to its corresponding IP address and vice versa, for instance, the IP address of `www.zyxel.com` is `204.217.0.2`. The DNS server is extremely important because without it, you must know the IP address of a computer before you can access it.

The SBG3600-N Series can get the DNS server addresses in the following ways.

- 1 The ISP tells you the DNS server addresses, usually in the form of an information sheet, when you sign up. If your ISP gives you DNS server addresses, manually enter them in the DNS server fields.
- 2 If your ISP dynamically assigns the DNS server IP addresses (along with the SBG3600-N Series's WAN IP address), set the DNS server fields to get the DNS server address from the ISP.

IPv6 Addressing

The 128-bit IPv6 address is written as eight 16-bit hexadecimal blocks separated by colons (:). This is an example IPv6 address `2001:0db8:1a2b:0015:0000:0000:1a2f:0000`.

IPv6 addresses can be abbreviated in two ways:

- Leading zeros in a block can be omitted. So `2001:0db8:1a2b:0015:0000:0000:1a2f:0000` can be written as `2001:db8:1a2b:15:0:0:1a2f:0`.
- Any number of consecutive blocks of zeros can be replaced by a double colon. A double colon can only appear once in an IPv6 address. So `2001:0db8:0000:0000:1a2f:0000:0000:0015` can be written as `2001:0db8::1a2f:0000:0000:0015`, `2001:0db8:0000:0000:1a2f::0015`, `2001:db8::1a2f:0:0:15` or `2001:db8:0:0:1a2f::15`.

IPv6 Prefix and Prefix Length

Similar to an IPv4 subnet mask, IPv6 uses an address prefix to represent the network address. An IPv6 prefix length specifies how many most significant bits (start from the left) in the address

compose the network address. The prefix length is written as “/x” where x is a number. For example,

`2001:db8:1a2b:15::1a2f:0/32`

means that the first 32 bits (2001:db8) is the subnet prefix.

Wireless

7.1 Overview

This chapter describes the SBG3600-N Series's **Network Setting > Wireless** screens. Use these screens to set up your SBG3600-N Series's wireless connection.

7.1.1 What You Can Do in this Chapter

This section describes the SBG3600-N Series's **Wireless** screens. Use these screens to set up your SBG3600-N Series's wireless connection.

- Use the **General** screen to enable the Wireless LAN, enter the SSID and select the wireless security mode ([Section 7.2 on page 138](#)).
- Use the **More AP** screen to set up multiple wireless networks on your SBG3600-N Series ([Section 7.3 on page 145](#)).
- Use the **MAC Authentication** screen to allow or deny wireless clients based on their MAC addresses from connecting to the SBG3600-N Series ([Section 7.4 on page 148](#)).
- Use the **WPS** screen to enable or disable WPS, view or generate a security PIN (Personal Identification Number) ([Section 7.5 on page 149](#)).
- Use the **WMM** screen to enable Wi-Fi MultiMedia (WMM) to ensure quality of service in wireless networks for multimedia applications ([Section 7.6 on page 150](#)).
- Use the **Others** screen to configure wireless advanced features, such as the RTS/CTS Threshold ([Section 7.7 on page 151](#)).
- Use the **Channel Status** screen to scan wireless LAN channel noises and view the results ([Section 7.8 on page 153](#)).
- Use the **Scheduling** screen to set the times your wireless LAN is turned on and off ([Section 7.8 on page 153](#)).

7.1.2 What You Need to Know

Wireless Basics

“Wireless” is essentially radio communication. In the same way that walkie-talkie radios send and receive information over the airwaves, wireless networking devices exchange information with one another. A wireless networking device is just like a radio that lets your computer exchange information with radios attached to other computers. Like walkie-talkies, most wireless networking devices operate at radio frequency bands that are open to the public and do not require a license to use. However, wireless networking is different from that of most traditional radio communications in that there a number of wireless networking standards available with different methods of data encryption.

Finding Out More

See [Section 7.10 on page 155](#) for advanced technical information on wireless networks.

7.2 The General Screen

Use this screen to enable the Wireless LAN, enter the SSID and select the wireless security mode.

Note: If you are configuring the SBG3600-N Series from a computer connected to the wireless LAN and you change the SBG3600-N Series’s SSID, channel or security settings, you will lose your wireless connection when you press **Apply** to confirm. You must then change the wireless settings of your computer to match the SBG3600-N Series’s new settings.

Click **Network Setting** > **Wireless** to open the **General** screen.

Figure 35 Network Setting > Wireless > General

Wireless Network Setup

Wireless ☐ Enable ☒ Disable (settings are invalid when disabled)

Disable/Enable wifi button ☒ Enable ☐ Disable

Band: 2.4GHz ▼

Channel: Auto ▼ Current: 1 [more...](#)

Wireless Network Settings

Wireless Network Name(SSID): ZyxEL5F5B4

Max clients: 32

☐ Hide SSID

☐ Enhanced Multicast Forwarding

Max. Upstream Bandwidth: Kbps

Max. Downstream Bandwidth: Kbps

Notes:

1. Max. Upstream Bandwidth: This field allows user to configure the maximum bandwidth of this SSID to WAN.
2. Max. Downstream Bandwidth: This field allows user to configure the maximum bandwidth of WAN to this SSID.
3. If Max. Upstream/Downstream Bandwidth is empty, the CPE sets the value automatically.

Security Level

No Security Basic **More Secure (Recommended)**

Security Mode: WPA2-PSK ▼

☒ Generate password automatically

Enter 8-63 characters (a-z, A-Z, 0-9 and special characters), other characters are not allowed.

Password: BEB5388CF95AB2935277 [more...](#)

[Apply](#) [Cancel](#)

The following table describes the general wireless LAN labels in this screen.

Table 20 Network Setting > Wireless > General

| LABEL | DESCRIPTION |
|------------------------|---|
| Wireless Network Setup | |
| Wireless | You can Enable or Disable the wireless LAN in this field. |
| Band | This shows the wireless band which this radio profile is using. 2.4GHz is the frequency used by IEEE 802.11b/g/n wireless clients. |
| Channel | Set the channel depending on your particular region. Select a channel or use Auto to have the SBG3600-N Series automatically determine a channel to use. If you are having problems with wireless interference, changing the channel may help. Try to use a channel that is as many channels away from any channels used by neighboring APs as possible. The channel number which the SBG3600-N Series is currently using then displays next to this field. |
| more.../less | Click more... to show more information. Click less to hide them. |

Table 20 Network Setting > Wireless > General (continued)

| LABEL | DESCRIPTION |
|-------------------------------|--|
| Bandwidth | <p>Select whether the SBG3600-N Series uses a wireless channel width of 20MHz or 40MHz.</p> <p>A standard 20MHz channel offers transfer speeds of up to 150Mbps whereas a 40MHz channel uses two standard channels and offers speeds of up to 300 Mbps.</p> <p>40MHz (channel bonding or dual channel) bonds two adjacent radio channels to increase throughput. The wireless clients must also support 40 MHz. It is often better to use the 20 MHz setting in a location where the environment hinders the wireless signal.</p> <p>Select 20MHz if you want to lessen radio interference with other wireless devices in your neighborhood or the wireless clients do not support channel bonding.</p> |
| Control Sideband | <p>This is available for some regions when you select a specific channel and set the Bandwidth field to 40MHz. Set whether the control channel (set in the Channel field) should be in the Lower or Upper range of channel bands.</p> |
| Passphrase Type | <p>If you set security for the wireless LAN and have the SBG3600-N Series generate a password, the setting in this field determines how the SBG3600-N Series generates the password.</p> <p>Select None to set the SBG3600-N Series's password generation to not be based on a passphrase.</p> <p>Select Fixed to use a 16 character passphrase for generating a password.</p> <p>Select Variable to use a 16 to 63 character passphrase for generating a password.</p> |
| Passphrase Key | <p>For a fixed type passphrase enter 16 alphanumeric characters (0-9, A-Z, with no spaces). It must contain both letters and numbers and is case-sensitive.</p> <p>For a variable type passphrase enter 16 to 63 alphanumeric characters (0-9, A-Z, with no spaces). It must contain both letters and numbers and is case-sensitive.</p> |
| Wireless Network Settings | |
| Wireless Network Name (SSID) | <p>The SSID (Service Set IDentity) identifies the service set with which a wireless device is associated. Wireless devices associating to the access point (AP) must have the same SSID.</p> <p>Enter a descriptive name (up to 32 English keyboard characters) for the wireless LAN.</p> |
| Hide SSID | <p>Select this check box to hide the SSID in the outgoing beacon frame so a station cannot obtain the SSID through scanning using a site survey tool.</p> |
| Client Isolation | <p>Select this to keep the wireless clients in this SSID from communicating with each other through the SBG3600-N Series.</p> |
| MBSSID/LAN Isolation | <p>Select this to keep the wireless clients in this SSID from communicating with clients in other SSIDs or wired LAN devices through the SBG3600-N Series.</p> <p>Select both Client Isolation and MBSSID/LAN Isolation to allow this SSID's wireless clients to only connect to the Internet through the SBG3600-N Series.</p> |
| Enhanced Multicast Forwarding | <p>Select this check box to allow the SBG3600-N Series to convert wireless multicast traffic into wireless unicast traffic.</p> |
| BSSID | <p>This shows the MAC address of the wireless interface on the SBG3600-N Series when wireless LAN is enabled.</p> |
| Maximum Bandwidth | <p>Specify the maximum rate for wireless traffic in kilobits per second (Kbps).</p> |
| Security Level | |


Table 20 Network Setting > Wireless > General (continued)

| LABEL | DESCRIPTION |
|---------------|--|
| Security Mode | Select Basic (WEP) or More Secure (WPA(2)-PSK, WPA(2)) to add security on this wireless network. The wireless clients which want to associate to this network must have same wireless security settings as the SBG3600-N Series. When you select to use a security, additional options appears in this screen. Or you can select No Security to allow any client to associate this network without any data encryption or authentication. See the following sections for more details about this field. |
| Apply | Click Apply to save your changes. |
| Cancel | Click Cancel to restore your previously saved settings. |

7.2.1 No Security

Select **No Security** to allow wireless stations to communicate with the access points without any data encryption or authentication.

Note: If you do not enable any wireless security on your SBG3600-N Series, your network is accessible to any wireless networking device that is within range.

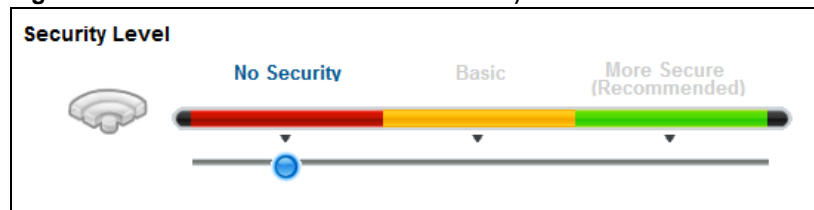Figure 36 Wireless > General: No Security

The following table describes the labels in this screen.

Table 21 Wireless > General: No Security

| LABEL | DESCRIPTION |
|----------------|--|
| Security Level | Choose No Security to allow all wireless connections without data encryption or authentication. |

7.2.2 Basic (WEP Encryption)

WEP encryption scrambles the data transmitted between the wireless stations and the access points (AP) to keep network communications private. Both the wireless stations and the access points must use the same WEP key.

Note: WEP is extremely insecure. Its encryption can be broken by an attacker, using widely-available software. It is strongly recommended that you use a more effective security mechanism. Use the strongest security mechanism that all the wireless devices in your network support. For example, use WPA-PSK or WPA2-PSK if all your wireless devices support it, or use WPA or WPA2 if your wireless devices support it and you have a RADIUS server. If your wireless devices support nothing stronger than WEP, use the highest encryption level available.

Your SBG3600-N Series allows you to configure up to four 64-bit or 128-bit WEP keys but only one key can be enabled at any one time.

In order to configure and enable WEP encryption, click **Network Setting > Wireless** to display the **General** screen, then select **Basic** as the security level.

Figure 37 Wireless > General: Basic (WEP)

Security Level

No Security Basic More Secure (Recommended)

Security Mode: WEP

☒ Generate password automatically

64-bit: Enter 5 ASCII characters or 10 hex characters ("0-9", "A-F")
 128-bit: Enter 13 ASCII characters or 26 hex characters ("0-9", "A-F")
 Select one password as your active password.

● Password 1: 1ED1C8BEB5388CF95AB2935277 [less](#)

○ Password 2: *****

○ Password 3: *****

○ Password 4: *****

WEP Encryption: 128-bit

The following table describes the labels in this screen.

Table 22 Wireless > General: Basic (WEP)

| LABEL | DESCRIPTION |
|---------------------------------|--|
| Security Level | Select Basic to enable WEP data encryption. |
| Generate password automatically | Select this option to have the SBG3600-N Series automatically generate a password. The password field will not be configurable when you select this option. |
| Password 1~4 | The password (WEP keys) are used to encrypt data. Both the SBG3600-N Series and the wireless stations must use the same password (WEP key) for data transmission. If you chose 64-bit WEP, then enter any 5 ASCII characters or 10 hexadecimal characters ("0-9", "A-F"). If you chose 128-bit WEP, then enter 13 ASCII characters or 26 hexadecimal characters ("0-9", "A-F"). You must configure at least one password, only one password can be activated at any one time. The default password is Passowrd 1 . |
| more.../less | Click more... to show more fields in this section. Click less to hide them. |
| WEP Encryption | Select 64-bits or 128-bits . This dictates the length of the security key that the network is going to use. |

7.2.3 More Secure (WPA(2)-PSK)

The WPA-PSK security mode provides both improved data encryption and user authentication over WEP. Using a Pre-Shared Key (PSK), both the SBG3600-N Series and the connecting client share a common password in order to validate the connection. This type of encryption, while robust, is not as strong as WPA, WPA2 or even WPA2-PSK. The WPA2-PSK security mode is a newer, more robust version of the WPA encryption standard. It offers slightly better security, although the use of PSK makes it less robust than it could be.

Click **Network Setting > Wireless** to display the **General** screen. Select **More Secure** as the security level. Then select **WPA-PSK** or **WPA2-PSK** from the **Security Mode** list.

Figure 38 Wireless > General: More Secure: WPA(2)-PSK

Security Level

No Security Basic **More Secure (Recommended)**

Security Mode: WPA2-PSK

☒ Generate password automatically

Enter 8-63 characters (a-z, A-Z, 0-9 and special characters), other characters are not allowed.

Password: BEB5388CF95AB2935277 [less](#)

WPA-PSK Compatible: ☒ Enable ☐ Disable

Encryption: TKIP+AES

Group Key Update Timer: 1800 sec

The following table describes the labels in this screen.

Table 23 Wireless > General: More Secure: WPA(2)-PSK

| LABEL | DESCRIPTION |
|---------------------------------|--|
| Security Level | Select More Secure to enable WPA(2)-PSK data encryption. |
| Security Mode | Select WPA-PSK or WPA2-PSK from the drop-down list box. |
| Generate password automatically | Select this option to have the SBG3600-N Series automatically generate a password. The password field will not be configurable when you select this option. |
| Password | The encryption mechanisms used for WPA(2) and WPA(2)-PSK are the same. The only difference between the two is that WPA(2)-PSK uses a simple common password, instead of user-specific credentials. If you did not select Generate password automatically , you can manually type a pre-shared key from 8 to 64 case-sensitive keyboard characters. |
| more.../less | Click more... to show more fields in this section. Click less to hide them. |
| WPA-PSK Compatible | This field appears when you choose WPA-PSK2 as the Security Mode . Check this field to allow wireless devices using WPA-PSK security mode to connect to your SBG3600-N Series. The SBG3600-N Series supports WPA-PSK and WPA2-PSK simultaneously. |

Table 23 Wireless > General: More Secure: WPA(2)-PSK (continued)

| LABEL | DESCRIPTION |
|------------------------|---|
| Encryption | Select the encryption type (AES or TKIP+AES) for data encryption. Select AES if your wireless clients can all use AES. Select TKIP+AES to allow the wireless clients to use either TKIP or AES. |
| Group Key Update Timer | The Group Key Update Timer is the rate at which the RADIUS server sends a new group key out to all clients. |

7.2.4 WPA(2) Authentication

The WPA2 security mode is currently the most robust form of encryption for wireless networks. It requires a RADIUS server to authenticate user credentials and is a full implementation the security protocol. Use this security option for maximum protection of your network. However, it is the least backwards compatible with older devices.

The WPA security mode is a security subset of WPA2. It requires the presence of a RADIUS server on your network in order to validate user credentials. This encryption standard is slightly older than WPA2 and therefore is more compatible with older devices.

Click **Network Setting > Wireless** to display the **General** screen. Select **More Secure** as the security level. Then select **WPA** or **WPA2** from the **Security Mode** list.

Figure 39 Wireless > General: More Secure: WPA(2)

Security Level

No Security Basic **More Secure (Recommended)**

Security Mode: WPA2

Authentication Server

IP Address: 0.0.0.0

Port Number: 1812

Shared Secret: less

WPA Compatible: ☐ Enable ☒ Disable

Encryption: TKIP+AES

WPA2 Pre-authentication: ☐ Enable ☒ Disable

Network Re-auth Interval: 36000 sec

Group Key Update Timer: 1800 x sec

The following table describes the labels in this screen.

Table 24 Wireless > General: More Secure: WPA(2)

| LABEL | DESCRIPTION |
|----------------|---|
| Security Level | Select More Secure to enable WPA(2)-PSK data encryption. |
| Security Mode | Choose WPA or WPA2 from the drop-down list box. |

Table 24 Wireless > General: More Secure: WPA(2) (continued)

| LABEL | DESCRIPTION |
|--------------------------|--|
| Authentication Server | |
| IP Address | Enter the IP address of the external authentication server in dotted decimal notation. |
| Port Number | Enter the port number of the external authentication server. The default port number is 1812 . You need not change this value unless your network administrator instructs you to do so with additional information. |
| Shared Secret | Enter a password (up to 31 alphanumeric characters) as the key to be shared between the external authentication server and the SBG3600-N Series. The key must be the same on the external authentication server and your SBG3600-N Series. The key is not sent over the network. |
| more.../less | Click more... to show more fields in this section. Click less to hide them. |
| WPA Compatible | This field is only available for WPA2. Select this if you want the SBG3600-N Series to support WPA and WPA2 simultaneously. |
| Encryption | Select the encryption type (AES or TKIP+AES) for data encryption. Select AES if your wireless clients can all use AES. Select TKIP+AES to allow the wireless clients to use either TKIP or AES. |
| WPA2 Pre-Authentication | This field is available only when you select WPA2 . Pre-authentication enables fast roaming by allowing the wireless client (already connecting to an AP) to perform IEEE 802.1x authentication with another AP before connecting to it. Select Enabled to turn on preauthentication in WAP2. Otherwise, select Disabled . |
| Network Re-auth Interval | Specify how often wireless stations have to resend usernames and passwords in order to stay connected. If wireless station authentication is done using a RADIUS server, the reauthentication timer on the RADIUS server has priority. |
| Group Key Update Timer | The Group Key Update Timer is the rate at which the RADIUS server sends a new group key out to all clients. |

7.3 The More AP Screen

This screen allows you to enable and configure multiple Basic Service Sets (BSSs) on the SBG3600-N Series.

Click **Network Setting > Wireless > More AP**. The following screen displays.

Figure 40 Network Setting > Wireless > More AP

| # | Status | SSID | Security | Guest WLAN | Modify |
|---|---|-------------------|----------|------------|---|
| 1 |  | ZyXEL5F5B4_Guest1 | WPA-PSK | N/A |  |
| 2 |  | ZyXEL5F5B4_Guest2 | WPA-PSK | N/A |  |
| 3 |  | ZyXEL5F5B4_Guest3 | WPA-PSK | N/A |  |

The following table describes the labels in this screen.

Table 25 Network Setting > Wireless > More AP

| LABEL | DESCRIPTION |
|----------|---|
| # | This is the index number of the entry. |
| Status | This field indicates whether this SSID is active. A yellow bulb signifies that this SSID is active. A gray bulb signifies that this SSID is not active. |
| SSID | An SSID profile is the set of parameters relating to one of the SBG3600-N Series's BSSs. The SSID (Service Set Identifier) identifies the Service Set with which a wireless device is associated. This field displays the name of the wireless profile on the network. When a wireless client scans for an AP to associate with, this is the name that is broadcast and seen in the wireless client utility. |
| Security | This field indicates the security mode of the SSID profile. |
| Modify | Click the Edit icon to configure the SSID profile. |

7.3.1 Edit More AP

Use this screen to edit an SSID profile. Click the **Edit** icon next to an SSID in the **More AP** screen. The following screen displays.

Figure 41 More AP: Edit

Wireless Network Setup

Wireless : ☐ Enable ☒ Disable (The settings in this screen are invalid if you select this.)

Wireless Network Settings

Wireless Network Name(SSID):

Max clients:

☐ Hide SSID

☐ Enhanced Multicast Forwarding

☐ Guest WLAN

Max. Upstream Bandwidth : Kbps

Max. Downstream Bandwidth : Kbps

Notes:

1. Max. Upstream Bandwidth: This field allows user to configure the maximum bandwidth of this SSID to WAN.
2. Max. Downstream Bandwidth: This field allows user to configure the maximum bandwidth of WAN to this SSID.
3. If Max. Upstream/Downstream Bandwidth is empty, the CPE sets the value automatically.

Security Level

No Security Basic **More Secure (Recommended)**

Security Mode:

☒ Generate password automatically

Enter 8-63 characters (a-z, A-Z, 0-9, '-', '_' and '.'). other characters are not allowed.

Password: [more...](#)

OK Cancel

The following table describes the fields in this screen.

Table 26 More AP: Edit

| LABEL | DESCRIPTION |
|-------------------------------|---|
| Wireless Network Setup | |
| Wireless | You can Enable or Disable the wireless LAN in this field. |
| Passphrase Type | <p>If you set security for the wireless LAN and have the SBG3600-N Series generate a password, the setting in this field determines how the SBG3600-N Series generates the password.</p> <p>Select None to set the SBG3600-N Series's password generation to not be based on a passphrase.</p> <p>Select Fixed to use a 16 character passphrase for generating a password.</p> <p>Select Variable to use a 16 to 63 character passphrase for generating a password.</p> |
| Passphrase Key | <p>For a fixed type passphrase enter 16 alphanumeric characters (0-9, A-Z, with no spaces). It must contain both letters and numbers and is case-sensitive.</p> <p>For a variable type passphrase enter 16 to 63 alphanumeric characters (0-9, A-Z, with no spaces). It must contain both letters and numbers and is case-sensitive.</p> |
| Wireless Network Settings | |
| Wireless Network Name (SSID) | <p>The SSID (Service Set IDentity) identifies the service set with which a wireless device is associated. Wireless devices associating to the access point (AP) must have the same SSID.</p> <p>Enter a descriptive name (up to 32 English keyboard characters) for the wireless LAN.</p> |
| Hide SSID | Select this check box to hide the SSID in the outgoing beacon frame so a station cannot obtain the SSID through scanning using a site survey tool. |
| Client Isolation | Select this to keep the wireless clients in this SSID from communicating with each other. |
| MBSSID/LAN Isolation | Select this to keep the wireless clients in this SSID from communicating with clients in other SSIDs or LAN devices. |
| Enhanced Multicast Forwarding | Select this check box to allow the SBG3600-N Series to convert wireless multicast traffic into wireless unicast traffic. |
| BSSID | This shows the MAC address of the wireless interface on the SBG3600-N Series when wireless LAN is enabled. |
| Maximum Bandwidth | Specify the maximum rate for wireless traffic in kilobits per second (Kbps). |
| Security Level | |
| Security Mode | <p>Select Basic (WEP) or More Secure (WPA(2)-PSK, WPA(2)) to add security on this wireless network. The wireless clients which want to associate to this network must have same wireless security settings as the SBG3600-N Series. After you select to use a security, additional options appears in this screen.</p> <p>Or you can select No Security to allow any client to associate this network without any data encryption or authentication.</p> <p>See Section 7.2.1 on page 141 for more details about this field.</p> |
| Apply | Click Apply to save your changes. |
| Cancel | Click Cancel to exit this screen without saving. |

7.4 MAC Authentication

This screen allows you to configure the SBG3600-N Series to give exclusive access to specific devices (**Allow**) or exclude specific devices from accessing the SBG3600-N Series (**Deny**). Every Ethernet device has a unique MAC (Media Access Control) address. The MAC address is assigned at the factory and consists of six pairs of hexadecimal characters, for example, 00:A0:C5:00:00:02. You need to know the MAC addresses of the devices to configure this screen.

Use this screen to view your SBG3600-N Series's MAC filter settings and add new MAC filter rules. Click **Network Setting > Wireless > MAC Authentication**. The screen appears as shown.

Figure 42 Wireless > MAC Authentication

The following table describes the labels in this screen.

Table 27 Wireless > MAC Authentication

| LABEL | DESCRIPTION |
|---------------------|--|
| SSID | Select the SSID for which you want to configure MAC filter settings. |
| MAC Restrict Mode | Define the filter action for the list of MAC addresses in the MAC Address table. Select Disable to turn off MAC filtering. Select Deny to block access to the SBG3600-N Series. MAC addresses not listed will be allowed to access the SBG3600-N Series. Select Allow to permit access to the SBG3600-N Series. MAC addresses not listed will be denied access to the SBG3600-N Series. |
| Add new MAC address | Click this if you want to add a new MAC address entry to the MAC filter list below. Enter the MAC addresses of the wireless devices that are allowed or denied access to the SBG3600-N Series in these address fields. Enter the MAC addresses in a valid MAC address format, that is, six hexadecimal character pairs, for example, 12:34:56:78:9a:bc. |
| # | This is the index number of the entry. |
| MAC Address | This is the MAC addresses of the wireless devices that are allowed or denied access to the SBG3600-N Series. |
| Modify | Click the Delete icon to delete the entry. |
| Apply | Click Apply to save your changes. |
| Cancel | Click Cancel to exit this screen without saving. |

7.5 The WPS Screen

Use this screen to configure WiFi Protected Setup (WPS) on your SBG3600-N Series.

WPS allows you to quickly set up a wireless network with strong security, without having to configure security settings manually. Set up each WPS connection between two devices. Both devices must support WPS. See [Section 7.10.8.3 on page 163](#) for more information about WPS.

Note: To use the WPS feature, make sure you have wireless enabled in the **Network Setting > Wireless > General** screen.

Note: The SBG3600-N Series applies the security settings of the **SSID1** profile (see [Section 7.2 on page 138](#)). If you want to use the WPS feature set the security mode of **SSID1** to **WPA-PSK**, **WPA2-PSK** or **No Security**.

Click **Network Setting > Wireless > WPS**. The following screen displays. Select **Enable** and click **Apply** to activate the WPS function. Then you can configure the WPS settings in this screen.

Figure 43 Network Setting > Wireless > WPS

WPS Setup

WPS : ☒ Enable ☐ Disable (The settings in this screen are invalid if you select this.)

| Method 1 | Method 2 | Method 3 |
|---|---|---|
| <p>Push Button Configuration</p> <p>1. Click "Connect".</p> <p>Connect</p> <p>2. Activate WPS on the wireless client within 2 minutes after clicking "Connect".</p> | <p>Register Wireless Client's PIN Number</p> <p>1. Enter the PIN of your wireless client and click "Register"</p> <p><input type="text"/> Register</p> <p>2. Activate WPS on the wireless client within 2 minutes after clicking "Connect".</p> | <p>Enter AP's PIN Number in Wireless Client</p> <p>Current state: Unconfigured</p> <p>1. Enter current PIN 15624291 on your wireless client</p> <p>Generate New PIN Number</p> |

Notes:

1. This function only works on the first SSID.
2. Click the "Release Configuration" button to have the WPS status changed to "Unconfigured". Otherwise, WPS status is in "Configured" mode.

Apply **Cancel**

The following table describes the labels in this screen.

Table 28 Network Setting > Wireless > WPS

| LABEL | DESCRIPTION |
|----------|--|
| WPS | Select Enable to activate WPS on the SBG3600-N Series. |
| Method 1 | Use this section to set up a WPS wireless network using Push Button Configuration (PBC). |

Table 28 Network Setting > Wireless > WPS (continued)

| LABEL | DESCRIPTION |
|-------------------------|--|
| Connect | Click this button to add another WPS-enabled wireless device (within wireless range of the SBG3600-N Series) to your wireless network. This button may either be a physical button on the outside of device, or a menu button similar to the Connect button on this screen. Note: You must press the other wireless device's WPS button within two minutes of pressing this button. |
| Method 2 | Use this section to set up a WPS wireless network by entering the PIN of the client into the SBG3600-N Series. |
| Register | Enter the PIN of the device that you are setting up a WPS connection with and click Register to authenticate and add the wireless device to your wireless network. You can find the PIN either on the outside of the device, or by checking the device's settings. Note: You must also activate WPS on that device within two minutes to have it present its PIN to the SBG3600-N Series. |
| Method 3 | Use this section to set up a WPS wireless network by entering the PIN of the SBG3600-N Series into the client. |
| Release Configuration | The default WPS status is configured. Click this button to remove all configured wireless and wireless security settings for WPS connections on the SBG3600-N Series. |
| Generate New PIN Number | The PIN (Personal Identification Number) of the SBG3600-N Series is shown here. Enter this PIN in the configuration utility of the device you want to connect to using WPS. The PIN is not necessary when you use WPS push-button method. Click the Generate New PIN Number button to have the SBG3600-N Series create a new PIN. |
| Apply | Click Apply to save your changes. |
| Cancel | Click Cancel to restore your previously saved settings. |

7.6 The WMM Screen

Use this screen to enable Wi-Fi MultiMedia (WMM) and WMM Power Save in wireless networks for multimedia applications.

Click **Network Setting > Wireless > WMM**. The following screen displays.

Figure 44 Network Setting > Wireless > WMM

WMM : ☒ Enable ☐ Disable

WMM Automatic Power Save Delivery (APSD) : ☒ Enable ☐ Disable

Apply Cancel

The following table describes the labels in this screen.

Table 29 Network Setting > Wireless > WMM

| LABEL | DESCRIPTION |
|--|---|
| WMM | Select On to have the SBG3600-N Series automatically give a service a priority level according to the ToS value in the IP header of packets it sends. WMM QoS (Wifi MultiMedia Quality of Service) gives high priority to voice and video, which makes them run more smoothly. |
| WMM Automatic Power Save Delivery (APSD) | Select this option to extend the battery life of your mobile devices (especially useful for small devices that are running multimedia applications). The SBG3600-N Series goes to sleep mode to save power when it is not transmitting data. The AP buffers the packets sent to the SBG3600-N Series until the SBG3600-N Series "wakes up". The SBG3600-N Series wakes up periodically to check for incoming data. Note: Note: This works only if the wireless device to which the SBG3600-N Series is connected also supports this feature. |
| Apply | Click Apply to save your changes. |
| Cancel | Click Cancel to restore your previously saved settings. |

7.7 The Others Screen

Use this screen to configure advanced wireless settings. Click **Network Setting > Wireless > Others**. The screen appears as shown.

See [Section 7.10.2 on page 157](#) for detailed definitions of the terms listed in this screen.

Figure 45 Network Setting > Wireless > Others

Wireless Advanced Setup

RTS/CTS Threshold : 2347

Fragmentation Threshold : 2346

Auto Channel Timer : 0 min

Output Power : 100%

Beacon Interval : 100 ms

DTIM Interval : 1 ms

802.11 Mode : 802.11b/g/n Mixed

802.11 Protection : Auto

Preamble : Long

Apply Cancel

The following table describes the labels in this screen.


Table 30 Network Setting > Wireless > Others

| LABEL | DESCRIPTION |
|-------------------------|---|
| RTS/CTS Threshold | Data with its frame size larger than this value will perform the RTS (Request To Send)/CTS (Clear To Send) handshake. Enter a value between 0 and 2347. |
| Fragmentation Threshold | This is the maximum data fragment size that can be sent. Enter a value between 256 and 2346. |
| Auto Channel Timer | If you set the channel to Auto in the Network Setting > Wireless > General screen, specify the interval in minutes for how often the SBG3600-N Series scans for the best channel. Enter 0 to disable the periodical scan. |
| Output Power | Set the output power of the SBG3600-N Series. If there is a high density of APs in an area, decrease the output power to reduce interference with other APs. Select one of the following: 20% , 40% , 60% , 80% or 100% . |
| Beacon Interval | When a wirelessly networked device sends a beacon, it includes with it a beacon interval. This specifies the time period before the device sends the beacon again. The interval tells receiving devices on the network how long they can wait in low power mode before waking up to handle the beacon. This value can be set from 20ms to 1000ms. A high value helps save current consumption of the access point. |
| DTIM Interval | Delivery Traffic Indication Message (DTIM) is the time period after which broadcast and multicast packets are transmitted to mobile clients in the Power Saving mode. A high DTIM value can cause clients to lose connectivity with the network. This value can be set from 1 to 100. |
| 802.11 Mode | Select 802.11b Only to allow only IEEE 802.11b compliant WLAN devices to associate with the SBG3600-N Series. Select 802.11g Only to allow only IEEE 802.11g compliant WLAN devices to associate with the SBG3600-N Series. Select 802.11n Only to allow only IEEE 802.11n compliant WLAN devices to associate with the SBG3600-N Series. Select 802.11b/g Mixed to allow either IEEE 802.11b or IEEE 802.11g compliant WLAN devices to associate with the SBG3600-N Series. The transmission rate of the SBG3600-N Series might be reduced when an 802.11b wireless client is associated with it. Select 802.11b/g/n Mixed to allow IEEE 802.11b, IEEE 802.11g or IEEE802.11n compliant WLAN devices to associate with the SBG3600-N Series. The transmission rate of the SBG3600-N Series might be reduced when an 802.11b or 802.11g wireless client is associated with it. |
| 802.11 Protection | Enabling this feature can help prevent collisions in mixed-mode networks (networks with both IEEE 802.11b and IEEE 802.11g traffic). Select Auto to have the wireless devices transmit data after a RTS/CTS handshake. This helps improve IEEE 802.11g performance. Select Off to disable 802.11 protection. The transmission rate of your SBG3600-N Series might be reduced in a mixed-mode network. This field displays Off and is not configurable when you set 802.11 Mode to 802.11b Only . |
| Preamble | Select a preamble type from the drop-down list box. Choices are Long or Short . See Section 7.10.7 on page 161 for more information. This field is configurable only when you set 802.11 Mode to 802.11b . |
| Apply | Click Apply to save your changes. |
| Cancel | Click Cancel to restore your previously saved settings. |

7.8 The Channel Status Screen

Use the **Channel Status** screen to scan wireless LAN channel noises and view the results. Click **Network Setting > Wireless > Channel Status**. The screen appears as shown. Click **Scan** to scan the wireless LAN channels. You can view the results in the **Channel Scan Result** section.

Figure 46 Network Setting > Wireless > Channel Status

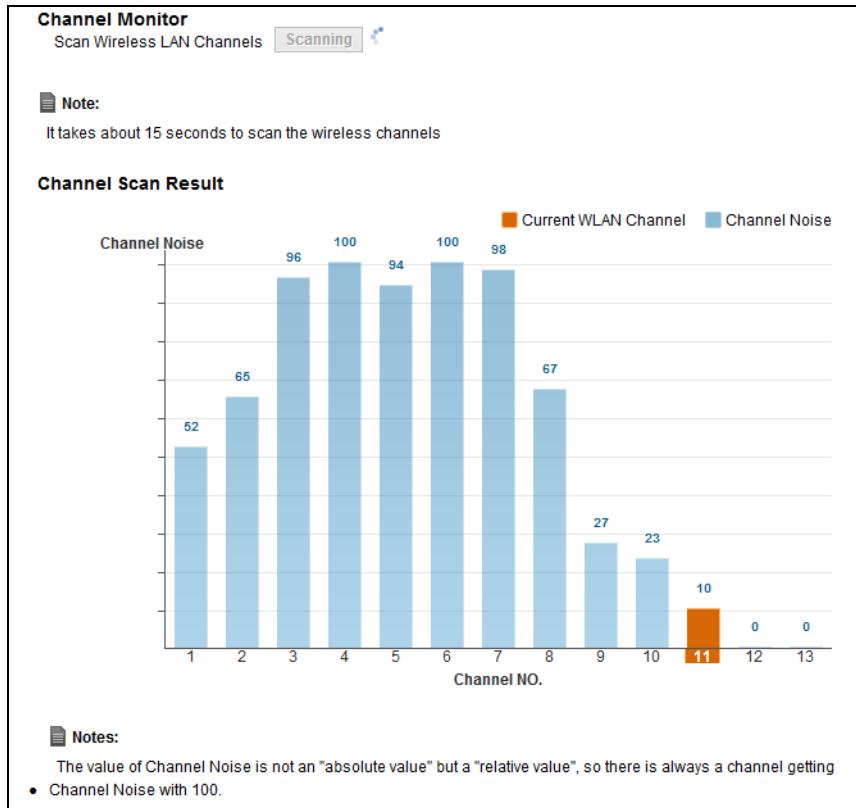

7.9 The Scheduling Screen

The wireless LAN can be scheduled to disable on certain days and at certain times. Use this screen to view the wireless scheduling rules on the SBG3600-N Series. Click **Network Setting > Wireless > Scheduling**. The following screen displays.

Figure 47 Network Setting > Wireless > Scheduling

WLAN Power Off Scheduling : ☐ Enable ☒ Disable (settings are invalid when disabled)

Add new rule

| # | Rule Name | Days | Start Time | End Time | Modify |
|---|-----------|---------------|------------|----------|--------|
| 1 | Weekend | S M T W T F S | 00:00 | 23:59 | |

Notes:
1. WLAN can be enabled manually at any time.

Apply Cancel

The following table describes the labels in this screen.

Table 31 Network Setting > Wireless > Scheduling

| LABEL | DESCRIPTION |
|---------------------------|---|
| WLAN Power Off Scheduling | Select Enable or Disable to activate or deactivate wireless LAN scheduling on your SBG3600-N Series. |
| Add New Rule | Click this button to create a new WLAN power-off scheduling rule. |
| # | This field displays the index number of a rule. |
| Rule Name | This field displays the descriptive name of a rule. |
| Days | This field displays whether wireless power-off scheduling is active on the day(s). Green color means the SBG3600-N Series turns off the wireless LAN in the specified time period of the day(s). |
| Start Time | This field displays the time of day when power-off scheduling starts and the SBG3600-N Series turns off the wireless LAN. |
| End Time | This field displays the time of day when power-off scheduling ends and the SBG3600-N Series turns on the wireless LAN again. |
| Modify | Click Edit to configure the rule. Click Delete to remove the rule. |
| Apply | Click Apply to save your changes. |
| Cancel | Click Cancel to restore your previously saved settings. |

7.9.1 Add New Rule/Edit

Use this screen to set the times your wireless LAN is turned off. To open this screen, click the **Add New Rule** button or an existing rule's **Edit** icon in the **Network Setting > Wireless > Scheduling** screen.

Figure 48 Network Setting > Wireless > Scheduling: Add New Rule

Rule Name :

Day : ☐ SUN ☐ MON ☐ TUE ☐ WED ☐ THU ☐ FRI ☐ SAT

Time of Day Range : From: To: (hh:mm)

Apply **Cancel**

The following table describes the labels in this screen.

Table 32 Network Setting > Wireless > Scheduling: Add New Rule/Edit

| LABEL | DESCRIPTION |
|-------------------|--|
| Rule Name | Enter a descriptive name for identification purposes. You can enter up to 15 alphanumeric characters. Spaces are not allowed, but dashes "-" and underscores "_" are accepted. |
| Day | Check which day(s) of the week you want to turn the wireless LAN off. |
| Time of Day Range | Specify a time frame during which the schedule would apply. For example, if you set the time range from 12:00 to 23:00, the wireless LAN will be turned off only during this time period. |

Table 32 Network Setting > Wireless > Scheduling: Add New Rule/Edit (continued)

| LABEL | DESCRIPTION |
|--------|--|
| Apply | Click Apply to save your changes. |
| Cancel | Click Cancel to return to the previous screen without saving changes. |

7.10 Technical Reference

This section discusses wireless LANs in depth. For more information, see [Appendix D on page 411](#).

7.10.1 Wireless Network Overview


Wireless networks consist of wireless clients, access points and bridges.

- A wireless client is a radio connected to a user's computer.
- An access point is a radio with a wired connection to a network, which can connect with numerous wireless clients and let them access the network.
- A bridge is a radio that relays communications between access points and wireless clients, extending a network's range.

Traditionally, a wireless network operates in one of two ways.

- An "infrastructure" type of network has one or more access points and one or more wireless clients. The wireless clients connect to the access points.
- An "ad-hoc" type of network is one in which there is no access point. Wireless clients connect to one another in order to exchange information.

The following figure provides an example of a wireless network.

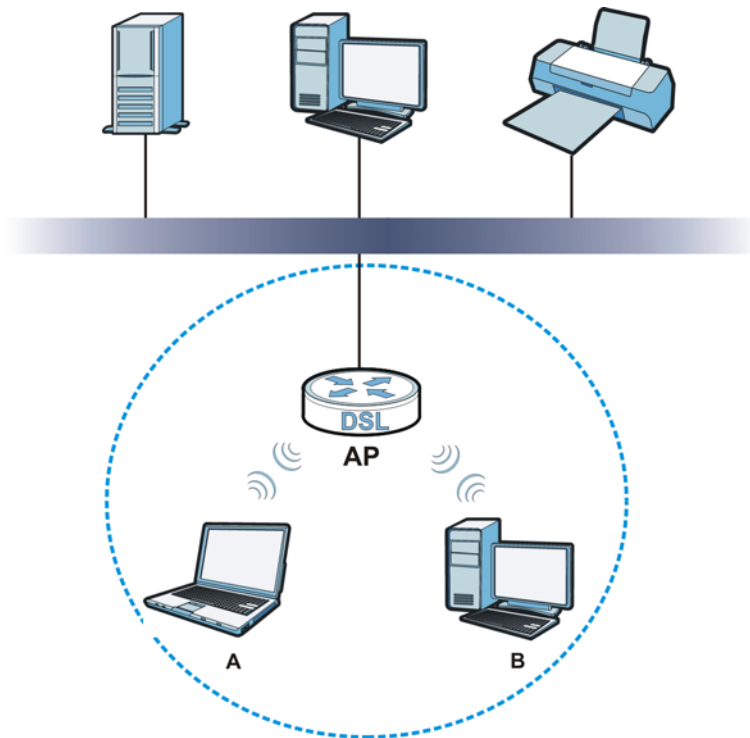Figure 49 Example of a Wireless Network

The wireless network is the part in the blue circle. In this wireless network, devices **A** and **B** use the access point (**AP**) to interact with the other devices (such as the printer) or with the Internet. Your SBG3600-N Series is the AP.

Every wireless network must follow these basic guidelines.

- Every device in the same wireless network must use the same SSID.
The SSID is the name of the wireless network. It stands for Service Set IDentifier.
- If two wireless networks overlap, they should use a different channel.
Like radio stations or television channels, each wireless network uses a specific channel, or frequency, to send and receive information.
- Every device in the same wireless network must use security compatible with the AP.
Security stops unauthorized devices from using the wireless network. It can also protect the information that is sent in the wireless network.

Radio Channels

In the radio spectrum, there are certain frequency bands allocated for unlicensed, civilian use. For the purposes of wireless networking, these bands are divided into numerous channels. This allows a variety of networks to exist in the same place without interfering with one another. When you create a network, you must select a channel to use.

Since the available unlicensed spectrum varies from one country to another, the number of available channels also varies.

7.10.2 Additional Wireless Terms

The following table describes some wireless network terms and acronyms used in the SBG3600-N Series's Web Configurator.

Table 33 Additional Wireless Terms

| TERM | DESCRIPTION |
|-------------------------|--|
| RTS/CTS Threshold | <p>In a wireless network which covers a large area, wireless devices are sometimes not aware of each other's presence. This may cause them to send information to the AP at the same time and result in information colliding and not getting through.</p> <p>By setting this value lower than the default value, the wireless devices must sometimes get permission to send information to the SBG3600-N Series. The lower the value, the more often the devices must get permission.</p> <p>If this value is greater than the fragmentation threshold value (see below), then wireless devices never have to get permission to send information to the SBG3600-N Series.</p> |
| Preamble | A preamble affects the timing in your wireless network. There are two preamble modes: long and short. If a device uses a different preamble mode than the SBG3600-N Series does, it cannot communicate with the SBG3600-N Series. |
| Authentication | The process of verifying whether a wireless device is allowed to use the wireless network. |
| Fragmentation Threshold | A small fragmentation threshold is recommended for busy networks, while a larger threshold provides faster performance if the network is not very busy. |

7.10.3 Wireless Security Overview

By their nature, radio communications are simple to intercept. For wireless data networks, this means that anyone within range of a wireless network without security can not only read the data passing over the airwaves, but also join the network. Once an unauthorized person has access to the network, he or she can steal information or introduce malware (malicious software) intended to compromise the network. For these reasons, a variety of security systems have been developed to ensure that only authorized people can use a wireless data network, or understand the data carried on it.

These security standards do two things. First, they authenticate. This means that only people presenting the right credentials (often a username and password, or a "key" phrase) can access the network. Second, they encrypt. This means that the information sent over the air is encoded. Only people with the code key can understand the information, and only people who have been authenticated are given the code key.

These security standards vary in effectiveness. Some can be broken, such as the old Wired Equivalent Protocol (WEP). Using WEP is better than using no security at all, but it will not keep a determined attacker out. Other security standards are secure in themselves but can be broken if a user does not use them properly. For example, the WPA-PSK security standard is very secure if you use a long key which is difficult for an attacker's software to guess - for example, a twenty-letter long string of apparently random numbers and letters - but it is not very secure if you use a short key which is very easy to guess - for example, a three-letter word from the dictionary.

Because of the damage that can be done by a malicious attacker, it's not just people who have sensitive information on their network who should use security. Everybody who uses any wireless network should ensure that effective security is in place.

A good way to come up with effective security keys, passwords and so on is to use obscure information that you personally will easily remember, and to enter it in a way that appears random and does not include real words. For example, if your mother owns a 1970 Dodge Challenger and her favorite movie is Vanishing Point (which you know was made in 1971) you could use “70dodchal71vanpoi” as your security key.

The following sections introduce different types of wireless security you can set up in the wireless network.

7.10.3.1 SSID

Normally, the SBG3600-N Series acts like a beacon and regularly broadcasts the SSID in the area. You can hide the SSID instead, in which case the SBG3600-N Series does not broadcast the SSID. In addition, you should change the default SSID to something that is difficult to guess.

This type of security is fairly weak, however, because there are ways for unauthorized wireless devices to get the SSID. In addition, unauthorized wireless devices can still see the information that is sent in the wireless network.

7.10.3.2 MAC Address Filter

Every device that can use a wireless network has a unique identification number, called a MAC address.¹ A MAC address is usually written using twelve hexadecimal characters²; for example, 00A0C5000002 or 00:A0:C5:00:00:02. To get the MAC address for each device in the wireless network, see the device’s User’s Guide or other documentation.

You can use the MAC address filter to tell the SBG3600-N Series which devices are allowed or not allowed to use the wireless network. If a device is allowed to use the wireless network, it still has to have the correct information (SSID, channel, and security). If a device is not allowed to use the wireless network, it does not matter if it has the correct information.

This type of security does not protect the information that is sent in the wireless network. Furthermore, there are ways for unauthorized wireless devices to get the MAC address of an authorized device. Then, they can use that MAC address to use the wireless network.

7.10.3.3 User Authentication

Authentication is the process of verifying whether a wireless device is allowed to use the wireless network. You can make every user log in to the wireless network before using it. However, every device in the wireless network has to support IEEE 802.1x to do this.

For wireless networks, you can store the user names and passwords for each user in a RADIUS server. This is a server used in businesses more than in homes. If you do not have a RADIUS server, you cannot set up user names and passwords for your users.

Unauthorized wireless devices can still see the information that is sent in the wireless network, even if they cannot use the wireless network. Furthermore, there are ways for unauthorized wireless users to get a valid user name and password. Then, they can use that user name and password to use the wireless network.


-
1. Some wireless devices, such as scanners, can detect wireless networks but cannot use wireless networks. These kinds of wireless devices might not have MAC addresses.
 2. Hexadecimal characters are 0, 1, 2, 3, 4, 5, 6, 7, 8, 9, A, B, C, D, E, and F.

7.10.3.4 Encryption

Wireless networks can use encryption to protect the information that is sent in the wireless network. Encryption is like a secret code. If you do not know the secret code, you cannot understand the message.

The types of encryption you can choose depend on the type of authentication. (See [Section 7.10.3.3 on page 158](#) for information about this.)

Table 34 Types of Encryption for Each Type of Authentication

| | NO AUTHENTICATION | RADIUS SERVER |
|--|-------------------|---------------|
| Weakest  | No Security | WPA |
| | Static WEP | |
| | WPA-PSK | |
| Strongest | WPA2-PSK | WPA2 |

For example, if the wireless network has a RADIUS server, you can choose **WPA** or **WPA2**. If users do not log in to the wireless network, you can choose no encryption, **Static WEP**, **WPA-PSK**, or **WPA2-PSK**.

Usually, you should set up the strongest encryption that every device in the wireless network supports. For example, suppose you have a wireless network with the SBG3600-N Series and you do not have a RADIUS server. Therefore, there is no authentication. Suppose the wireless network has two devices. Device A only supports WEP, and device B supports WEP and WPA. Therefore, you should set up **Static WEP** in the wireless network.

Note: It is recommended that wireless networks use **WPA-PSK**, **WPA**, or stronger encryption. The other types of encryption are better than none at all, but it is still possible for unauthorized wireless devices to figure out the original information pretty quickly.

When you select **WPA2** or **WPA2-PSK** in your SBG3600-N Series, you can also select an option (**WPA compatible**) to support WPA as well. In this case, if some of the devices support WPA and some support WPA2, you should set up **WPA2-PSK** or **WPA2** (depending on the type of wireless network login) and select the **WPA compatible** option in the SBG3600-N Series.

Many types of encryption use a key to protect the information in the wireless network. The longer the key, the stronger the encryption. Every device in the wireless network must have the same key.

7.10.4 Signal Problems

Because wireless networks are radio networks, their signals are subject to limitations of distance, interference and absorption.


Problems with distance occur when the two radios are too far apart. Problems with interference occur when other radio waves interrupt the data signal. Interference may come from other radio transmissions, such as military or air traffic control communications, or from machines that are coincidental emitters such as electric motors or microwaves. Problems with absorption occur when physical objects (such as thick walls) are between the two radios, muffling the signal.

7.10.5 BSS

A Basic Service Set (BSS) exists when all communications between wireless stations or between a wireless station and a wired network client go through one access point (AP).

Intra-BSS traffic is traffic between wireless stations in the BSS. When Intra-BSS traffic blocking is disabled, wireless station A and B can access the wired network and communicate with each other. When Intra-BSS traffic blocking is enabled, wireless station A and B can still access the wired network but cannot communicate with each other.

Figure 50 Basic Service set

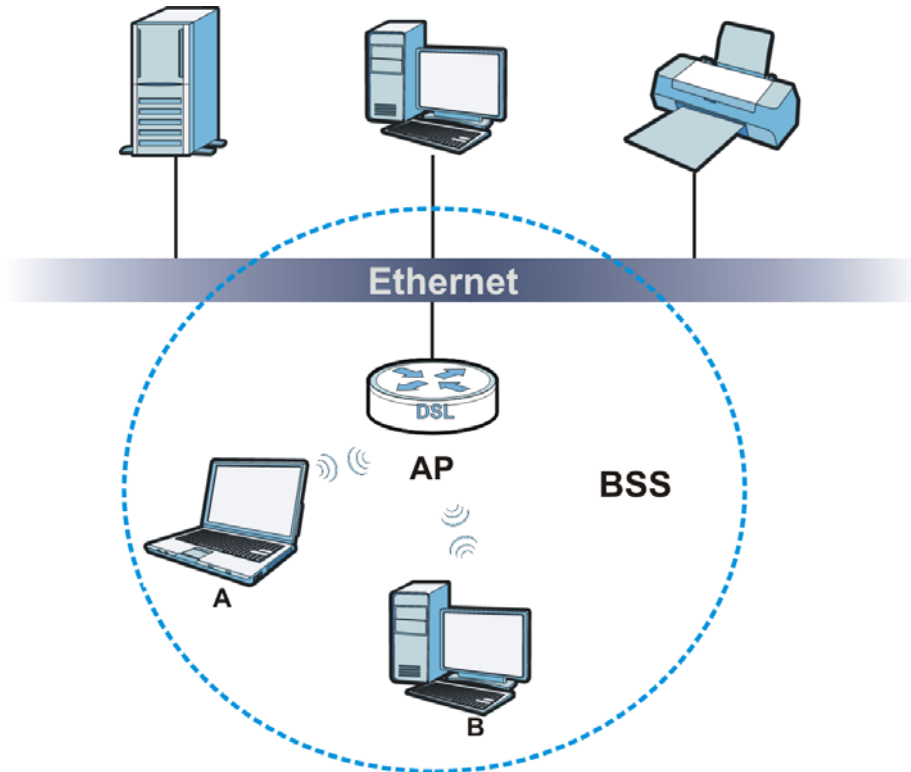

7.10.6 MBSSID

Traditionally, you need to use different APs to configure different Basic Service Sets (BSSs). As well as the cost of buying extra APs, there is also the possibility of channel interference. The SBG3600-N Series's MBSSID (Multiple Basic Service Set Identifier) function allows you to use one access point to provide several BSSs simultaneously. You can then assign varying QoS priorities and/or security modes to different SSIDs.

Wireless devices can use different BSSIDs to associate with the same AP.

7.10.6.1 Notes on Multiple BSSs

- A maximum of eight BSSs are allowed on one AP simultaneously.
- You must use different keys for different BSSs. If two wireless devices have different BSSIDs (they are in different BSSs), but have the same keys, they may hear each other's communications (but not communicate with each other).

- MBSSID should not replace but rather be used in conjunction with 802.1x security.

7.10.7 Preamble Type

Preamble is used to signal that data is coming to the receiver. Short and long refer to the length of the synchronization field in a packet.

Short preamble increases performance as less time sending preamble means more time for sending data. All IEEE 802.11 compliant wireless adapters support long preamble, but not all support short preamble.

Use long preamble if you are unsure what preamble mode other wireless devices on the network support, and to provide more reliable communications in busy wireless networks.

Use short preamble if you are sure all wireless devices on the network support it, and to provide more efficient communications.

Use the dynamic setting to automatically use short preamble when all wireless devices on the network support it, otherwise the SBG3600-N Series uses long preamble.

Note: The wireless devices MUST use the same preamble mode in order to communicate.

7.10.8 WiFi Protected Setup (WPS)

Your SBG3600-N Series supports WiFi Protected Setup (WPS), which is an easy way to set up a secure wireless network. WPS is an industry standard specification, defined by the WiFi Alliance.

WPS allows you to quickly set up a wireless network with strong security, without having to configure security settings manually. Each WPS connection works between two devices. Both devices must support WPS (check each device's documentation to make sure).

Depending on the devices you have, you can either press a button (on the device itself, or in its configuration utility) or enter a PIN (a unique Personal Identification Number that allows one device to authenticate the other) in each of the two devices. When WPS is activated on a device, it has two minutes to find another device that also has WPS activated. Then, the two devices connect and set up a secure network by themselves.

7.10.8.1 Push Button Configuration

WPS Push Button Configuration (PBC) is initiated by pressing a button on each WPS-enabled device, and allowing them to connect automatically. You do not need to enter any information.

Not every WPS-enabled device has a physical WPS button. Some may have a WPS PBC button in their configuration utilities instead of or in addition to the physical button.

Take the following steps to set up WPS using the button.

- 1 Ensure that the two devices you want to set up are within wireless range of one another.
- 2 Look for a WPS button on each device. If the device does not have one, log into its configuration utility and locate the button (see the device's User's Guide for how to do this - for the SBG3600-N Series, see [Section 7.6 on page 150](#)).

- 3 Press the button on one of the devices (it doesn't matter which). For the SBG3600-N Series you must press the WPS button for more than three seconds.
- 4 Within two minutes, press the button on the other device. The registrar sends the network name (SSID) and security key through an secure connection to the enrollee.

If you need to make sure that WPS worked, check the list of associated wireless clients in the AP's configuration utility. If you see the wireless client in the list, WPS was successful.

7.10.8.2 PIN Configuration

Each WPS-enabled device has its own PIN (Personal Identification Number). This may either be static (it cannot be changed) or dynamic (in some devices you can generate a new PIN by clicking on a button in the configuration interface).

Use the PIN method instead of the push-button configuration (PBC) method if you want to ensure that the connection is established between the devices you specify, not just the first two devices to activate WPS in range of each other. However, you need to log into the configuration interfaces of both devices to use the PIN method.


When you use the PIN method, you must enter the PIN from one device (usually the wireless client) into the second device (usually the Access Point or wireless router). Then, when WPS is activated on the first device, it presents its PIN to the second device. If the PIN matches, one device sends the network and security information to the other, allowing it to join the network.

Take the following steps to set up a WPS connection between an access point or wireless router (referred to here as the AP) and a client device using the PIN method.

- 1 Ensure WPS is enabled on both devices.
- 2 Access the WPS section of the AP's configuration interface. See the device's User's Guide for how to do this.
- 3 Look for the client's WPS PIN; it will be displayed either on the device, or in the WPS section of the client's configuration interface (see the device's User's Guide for how to find the WPS PIN - for the SBG3600-N Series, see [Section 7.5 on page 149](#)).
- 4 Enter the client's PIN in the AP's configuration interface.
- 5 If the client device's configuration interface has an area for entering another device's PIN, you can either enter the client's PIN in the AP, or enter the AP's PIN in the client - it does not matter which.
- 6 Start WPS on both devices within two minutes.
- 7 Use the configuration utility to activate WPS, not the push-button on the device itself.
- 8 On a computer connected to the wireless client, try to connect to the Internet. If you can connect, WPS was successful.

If you cannot connect, check the list of associated wireless clients in the AP's configuration utility. If you see the wireless client in the list, WPS was successful.

The following figure shows a WPS-enabled wireless client (installed in a notebook computer) connecting to the WPS-enabled AP via the PIN method.

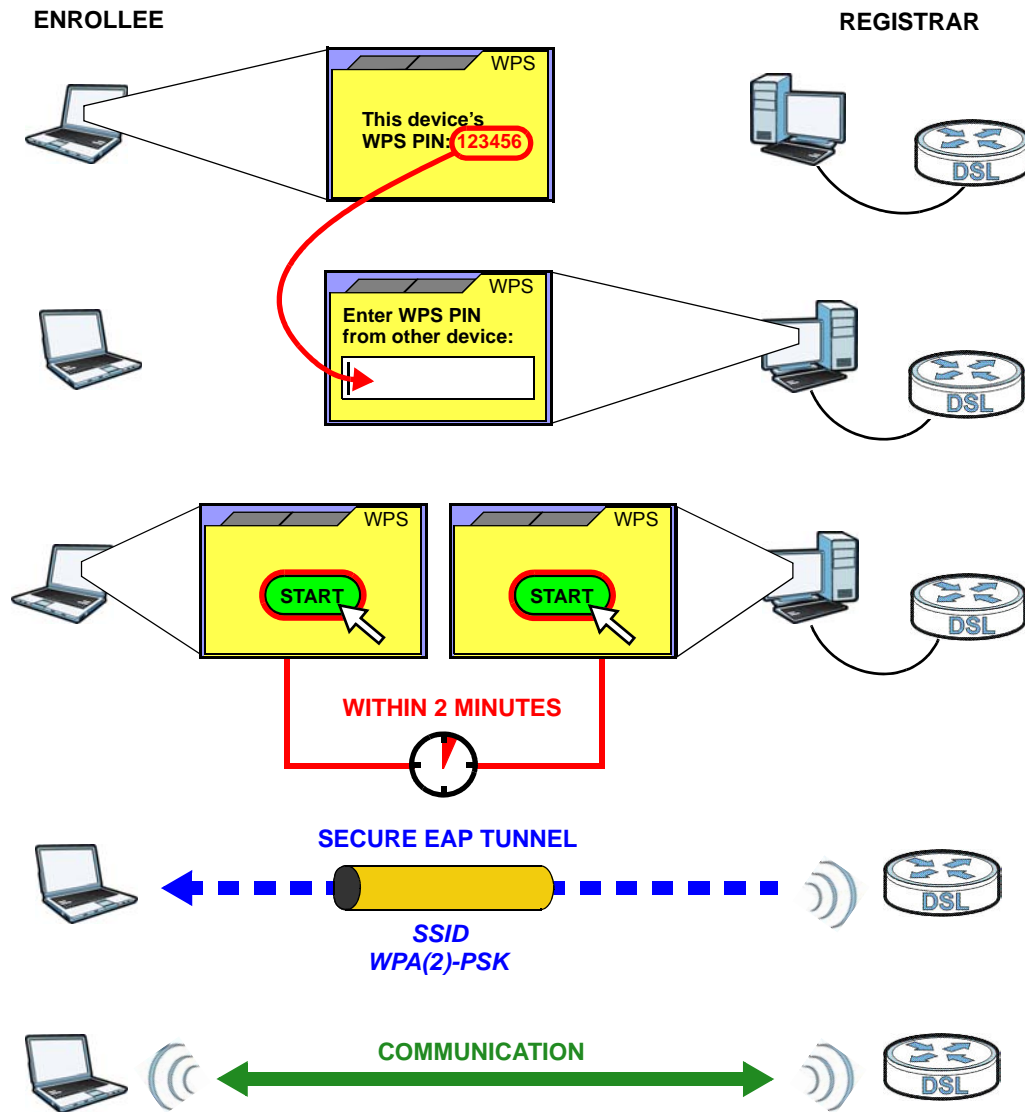
Figure 51 Example WPS Process: PIN Method

7.10.8.3 How WPS Works

When two WPS-enabled devices connect, each device must assume a specific role. One device acts as the registrar (the device that supplies network and security settings) and the other device acts as the enrollee (the device that receives network and security settings). The registrar creates a secure EAP (Extensible Authentication Protocol) tunnel and sends the network name (SSID) and the WPA-PSK or WPA2-PSK pre-shared key to the enrollee. Whether WPA-PSK or WPA2-PSK is used depends on the standards supported by the devices. If the registrar is already part of a network, it sends the existing information. If not, it generates the SSID and WPA(2)-PSK randomly.

The following figure shows a WPS-enabled client (installed in a notebook computer) connecting to a WPS-enabled access point.

Figure 52 How WPS works

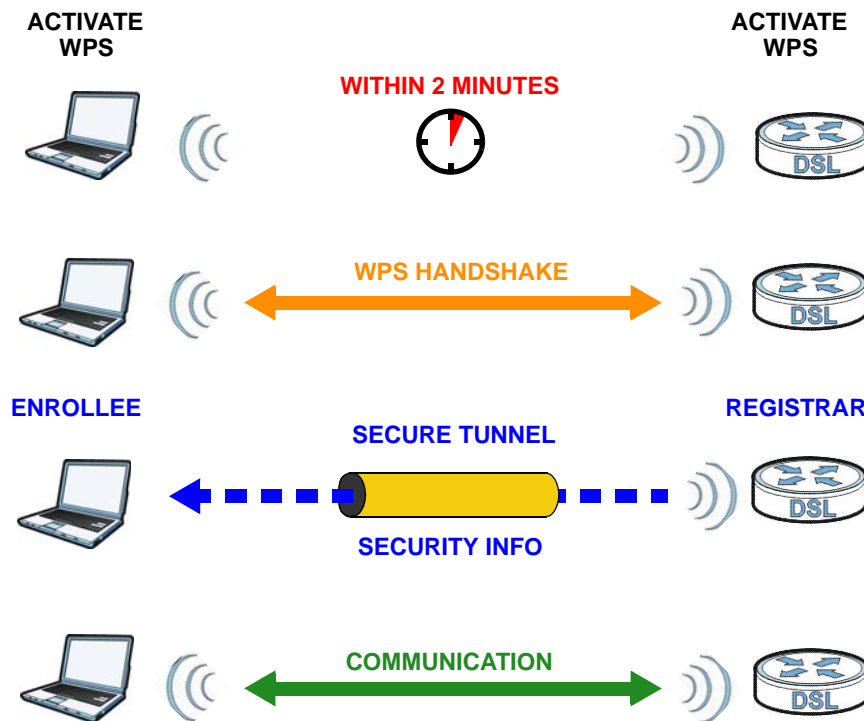

The roles of registrar and enrollee last only as long as the WPS setup process is active (two minutes). The next time you use WPS, a different device can be the registrar if necessary.

The WPS connection process is like a handshake; only two devices participate in each WPS transaction. If you want to add more devices you should repeat the process with one of the existing networked devices and the new device.


Note that the access point (AP) is not always the registrar, and the wireless client is not always the enrollee. All WPS-certified APs can be a registrar, and so can some WPS-enabled wireless clients.

By default, a WPS device is "unconfigured". This means that it is not part of an existing network and can act as either enrollee or registrar (if it supports both functions). If the registrar is unconfigured, the security settings it transmits to the enrollee are randomly-generated. Once a WPS-enabled device has connected to another device using WPS, it becomes "configured". A configured wireless client can still act as enrollee or registrar in subsequent WPS connections, but a configured access point can no longer act as enrollee. It will be the registrar in all subsequent WPS connections in which it is involved. If you want a configured AP to act as an enrollee, you must reset it to its factory defaults.


7.10.8.4 Example WPS Network Setup

This section shows how security settings are distributed in an example WPS setup.


The following figure shows an example network. In step 1, both **AP1** and **Client 1** are unconfigured. When WPS is activated on both, they perform the handshake. In this example, **AP1** is the registrar, and **Client 1** is the enrollee. The registrar randomly generates the security information to set up the network, since it is unconfigured and has no existing information.

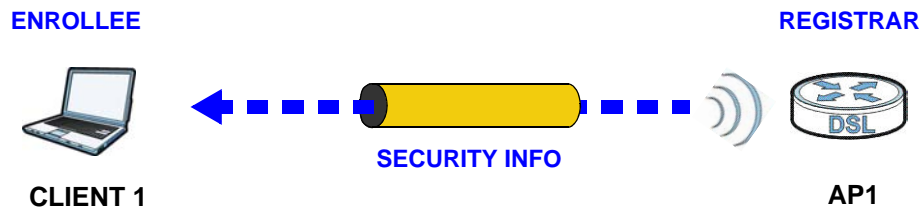Figure 53 WPS: Example Network Step 1

In step 2, you add another wireless client to the network. You know that **Client 1** supports registrar mode, but it is better to use **AP1** for the WPS handshake with the new client since you must connect to the access point anyway in order to use the network. In this case, **AP1** must be the registrar, since it is configured (it already has security information for the network). **AP1** supplies the existing security information to **Client 2**.

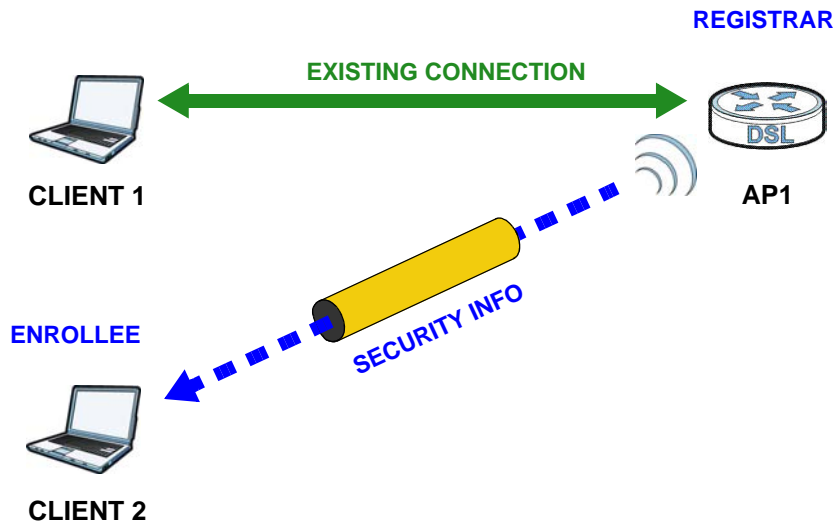Figure 54 WPS: Example Network Step 2

In step 3, you add another access point (**AP2**) to your network. **AP2** is out of range of **AP1**, so you cannot use **AP1** for the WPS handshake with the new access point. However, you know that **Client 2** supports the registrar function, so you use it to perform the WPS handshake instead.

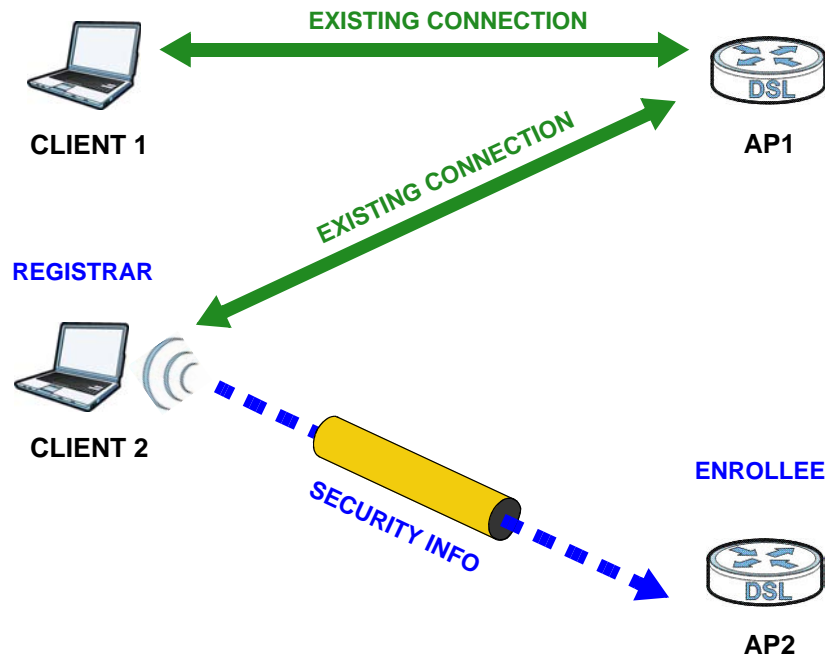Figure 55 WPS: Example Network Step 3

7.10.8.5 Limitations of WPS

WPS has some limitations of which you should be aware.

- WPS works in Infrastructure networks only (where an AP and a wireless client communicate). It does not work in Ad-Hoc networks (where there is no AP).
- When you use WPS, it works between two devices only. You cannot enroll multiple devices simultaneously, you must enroll one after the other.

For instance, if you have two enrollees and one registrar you must set up the first enrollee (by pressing the WPS button on the registrar and the first enrollee, for example), then check that it successfully enrolled, then set up the second device in the same way.

- WPS works only with other WPS-enabled devices. However, you can still add non-WPS devices to a network you already set up using WPS.

WPS works by automatically issuing a randomly-generated WPA-PSK or WPA2-PSK pre-shared key from the registrar device to the enrollee devices. Whether the network uses WPA-PSK or WPA2-PSK depends on the device. You can check the configuration interface of the registrar device to discover the key the network is using (if the device supports this feature). Then, you can enter the key into the non-WPS device and join the network as normal (the non-WPS device must also support WPA-PSK or WPA2-PSK).

- When you use the PBC method, there is a short period (from the moment you press the button on one device to the moment you press the button on the other device) when any WPS-enabled device could join the network. This is because the registrar has no way of identifying the "correct" enrollee, and cannot differentiate between your enrollee and a rogue device. This is a possible way for a hacker to gain access to a network.


You can easily check to see if this has happened. WPS works between only two devices simultaneously, so if another device has enrolled your device will be unable to enroll, and will not have access to the network. If this happens, open the access point's configuration interface and look at the list of associated clients (usually displayed by MAC address). It does not matter if the

access point is the WPS registrar, the enrollee, or was not involved in the WPS handshake; a rogue device must still associate with the access point to gain access to the network. Check the MAC addresses of your wireless clients (usually printed on a label on the bottom of the device). If there is an unknown MAC address you can remove it or reset the AP.

8.1 Overview

A Local Area Network (LAN) is a shared communication system to which many networking devices are connected. It is usually located in one immediate area such as a building or floor of a building.

Use the LAN screens to help you configure a LAN DHCP server and manage IP addresses.

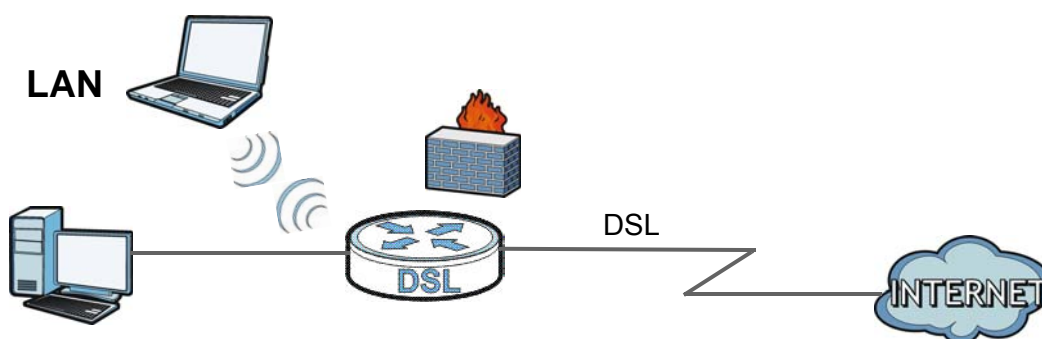

8.1.1 What You Can Do in this Chapter

- Use the **LAN Setup** screen to set the LAN IP address, subnet mask, and DHCP settings of your SBG3600-N Series ([Section 8.2 on page 170](#)).
- Use the **Static DHCP** screen to assign IP addresses on the LAN to specific individual computers based on their MAC Addresses ([Section 8.3 on page 174](#)).
- Use the **UPnP** screen to enable UPnP and UPnP NAT traversal on the SBG3600-N Series ([Section 8.4 on page 176](#)).
- Use the **Additional Subnet** screen to configure IP alias and public static IP ([Section 8.5 on page 176](#)).
- Use the **5th Ethernet Port** screen to configure the Ethernet WAN port as a LAN port ([Section 8.7 on page 184](#)).

8.1.2 What You Need To Know

8.1.2.1 About LAN

IP Address

IP addresses identify individual devices on a network. Every networking device (including computers, servers, routers, printers, etc.) needs an IP address to communicate across the network. These networking devices are also known as hosts.

Subnet Mask

Subnet masks determine the maximum number of possible hosts on a network. You can also use subnet masks to divide one network into multiple sub-networks.

DHCP

A DHCP (Dynamic Host Configuration Protocol) server can assign your SBG3600-N Series an IP address, subnet mask, DNS and other routing information when it's turned on.

DNS

DNS (Domain Name System) is for mapping a domain name to its corresponding IP address and vice versa. The DNS server is extremely important because without it, you must know the IP address of a networking device before you can access it.

RADVD (Router Advertisement Daemon)

When an IPv6 host sends a Router Solicitation (RS) request to discover the available routers, RADVD with Router Advertisement (RA) messages in response to the request. It specifies the minimum and maximum intervals of RA broadcasts. RA messages containing the address prefix. IPv6 hosts can be generated with the IPv6 prefix an IPv6 address.

8.1.2.2 About UPnP

Identifying UPnP Devices

UPnP hardware is identified as an icon in the Network Connections folder (Windows XP). Each UPnP compatible device installed on your network will appear as a separate icon. Selecting the icon of a UPnP device will allow you to access the information and properties of that device.

NAT Traversal

UPnP NAT traversal automates the process of allowing an application to operate through NAT. UPnP network devices can automatically configure network addressing, announce their presence in the network to other UPnP devices and enable exchange of simple product and service descriptions. NAT traversal allows the following:

- Dynamic port mapping
- Learning public IP addresses

- Assigning lease times to mappings

Windows Messenger is an example of an application that supports NAT traversal and UPnP.

See the [Chapter 11 on page 212](#) for more information on NAT.

Cautions with UPnP

The automated nature of NAT traversal applications in establishing their own services and opening firewall ports may present network security issues. Network information and configuration may also be obtained and modified by users in some network environments.

When a UPnP device joins a network, it announces its presence with a multicast message. For security reasons, the SBG3600-N Series allows multicast messages on the LAN only.

All UPnP-enabled devices may communicate freely with each other without additional configuration. Disable UPnP if this is not your intention.

UPnP and ZyXEL

ZyXEL has achieved UPnP certification from the Universal Plug and Play Forum UPnP™ Implementers Corp. (UIC). ZyXEL's UPnP implementation supports Internet Gateway Device (IGD) 1.0.

See [Section 8.5 on page 176](#) for examples of installing and using UPnP.

Finding Out More

See [Section 8.8 on page 184](#) for technical background information on LANs.

8.1.3 Before You Begin

Find out the MAC addresses of your network devices if you intend to add them to the DHCP Client List screen.

8.2 The LAN Setup Screen

Use this screen to set the Local Area Network IP address and subnet mask of your SBG3600-N Series. Click **Network Setting** > **LAN** to open the **LAN Setup** screen.

Follow these steps to configure your LAN settings.

- 1 Enter an IP address into the **IP Address** field. The IP address must be in dotted decimal notation. This will become the IP address of your SBG3600-N Series.
- 2 Enter the IP subnet mask into the **IP Subnet Mask** field. Unless instructed otherwise it is best to leave this alone, the configurator will automatically compute a subnet mask based upon the IP address you entered.
- 3 Click **Apply** to save your settings.

Figure 56 Network Setting > LAN > LAN Setup

Interface Group

Group Name :

Zone :

LAN IP Setup

IP Address :

Subnet Mask :

IGMP Snooping

Status : ☒ Enable IGMP Snooping

IGMP Mode : ☒ Standard Mode ☐ Blocking Mode

DHCP Server State

DHCP : ☒ Enable ☐ Disable ☐ DHCP Relay

IP Addressing Values

Beginning IP Address :

Ending IP Address :

DHCP Option Setup

TFTP Server Name(option 66) :

Bootfile Name(option 67) :

TFTP Server Address(option 150) :

DHCP Server Lease Time Days Hours Minutes

DNS Values

DNS : ☒ Dynamic ☐ Static

DNS Server 1 :

DNS Server 2 :

LAN IPv6 Mode Setup

IPv6 State: ☒ Enable ☐ Disable

LAN IPv6 Address Setup

☐ Delegate prefix from WAN

☒ Static

☐ ULA Pseudo-Random Global ID

ULA IPv6 Address Setup

IPv6 Address :

Prefix Length :

MLD Snooping

Status : ☐ Enable MLD Snooping

LAN IPv6 Address Assign Setup

☐ stateless + DNS send by RADVD (DHCPv6 server disable)

☒ stateless + DNS send by DHCPv6 (DHCPv6 server enable)

☐ stateful + DHCPv6 server (DHCPv6 server enable)

☐ stateful + DHCPv6 relay (DHCPv6 relay enable)

DHCPv6 Configuration

DHCPv6 State : DHCPv6 Server

IPv6 DNS Values

IPv6 DNS Server 1 :

IPv6 DNS Server 2 :

IPv6 DNS Server 3 :

IPv6 Router Advertisement State

RADVD State : Enable

The following table describes the fields in this screen.

Table 35 Network Setting > LAN > LAN Setup

| LABEL | DESCRIPTION |
|----------------------------------|--|
| Interface Group | |
| Group Name | Select the interface group name for which you want to configure LAN settings. See Chapter 15 on page 253 for how to create a new interface group. |
| Zone | Choose the zone for this interface group from the drop-down list. |
| LAN IP Setup | |
| IP Address | Enter the LAN IP address you want to assign to your SBG3600-N Series in dotted decimal notation, for example, 192.168.1.1 (factory default). |
| Subnet Mask | Type the subnet mask of your network in dotted decimal notation, for example 255.255.255.0 (factory default). Your SBG3600-N Series automatically computes the subnet mask based on the IP Address you enter, so do not change this field unless you are instructed to do so. |
| IGMP Snooping | |
| Status | Select the Enable IGMP Snooping checkbox to allows the SBG3600-N Series to passively learn multicast group. |
| IGMP Mode | Select Standard Mode to have the SBG3600-N Series forward multicast packets to a port that joins the multicast group and broadcast unknown multicast packets from the WAN to all LAN ports. Select Blocking Mode to have the SBG3600-N Series block all unknown multicast packets from the WAN. |
| DHCP Server State | |
| DHCP | Select Enable to have the SBG3600-N Series act as a DHCP server or DHCP relay agent. Select Disable to stop the DHCP server on the SBG3600-N Series. Select DHCP Relay to have the SBG3600-N Series forward DHCP request to the DHCP server. |
| DHCP Relay Server Address | This field is only available when you select DHCP Relay in the DHCP field. |
| IP Address | Enter the IP address of the actual remote DHCP server in this field. |
| IP Addressing Values | This field is only available when you select Enable in the DHCP field. |
| Beginning IP Address | This field specifies the first of the contiguous addresses in the IP address pool. |
| Ending IP Address | This field specifies the last of the contiguous addresses in the IP address pool. |
| DHCP Option Setup | |
| TFTP Server Name (option 66) | Type a name for the TFTP (Trivial File Transfer Protocol) server. This field allows you to access the TFTP server using DHCP option 66. However, option 66 (open standard) supports only the IP address of the hostname or a single TFTP server |
| Bootfile name (option 67) | Type the bootfile name to access the TFTP server using DHCP option 67. Option 67 is a bootstrap service that accesses the TFTP server dynamically at server startup. |
| TFTP Server Address (option 150) | Type an IP address for the TFTP server. This field allows you to access multiple TFTP servers using DHCP option 150. Option 150 is Cisco proprietary. |

Table 35 Network Setting > LAN > LAN Setup (continued)

| LABEL | DESCRIPTION |
|------------------------------|---|
| DHCP Server Lease Time | This is the period of time DHCP-assigned addresses is used. DHCP automatically assigns IP addresses to clients when they log in. DHCP centralizes IP address management on central computers that run the DHCP server program. DHCP leases addresses, for a period of time, which means that past addresses are "recycled" and made available for future reassignment to other systems. This field is only available when you select Enable in the DHCP field. |
| Days/Hours/Minutes | Enter the lease time of the DHCP server. |
| DNS Values | This field is only available when you select Enable in the DHCP field. |
| DNS | Select the type of service that you are registered for from your Dynamic DNS service provider. Select Dynamic if you have the Dynamic DNS service. Select Static if you have the Static DNS service. |
| DNS Server 1 DNS Server 2 | Enter the first and second DNS (Domain Name System) server IP address the SBG3600-N Series passes to the DHCP clients. |
| LAN IPv6 Mode Setup | |
| IPv6 State | Select Enable to activate the IPv6 mode and configure IPv6 settings on the SBG3600-N Series. |
| LAN IPv6 Address Setup | |
| Delegate prefix from WAN | Select this option to automatically obtain an IPv6 network prefix from the service provider or an uplink router. |
| Static | Select this option to configure a fixed IPv6 address for the SBG3600-N Series's LAN IPv6 address. Note: This fixed address is for local hosts to access the Web Configurator only as the global LAN IPv6 address might be changed by your ISP any time. This address is not the routing gateway's address for LAN IPv6 hosts. |
| ULA Pseudo-Random Global ID | Select this option to get IP addresses with same prefix using the Unique Local Address Random Global ID. |
| ULA IPv6 Address Setup | |
| IPv6 Address | If you select static IPv6 address, enter the IPv6 address prefix that the SBG3600-N Series uses for the LAN IPv6 address. |
| Prefix Length | If you select static IPv6 address, enter the IPv6 prefix length that the SBG3600-N Series uses to generate the LAN IPv6 address. An IPv6 prefix length specifies how many most significant bits (starting from the left) in the address compose the network address. This field displays the bit number of the IPv6 subnet mask. |
| MLD Snooping | Multicast Listener Discovery (MLD) allows an IPv6 switch or router to discover the presence of MLD hosts who wish to receive multicast packets and the IP addresses of multicast groups the hosts want to join on its network. Select Enable MLD Snooping to activate MLD Snooping on the SBG3600-N Series. This allows the SBG3600-N Series to check MLD packets passing through it and learn the multicast group membership. It helps reduce multicast traffic. |

Table 35 Network Setting > LAN > LAN Setup (continued)

| LABEL | DESCRIPTION |
|---------------------------------|---|
| LAN IPv6 Address Assign Setup | <p>Select how you want to obtain an IPv6 address:</p> <ul style="list-style-type: none"> • stateless + DNS send by RADVD: The SBG3600-N Series uses IPv6 stateless autoconfiguration. RADVD (Router Advertisement Daemon) is enabled to have the SBG3600-N Series send IPv6 prefix information in router advertisements periodically and in response to router solicitations. DHCPv6 server is disabled. (See page 169 for more information on RADVD.) • stateless + DNS send by DHCPv6: The SBG3600-N Series uses IPv6 stateless autoconfiguration. The DNS is provided by a DHCPv6 server. • stateful + DHCPv6 server: The SBG3600-N Series uses IPv6 stateful autoconfiguration. The DHCPv6 server is enabled to have the SBG3600-N Series act as a DHCPv6 server and pass IPv6 addresses, DNS server and domain name information to DHCPv6 clients. • stateful + DHCPv6 relay: The SBG3600-N Series uses IPv6 stateful autoconfiguration. DHCPv6 Relay is enabled to have the SBG3600-N Series relay client DHCPv6 requests. |
| DHCPv6 Configuration | |
| DHCPv6 State | This shows the status of the DHCPv6. |
| IPv6 DNS Values | |
| IPv6 DNS Server 1-3 | <p>Select From ISP if your ISP dynamically assigns IPv6 DNS server information.</p> <p>Select User-Defined if you have the IPv6 address of a DNS server. Enter the DNS server IPv6 addresses the SBG3600-N Series passes to the DHCP clients.</p> <p>Select None if you do not want to configure IPv6 DNS servers.</p> |
| IPv6 Router Advertisement State | |
| RADVD State | This shows the status of RADVD. |
| Apply | Click Apply to save your changes. |
| Cancel | Click Cancel to restore your previously saved settings. |




8.3 The Static DHCP Screen

This table allows you to assign IP addresses on the LAN to specific individual computers based on their MAC Addresses.

Every Ethernet device has a unique MAC (Media Access Control) address. The MAC address is assigned at the factory and consists of six pairs of hexadecimal characters, for example, 00:A0:C5:00:00:02.

Use this screen to change your SBG3600-N Series's static DHCP settings. Click **Network Setting > LAN > Static DHCP** to open the following screen.

Figure 57 Network Setting > LAN > Static DHCP

| Add new static lease | | | | |
|----------------------|---|-------------------|-------------|---|
| # | Status | MAC Address | IP Address | Modify |
| 1 |  | 00:24:21:7E:20:96 | 172.23.30.1 |   |

The following table describes the labels in this screen.

Table 36 Network Setting > LAN > Static DHCP

| LABEL | DESCRIPTION |
|----------------------|--|
| Add new static lease | Click this to add a new static DHCP entry. |
| # | This is the index number of the entry. |
| Status | This field displays whether the client is connected to the SBG3600-N Series. |
| MAC Address | The MAC (Media Access Control) or Ethernet address on a LAN (Local Area Network) is unique to your computer (six pairs of hexadecimal notation). A network interface card such as an Ethernet adapter has a hardwired address that is assigned at the factory. This address follows an industry standard that ensures no other adapter has a similar address. |
| IP Address | This field displays the IP address relative to the # field listed above. |
| Modify | Click the Edit icon to have the IP address field editable and change it. Click the Delete icon to delete a static DHCP entry. A window displays asking you to confirm that you want to delete the selected entry. |

If you click **Add new static lease** in the **Static DHCP** screen or the Edit icon next to a static DHCP entry, the following screen displays.

Figure 58 Static DHCP: Add/Edit

The following table describes the labels in this screen.

Table 37 Static DHCP: Add/Edit

| LABEL | DESCRIPTION |
|--------------------|---|
| Active | Select this to activate the connection between the client and the SBG3600-N Series. |
| Group Name | Select the interface group name for which you want to configure static DHCP settings. See Chapter 15 on page 253 for how to create a new interface group. |
| Select Device Info | If you select Manual Input , you can manually type in the MAC address and IP address of a computer on your LAN. You can also choose the name of a computer from the drop list and have the MAC Address and IP Address auto-detected. |
| MAC Address | If you select Manual Input , enter the MAC address of a computer on your LAN. |
| IP Address | If you select Manual Input , enter the IP address that you want to assign to the computer on your LAN with the MAC address that you will also specify. |
| Apply | Click Apply to save your changes. |
| Cancel | Click Cancel to exit this screen without saving. |

8.4 The UPnP Screen

Universal Plug and Play (UPnP) is a distributed, open networking standard that uses TCP/IP for simple peer-to-peer network connectivity between devices. A UPnP device can dynamically join a network, obtain an IP address, convey its capabilities and learn about other devices on the network. In turn, a device can leave a network smoothly and automatically when it is no longer in use.

See [page 169](#) for more information on UPnP.

Use the following screen to configure the UPnP settings on your SBG3600-N Series. Click **Network Setting > LAN > UPnP** to display the screen shown next.

Figure 59 Network Setting > LAN > UPnP

UPnP State
UPnP : ☐ Enable ☒ Disable

UPnP NAT-T State
UPnP NAT-T : ☐ Enable ☒ Disable

Note:
UPnP NATT only work when NAT is enable

| # | Description | IP ADDRESS | External Port | Internal Port | Protocol |
|---|-------------|------------|---------------|---------------|----------|
| | | | | | |

Apply Cancel

The following table describes the labels in this screen.

Table 38 Network Setting > LAN > UPnP


| LABEL | DESCRIPTION |
|------------|--|
| UPnP | Select Enable to activate UPnP. Be aware that anyone could use a UPnP application to open the web configurator's login screen without entering the SBG3600-N Series's IP address (although you must still enter the password to access the web configurator). |
| UPnP NAT-T | Select Enable to allow UPnP-enabled applications to automatically configure the SBG3600-N Series so that they can communicate through the SBG3600-N Series by using NAT traversal. UPnP applications automatically reserve a NAT forwarding port in order to communicate with another UPnP enabled device; this eliminates the need to manually configure port forwarding for the UPnP enabled application. |
| Apply | Click Apply to save your changes. |
| Cancel | Click Cancel to exit this screen without saving. |

8.5 Installing UPnP in Windows Example


This section shows you how to use the UPnP feature in Windows 7. UPnP server is installed in Windows 7. You will need to activate UPnP on the SBG3600-N Series.

Make sure the computer is connected to a LAN port of the SBG3600-N Series. Turn on your computer and the SBG3600-N Series.


- 1 Click the **Start** icon, **Control Panel** and then the **Network and Sharing Center**.

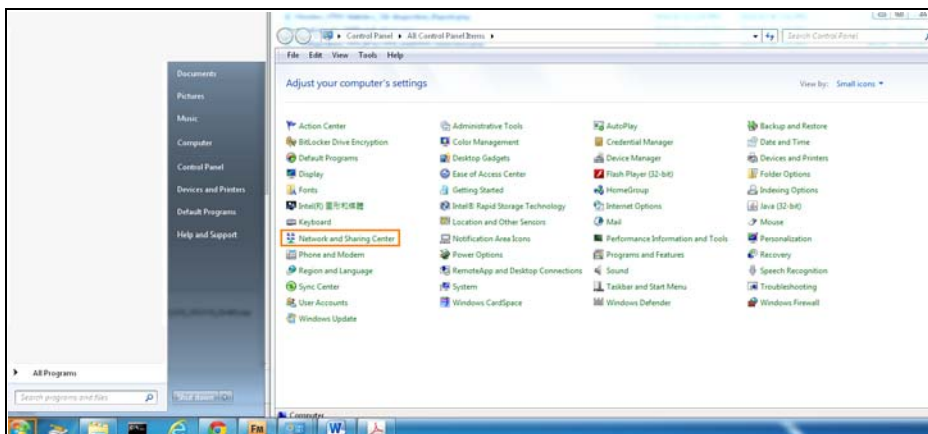

- 2 Click **Change Advanced Sharing Settings**.

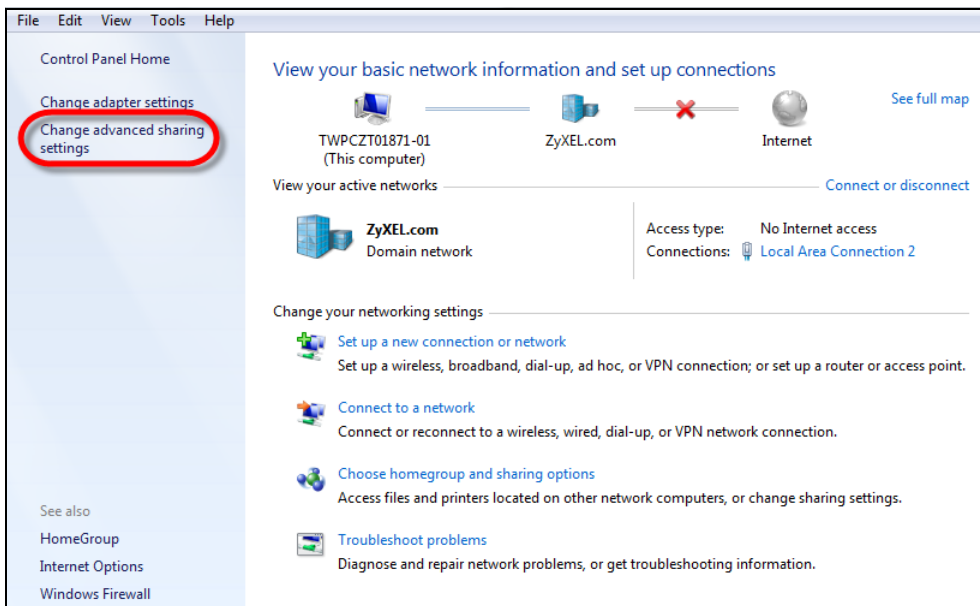

- 3 Under Network Discover section, select **Turn on network discovery** and click **Save Changes**. Network discovery allows your computer to find other computers and devices on the network and other computers on the network to find your computer. This makes it easier to share files and printers.

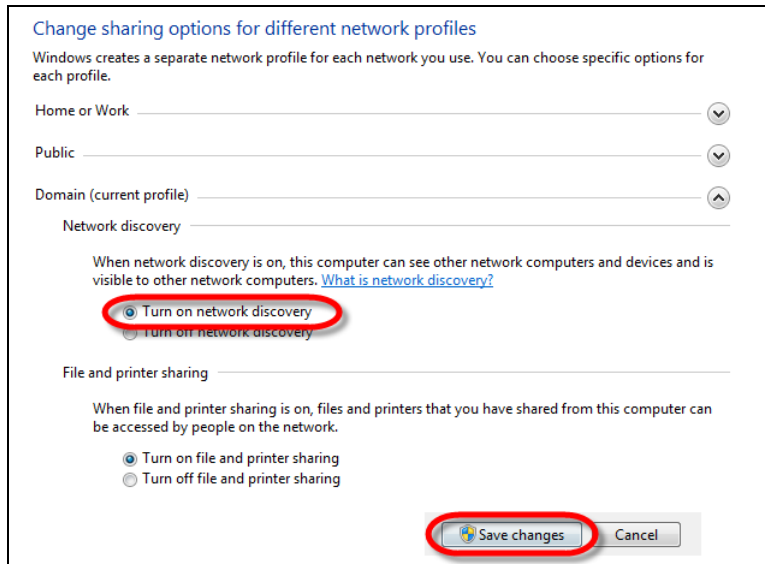

8.5.1 Using UPnP in Windows XP Example

This section shows you how to use the UPnP feature in Windows XP. You must already have UPnP installed in Windows XP and UPnP activated on the SBG3600-N Series.

Make sure the computer is connected to a LAN port of the SBG3600-N Series. Turn on your computer and the SBG3600-N Series.

8.5.1.1 Auto-discover Your UPnP-enabled Network Device

- 1 Click **start** and **Control Panel**. Double-click **Network Connections**. An icon displays under Internet Gateway.
- 2 Right-click the icon and select **Properties**.



Figure 60 Network Connections



- 3 In the **Internet Connection Properties** window, click **Settings** to see the port mappings there were automatically created.

Figure 61 Internet Connection Properties

- 4 You may edit or delete the port mappings or click **Add** to manually add port mappings.

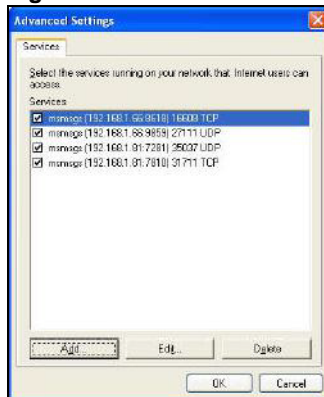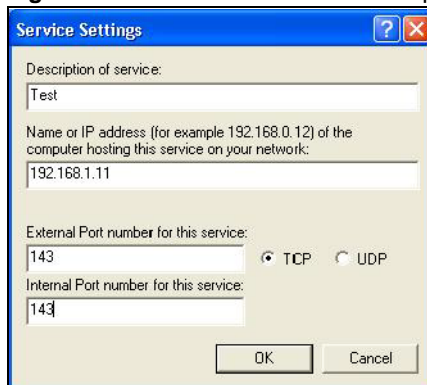Figure 62 Internet Connection Properties: Advanced Settings**Figure 63** Internet Connection Properties: Advanced Settings: Add

Note: When the UPnP-enabled device is disconnected from your computer, all port mappings will be deleted automatically.

- 5 Select **Show icon in notification area when connected** option and click **OK**. An icon displays in the system tray.

Figure 64 System Tray Icon

- 6 Double-click on the icon to display your current Internet connection status.


Figure 65 Internet Connection Status

8.5.2 Web Configurator Easy Access


With UPnP, you can access the web-based configurator on the SBG3600-N Series without finding out the IP address of the SBG3600-N Series first. This comes helpful if you do not know the IP address of the SBG3600-N Series.

Follow the steps below to access the web configurator.

- 1 Click **Start** and then **Control Panel**.
- 2 Double-click **Network Connections**.
- 3 Select **My Network Places** under **Other Places**.

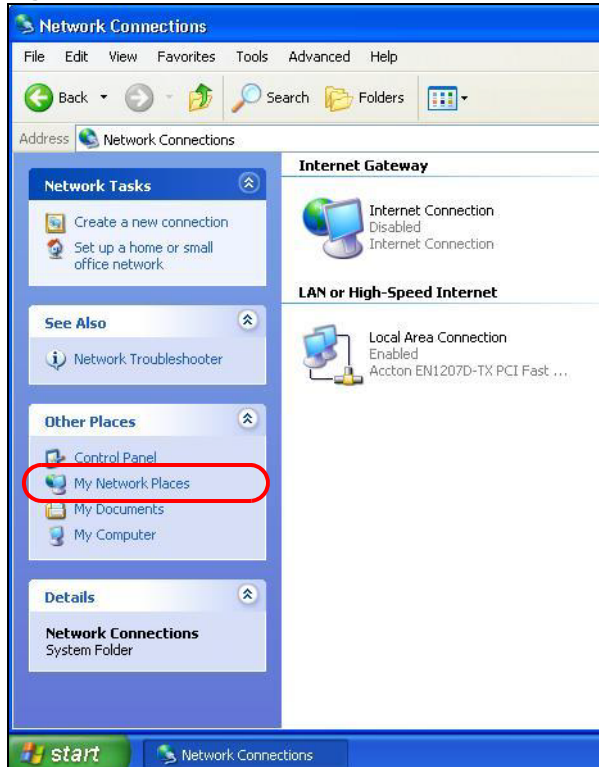Figure 66 Network Connections

- 4 An icon with the description for each UPnP-enabled device displays under **Local Network**.
- 5 Right-click on the icon for your SBG3600-N Series and select **Invoke**. The web configurator login screen displays.

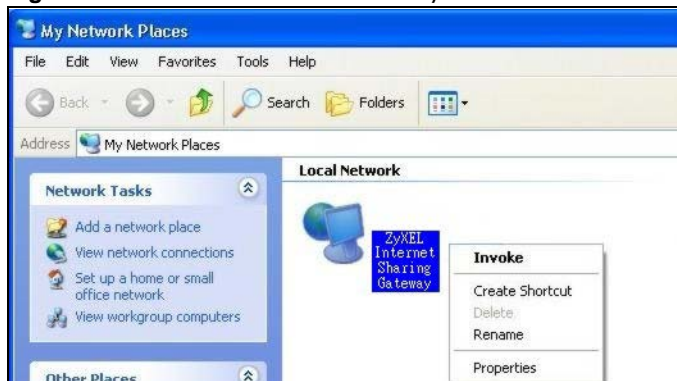Figure 67 Network Connections: My Network Places

- 6 Right-click on the icon for your SBG3600-N Series and select **Properties**. A properties window displays with basic information about the SBG3600-N Series.

Figure 68 Network Connections: My Network Places: Properties: Example

8.6 The Additional Subnet Screen

Use the **Additional Subnet** screen to configure IP alias and public static IP.

IP alias allows you to partition a physical network into different logical networks over the same Ethernet interface. The SBG3600-N Series supports multiple logical LAN interfaces via its physical Ethernet interface with the SBG3600-N Series itself as the gateway for the LAN network. When you use IP alias, you can also configure firewall rules to control access to the LAN's logical network (subnet).

If your ISP provides the Public LAN service, the SBG3600-N Series may use an LAN IP address that can be accessed from the WAN.

Click **Network Setting > LAN > Additional Subnet** to display the screen shown next.

Figure 69 Network Setting > LAN > Additional Subnet

IP Alias Setup

Group Name :

Active ☒

IP Address :

IP Subnet Mask :

Public LAN

Active ☒

IP Address :

IP Subnet Mask :

Offer Public IP by DHCP : ☐

Enable ARP Proxy : ☐

The following table describes the labels in this screen.

Table 39 Network Setting > LAN > Additional Subnet

| LABEL | DESCRIPTION |
|----------------|---|
| IP Alias Setup | |
| Group Name | Select the interface group name for which you want to configure the IP alias settings. See Chapter 15 on page 253 for how to create a new interface group. |
| Active | Select the checkbox to configure a LAN network for the SBG3600-N Series. |
| IP Address | Enter the IP address of your SBG3600-N Series in dotted decimal notation. |
| IP Subnet Mask | Your SBG3600-N Series will automatically calculate the subnet mask based on the IP address that you assign. Unless you are implementing subnetting, use the subnet mask computed by the SBG3600-N Series. |
| Public LAN | |
| Active | Select the checkbox to enable the Public LAN feature. Your ISP must support Public LAN and Static IP. |
| IP Address | Enter the public IP address provided by your ISP. |
| IP Subnet Mask | Enter the public IP subnet mask provided by your ISP. |

Table 39 Network Setting > LAN > Additional Subnet (continued)

| LABEL | DESCRIPTION |
|-------------------------|---|
| Offer Public IP by DHCP | Select the checkbox to enable the SBG3600-N Series to provide public IP addresses by DHCP server. |
| Enable ARP Proxy | Select the checkbox to enable the ARP (Address Resolution Protocol) proxy. |
| Apply | Click Apply to save your changes. |
| Cancel | Click Cancel to exit this screen without saving. |

8.7 The 5th Ethernet Port Screen

If you are using DSL connection, you can configure your Ethernet WAN port as an extra LAN port. This fifth Ethernet port is a Gigabit port. Click **Network Settings > LAN > 5th Ethernet Port** to open this screen.

Figure 70 Network Settings > LAN > 5th Ethernet Port

State : ☐ Enable ☒ Disable

Notes:

1. State Enable, the Ethernet Port is LAN ethernet.
2. State Disable, the Ethernet Port is WAN ethernet.

Apply Cancel

The following table describes the fields in this screen.

Table 40 Network Settings > LAN > 5th Ethernet Port


| LABEL | DESCRIPTION |
|--------|--|
| State | Select Enable to use the Ethernet WAN port as a LAN port on the SBG3600-N Series. |
| Apply | Click Apply to save your changes back to the SBG3600-N Series. |
| Cancel | Click Cancel to exit this screen without saving. |

8.8 Technical Reference

This section provides some technical background information about the topics covered in this chapter.

8.8.1 LANs, WANs and the SBG3600-N Series

The actual physical connection determines whether the SBG3600-N Series ports are LAN or WAN ports. There are two separate IP networks, one inside the LAN network and the other outside the WAN network as shown next.

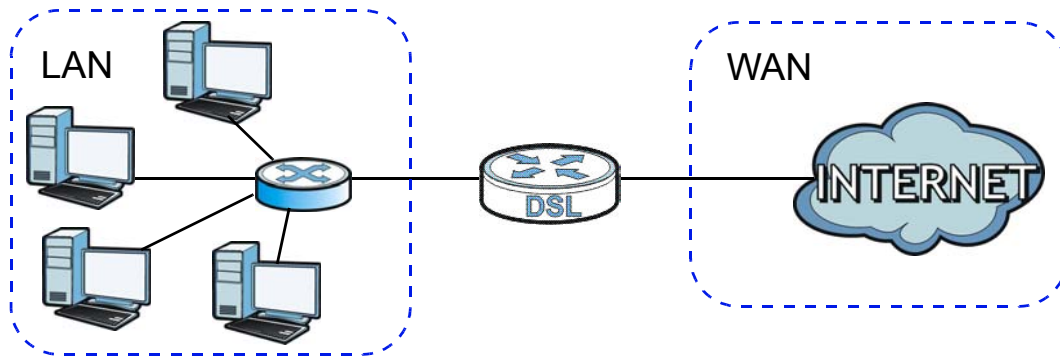Figure 71 LAN and WAN IP Addresses

8.8.2 DHCP Setup

DHCP (Dynamic Host Configuration Protocol, RFC 2131 and RFC 2132) allows individual clients to obtain TCP/IP configuration at start-up from a server. You can configure the SBG3600-N Series as a DHCP server or disable it. When configured as a server, the SBG3600-N Series provides the TCP/IP configuration for the clients. If you turn DHCP service off, you must have another DHCP server on your LAN, or else the computer must be manually configured.

IP Pool Setup

The SBG3600-N Series is pre-configured with a pool of IP addresses for the DHCP clients (DHCP Pool). See the product specifications in the appendices. Do not assign static IP addresses from the DHCP pool to your LAN computers.

8.8.3 DNS Server Addresses

DNS (Domain Name System) maps a domain name to its corresponding IP address and vice versa. The DNS server is extremely important because without it, you must know the IP address of a computer before you can access it. The DNS server addresses you enter when you set up DHCP are passed to the client machines along with the assigned IP address and subnet mask.

There are two ways that an ISP disseminates the DNS server addresses.

- The ISP tells you the DNS server addresses, usually in the form of an information sheet, when you sign up. If your ISP gives you DNS server addresses, enter them in the **DNS Server** fields in the **DHCP Setup** screen.
- Some ISPs choose to disseminate the DNS server addresses using the DNS server extensions of IPCP (IP Control Protocol) after the connection is up. If your ISP did not give you explicit DNS servers, chances are the DNS servers are conveyed through IPCP negotiation. The SBG3600-N Series supports the IPCP DNS server extensions through the DNS proxy feature.

Please note that DNS proxy works only when the ISP uses the IPCP DNS server extensions. It does not mean you can leave the DNS servers out of the DHCP setup under all circumstances. If your ISP gives you explicit DNS servers, make sure that you enter their IP addresses in the **DHCP Setup** screen.

8.8.4 LAN TCP/IP

The SBG3600-N Series has built-in DHCP server capability that assigns IP addresses and DNS servers to systems that support DHCP client capability.

IP Address and Subnet Mask

Similar to the way houses on a street share a common street name, so too do computers on a LAN share one common network number.

Where you obtain your network number depends on your particular situation. If the ISP or your network administrator assigns you a block of registered IP addresses, follow their instructions in selecting the IP addresses and the subnet mask.

If the ISP did not explicitly give you an IP network number, then most likely you have a single user account and the ISP will assign you a dynamic IP address when the connection is established. If this is the case, it is recommended that you select a network number from 192.168.0.0 to 192.168.255.0 and you must enable the Network Address Translation (NAT) feature of the SBG3600-N Series. The Internet Assigned Number Authority (IANA) reserved this block of addresses specifically for private use; please do not use any other number unless you are told otherwise. Let's say you select 192.168.1.0 as the network number; which covers 254 individual addresses, from 192.168.1.1 to 192.168.1.254 (zero and 255 are reserved). In other words, the first three numbers specify the network number while the last number identifies an individual computer on that network.

Once you have decided on the network number, pick an IP address that is easy to remember, for instance, 192.168.1.1, for your SBG3600-N Series, but make sure that no other device on your network is using that IP address.

The subnet mask specifies the network number portion of an IP address. Your SBG3600-N Series will compute the subnet mask automatically based on the IP address that you entered. You don't need to change the subnet mask computed by the SBG3600-N Series unless you are instructed to do otherwise.

Private IP Addresses

Every machine on the Internet must have a unique address. If your networks are isolated from the Internet, for example, only between your two branch offices, you can assign any IP addresses to the hosts without problems. However, the Internet Assigned Numbers Authority (IANA) has reserved the following three blocks of IP addresses specifically for private networks:

- 10.0.0.0 — 10.255.255.255
- 172.16.0.0 — 172.31.255.255
- 192.168.0.0 — 192.168.255.255

You can obtain your IP address from the IANA, from an ISP or it can be assigned from a private network. If you belong to a small organization and your Internet access is through an ISP, the ISP can provide you with the Internet addresses for your local networks. On the other hand, if you are part of a much larger organization, you should consult your network administrator for the appropriate IP addresses.

Note: Regardless of your particular situation, do not create an arbitrary IP address; always follow the guidelines above. For more information on address assignment, please refer to RFC 1597, "Address Allocation for Private Internets" and RFC 1466, "Guidelines for Management of IP Address Space".


Routing

9.1 Overview

The SBG3600-N Series usually uses the default gateway to route outbound traffic from computers on the LAN to the Internet. To have the SBG3600-N Series send data to devices not reachable through the default gateway, use static routes.

For example, the next figure shows a computer (**A**) connected to the SBG3600-N Series's LAN interface. The SBG3600-N Series routes most traffic from **A** to the Internet through the SBG3600-N Series's default gateway (**R1**). You create one static route to connect to services offered by your ISP behind router **R2**. You create another static route to communicate with a separate network behind a router **R3** connected to the LAN.

Figure 72 Example of Routing Topology

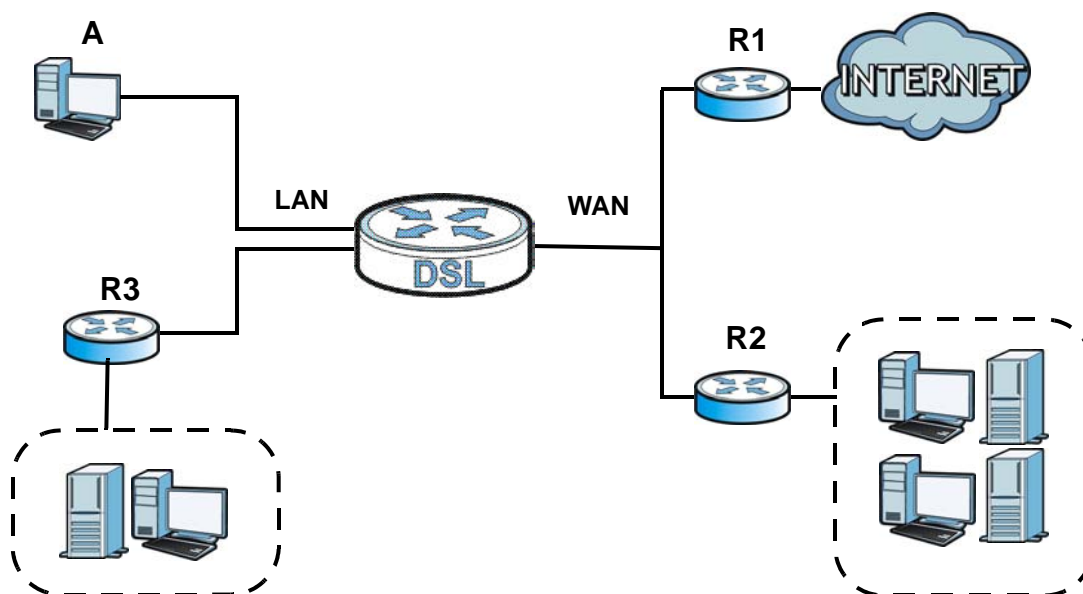

9.1.1 What You Can Do in this Chapter

- Use the **Static Route** screen to view and set up static routes on the SBG3600-N Series ([Section 9.2 on page 189](#)).
- Use the **Policy Forwarding** screen to configure policy routing on the SBG3600-N Series. ([Section 9.3 on page 190](#)).
- Use the **RIP** screen to set up RIP settings on the SBG3600-N Series. ([Section 9.4 on page 192](#)).

9.2 The Routing Screen

Use this screen to view and configure the static route rules on the SBG3600-N Series. Click **Network Setting > Routing > Static Route** to open the following screen.

Figure 73 Network Setting > Routing > Static Route

| Add new static route | | | | | | | |
|----------------------|--------|------|----------------|-------------|--------------|-----------|--------|
| # | Status | Name | Destination IP | Subnet Mask | Gateway | Interface | Modify |
| 1 | | test | 192.168.0.0 | 255.255.0.0 | 192.168.1.23 | ADSL | |

The following table describes the labels in this screen.

Table 41 Network Setting > Routing > Static Route

| LABEL | DESCRIPTION |
|----------------------|---|
| Add new static route | Click this to configure a new static route. |
| # | This is the index number of the entry. |
| Status | This field displays whether the static route is active or not. A yellow bulb signifies that this route is active. A gray bulb signifies that this route is not active. |
| Name | This is the name that describes or identifies this route. |
| Destination IP | This parameter specifies the IP network address of the final destination. Routing is always based on network number. |
| Subnet Mask | This parameter specifies the IP network subnet mask of the final destination. |
| Gateway | This is the IP address of the gateway. The gateway is a router or switch on the same network segment as the device's LAN or WAN port. The gateway helps forward packets to their destinations. |
| Interface | This is the WAN interface used for this static route. |
| Modify | Click the Edit icon to edit the static route on the SBG3600-N Series. Click the Delete icon to remove a static route from the SBG3600-N Series. A window displays asking you to confirm that you want to delete the route. |

9.2.1 Add/Edit Static Route

Use this screen to add or edit a static route. Click **Add new static route** in the **Routing** screen or the **Edit** icon next to the static route you want to edit. The screen shown next appears.

Figure 74 Routing: Add/Edit

☐ Active

Route Name :

IP Type:

Destination IP Address :

IP Subnet Mask :

Use Gateway IP Address : ☒ Enable ☐ Disable

Gateway IP Address :

Use Interface :

The following table describes the labels in this screen.

Table 42 Routing: Add/Edit

| LABEL | DESCRIPTION |
|------------------------|--|
| Active | This field allows you to activate/deactivate this static route. Select this to enable the static route. Clear this to disable this static route without having to delete the entry. |
| Route Name | Enter a descriptive name for the static route. |
| IP Type | Select whether your IP type is IPv4 or IPv6 . |
| Destination IP Address | Enter the IPv4 or IPv6 network address of the final destination. |
| IP Subnet Mask | If you are using IPv4 and need to specify a route to a single host, use a subnet mask of 255.255.255.255 in the subnet mask field to force the network number to be identical to the host ID. Enter the IP subnet mask here. |
| Use Gateway IP Address | The gateway is a router or switch on the same network segment as the device's LAN or WAN port. The gateway helps forward packets to their destinations. If you want to use the gateway IP address, select Enable . |
| Gateway IP Address | Enter the IP address of the gateway. |
| Use Interface | Select the WAN interface you want to use for this static route. |
| Apply | Click Apply to save your changes. |
| Cancel | Click Cancel to exit this screen without saving. |



9.3 The Policy Forwarding Screen

Traditionally, routing is based on the destination address only and the SBG3600-N Series takes the shortest path to forward a packet. Policy forwarding allows the SBG3600-N Series to override the default routing behavior and alter the packet forwarding based on the policy defined by the network administrator. Policy-based routing is applied to outgoing packets, prior to the normal routing.

You can use source-based policy forwarding to direct traffic from different users through different connections or distribute traffic among multiple paths for load sharing.

The **Policy Forwarding** screen let you view and configure routing policies on the SBG3600-N Series. Click **Network Setting > Routing > Policy Forwarding** to open the following screen.

Figure 75 Network Setting > Routing > Policy Forwarding

| Add new Policy Forward Rule | | | | | | | | | | | | |
|-----------------------------|-------------|--------------|--------------------|----------|-------------|------------|----------------|-------------------------|------------------|-----------------|------|---|
| # | Policy Name | Source IP | Source Subnet Mask | Protocol | Source Port | Source MAC | Destination IP | Destination Subnet Mask | Destination Port | Destination MAC | WAN | Modify |
| 1 | test | 192.168.1.35 | 255.255.255.0 | TCP | | | 192.168.1.30 | 255.255.255.0 | | | ADSL |   |

The following table describes the labels in this screen.

Table 43 Network Setting > Routing > Policy Forwarding

| LABEL | DESCRIPTION |
|-----------------------------|--|
| Add new Policy Forward Rule | Click this to create a new policy forwarding rule. |
| # | This is the index number of the entry. |

Table 43 Network Setting > Routing > Policy Forwarding (continued)

| LABEL | DESCRIPTION |
|-------------------------|---|
| Policy Name | This is the name of the rule. |
| Source IP | This is the source IP address. |
| Source Subnet Mask | This is the source subnet mask address. |
| Protocol | This is the transport layer protocol. |
| Source Port | This is the source port number. |
| Source MAC | This is the source MAC address |
| Destination IP | This is the destination IP address. |
| Destination Subnet Mask | This is the destination subnet mask address. |
| Destination Port | This is the destination port number. |
| Destination MAC | This is the destination MAC address. |
| WAN | This is the WAN interface through which the traffic is routed. |
| Modify | Click the Edit icon to edit this policy. Click the Delete icon to remove a policy from the SBG3600-N Series. A window displays asking you to confirm that you want to delete the policy. |

9.3.1 Add/Edit Policy Forwarding

Click **Add new Policy Forward Rule** in the **Policy Forwarding** screen or click the **Edit** icon next to a policy. Use this screen to configure the required information for a policy route.

Figure 76 Policy Forwarding: Add/Edit

Policy Name :

Source IP :

Source Subnet Mask :

Protocol :

Source Port :

Source MAC :

Destination IP :

Destination Subnet Mask :

Destination Port :

Destination MAC :

WAN : [Add WAN Interface](#)

The following table describes the labels in this screen.

Table 44 Policy Forwarding: Add/Edit (Sheet 1 of 2)

| LABEL | DESCRIPTION |
|-------------|--|
| Policy Name | Enter a descriptive name of up to 8 printable English keyboard characters, not including spaces. |
| Source IP | Enter the source IP address. |

Table 44 Policy Forwarding: Add/Edit (Sheet 2 of 2)

| LABEL | DESCRIPTION |
|-------------------------|--|
| Source Subnet Mask | Enter the source subnet mask address. |
| Protocol | Select the transport layer protocol (TCP or UDP). |
| Source Port | Enter the source port number. |
| Source MAC | Enter the source MAC address. |
| Destination IP | Enter the destination IP address. |
| Destination Subnet Mask | Enter the destination subnet mask address. |
| Destination Port | Enter the destination port. |
| Destination MAC | Enter the destination MAC address. |
| WAN | Select a WAN interface through which the traffic is sent. You must have the WAN interface(s) already configured in the Broadband screens. |
| Apply | Click Apply to save your changes. |
| Cancel | Click Cancel to exit this screen without saving. |

9.4 The RIP Screen

Routing Information Protocol (RIP, RFC 1058 and RFC 1389) allows a device to exchange routing information with other routers.

Click **Network Setting > Routing > RIP** to open the **RIP** screen.

Figure 77 RIP

| # | Interface | Version | Operation | Enabled |
|---|-----------|---------|-----------|--------------------------|
| 1 | atm0 | 2 ▼ | Passive ▼ | <input type="checkbox"/> |

Note:
RIP CANNOT BE CONFIGURED on the WAN interface which has NAT enabled (such as PPPoE).

The following table describes the labels in this screen.

Table 45 Network Setting > Routing > RIP

| LABEL | DESCRIPTION |
|-----------|--|
| # | This is the index number of the entry. |
| Interface | This is the name of the interface in which the RIP setting is used. |
| Version | The RIP version controls the format and the broadcasting method of the RIP packets that the SBG3600-N Series sends (it recognizes both formats when receiving). RIP version 1 is universally supported but RIP version 2 carries more information. RIP version 1 is probably adequate for most networks, unless you have an unusual network topology. |
| Operation | <p>Select Passive to have the SBG3600-N Series update the routing table based on the RIP packets received from neighbors but not advertise its route information to other routers in this interface.</p> <p>Select Active to have the SBG3600-N Series advertise its route information and also listen for routing updates from neighboring routers.</p> |

Table 45 Network Setting > Routing > RIP

| LABEL | DESCRIPTION |
|---------|---|
| Enabled | Select the check box to activate the settings. |
| Apply | Click Apply to save your changes. |
| Cancel | Click Cancel to exit this screen without saving. |

Quality of Service (QoS)

10.1 Overview

Quality of Service (QoS) refers to both a network's ability to deliver data with minimum delay, and the networking methods used to control the use of bandwidth. Without QoS, all traffic data is equally likely to be dropped when the network is congested. This can cause a reduction in network performance and make the network inadequate for time-critical application such as video-on-demand.

Configure QoS on the SBG3600-N Series to group and prioritize application traffic and fine-tune network performance. Setting up QoS involves these steps:

- 1 Configure classifiers to sort traffic into different flows.
- 2 Assign priority and define actions to be performed for a classified traffic flow.

The SBG3600-N Series assigns each packet a priority and then queues the packet accordingly. Packets assigned a high priority are processed more quickly than those with low priority if there is congestion, allowing time-sensitive applications to flow more smoothly. Time-sensitive applications include both those that require a low level of latency (delay) and a low level of jitter (variations in delay) such as Voice over IP (VoIP) or Internet gaming, and those for which jitter alone is a problem such as Internet radio or streaming video.

This chapter contains information about configuring QoS and editing classifiers.

10.1.1 What You Can Do in this Chapter

- The **General** screen lets you enable or disable QoS and set the upstream bandwidth ([Section 10.3 on page 196](#)).
- The **Queue Setup** screen lets you configure QoS queue assignment ([Section 10.4 on page 197](#)).
- The **Class Setup** screen lets you add, edit or delete QoS classifiers ([Section 10.5 on page 199](#)).
- The **Policer Setup** screen lets you add, edit or delete QoS policers ([Section 10.5 on page 199](#)).
- The **Monitor** screen lets you view the SBG3600-N Series's QoS-related packet statistics ([Section 10.7 on page 206](#)).

10.2 What You Need to Know

The following terms and concepts may help as you read through this chapter.

QoS versus Cos

QoS is used to prioritize source-to-destination traffic flows. All packets in the same flow are given the same priority. CoS (class of service) is a way of managing traffic in a network by grouping similar types of traffic together and treating each type as a class. You can use CoS to give different priorities to different packet types.


CoS technologies include IEEE 802.1p layer 2 tagging and DiffServ (Differentiated Services or DS). IEEE 802.1p tagging makes use of three bits in the packet header, while DiffServ is a new protocol and defines a new DS field, which replaces the eight-bit ToS (Type of Service) field in the IP header.

Tagging and Marking


In a QoS class, you can configure whether to add or change the DSCP (DiffServ Code Point) value, IEEE 802.1p priority level and VLAN ID number in a matched packet. When the packet passes through a compatible network, the networking device, such as a backbone switch, can provide specific treatment or service based on the tag or marker.

Traffic Shaping

Bursty traffic may cause network congestion. Traffic shaping regulates packets to be transmitted with a pre-configured data transmission rate using buffers (or queues). Your SBG3600-N Series uses the Token Bucket algorithm to allow a certain amount of large bursts while keeping a limit at the average rate.

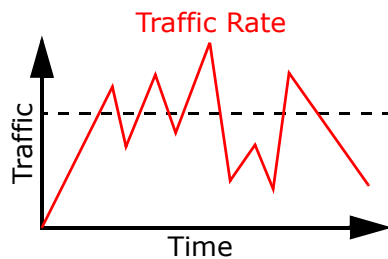


(Before Traffic Shaping)

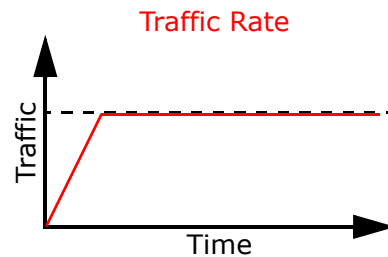

(After Traffic Shaping)

Traffic Policing

Traffic policing is the limiting of the input or output transmission rate of a class of traffic on the basis of user-defined criteria. Traffic policing methods measure traffic flows against user-defined criteria and identify it as either conforming, exceeding or violating the criteria.

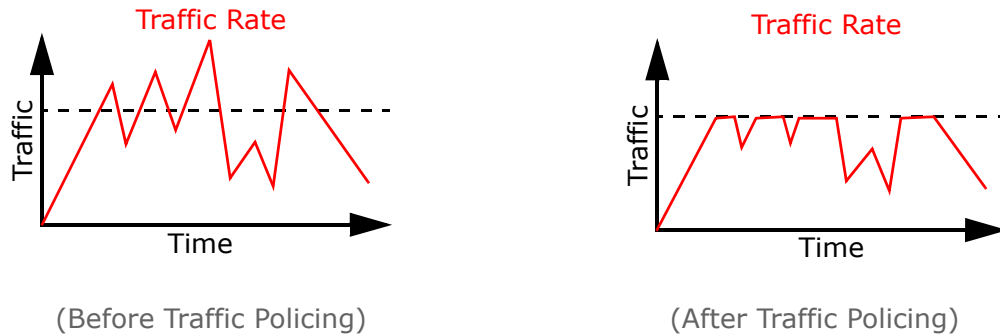

The SBG3600-N Series supports three incoming traffic metering algorithms: Token Bucket Filter (TBF), Single Rate Two Color Marker (srTCM), and Two Rate Two Color Marker (trTCM). You can specify actions which are performed on the colored packets. See [Section 10.8 on page 207](#) for more information on each metering algorithm.

10.3 The Quality of Service General Screen

Click **Network Setting > QoS > General** to open the screen as shown next.

Use this screen to enable or disable QoS and set the upstream bandwidth. See [Section 10.1 on page 194](#) for more information.

Figure 78 Network Settings > QoS > General

QoS ☒ Enable ☐ Disable (settings are invalid when disabled)

WAN Managed Upstream Bandwidth : (kbps)

LAN Managed Downstream Bandwidth : (kbps)

Upstream traffic priority Assigned by: None

Note:

You can assign the upstream bandwidth manually. If the field is empty, the CPE sets the value automatically.

If Enable QoS checkbox is selected, choose a default DSCP mark to automatically mark incoming traffic without reference to a particular classifier.

If the setting of WAN managed upstream bandwidth is greater than current WAN interface linkup rate, then the WAN managed upstream bandwidth will become current WAN interface linkup rate.

Apply
Cancel

The following table describes the labels in this screen.

Table 46 Network Setting > QoS > General

| LABEL | DESCRIPTION |
|---------------------------------------|--|
| QoS | Select the Enable check box to turn on QoS to improve your network performance. |
| WAN Managed Upstream Bandwidth | <p>Enter the amount of upstream bandwidth for the WAN interfaces that you want to allocate using QoS.</p> <p>The recommendation is to set this speed to match the interfaces' actual transmission speed. For example, set the WAN interfaces' speed to 100000 kbps if your Internet connection has an upstream transmission speed of 100 Mbps.</p> <p>You can set this number higher than the interfaces' actual transmission speed. The SBG3600-N Series uses up to 95% of the DSL port's actual upstream transmission speed even if you set this number higher than the DSL port's actual transmission speed.</p> <p>You can also set this number lower than the interfaces' actual transmission speed. This will cause the SBG3600-N Series to not use some of the interfaces' available bandwidth.</p> <p>If you leave this field blank, the SBG3600-N Series automatically sets this number to be 95% of the WAN interfaces' actual upstream transmission speed.</p> |
| LAN Managed Downstream Bandwidth | <p>Enter the amount of downstream bandwidth for the LAN interfaces (including WLAN) that you want to allocate using QoS.</p> <p>The recommendation is to set this speed to match the WAN interfaces' actual transmission speed. For example, set the LAN managed downstream bandwidth to 100000 kbps if you use a 100 Mbps wired Ethernet WAN connection.</p> <p>You can also set this number lower than the WAN interfaces' actual transmission speed. This will cause the SBG3600-N Series to not use some of the interfaces' available bandwidth.</p> <p>If you leave this field blank, the SBG3600-N Series automatically sets this to the LAN interfaces' maximum supported connection speed.</p> |
| Upstream traffic priority Assigned by | <p>Select how the SBG3600-N Series assigns priorities to various upstream traffic flows.</p> <ul style="list-style-type: none"> • None: Disables auto priority mapping and has the SBG3600-N Series put packets into the queues according to your classification rules. Traffic which does not match any of the classification rules is mapped into the default queue with the lowest priority. • Ethernet Priority: Automatically assign priority based on the IEEE 802.1p priority level. • IP Precedence: Automatically assign priority based on the first three bits of the TOS field in the IP header. • Packet Length: Automatically assign priority based on the packet size. Smaller packets get higher priority since control, signaling, VoIP, internet gaming, or other real-time packets are usually small while larger packets are usually best effort • data packets like file transfers. |
| Apply | Click Apply to save your changes. |
| Cancel | Click Cancel to restore your previously saved settings. |

10.4 The Queue Setup Screen

Click **Network Setting > QoS > Queue Setup** to open the screen as shown next.

Use this screen to configure QoS queue assignment.

Figure 79 Network Setting > QoS > Queue Setup

| Add new Queue | | | | | | | | |
|---------------|--------|--------------|-----------|----------|--------|-------------------|-------------------|--------|
| # | Status | Name | Interface | Priority | Weight | Buffer Management | Rate Limit (kbps) | Modify |
| 1 | | DefaultQueue | WAN | 8 | 1 | DT | 0 | |
| 2 | | PriQ1 | WAN | 1 | 1 | DT | 0 | |
| 3 | | PriQ2 | WAN | 2 | 1 | DT | 0 | |
| 4 | | PriQ3 | WAN | 3 | 1 | DT | 0 | |
| 5 | | PriQ4 | WAN | 4 | 1 | DT | 0 | |
| 6 | | PriQ5 | WAN | 5 | 1 | DT | 0 | |
| 7 | | PriQ6 | WAN | 6 | 1 | DT | 0 | |
| 8 | | PriQ7 | WAN | 7 | 1 | DT | 0 | |

Note:
maximum 8 configurable entries for WAN port, and maximum 3 configurable entries for each LAN port.
If queue is deleted, then related classifiers will be removed too.

The following table describes the labels in this screen.

Table 47 Network Setting > QoS > Queue Setup

| LABEL | DESCRIPTION |
|-------------------|--|
| Add new Queue | Click this button to create a new queue entry. |
| # | This is the index number of the entry. |
| Status | This field displays whether the queue is active or not. A yellow bulb signifies that this queue is active. A gray bulb signifies that this queue is not active. |
| Name | This shows the descriptive name of this queue. |
| Interface | This shows the name of the SBG3600-N Series's interface through which traffic in this queue passes. |
| Priority | This shows the priority of this queue. |
| Weight | This shows the weight of this queue. |
| Buffer Management | This shows the queue management algorithm used for this queue. Queue management algorithms determine how the SBG3600-N Series should handle packets when it receives too many (network congestion). |
| Rate Limit | This shows the maximum transmission rate allowed for traffic on this queue. |
| Modify | Click the Edit icon to edit the queue. Click the Delete icon to delete an existing queue. Note that subsequent rules move up by one when you take this action. |

10.4.1 Adding a QoS Queue

Click **Add new Queue** or the edit icon in the **Queue Setup** screen to configure a queue.

Figure 80 Queue Setup: Add

The screenshot shows a 'Queue Setup: Add' dialog box. It has the following fields and controls:

- Active:** A checkbox.
- Name:** A text input field.
- Interface:** A dropdown menu.
- Priority:** A dropdown menu currently showing '1 (High)'.
- Weight:** A dropdown menu currently showing '1'.
- Buffer Management:** A dropdown menu currently showing 'Drop Tail (DT)'.
- Rate Limit:** A text input field followed by '(kbps)'.
- Buttons:** 'OK' and 'Cancel' buttons at the bottom right.

The following table describes the labels in this screen.

Table 48 Queue Setup: Add

| LABEL | DESCRIPTION |
|-------------------|---|
| Active | Select to enable or disable this queue. |
| Name | Enter the descriptive name of this queue. Note that \"<>%\\^[]`'+\\\$\\,='#&@.:() are not allowed. |
| Interface | Select the interface to which this queue is applied. This field is read-only if you are editing the queue. |
| Priority | Select the priority level (from 1 to 7) of this queue. The smaller the number, the higher the priority level. Traffic assigned to higher priority queues gets through faster while traffic in lower priority queues is dropped if the network is congested. |
| Weight | Select the weight (from 1 to 8) of this queue. If two queues have the same priority level, the SBG3600-N Series divides the bandwidth across the queues according to their weights. Queues with larger weights get more bandwidth than queues with smaller weights. |
| Buffer Management | This field displays Drop Tail (DT) . Drop Tail (DT) is a simple queue management algorithm that allows the SBG3600-N Series buffer to accept as many packets as it can until it is full. Once the buffer is full, new packets that arrive are dropped until there is space in the buffer again (packets are transmitted out of it). |
| Rate Limit | Specify the maximum transmission rate (in Kbps) allowed for traffic on this queue. |
| OK | Click OK to save your changes. |
| Cancel | Click Cancel to exit this screen without saving. |

10.5 The Class Setup Screen




Use this screen to add, edit or delete QoS classifiers. A classifier groups traffic into data flows according to specific criteria such as the source address, destination address, source port number,

destination port number or incoming interface. For example, you can configure a classifier to select traffic from the same protocol port (such as Telnet) to form a flow.

You can give different priorities to traffic that the SBG3600-N Series forwards out through the WAN interface. Give high priority to voice and video to make them run more smoothly. Similarly, give low priority to many large file downloads so that they do not reduce the quality of other applications.

Click **Network Setting > QoS > Class Setup** to open the following screen.

Figure 81 Network Setting > QoS > Class Setup

| Add new Classifier | | | | | | | | |
|---------------------------|---|------------|----------------------------------|-----------|-------------|-------------|--------------|---|
| # | Status | Class Name | Classification Criteria | DSCP Mark | 802.1P Mark | VLAN ID Tag | To Queue | Modify |
| 1 |  | example | From Intf: LAN Ether Type: IP | Unchange | Unchange | Unchange | DefaultQueue |   |

The following table describes the labels in this screen.

Table 49 Network Setting > QoS > Class Setup

| LABEL | DESCRIPTION |
|-------------------------|---|
| Add new Classifier | Click this to create a new classifier. |
| # | This is the index number of the entry. |
| Status | This field displays whether the classifier is active or not. A yellow bulb signifies that this classifier is active. A gray bulb signifies that this classifier is not active. |
| Class Name | This is the name of the classifier. |
| Classification Criteria | This shows criteria specified in this classifier, for example the interface from which traffic of this class should come and the source MAC address of traffic that matches this classifier. |
| DSCP Mark | This is the DSCP number added to traffic of this classifier. |
| 802.1P Mark | This is the IEEE 802.1p priority level assigned to traffic of this classifier. |
| VLAN ID Tag | This is the VLAN ID number assigned to traffic of this classifier. |
| To Queue | This is the name of the queue in which traffic of this classifier is put. |
| Modify | Click the Edit icon to edit the classifier. Click the Delete icon to delete an existing classifier. Note that subsequent rules move up by one when you take this action. |

10.5.1 Add/Edit QoS Class

Click **Add new Classifier** in the **Class Setup** screen or the **Edit** icon next to a classifier to open the following screen.

Figure 82 Class Setup: Add/Edit

Please follow the guidance through step 1~5 to configure a QoS rule

Step1: Class Configuration

☐ Active

Class Name :

Classification Order : ▼

Step2: Criteria configuration

Use the configurations below to specify the characteristics of a data flow need to be managed by this QoS rule

- Basic**

From Interface : ▼

Ether Type : ▼
- Source**

| | | | | |
|-------------------------------------|--------------------------------|----------------|----------------------|----------------------------------|
| <input type="checkbox"/> Address | <input type="text"/> | Subnet Netmask | <input type="text"/> | <input type="checkbox"/> Exclude |
| <input type="checkbox"/> Port Range | <input type="text" value="~"/> | | | <input type="checkbox"/> Exclude |
| <input type="checkbox"/> MAC | <input type="text"/> | MAC Mask | <input type="text"/> | <input type="checkbox"/> Exclude |
- Destination**

| | | | | |
|-------------------------------------|--------------------------------|----------------|----------------------|----------------------------------|
| <input type="checkbox"/> Address | <input type="text"/> | Subnet Netmask | <input type="text"/> | <input type="checkbox"/> Exclude |
| <input type="checkbox"/> Port Range | <input type="text" value="~"/> | | | <input type="checkbox"/> Exclude |
| <input type="checkbox"/> MAC | <input type="text"/> | MAC Mask | <input type="text"/> | <input type="checkbox"/> Exclude |
- Others**

| | | |
|--|---|----------------------------------|
| <input type="checkbox"/> Service | <input type="text" value="Age of Empires"/> ▼ | <input type="checkbox"/> Exclude |
| <input type="checkbox"/> IP protocol | <input type="text" value="TCP"/> ▼ | <input type="checkbox"/> Exclude |
| <input type="checkbox"/> DHCP | <input type="text"/> ▼ | <input type="checkbox"/> Exclude |
| <input type="checkbox"/> Packet Length | <input type="text" value="~"/> | <input type="checkbox"/> Exclude |
| <input type="checkbox"/> DSCP | <input type="text" value="(0~63)"/> | <input type="checkbox"/> Exclude |
| <input type="checkbox"/> 802.1P | <input type="text" value="0 BE"/> ▼ | <input type="checkbox"/> Exclude |
| <input type="checkbox"/> VLAN ID | <input type="text" value="(0~4094)"/> | <input type="checkbox"/> Exclude |
| <input type="checkbox"/> TCP ACK | | <input type="checkbox"/> Exclude |

Step3: Packet modification

The content of the packet can be modified by applying the following settings:

DSCP Mark : ▼

802.1P Mark : ▼

VLAN ID : ▼

Step4: Policy Forwarding

This module can route or bridge packets to certain interface according to the class settings:

Forward To Interface : ▼

Step5: Outgoing queue selection

Outgoing queue decide the priority of the traffic and how traffic should be shaped in the WAN interface. Choose "None" if you don't want to apply outgoing queue

To Queue Index : ▼

The following table describes the labels in this screen.

Table 50 Class Setup: Add/Edit

| LABEL | DESCRIPTION |
|----------------------|--|
| Active | Select this to enable this classifier. |
| Class Name | Enter a descriptive name of up to 15 printable English keyboard characters, not including spaces. |
| Classification Order | Select an existing number for where you want to put this classifier to move the classifier to the number you selected after clicking Apply . Select Last to put this rule in the back of the classifier list. |
| From Interface | If you want to classify the traffic by an ingress interface, select an interface from the From Interface drop-down list box. |
| Ether Type | Select a predefined application to configure a class for the matched traffic. If you select IP , you also need to configure source or destination MAC address, IP address, DHCP options, DSCP value or the protocol type. If you select 802.1Q , you can configure an 802.1p priority level. |
| Source | |
| Address | Select the check box and enter the source IP address in dotted decimal notation. A blank source IP address means any source IP address. |
| Subnet Netmask | Enter the source subnet mask. |
| Port Range | If you select TCP or UDP in the IP Protocol field, select the check box and enter the port number(s) of the source. |
| MAC | Select the check box and enter the source MAC address of the packet. |
| MAC Mask | Type the mask for the specified MAC address to determine which bits a packet's MAC address should match. Enter "f" for each bit of the specified source MAC address that the traffic's MAC address should match. Enter "0" for the bit(s) of the matched traffic's MAC address, which can be of any hexadecimal character(s). For example, if you set the MAC address to 00:13:49:00:00:00 and the mask to ff:ff:ff:00:00:00, a packet with a MAC address of 00:13:49:12:34:56 matches this criteria. |
| Exclude | Select this option to exclude the packets that match the specified criteria from this classifier. |
| Destination | |
| Address | Select the check box and enter the source IP address in dotted decimal notation. A blank source IP address means any source IP address. |
| Subnet Netmask | Enter the source subnet mask. |
| Port Range | If you select TCP or UDP in the IP Protocol field, select the check box and enter the port number(s) of the source. |
| MAC | Select the check box and enter the source MAC address of the packet. |
| MAC Mask | Type the mask for the specified MAC address to determine which bits a packet's MAC address should match. Enter "f" for each bit of the specified source MAC address that the traffic's MAC address should match. Enter "0" for the bit(s) of the matched traffic's MAC address, which can be of any hexadecimal character(s). For example, if you set the MAC address to 00:13:49:00:00:00 and the mask to ff:ff:ff:00:00:00, a packet with a MAC address of 00:13:49:12:34:56 matches this criteria. |
| Exclude | Select this option to exclude the packets that match the specified criteria from this classifier. |
| Others | |

Table 50 Class Setup: Add/Edit (continued)

| LABEL | DESCRIPTION |
|---------------|--|
| Service | This field is available only when you select IP in the Ether Type field. This field simplifies classifier configuration by allowing you to select a predefined application. When you select a predefined application, you do not configure the rest of the filter fields. |
| IP Protocol | This field is available only when you select IP in the Ether Type field. Select this option and select the protocol (service type) from TCP , UDP , ICMP or IGMP . If you select User defined , enter the protocol (service type) number. |
| DHCP | This field is available only when you select IP in the Ether Type field. Select this option and select a DHCP option. If you select Vendor Class ID (DHCP Option 60) , enter the Vendor Class Identifier (Option 60) of the matched traffic, such as the type of the hardware or firmware. If you select User Class ID (DHCP Option 77) , enter a string that identifies the user's category or application type in the matched DHCP packets. |
| Packet Length | This field is available only when you select IP in the Ether Type field. Select this option and enter the minimum and maximum packet length (from 46 to 1500) in the fields provided. |
| DSCP | This field is available only when you select IP in the Ether Type field. Select this option and specify a DSCP (DiffServ Code Point) number between 0 and 63 in the field provided. |
| 802.1P | This field is available only when you select 802.1Q in the Ether Type field. Select this option and select a priority level (between 0 and 7) from the drop-down list box. "0" is the lowest priority level and "7" is the highest. |
| VLAN ID | This field is available only when you select 802.1Q in the Ether Type field. Select this option and specify a VLAN ID number. |
| TCP ACK | This field is available only when you select IP in the Ether Type field. If you select this option, the matched TCP packets must contain the ACK (Acknowledge) flag. |
| Exclude | Select this option to exclude the packets that match the specified criteria from this classifier. |
| DSCP Mark | This field is available only when you select IP in the Ether Type field. If you select Mark , enter a DSCP value with which the SBG3600-N Series replaces the DSCP field in the packets. If you select Unchange , the SBG3600-N Series keep the DSCP field in the packets. |
| 802.1P Mark | Select a priority level with which the SBG3600-N Series replaces the IEEE 802.1p priority field in the packets. If you select Unchange , the SBG3600-N Series keep the 802.1p priority field in the packets. |
| VLAN ID | If you select Remark , enter a VLAN ID number with which the SBG3600-N Series replaces the VLAN ID of the frames. If you select Remove , the SBG3600-N Series deletes the VLAN ID of the frames before forwarding them out. If you select Add , the SBG3600-N Series treat all matched traffic untagged and add a second VLAN ID. If you select Unchange , the SBG3600-N Series keep the VLAN ID in the packets. |

Table 50 Class Setup: Add/Edit (continued)

| LABEL | DESCRIPTION |
|----------------------|--|
| Forward to Interface | Select a WAN interface through which traffic of this class will be forwarded out. If you select Unchange , the SBG3600-N Series forward traffic of this class according to the default routing table. |
| To Queue Index | Select a queue that applies to this class. You should have configured a queue in the Queue Setup screen already. |
| Apply | Click Apply to save your changes. |
| Cancel | Click Cancel to exit this screen without saving. |

10.6 The QoS Policer Setup Screen

Use this screen to configure QoS policers that allow you to limit the transmission rate of incoming traffic. Click **Network Setting > QoS > Policer Setup**. The screen appears as shown.

Figure 83 Network Setting > QoS > Policer Setup

| Add new Policer | | | | | | | |
|-----------------|--------|------|-------------------|-------------------|---|--|--------|
| # | Status | Name | Regulated Classes | Meter Type | Rule | Action | Modify |
| 1 | | test | Class 1: example | SimpleTokenBucket | Committed Rate: 200Kbps Committed Burst Size: 300Kbyte | Conforming Action: Pass Non-Conforming Action: Drop | |

The following table describes the labels in this screen.

Table 51 Network Setting > QoS > Policer Setup

| LABEL | DESCRIPTION |
|-------------------|---|
| Add new Policer | Click this to create a new entry. |
| # | This is the index number of the entry. |
| Status | This field displays whether the policer is active or not. A yellow bulb signifies that this policer is active. A gray bulb signifies that this policer is not active. |
| Name | This field displays the descriptive name of this policer. |
| Regulated Classes | This field displays the name of a QoS classifier. |
| Meter Type | This field displays the type of QoS metering algorithm used in this policer. |
| Rule | These are the rates and burst sizes against which the policer checks the traffic of the member QoS classes. |
| Action | This shows the how the policer has the SBG3600-N Series treat different types of traffic belonging to the policer's member QoS classes. |
| Modify | Click the Edit icon to edit the policer. Click the Delete icon to delete an existing policer. Note that subsequent rules move up by one when you take this action. |

10.6.1 Add/Edit a QoS Policer

Click **Add new Policer** in the **Policer Setup** screen or the **Edit** icon next to a policer to show the following screen.

Figure 84 Policer Setup: Add/Edit

The following table describes the labels in this screen.

Table 52 Policer Setup: Add/Edit

| LABEL | DESCRIPTION |
|----------------------|--|
| Active | Select the check box to activate this policer. |
| Name | Enter the descriptive name of this policer. |
| Meter Type | <p>This shows the traffic metering algorithm used in this policer.</p> <p>The Simple Token Bucket algorithm uses tokens in a bucket to control when traffic can be transmitted. Each token represents one byte. The algorithm allows bursts of up to <i>b</i> bytes which is also the bucket size.</p> <p>The Single Rate Three Color Marker (srTCM) is based on the token bucket filter and identifies packets by comparing them to the Committed Information Rate (CIR), the Committed Burst Size (CBS) and the Excess Burst Size (EBS).</p> <p>The Two Rate Three Color Marker (trTCM) is based on the token bucket filter and identifies packets by comparing them to the Committed Information Rate (CIR) and the Peak Information Rate (PIR).</p> |
| Committed Rate | Specify the committed rate. When the incoming traffic rate of the member QoS classes is less than the committed rate, the device applies the conforming action to the traffic. |
| Committed Burst Size | <p>Specify the committed burst size for packet bursts. This must be equal to or less than the peak burst size (two rate three color) or excess burst size (single rate three color) if it is also configured.</p> <p>This is the maximum size of the (first) token bucket in a traffic metering algorithm.</p> |
| Conforming Action | <p>Specify what the SBG3600-N Series does for packets within the committed rate and burst size (green-marked packets).</p> <ul style="list-style-type: none"> Pass: Send the packets without modification. DSCP Mark: Change the DSCP mark value of the packets. Enter the DSCP mark value to use. |

Table 52 Policer Setup: Add/Edit (continued)

| LABEL | DESCRIPTION |
|-----------------------|--|
| Non-Conforming Action | Specify what the SBG3600-N Series does for packets that exceed the excess burst size or peak rate and burst size (red-marked packets). <ul style="list-style-type: none"> Drop: Discard the packets. DSCP Mark: Change the DSCP mark value of the packets. Enter the DSCP mark value to use. The packets may be dropped if there is congestion on the network. |
| Available Class | Select a QoS classifier to apply this QoS policer to traffic that matches the QoS classifier. |
| Selected Class | Highlight a QoS classifier in the Available Class box and use the > button to move it to the Selected Class box. To remove a QoS classifier from the Selected Class box, select it and use the < button. |
| Apply | Click Apply to save your changes. |
| Cancel | Click Cancel to exit this screen without saving. |

10.7 The QoS Monitor Screen

To view the SBG3600-N Series's QoS packet statistics, click **Network Setting > QoS > Monitor**. The screen appears as shown.

Figure 85 Network Setting > QoS > Monitor

Monitor
Refresh Interval : No Refresh ▼

Status :

- Interface Monitor**

| # | Name | Pass Rate(bps) | Drop Rate(bps) |
|---|------|----------------|----------------|
| 1 | WAN | 0 | 0 |
| 2 | LAN | | |
- Queue Monitor**

| # | Name | Pass Rate(bps) | Drop Rate(bps) |
|---|------|----------------|----------------|
|---|------|----------------|----------------|

The following table describes the labels in this screen.

Table 53 Network Setting > QoS > Monitor

| LABEL | DESCRIPTION |
|-------------------|--|
| Refresh Interval | Enter how often you want the SBG3600-N Series to update this screen. Select No Refresh to stop refreshing statistics. |
| Interface Monitor | |
| # | This is the index number of the entry. |
| Name | This shows the name of the interface on the SBG3600-N Series. |
| Pass Rate | This shows how many packets forwarded to this interface are transmitted successfully. |
| Drop Rate | This shows how many packets forwarded to this interface are dropped. |
| Queue Monitor | |
| # | This is the index number of the entry. |
| Name | This shows the name of the queue. |
| Pass Rate | This shows how many packets assigned to this queue are transmitted successfully. |
| Drop Rate | This shows how many packets assigned to this queue are dropped. |

10.8 Technical Reference

The following section contains additional technical information about the SBG3600-N Series features described in this chapter.

IEEE 802.1Q Tag

The IEEE 802.1Q standard defines an explicit VLAN tag in the MAC header to identify the VLAN membership of a frame across bridges. A VLAN tag includes the 12-bit VLAN ID and 3-bit user priority. The VLAN ID associates a frame with a specific VLAN and provides the information that devices need to process the frame across the network.

IEEE 802.1p specifies the user priority field and defines up to eight separate traffic types. The following table describes the traffic types defined in the IEEE 802.1d standard (which incorporates the 802.1p).

Table 54 IEEE 802.1p Priority Level and Traffic Type

| PRIORITY LEVEL | TRAFFIC TYPE |
|----------------|---|
| Level 7 | Typically used for network control traffic such as router configuration messages. |
| Level 6 | Typically used for voice traffic that is especially sensitive to jitter (jitter is the variations in delay). |
| Level 5 | Typically used for video that consumes high bandwidth and is sensitive to jitter. |
| Level 4 | Typically used for controlled load, latency-sensitive traffic such as SNA (Systems Network Architecture) transactions. |
| Level 3 | Typically used for "excellent effort" or better than best effort and would include important business traffic that can tolerate some delay. |
| Level 2 | This is for "spare bandwidth". |
| Level 1 | This is typically used for non-critical "background" traffic such as bulk transfers that are allowed but that should not affect other applications and users. |
| Level 0 | Typically used for best-effort traffic. |

DiffServ

QoS is used to prioritize source-to-destination traffic flows. All packets in the flow are given the same priority. You can use CoS (class of service) to give different priorities to different packet types.

DiffServ (Differentiated Services) is a class of service (CoS) model that marks packets so that they receive specific per-hop treatment at DiffServ-compliant network devices along the route based on the application types and traffic flow. Packets are marked with DiffServ Code Points (DSCPs) indicating the level of service desired. This allows the intermediary DiffServ-compliant network devices to handle the packets differently depending on the code points without the need to negotiate paths or remember state information for every flow. In addition, applications do not have to request a particular service or give advanced notice of where the traffic is going.

DSCP and Per-Hop Behavior

DiffServ defines a new Differentiated Services (DS) field to replace the Type of Service (TOS) field in the IP header. The DS field contains a 2-bit unused field and a 6-bit DSCP field which can define up to 64 service levels. The following figure illustrates the DS field.

DSCP is backward compatible with the three precedence bits in the ToS octet so that non-DiffServ compliant, ToS-enabled network device will not conflict with the DSCP mapping.

| | |
|---------------|-----------------|
| DSCP (6 bits) | Unused (2 bits) |
|---------------|-----------------|

The DSCP value determines the forwarding behavior, the PHB (Per-Hop Behavior), that each packet gets across the DiffServ network. Based on the marking rule, different kinds of traffic can be marked for different kinds of forwarding. Resources can then be allocated according to the DSCP values and the configured policies.

IP Precedence

Similar to IEEE 802.1p prioritization at layer-2, you can use IP precedence to prioritize packets in a layer-3 network. IP precedence uses three bits of the eight-bit ToS (Type of Service) field in the IP header. There are eight classes of services (ranging from zero to seven) in IP precedence. Zero is the lowest priority level and seven is the highest.

Automatic Priority Queue Assignment

If you enable QoS on the SBG3600-N Series, the SBG3600-N Series can automatically base on the IEEE 802.1p priority level, IP precedence and/or packet length to assign priority to traffic which does not match a class.

The following table shows you the internal layer-2 and layer-3 QoS mapping on the SBG3600-N Series. On the SBG3600-N Series, traffic assigned to higher priority queues gets through faster while traffic in lower index queues is dropped if the network is congested.

Table 55 Internal Layer2 and Layer3 QoS Mapping

| PRIORITY QUEUE | LAYER 2 | LAYER 3 | | |
|----------------|---|---------------------|--------------------------------------|-------------------------|
| | IEEE 802.1P USER PRIORITY (ETHERNET PRIORITY) | TOS (IP PRECEDENCE) | DSCP | IP PACKET LENGTH (BYTE) |
| 0 | 1 | 0 | 000000 | |
| 1 | 2 | | | |
| 2 | 0 | 0 | 000000 | >1100 |
| 3 | 3 | 1 | 001110 001100 001010 001000 | 250~1100 |
| 4 | 4 | 2 | 010110 010100 010010 010000 | |

Table 55 Internal Layer2 and Layer3 QoS Mapping

| PRIORITY QUEUE | LAYER 2 | LAYER 3 | | |
|----------------|---|---------------------|--------------------------------------|-------------------------|
| | IEEE 802.1P USER PRIORITY (ETHERNET PRIORITY) | TOS (IP PRECEDENCE) | DSCP | IP PACKET LENGTH (BYTE) |
| 5 | 5 | 3 | 011110 011100 011010 011000 | <250 |
| 6 | 6 | 4 | 100110 100100 100010 100000 | |
| | | 5 | 101110 101000 | |
| 7 | 7 | 6 | 110000 | |
| | | 7 | 111000 | |

Token Bucket

The token bucket algorithm uses tokens in a bucket to control when traffic can be transmitted. The bucket stores tokens, each of which represents one byte. The algorithm allows bursts of up to b bytes which is also the bucket size, so the bucket can hold up to b tokens. Tokens are generated and added into the bucket at a constant rate. The following shows how tokens work with packets:

- A packet can be transmitted if the number of tokens in the bucket is equal to or greater than the size of the packet (in bytes).
- After a packet is transmitted, a number of tokens corresponding to the packet size is removed from the bucket.
- If there are no tokens in the bucket, the SBG3600-N Series stops transmitting until enough tokens are generated.
- If not enough tokens are available, the SBG3600-N Series treats the packet in either one of the following ways:

In traffic shaping:

- Holds it in the queue until enough tokens are available in the bucket.

In traffic policing:

- Drops it.
- Transmits it but adds a DSCP mark. The SBG3600-N Series may drop these marked packets if the network is overloaded.

Configure the bucket size to be equal to or less than the amount of the bandwidth that the interface can support. It does not help if you set it to a bucket size over the interface's capability. The smaller the bucket size, the lower the data transmission rate and that may cause outgoing packets to be dropped. A larger transmission rate requires a big bucket size. For example, use a bucket size of 10 kbytes to get the transmission rate up to 10 Mbps.

Single Rate Three Color Marker

The Single Rate Three Color Marker (srTCM, defined in RFC 2697) is a type of traffic policing that identifies packets by comparing them to one user-defined rate, the Committed Information Rate (CIR), and two burst sizes: the Committed Burst Size (CBS) and Excess Burst Size (EBS).

The srTCM evaluates incoming packets and marks them with one of three colors which refer to packet loss priority levels. High packet loss priority level is referred to as red, medium is referred to as yellow and low is referred to as green.

The srTCM is based on the token bucket filter and has two token buckets (CBS and EBS). Tokens are generated and added into the bucket at a constant rate, called Committed Information Rate (CIR). When the first bucket (CBS) is full, new tokens overflow into the second bucket (EBS).

All packets are evaluated against the CBS. If a packet does not exceed the CBS it is marked green. Otherwise it is evaluated against the EBS. If it is below the EBS then it is marked yellow. If it exceeds the EBS then it is marked red.

The following shows how tokens work with incoming packets in srTCM:

- A packet arrives. The packet is marked green and can be transmitted if the number of tokens in the CBS bucket is equal to or greater than the size of the packet (in bytes).
- After a packet is transmitted, a number of tokens corresponding to the packet size is removed from the CBS bucket.
- If there are not enough tokens in the CBS bucket, the SBG3600-N Series checks the EBS bucket. The packet is marked yellow if there are sufficient tokens in the EBS bucket. Otherwise, the packet is marked red. No tokens are removed if the packet is dropped.

Two Rate Three Color Marker

The Two Rate Three Color Marker (trTCM, defined in RFC 2698) is a type of traffic policing that identifies packets by comparing them to two user-defined rates: the Committed Information Rate (CIR) and the Peak Information Rate (PIR). The CIR specifies the average rate at which packets are admitted to the network. The PIR is greater than or equal to the CIR. CIR and PIR values are based on the guaranteed and maximum bandwidth respectively as negotiated between a service provider and client.

The trTCM evaluates incoming packets and marks them with one of three colors which refer to packet loss priority levels. High packet loss priority level is referred to as red, medium is referred to as yellow and low is referred to as green.

The trTCM is based on the token bucket filter and has two token buckets (Committed Burst Size (CBS) and Peak Burst Size (PBS)). Tokens are generated and added into the two buckets at the CIR and PIR respectively.

All packets are evaluated against the PIR. If a packet exceeds the PIR it is marked red. Otherwise it is evaluated against the CIR. If it exceeds the CIR then it is marked yellow. Finally, if it is below the CIR then it is marked green.

The following shows how tokens work with incoming packets in trTCM:

- A packet arrives. If the number of tokens in the PBS bucket is less than the size of the packet (in bytes), the packet is marked red and may be dropped regardless of the CBS bucket. No tokens are removed if the packet is dropped.

- If the PBS bucket has enough tokens, the SBG3600-N Series checks the CBS bucket. The packet is marked green and can be transmitted if the number of tokens in the CBS bucket is equal to or greater than the size of the packet (in bytes). Otherwise, the packet is marked yellow.

Network Address Translation (NAT)

11.1 Overview

This chapter discusses how to configure NAT on the SBG3600-N Series. NAT (Network Address Translation - NAT, RFC 1631) is the translation of the IP address of a host in a packet, for example, the source address of an outgoing packet, used within one network to a different IP address known within another network.

11.1.1 What You Can Do in this Chapter

- Use the **Port Forwarding** screen to configure forward incoming service requests to the server(s) on your local network ([Section 11.2 on page 213](#)).
- Use the **Applications** screen to forward incoming service requests to the server(s) on your local network ([Section 11.3 on page 216](#)).
- Use the **Port Triggering** screen to add and configure the SBG3600-N Series's trigger port settings ([Section 11.4 on page 217](#)).
- Use the **Default Server** screen to configure a default server ([Section 11.5 on page 220](#)).
- Use the **ALG** screen to enable and disable the NAT and SIP (VoIP) ALG in the SBG3600-N Series ([Section 11.6 on page 221](#)).
- Use the **Address Mapping** screen to configure the SBG3600-N Series's address mapping settings ([Section 11.7 on page 221](#)).

11.1.2 What You Need To Know

Inside/Outside

Inside/outside denotes where a host is located relative to the SBG3600-N Series, for example, the computers of your subscribers are the inside hosts, while the web servers on the Internet are the outside hosts.

Global/Local

Global/local denotes the IP address of a host in a packet as the packet traverses a router, for example, the local address refers to the IP address of a host when the packet is in the local network, while the global address refers to the IP address of the host when the same packet is traveling in the WAN side.

NAT

In the simplest form, NAT changes the source IP address in a packet received from a subscriber (the inside local address) to another (the inside global address) before forwarding the packet to the

WAN side. When the response comes back, NAT translates the destination address (the inside global address) back to the inside local address before forwarding it to the original inside host.

Port Forwarding

A port forwarding set is a list of inside (behind NAT on the LAN) servers, for example, web or FTP, that you can make visible to the outside world even though NAT makes your whole inside network appear as a single computer to the outside world.

Finding Out More

See [Section 11.8 on page 223](#) for advanced technical information on NAT.

11.2 The Port Forwarding Screen

Use the **Port Forwarding** screen to forward incoming service requests to the server(s) on your local network.


You may enter a single port number or a range of port numbers to be forwarded, and the local IP address of the desired server. The port number identifies a service; for example, web service is on port 80 and FTP on port 21. In some cases, such as for unknown services or where one server can support more than one service (for example both FTP and web service), it might be better to specify a range of port numbers. You can allocate a server IP address that corresponds to a port or a range of ports.

The most often used port numbers and services are shown in [Appendix F on page 432](#). Please refer to RFC 1700 for further information about port numbers.

Note: Many residential broadband ISP accounts do not allow you to run any server processes (such as a Web or FTP server) from your location. Your ISP may periodically check for servers and may suspend your account if it discovers any active services at your location. If you are unsure, refer to your ISP.

Configuring Servers Behind Port Forwarding (Example)

Let's say you want to assign ports 21-25 to one FTP, Telnet and SMTP server (**A** in the example), port 80 to another (**B** in the example) and assign a default server IP address of 192.168.1.35 to a third (**C** in the example). You assign the LAN IP addresses and the ISP assigns the WAN IP address. The NAT network appears as a single host on the Internet.

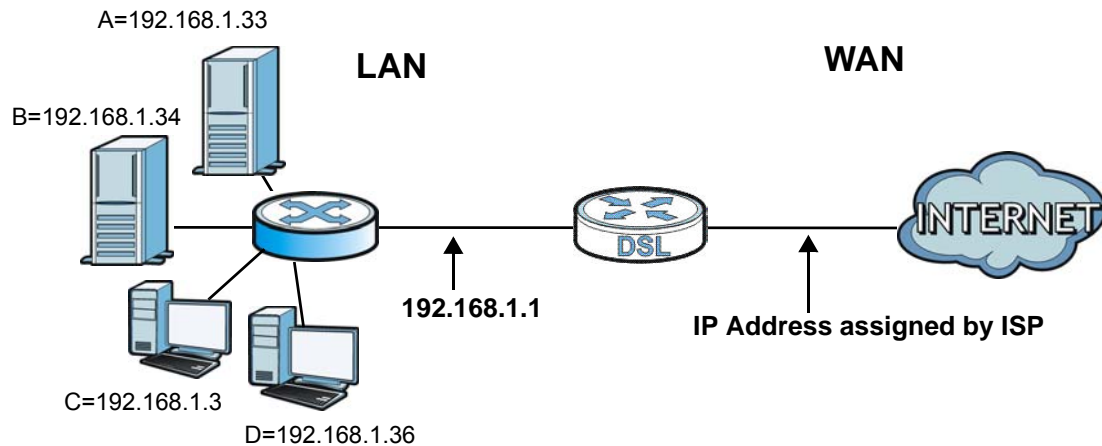Figure 86 Multiple Servers Behind NAT Example

Click **Network Setting > NAT > Port Forwarding** to open the following screen.

See [Appendix F on page 432](#) for port numbers commonly used for particular services.

Figure 87 Network Setting > NAT > Port Forwarding

The following table describes the fields in this screen.

Table 56 Network Setting > NAT > Port Forwarding

| LABEL | DESCRIPTION |
|-------------------|--|
| Add new rule | Click this to add a new rule. |
| # | This is the index number of the entry. |
| Status | This field displays whether the NAT rule is active or not. A yellow bulb signifies that this rule is active. A gray bulb signifies that this rule is not active. |
| Service Name | This shows the service's name. |
| WAN Interface | This shows the WAN interface through which the service is forwarded. |
| WAN IP | This field displays the incoming packet's destination IP address. |
| Server IP Address | This is the server's IP address. |
| Start Port | This is the first external port number that identifies a service. |
| End Port | This is the last external port number that identifies a service. |

Table 56 Network Setting > NAT > Port Forwarding (continued)

| LABEL | DESCRIPTION |
|------------------------|--|
| Translation Start Port | This is the first internal port number that identifies a service. |
| Translation End Port | This is the last internal port number that identifies a service. |
| Protocol | This shows the IP protocol supported by this virtual server, whether it is TCP , UDP , or TCP/UDP . |
| Modify | Click the Edit icon to edit this rule. Click the Delete icon to delete an existing rule. |

11.2.1 Add/Edit Port Forwarding

Click **Add new rule** in the **Port Forwarding** screen or click the **Edit** icon next to an existing rule to open the following screen.

Figure 88 Port Forwarding: Add/Edit

The following table describes the labels in this screen.

Table 57 Port Forwarding: Add/Edit

| LABEL | DESCRIPTION |
|---------------|---|
| Active | Clear the checkbox to disable the rule. Select the check box to enable it. |
| Service Name | Enter a name to identify this rule using keyboard characters (A-Z, a-z, 1-2 and so on). |
| WAN Interface | Select the WAN interface through which the service is forwarded. You must have already configured a WAN connection with NAT enabled. |
| WAN IP | Enter the WAN IP address for which the incoming service is destined. If the packet's destination IP address doesn't match the one specified here, the port forwarding rule will not be applied. |
| Start Port | Enter the original destination port for the packets. To forward only one port, enter the port number again in the End Port field. To forward a series of ports, enter the start port number here and the end port number in the End Port field. |

Table 57 Port Forwarding: Add/Edit (continued)


| LABEL | DESCRIPTION |
|------------------------|---|
| End Port | Enter the last port of the original destination port range. To forward only one port, enter the port number in the Start Port field above and then enter it again in this field. To forward a series of ports, enter the last port number in a series that begins with the port number in the Start Port field above. |
| Translation Start Port | This shows the port number to which you want the SBG3600-N Series to translate the incoming port. For a range of ports, enter the first number of the range to which you want the incoming ports translated. |
| Translation End Port | This shows the last port of the translated port range. |
| Server IP Address | Enter the inside IP address of the virtual server here. |
| Protocol | Select the protocol supported by this virtual server. Choices are TCP , UDP , or TCP/UDP . |
| OK | Click OK to save your changes. |
| Cancel | Click Cancel to exit this screen without saving. |

11.3 The Applications Screen

This screen provides a summary of all NAT applications and their configuration. In addition, this screen allows you to create new applications and/or remove existing ones.

To access this screen, click **Network Setting > NAT > Applications**. The following screen appears.

Figure 89 Network Setting > NAT > Applications

| Add new application | | | | |
|---------------------|---------------------------|---------------|-------------------|---|
| # | Application Forwarded | WAN Interface | Server IP Address | Modify |
| 1 | Remote Desktop Connection | ADSL | 192.168.1.23 |  |

The following table describes the labels in this screen.

Table 58 Network Setting > NAT > Applications

| LABEL | DESCRIPTION |
|-----------------------|--|
| Add new application | Click this to add a new NAT application rule. |
| # | This field displays the index number of the application rule. |
| Application Forwarded | This field shows the type of application that the service forwards. |
| WAN Interface | This field shows the WAN interface through which the service is forwarded. |
| Server IP Address | This field displays the destination IP address for the service. |
| Modify | Click the Delete icon to delete the rule. |

11.3.1 Add New Application

This screen lets you create new NAT application rules. Click **Add new application** in the **Applications** screen to open the following screen.

Figure 90 Applications: Add

The following table describes the labels in this screen.

Table 59 Applications: Add

| LABEL | DESCRIPTION |
|-----------------------|---|
| WAN Interface | Select the WAN interface that you want to apply this NAT rule to. |
| Server IP Address | Enter the inside IP address of the application here. |
| Application Category | Select the category of the application from the drop-down list box. |
| Application Forwarded | Select a service from the drop-down list box and the SBG3600-N Series automatically configures the protocol, start, end, and map port number that define the service. |
| View Rule | Click this to display the configuration of the service that you have chosen in Application Forwarded . |
| OK | Click OK to save your changes. |
| Cancel | Click Cancel to exit this screen without saving. |


11.4 The Port Triggering Screen

Some services use a dedicated range of ports on the client side and a dedicated range of ports on the server side. With regular port forwarding you set a forwarding port in NAT to forward a service (coming in from the server on the WAN) to the IP address of a computer on the client side (LAN). The problem is that port forwarding only forwards a service to a single LAN IP address. In order to use the same service on a different LAN computer, you have to manually replace the LAN computer's IP address in the forwarding port with another LAN computer's IP address.

Trigger port forwarding solves this problem by allowing computers on the LAN to dynamically take turns using the service. The SBG3600-N Series records the IP address of a LAN computer that sends traffic to the WAN to request a service with a specific port number and protocol (a "trigger" port). When the SBG3600-N Series's WAN port receives a response with a specific port number and protocol ("open" port), the SBG3600-N Series forwards the traffic to the LAN IP address of the computer that sent the request. After that computer's connection for that service closes, another computer on the LAN can use the service in the same manner. This way you do not need to configure a new IP address each time you want a different LAN computer to use the application.

For example:

Figure 91 Trigger Port Forwarding Process: Example

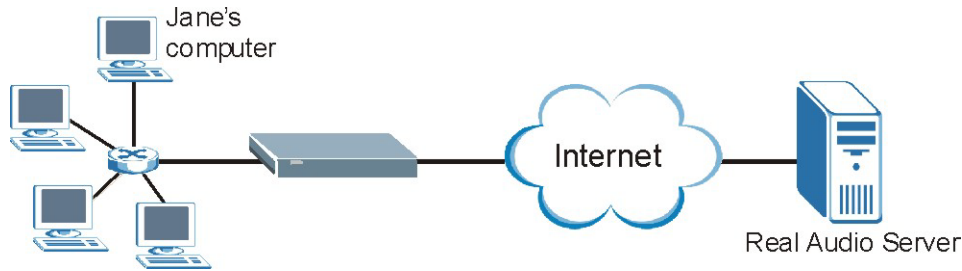

- 1 Jane requests a file from the Real Audio server (port 7070).
- 2 Port 7070 is a "trigger" port and causes the SBG3600-N Series to record Jane's computer IP address. The SBG3600-N Series associates Jane's computer IP address with the "open" port range of 6970-7170.
- 3 The Real Audio server responds using a port number ranging between 6970-7170.
- 4 The SBG3600-N Series forwards the traffic to Jane's computer IP address.
- 5 Only Jane can connect to the Real Audio server until the connection is closed or times out. The SBG3600-N Series times out in three minutes with UDP (User Datagram Protocol) or two hours with TCP/IP (Transfer Control Protocol/Internet Protocol).

Click **Network Setting > NAT > Port Triggering** to open the following screen. Use this screen to view your SBG3600-N Series's trigger port settings.

Figure 92 Network Setting > NAT > Port Triggering

| Add new rule | | | | | | | | | | | |
|--------------|--------|--------------|---------------|--------------------|------------------|----------------|-----------------|---------------|-------------|--------|--|
| # | Status | Service Name | WAN Interface | Trigger Start Port | Trigger End Port | Trigger Proto. | Open Start Port | Open End Port | Open Proto. | Modify | |
| 1 | | Test | ADSL | 5191 | 5191 | TCP or UDP | 5191 | 5191 | TCP | | |

The following table describes the labels in this screen.

Table 60 Network Setting > NAT > Port Triggering

| LABEL | DESCRIPTION |
|--------------------|--|
| Add new rule | Click this to create a new rule. |
| # | This is the index number of the entry. |
| Status | This field displays whether the port triggering rule is active or not. A yellow bulb signifies that this rule is active. A gray bulb signifies that this rule is not active. |
| Service Name | This field displays the name of the service used by this rule. |
| WAN Interface | This field shows the WAN interface through which the service is forwarded. |
| Trigger Start Port | The trigger port is a port (or a range of ports) that causes (or triggers) the SBG3600-N Series to record the IP address of the LAN computer that sent the traffic to a server on the WAN. This is the first port number that identifies a service. |
| Trigger End Port | This is the last port number that identifies a service. |

Table 60 Network Setting > NAT > Port Triggering (continued)

| LABEL | DESCRIPTION |
|-----------------|--|
| Trigger Proto. | This is the trigger transport layer protocol. |
| Open Start Port | The open port is a port (or a range of ports) that a server on the WAN uses when it sends out a particular service. The SBG3600-N Series forwards the traffic with this port (or range of ports) to the client computer on the LAN that requested the service. This is the first port number that identifies a service. |
| Open End Port | This is the last port number that identifies a service. |
| Open Proto. | This is the open transport layer protocol. |
| Modify | Click the Edit icon to edit this rule. Click the Delete icon to delete an existing rule. |

11.4.1 Add/Edit Port Triggering Rule

This screen lets you create new port triggering rules. Click **Add new rule** in the **Port Triggering** screen or click a rule's **Edit** icon to open the following screen.

Figure 93 Port Triggering: Add/Edit

The following table describes the labels in this screen.

Table 61 Port Triggering: Configuration Add/Edit

| LABEL | DESCRIPTION |
|--------------------|--|
| Active | Select the check box to enable this rule. |
| Service Name | Enter a name to identify this rule using keyboard characters (A-Z, a-z, 1-2 and so on). |
| WAN Interface | Select a WAN interface for which you want to configure port triggering rules. |
| Trigger Start Port | The trigger port is a port (or a range of ports) that causes (or triggers) the SBG3600-N Series to record the IP address of the LAN computer that sent the traffic to a server on the WAN. Type a port number or the starting port number in a range of port numbers. |
| Trigger End Port | Type a port number or the ending port number in a range of port numbers. |
| Trigger Protocol | Select the transport layer protocol from TCP , UDP , or TCP/UDP . |

Table 61 Port Triggering: Configuration Add/Edit (continued)

| LABEL | DESCRIPTION |
|-----------------|--|
| Open Start Port | The open port is a port (or a range of ports) that a server on the WAN uses when it sends out a particular service. The SBG3600-N Series forwards the traffic with this port (or range of ports) to the client computer on the LAN that requested the service. Type a port number or the starting port number in a range of port numbers. |
| Open End Port | Type a port number or the ending port number in a range of port numbers. |
| Open Protocol | Select the transport layer protocol from TCP , UDP , or TCP/UDP . |
| OK | Click OK to save your changes. |
| Cancel | Click Cancel to exit this screen without saving. |

11.5 The Default Server Screen

In addition to the servers for specified services, NAT supports a default server IP address. A default server receives packets from ports that are not specified in the **NAT Port Forwarding Setup** screen.

Figure 94 Network Setting > NAT > Default Server

Group Name :

Default Server Address :

Note:

1. Select the DMZ group from drop-down list. The group can be created from Network Setting -> Interface Group.
2. Enter IP address and click "Apply" to activate the DMZ host.
3. Clear the IP address field and click "Apply" to deactivate the DMZ host.
4. Some default ports of services are already used by remote management. If you need the same ports for DMZ server, please change the ports used by remote management from Maintenance -> Remote MGMT.

The following table describes the fields in this screen.

Table 62 Network Setting > NAT > Default Server

| LABEL | DESCRIPTION |
|------------------------|---|
| Group Name | Select the name of an interface group that was created in the Network Setting > Interface Group screen. The DMZ host must be in the same subnet as the selected interface group. |
| Default Server Address | Enter the IP address of the default server which receives packets from ports that are not specified in the NAT Port Forwarding screen. Note: If you do not assign a Default Server Address , the SBG3600-N Series discards all packets received for ports that are not specified in the NAT Port Forwarding screen. |
| Apply | Click Apply to save your changes. |
| Cancel | Click Cancel to restore your previously saved settings. |

11.6 The ALG Screen

Some NAT routers may include a SIP Application Layer Gateway (ALG). A SIP ALG allows SIP calls to pass through NAT by examining and translating IP addresses embedded in the data stream. When the SBG3600-N Series registers with the SIP register server, the SIP ALG translates the SBG3600-N Series's private IP address inside the SIP data stream to a public IP address. You do not need to use STUN or an outbound proxy if your SBG3600-N Series is behind a SIP ALG.

Use this screen to enable and disable the NAT and SIP (VoIP) ALG in the SBG3600-N Series. To access this screen, click **Network Setting > NAT > ALG**.

Figure 95 Network Setting > NAT > ALG

NAT ALG : ☒ Enable ☐ Disable (settings are invalid when disabled)

SIP ALG : ☐ Enable ☒ Disable

Apply Cancel

The following table describes the fields in this screen.

Table 63 Network Setting > NAT > ALG

| LABEL | DESCRIPTION |
|---------|---|
| NAT ALG | Enable this to make sure applications such as FTP and file transfer in IM applications work correctly with port-forwarding and address-mapping rules. |
| SIP ALG | Enable this to make sure SIP (VoIP) works correctly with port-forwarding and address-mapping rules. |
| Apply | Click Apply to save your changes. |
| Cancel | Click Cancel to restore your previously saved settings. |

11.7 The Address Mapping Screen

Ordering your rules is important because the SBG3600-N Series applies the rules in the order that you specify. When a rule matches the current packet, the SBG3600-N Series takes the corresponding action and the remaining rules are ignored.

Click **Network Setting > NAT > Address Mapping** to display the following screen.

Figure 96 Network Setting > NAT > Address Mapping

Add new rule

| Set | Local Start IP | Local End IP | Global Start IP | Global End IP | Type | Modify |
|-----|----------------|--------------|-----------------|---------------|------------|--------|
| 1 | 192.168.1.32 | | 10.1.2.3 | | One-to-One | |

The following table describes the fields in this screen.

Table 64 Network Setting > NAT > Address Mapping

| LABEL | DESCRIPTION |
|-----------------|--|
| Add new rule | Click this to create a new rule. |
| Set | This is the index number of the address mapping set. |
| Local Start IP | This is the starting Inside Local IP Address (ILA). |
| Local End IP | This is the ending Inside Local IP Address (ILA). If the rule is for all local IP addresses, then this field displays 0.0.0.0 as the Local Start IP address and 255.255.255.255 as the Local End IP address. This field is blank for One-to-One mapping types. |
| Global Start IP | This is the starting Inside Global IP Address (IGA). Enter 0.0.0.0 here if you have a dynamic IP address from your ISP. You can only do this for the Many-to-One mapping type. |
| Global End IP | This is the ending Inside Global IP Address (IGA). This field is blank for One-to-One and Many-to-One mapping types. |
| Type | <p>This is the address mapping type.</p> <p>One-to-One: This mode maps one local IP address to one global IP address. Note that port numbers do not change for the One-to-one NAT mapping type.</p> <p>Many-to-One: This mode maps multiple local IP addresses to one global IP address. This is equivalent to SUA (i.e., PAT, port address translation), the SBG3600-N Series's Single User Account feature that previous routers supported only.</p> <p>Many-to-Many: This mode maps multiple local IP addresses to shared global IP addresses.</p> |
| Modify | <p>Click the Edit icon to go to the screen where you can edit the address mapping rule.</p> <p>Click the Delete icon to delete an existing address mapping rule. Note that subsequent address mapping rules move up by one when you take this action.</p> |

11.7.1 Add/Edit Address Mapping Rule

To add or edit an address mapping rule, click **Add new rule** or the rule's edit icon in the **Address Mapping** screen to display the screen shown next.

Figure 97 Address Mapping: Add/Edit

The screenshot shows a window titled "Add New Rule" with a close button in the top right corner. Inside the window, there are several input fields and dropdown menus. The "Type" dropdown is set to "One-to-One". Below it are text input fields for "Local Start IP", "Local End IP", "Global Start IP", and "Global End IP". At the bottom, there is a "Set" dropdown menu set to "1". The "OK" and "Cancel" buttons are located at the bottom right of the window.

The following table describes the fields in this screen.

Table 65 Address Mapping: Add/Edit

| LABEL | DESCRIPTION |
|-----------------|--|
| Type | Choose the IP/port mapping type from one of the following. One-to-One: This mode maps one local IP address to one global IP address. Note that port numbers do not change for the One-to-one NAT mapping type. Many-to-One: This mode maps multiple local IP addresses to one global IP address. This is equivalent to SUA (i.e., PAT, port address translation), the SBG3600-N Series's Single User Account feature that previous routers supported only. Many-to-Many: This mode maps multiple local IP addresses to shared global IP addresses. |
| Local Start IP | Enter the starting Inside Local IP Address (ILA). |
| Local End IP | Enter the ending Inside Local IP Address (ILA). If the rule is for all local IP addresses, then this field displays 0.0.0.0 as the Local Start IP address and 255.255.255.255 as the Local End IP address. This field is blank for One-to-One mapping types. |
| Global Start IP | Enter the starting Inside Global IP Address (IGA). Enter 0.0.0.0 here if you have a dynamic IP address from your ISP. You can only do this for the Many-to-One mapping type. |
| Global End IP | Enter the ending Inside Global IP Address (IGA). This field is blank for One-to-One and Many-to-One mapping types. |
| Set | Select the number of the mapping set for which you want to configure. |
| OK | Click OK to save your changes. |
| Cancel | Click Cancel to exit this screen without saving. |

11.8 Technical Reference

This part contains more information regarding NAT.

11.8.1 NAT Definitions

Inside/outside denotes where a host is located relative to the SBG3600-N Series, for example, the computers of your subscribers are the inside hosts, while the web servers on the Internet are the outside hosts.

Global/local denotes the IP address of a host in a packet as the packet traverses a router, for example, the local address refers to the IP address of a host when the packet is in the local network, while the global address refers to the IP address of the host when the same packet is traveling in the WAN side.

Note that inside/outside refers to the location of a host, while global/local refers to the IP address of a host used in a packet. Thus, an inside local address (ILA) is the IP address of an inside host in a packet when the packet is still in the local network, while an inside global address (IGA) is the IP address of the same inside host when the packet is on the WAN side. The following table summarizes this information.

Table 66 NAT Definitions

| ITEM | DESCRIPTION |
|---------|---|
| Inside | This refers to the host on the LAN. |
| Outside | This refers to the host on the WAN. |
| Local | This refers to the packet address (source or destination) as the packet travels on the LAN. |
| Global | This refers to the packet address (source or destination) as the packet travels on the WAN. |

NAT never changes the IP address (either local or global) of an outside host.

11.8.2 What NAT Does


In the simplest form, NAT changes the source IP address in a packet received from a subscriber (the inside local address) to another (the inside global address) before forwarding the packet to the WAN side. When the response comes back, NAT translates the destination address (the inside global address) back to the inside local address before forwarding it to the original inside host. Note that the IP address (either local or global) of an outside host is never changed.

The global IP addresses for the inside hosts can be either static or dynamically assigned by the ISP. In addition, you can designate servers, for example, a web server and a telnet server, on your local network and make them accessible to the outside world. If you do not define any servers (for Many-to-One and Many-to-Many Overload mapping), NAT offers the additional benefit of firewall protection. With no servers defined, your SBG3600-N Series filters out all incoming inquiries, thus preventing intruders from probing your network. For more information on IP address translation, refer to *RFC 1631, The IP Network Address Translator (NAT)*.

11.8.3 How NAT Works


Each packet has two addresses – a source address and a destination address. For outgoing packets, the ILA (Inside Local Address) is the source address on the LAN, and the IGA (Inside Global Address) is the source address on the WAN. For incoming packets, the ILA is the destination address on the LAN, and the IGA is the destination address on the WAN. NAT maps private (local) IP addresses to globally unique ones required for communication with hosts on other networks. It replaces the original IP source address (and TCP or UDP source port numbers for Many-to-One and Many-to-Many Overload NAT mapping) in each packet and then forwards it to the Internet. The SBG3600-N Series keeps track of the original addresses and port numbers so incoming reply packets can have their original values restored. The following figure illustrates this.

Figure 98 How NAT Works

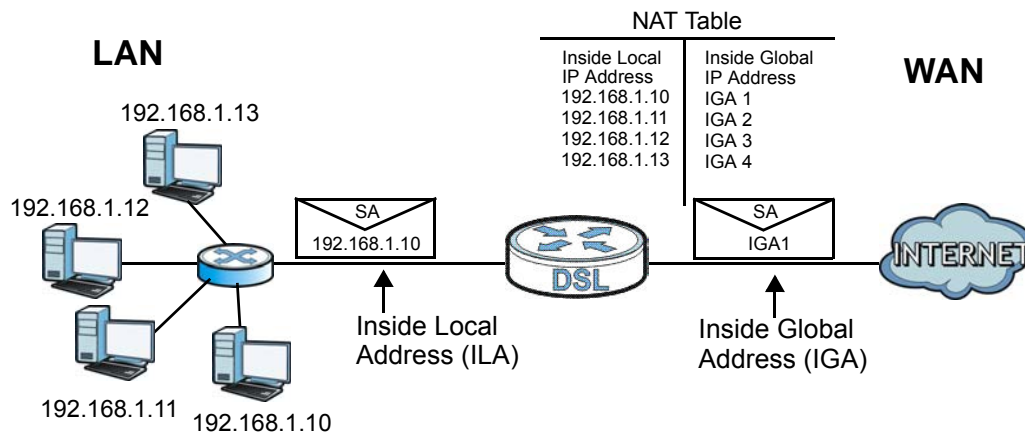

11.8.4 NAT Application

The following figure illustrates a possible NAT application, where three inside LANs (logical LANs using IP alias) behind the SBG3600-N Series can communicate with three distinct WAN networks.

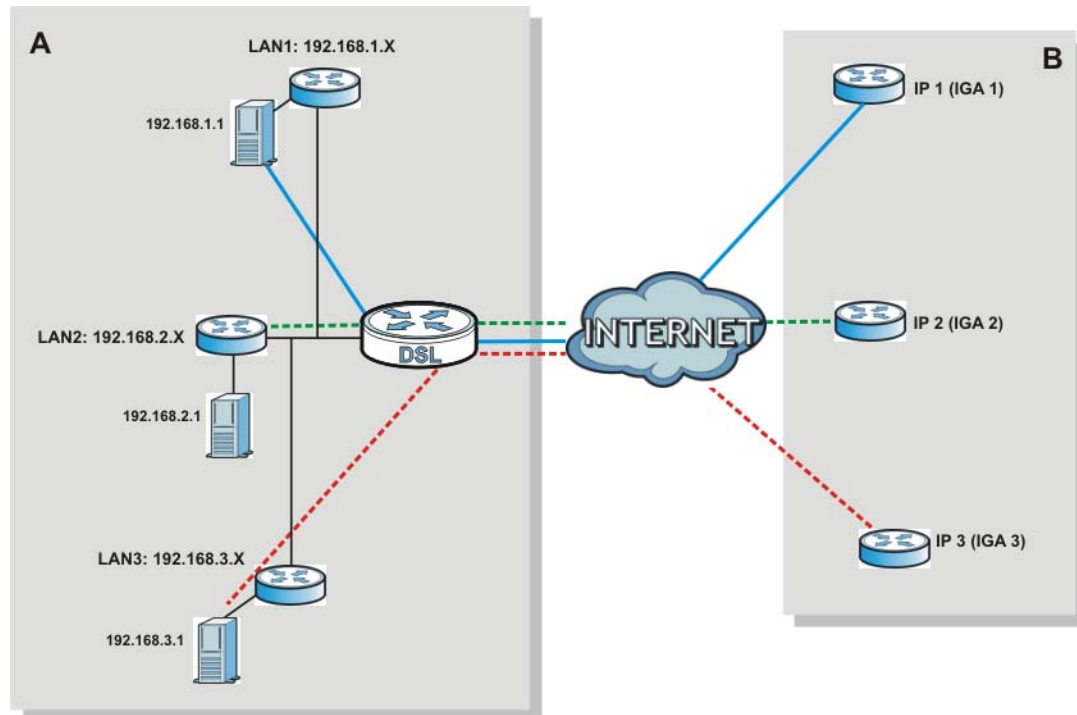Figure 99 NAT Application With IP Alias

Port Forwarding: Services and Port Numbers

The most often used port numbers are shown in the following table. Please refer to RFC 1700 for further information about port numbers. Please also refer to the Supporting CD for more examples and details on port forwarding and NAT.

Table 67 Services and Port Numbers


| SERVICES | PORT NUMBER |
|---|-------------|
| ECHO | 7 |
| FTP (File Transfer Protocol) | 21 |
| SMTP (Simple Mail Transfer Protocol) | 25 |
| DNS (Domain Name System) | 53 |
| Finger | 79 |
| HTTP (Hyper Text Transfer protocol or WWW, Web) | 80 |
| POP3 (Post Office Protocol) | 110 |
| NNTP (Network News Transport Protocol) | 119 |
| SNMP (Simple Network Management Protocol) | 161 |
| SNMP trap | 162 |
| PPTP (Point-to-Point Tunneling Protocol) | 1723 |

Port Forwarding Example

Let's say you want to assign ports 21-25 to one FTP, Telnet and SMTP server (**A** in the example), port 80 to another (**B** in the example) and assign a default server IP address of 192.168.1.35 to a

third (C in the example). You assign the LAN IP addresses and the ISP assigns the WAN IP address. The NAT network appears as a single host on the Internet.

Figure 100 Multiple Servers Behind NAT Example

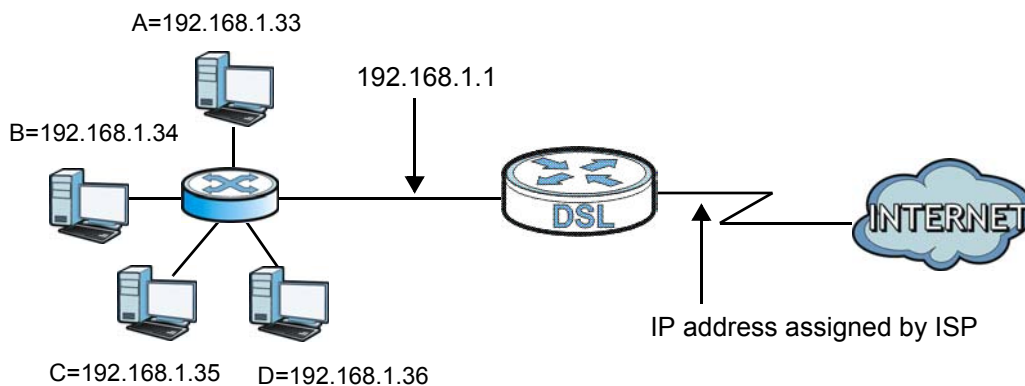

Dynamic DNS Setup

12.1 Overview

DNS

DNS (Domain Name System) is for mapping a domain name to its corresponding IP address and vice versa. The DNS server is extremely important because without it, you must know the IP address of a machine before you can access it.

In addition to the system DNS server(s), each WAN interface (service) is set to have its own static or dynamic DNS server list. You can configure a DNS static route to forward DNS queries for certain domain names through a specific WAN interface to its DNS server(s). The SBG3600-N Series uses a system DNS server (in the order you specify in the **Broadband** screen) to resolve domain names that do not match any DNS routing entry. After the SBG3600-N Series receives a DNS reply from a DNS server, it creates a new entry for the resolved IP address in the routing table.

Dynamic DNS

Dynamic DNS allows you to update your current dynamic IP address with one or many dynamic DNS services so that anyone can contact you (in NetMeeting, CU-SeeMe, etc.). You can also access your FTP server or Web site on your own computer using a domain name (for instance myhost.dhs.org, where myhost is a name of your choice) that will never change instead of using an IP address that changes each time you reconnect. Your friends or relatives will always be able to call you even if they don't know your IP address.

First of all, you need to have registered a dynamic DNS account with www.dyndns.org. This is for people with a dynamic IP from their ISP or DHCP server that would still like to have a domain name. The Dynamic DNS service provider will give you a password or key.

12.1.1 What You Can Do in this Chapter

- Use the **DNS Entry** screen to view, configure, or remove DNS routes ([Section 12.2 on page 229](#)).
- Use the **Dynamic DNS** screen to enable DDNS and configure the DDNS settings on the SBG3600-N Series ([Section 12.3 on page 230](#)).
- Use the **Host Name** screen to configure a unique name for the SBG3600-N Series in your network ([Section 12.4 on page 231](#)).

12.1.2 What You Need To Know

DYNDNS Wildcard



Enabling the wildcard feature for your host causes *.yourhost.dyndns.org to be aliased to the same IP address as yourhost.dyndns.org. This feature is useful if you want to be able to use, for example, www.yourhost.dyndns.org and still reach your hostname.

If you have a private WAN IP address, then you cannot use Dynamic DNS.

12.2 The DNS Entry Screen

Use this screen to view and configure DNS routes on the SBG3600-N Series. Click **Network Setting > DNS** to open the **DNS Entry** screen.

Figure 101 Network Setting > DNS > DNS Entry

| Add new DNS entry | | | |
|-------------------|--------------|--------------|---|
| # | FQDN | IP Address | Modify |
| 1 | Test.SBG3500 | 192.168.1.56 |   |

The following table describes the fields in this screen.

Table 68 Network Setting > DNS > DNS Entry

| LABEL | DESCRIPTION |
|-------------------|--|
| Add new DNS entry | Click this to create a new DNS entry. |
| # | This is the index number of the entry. |
| Hostname | This indicates the host name or domain name. |
| IP Address | This indicates the IP address assigned to this computer. |
| Modify | Click the Edit icon to edit the rule. Click the Delete icon to delete an existing rule. |

12.2.1 Add/Edit DNS Entry

You can manually add or edit the SBG3600-N Series's DNS name and IP address entry. Click **Add new DNS entry** in the **DNS Entry** screen or the **Edit** icon next to the entry you want to edit. The screen shown next appears.

Figure 102 DNS Entry: Add/Edit

| | |
|--|----------------------|
| FQDN : | <input type="text"/> |
| IP Address : | <input type="text"/> |
| <input type="button" value="Apply"/> <input type="button" value="Cancel"/> | |

The following table describes the labels in this screen.

Table 69 DNS Entry: Add/Edit

| LABEL | DESCRIPTION |
|------------|---|
| FQDN | Enter the Fully Qualified Domain Name (FQDN) of the DNS entry. For example, if your hostname is myhost and a parent domain name is example.com, then your FQDN is myhost.example.com. |
| IP Address | Enter the IP address of the DNS entry. |
| Apply | Click Apply to save your changes. |
| Cancel | Click Cancel to exit this screen without saving. |

12.3 The Dynamic DNS Screen

Use this screen to change your SBG3600-N Series's DDNS. Click **Network Setting > DNS > Dynamic DNS**. The screen appears as shown.

Figure 103 Network Setting > DNS > Dynamic DNS

The following table describes the fields in this screen.

Table 70 Network Setting > DNS > Dynamic DNS

| LABEL | DESCRIPTION |
|------------------|--|
| Dynamic DNS | Select Enable to use dynamic DNS. |
| Service Provider | Select your Dynamic DNS service provider from the drop-down list box. |
| Hostname | Type the domain name assigned to your SBG3600-N Series by your Dynamic DNS provider. You can specify up to two host names in the field separated by a comma (","). |
| Username | Type your user name. |
| Password | Type the password assigned to you. |
| Email | If you select TZO in the Service Provider field, enter the user name you used to register for this service. |
| Key | If you select TZO in the Service Provider field, enter the password you used to register for this service. |
| Apply | Click Apply to save your changes. |
| Cancel | Click Cancel to exit this screen without saving. |

12.4 The Host Name Screen

A host name is the unique name by which a device is known on a network. Click **Network Setting > DNS > Host Name**. The screen appears as shown.

Figure 104 Network Setting > DNS > Host Name



Hostname.

Host name:

The following table describes the fields in this screen.

Table 71 Network Setting > DNS > Host Name

| LABEL | DESCRIPTION |
|-----------|--|
| Host Name | Enter a descriptive name to identify your SBG3600-N Series. This name can be up to 64 alphanumeric characters long. Spaces are not allowed, but dashes (-) underscores (_) and periods (.) are accepted. |
| Apply | Click Apply to save your changes. |
| Cancel | Click Cancel to exit this screen without saving. |

AP Control

13.1 Overview

Use the **AP Control** screens to configure how the SBG3600-N Series manage the Access Points (APs) that are connected to it.


13.1.1 What You Can Do in this Chapter

- Use the **Controller** screen to set how the SBG3600-N Series allows new APs to connect to the network ([Section 13.2 on page 232](#)).
- Use the **Managed AP List** screen to manage all of the APs connected to the SBG3600-N Series ([Section 13.3 on page 233](#)).
- Use the **Load Balancing** screen to manage wireless network traffic load balancing between all of the APs connected to the SBG3600-N Series ([Section 13.4 on page 234](#)).
- Use the **DCS** (Dynamic Channel Selection) screen to have the SBG3600-N Series choose radio channels with the least interference for the managed APs automatically or you can choose the radio channels manually ([Section 13.5 on page 235](#)).

13.2 The Controller Screen

Use this screen to set how the SBG3600-N Series allows new APs to connect to the network. Click **Network Setting > AP Control** to open the **Controller** screen.

Figure 105 Network Setting > AP Control > Controller

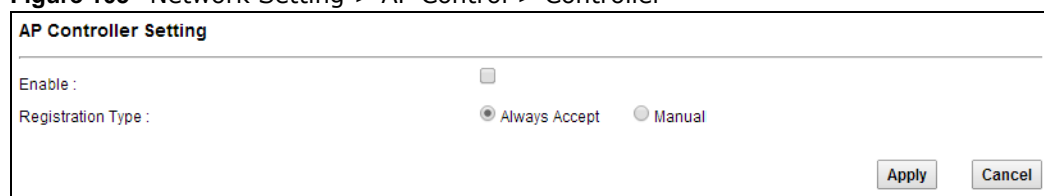

AP Controller Setting

Enable : ☐

Registration Type : ☒ Always Accept ☐ Manual

Apply Cancel

The following table describes the fields in this screen.




Table 72 Network Setting > AP Control > Controller


| LABEL | DESCRIPTION |
|-------------------|---|
| Enable | Click the check box to enable AP Controller in the SBG3600-N Series. |
| Registration Type | <p>Select Manual to add each AP to the SBG3600-N Series for management, or Always Accept to automatically add APs to the SBG3600-N Series for management.</p> <p>Note: Select the manual option for managing a specific set of APs. This is recommended as the registration mechanism cannot automatically differentiate between friendly and rogue APs.</p> <p>APs must be connected to the SBG3600-N Series by a wired connection or network.</p> |
| Apply | Click Apply to save your changes to the SBG3600-N Series. |
| Cancel | Click Cancel to abandon the changes to the SBG3600-N Series. |

13.3 The Managed AP List Screen

Use this screen to manage all of the APs connected to the SBG3600-N Series. Click **Network Setting > AP Control > Managed AP List** to access this screen.

Figure 106 Network Setting > AP Control > Managed AP List

| # | IP | MAC | Model | R1 Pro... | R2 Pro... | AC ... | AP ... | Description | Modify |
|---|--------------|-------------------|-----------|-----------|-----------|--------|--------|-----------------|---|
| 1 | 192.168.1.97 | 40:4A:03:79:ED:A5 | NWA5560-N | default | default2 | 1 | 1 | AP-404A0379EDA5 |    |

 **Note:**

1. Only 'AP Mode' is supported for all access points.

The following table describes the fields in this screen.

Table 73 Network Setting > AP Control > Managed AP List

| LABEL | DESCRIPTION |
|--------------|--|
| # | This is the AP's index number. |
| IP | This field displays the IP address of the AP. |
| MAC | This field displays the MAC address of the AP. |
| Model | This field displays the AP's hardware model information. It displays N/A (not applicable) only when the AP disconnects from the SBG3600-N Series and the information is unavailable as a result. |
| R1 Profile | This field displays the operating mode (AP) and AP profile name for Radio 1. It displays N/A for the profile for a radio not using an AP profile. |
| R2 Profile | This field displays the operating mode (AP) and AP profile name for Radio 2. It displays N/A for the profile for a radio not using an AP profile. |
| AC Mgmt VLAN | This displays the Access Controller (the SBG3600-N Series) management VLAN ID setting for the AP. |
| AP Mgmt VLAN | This displays the runtime management VLAN ID setting on the AP. VLAN Conflict displays if the AP's management VLAN ID does not match the Mgmt. VLAN ID(AC) . This field displays N/A if the SBG3600-N Series cannot get VLAN information from the AP. |

Table 73 Network Setting > AP Control > Managed AP List (continued)

| LABEL | DESCRIPTION |
|-------------|--|
| Description | This field displays the AP's description, which you can configure by selecting the AP's entry and clicking the Edit button. |
| Modify | Click the Edit icon to edit the AP's properties. Click the Delete icon to delete an existing AP. Note that subsequent AP moves up by one when you take this action. Click Reboot icon to reboot the APs that are connected to the SBG3600-N Series. |

13.4 The Load Balancing Screen

Use this screen to manage wireless network traffic load balancing between all of the APs connected to the SBG3600-N Series. Click **Network Setting > AP Control > Load Balancing** to access this screen.

Figure 107 Network Setting > AP Control > Load Balancing

Load balancing Configuration

Enable Load Balancing : ☐

Load Balancing Mode : By Station Number ▼

Max Station Number : (1-127)

Disassociate station when overloaded : ☐

Apply Cancel

The following table describes the fields in this screen.

Table 74 Network Setting > AP Control > Load Balancing

| LABEL | DESCRIPTION |
|------------------------------|--|
| Load Balancing Configuration | |
| Enable Load Balancing | Click the check box to enable the Load Balancing on wireless network traffic between APs connected to the SBG3600-N Series. |
| Load Balancing Mode | Choose By Station Number or By Traffic Level from the drop-down list. If you choose By Station Number you will need to enter the maximum number of stations in the field below. If you choose By Traffic Level, you will need to choose High , Medium or Low from a drop-down list that appears below this field. |
| Max Station Number | This field displays only when you choose By Station Number mode. The maximum number of AP station you can enter is 1 to 127. |

Table 74 Network Setting > AP Control > Load Balancing (continued)

| LABEL | DESCRIPTION |
|--------------------------------------|---|
| Disassociate station when overloaded | <p>Select this option to disassociate wireless clients connected to the AP when it becomes overloaded. If you do not enable this option, then the AP simply delays the connection until it can afford the bandwidth it requires, or it transfers the connection to another AP within its broadcast radius.</p> <p>The disassociation priority is determined automatically by the SBG3600-N Series and is as follows:</p> <ul style="list-style-type: none"> • Idle Timeout - Devices that have been idle the longest will be disassociated first. If none of the connected devices are idle, then the priority shifts to Signal Strength. • Signal Strength - Devices with the weakest signal strength will be disassociated first. <p>Note: If you enable this function, you should ensure that there are multiple APs within the broadcast radius that can accept any rejected or kicked wireless clients; otherwise, a wireless client attempting to connect to an overloaded AP will be kicked continuously and never be allowed to connect.</p> |
| Apply | Click Apply to save your changes to the SBG3600-N Series. |
| Cancel | Click Cancel to exit this screen without saving your changes. |

13.5 The Dynamic Channel Selection Screen

Use this screen to have the SBG3600-N Series automatically choose the radio channels with the least interference for the managed APs or you can choose the radio channels manually. There are two frequency bands to choose from, 2.4 GHz and 5 GHz. Click **Network Setting > AP Control > DCS** to access this screen.

Figure 108 Network Setting > AP Control > DCS

General Settings

Select Now

Enable Dynamic Channel Selection : ☒

• DCS Time Interval : (10-1440 minutes)

• Enable DCS Client Aware : ☒

2.4GHz Settings

2.4 GHz Channel Selection Method :

2.4 GHz Channel Selection :

☐ 1 ☐ 2 ☐ 3 ☐ 4 ☐ 5 ☐ 6 ☐ 7 ☐ 8

☐ 9 ☐ 10 ☐ 11 ☐ 12 ☐ 13

5GHz Settings

Enable 5 GHz DFS Aware : ☒

5 GHz Channel Selection Method :

5 GHz Channel Selection :

☐ 36 ☐ 40 ☐ 44 ☐ 48 ☐ 52 ☐ 56 ☐ 60 ☐ 64

☐ 100 ☐ 104 ☐ 108 ☐ 112 ☐ 116 ☐ 120 ☐ 124 ☐ 128

☐ 132 ☐ 136 ☐ 140

Apply Cancel

The following table describes the fields in this screen.

Table 75 Network Setting > AP Control > DCS

| LABEL | DESCRIPTION |
|----------------------------------|---|
| General Settings | |
| Select Now | Click the Select Now button to have the managed APs scan for and select an available channel immediately. |
| Enable Dynamic Channel Selection | Click this check box to DCS for the APs that the SBG3600-N Series manages. |
| DCS Time Interval | Enter a number of minutes. This regulates how often the SBG3600-N Series surveys the other APs within its broadcast radius. If the channel on which it is currently broadcasting suddenly comes into use by another AP, the SBG3600-N Series will then dynamically select the next available clean channel or a channel with lower interference. |
| Enable DCS Client Aware | Select this to have the AP wait until all connected clients have disconnected before switching channels. If you disable this then the AP switches channels immediately regardless of any client connections. In this instance, clients that are connected to the AP when it switches channels are dropped. |
| 2.4 GHz Settings | |
| 2.4 GHz Channel Selection Method | Select auto to have the AP search for available channels automatically in the 2.4 GHz band. The available channels vary depending on what you select in the 2.4 GHz Channel Deployment field. Select manual and specify the channels the AP uses in the 2.4 GHz band. |
| 2.4 GHz Channel Selection | The check boxes list the channels that are available in the 2.4 GHz band. Select the channels that you want the AP to use, and click the check boxes to add them. Click again to delete them. In the United States, it is restricted to use radio channels 1 to 11 when using the 20 MHz bandwidth channel. When using the 40 MHz bandwidth channel, only radio channels 3 to 9 are allowed. |
| 5 GHz Settings | |
| Enable 5 GHz DFS Aware | Select this if your APs are operating in an area known to have RADAR devices. This allows the device to downgrade its frequency to below 5 GHz in the event a RADAR signal is detected, thus preventing it from interfering with that signal. Enabling this forces the AP to select a non-DFS channel. |
| 5 GHz Channel Selection Method | Select auto to have the AP search for available channels automatically in the 5 GHz band. Select manual and specify the channels the AP uses in the 5 GHz band. |
| 5 GHz Channel Selection | This check boxes list s the channels that are available in the 5 GHz band. Select the channels that you want the AP to use, and click the check boxes to add them. Click again to delete them. |
| Apply | Click Apply to save your changes to the SBG3600-N Series. |
| Cancel | Click Cancel to exit this screen without saving your changes. |

AP Profile

14.1 Overview

This chapter shows you how to configure preset profiles for the Access Points (APs) connected to your SBG3600-N Series wireless network.

14.1.1 What You Can Do in this Chapter

- Use the **Radio** screen to create radio configurations that can be used by the APs ([Section 14.2 on page 238](#)).
- Use the **SSID** screen to create and manage SSID configurations that can be used by the APs ([Section 14.3 on page 243](#)).
- Use the **Security** screen to manage wireless security configurations that can be used by your SSIDs ([Section 14.4 on page 245](#)).
- Use the **MAC Filtering** screen to create and manage MAC filtering profiles that can be used by your SSIDs ([Section 14.5 on page 249](#)).
- Use the **Layer-2 Isolation** screen to create and manage layer-2 isolation profiles that can be used by your SSIDs ([Section 14.7 on page 251](#)).

14.1.2 What You Need To Know

The following terms and concepts may help as you read this chapter.

Wireless Profiles

At the heart of all wireless AP configurations on the SBG3600-N Series are profiles. A profile represents a group of saved settings that you can use across any number of connected APs. You can set up the following wireless profile types:

- **Radio** - This profile type defines the properties of an AP's radio transmitter. You can have a maximum of 24 radio profiles on the SBG3600-N Series.
- **SSID** - This profile type defines the properties of a single wireless network signal broadcast by an AP. Each radio on a single AP can broadcast up to 8 SSIDs. You can have a maximum of 16 SSID profiles on the SBG3600-N Series.
- **Security** - This profile type defines the security settings used by a single SSID. It controls the encryption method required for a wireless client to associate itself with the SSID. You can have a maximum of 8 security profiles on the SBG3600-N Series.
- **MAC Filtering** - This profile provides an additional layer of security for an SSID, allowing you to block access or allow access to that SSID based on wireless client MAC addresses. If a client's MAC address is on the list, then it is either allowed or denied, depending on how you set up the MAC Filter profile. You can have a maximum of 8 MAC filtering profiles on the SBG3600-N Series.

- **Layer-2 Isolation** - This profile prevents connected devices from communicating with each other in the SBG3600-N Series local network. It checks only the wireless traffic that goes through the SBG3600-N Series interfaces, including the virtual interfaces and the bridge interface between the 2.4 and 5 GHz WLAN. You can have a maximum of 16 layer-2 isolation profiles on the SBG3600-N Series.

SSID

The SSID (Service Set Identifier) is the name that identifies the Service Set with which a wireless station is associated. Wireless stations associating to the access point (AP) must have the same SSID. In other words, it is the name of the wireless network that clients use to connect to it.

WEP

WEP (Wired Equivalent Privacy) encryption scrambles all data packets transmitted between the AP and the wireless stations associated with it in order to keep network communications private. Both the wireless stations and the access points must use the same WEP key for data encryption and decryption.

WPA and WPA2

Wi-Fi Protected Access (WPA) is a subset of the IEEE 802.11i standard. WPA2 (IEEE 802.11i) is a wireless security standard that defines stronger encryption, authentication and key management than WPA. Key differences between WPA(2) and WEP are improved data encryption and user authentication.

IEEE 802.1x

The IEEE 802.1x standard outlines enhanced security methods for both the authentication of wireless stations and encryption key management. Authentication is done using an external RADIUS server.

14.2 Radio Screen

This screen allows you to create radio profiles for the APs on your network. A radio profile is a list of settings that a supported managed AP (SBG3600-N Series for example) can use to configure either one of its two radio transmitters. To access this screen click **Network Setting > AP Profile > Radio**.

Note: You can have a maximum of 24 radio profiles on the SBG3600-N Series.

Figure 109 Network Setting > AP Profile > Radio

| Add New Profile (Up to 24 Radio Profiles can be added.) | | | | | |
|---|----|--------------|----------------|------------|--------|
| # | En | Profile Name | Frequency Band | Channel ID | Modify |
| 1 | | default | 2.4G | 6 | |
| 2 | | default2 | 5G | 36 | |
| 3 | | example | 2.4G | 6 | |

The following table describes the labels in this screen.

Table 76 Configuration > Object > AP Profile > Radio

| LABEL | DESCRIPTION |
|-----------------|---|
| Add New Profile | Click this to add a new radio profile. |
| # | This field is a sequential value, and it is not associated with a specific profile. |
| Enable | This icon is lit when the entry is active and dimmed when the entry is inactive. |
| Profile Name | This field indicates the name assigned to the radio profile. |
| Frequency Band | This field indicates the frequency band which this radio profile is configured to use. |
| Channel ID | This field indicates the broadcast channel which this radio profile is configured to use. |
| Modify | Click the Edit icon to edit the selected radio profile. Click the Delete icon to delete an existing radio profile. Note that subsequent radio profile moves up by one when you take this action. |

14.2.1 Add/Modify New Profile

This screen allows you to create a new radio profile or edit an existing one. To access this screen, click the **Add New Profile** button or select a radio profile from the list and click the **Modify** button.

Figure 110 Network Setting > AP Profile > Add/Modify New Profile

| | |
|--|--|
| General Settings | |
| Enable : | <input checked="" type="checkbox"/> |
| Profile Name : | <input type="text"/> |
| 802.11 Band : | 2.4G ▼ |
| Mode : | b/g/n ▼ |
| Channel : | 6 ▼ |
| Advanced Settings ▲ | |
| Channel Width : | <input type="radio"/> Auto <input checked="" type="radio"/> 20MHz |
| Guard Interval : | <input checked="" type="radio"/> Short <input type="radio"/> Long |
| A-MPDU Aggregation : | <input checked="" type="checkbox"/> |
| • A-MPDU Limit : | <input type="text" value="50000"/> (100-65535) |
| • A-MPDU Subframe : | <input type="text" value="32"/> (2-64) |
| A-MSDU Aggregation : | <input checked="" type="checkbox"/> |
| • A-MSDU Limit : | <input type="text" value="4096"/> (2290-4096) |
| RTS/CTS Threshold : | <input type="text" value="2347"/> (0-2347) |
| Beacon Interval : | <input type="text" value="100"/> (40ms-1000ms) |
| DTIM : | <input type="text" value="2"/> (1-255) |
| Output Power : | Max ▼ |
| Signal Threshold : | <input type="checkbox"/> |
| • Station Signal Threshold : | <input type="text" value="-76"/> dBm (-20 ~ -76) |
| • Disassociate Station Threshold : | <input type="text" value="-90"/> dBm (-20 ~ -90) |
| • Allow Station Connection after Retries : | <input type="checkbox"/> |
| Station Retry Count : | <input type="text" value="6"/> (1-100) |
| Rate Configuration | |
| 2.4GHz Basic Rate (Mbps) : | <input checked="" type="checkbox"/> 1 <input checked="" type="checkbox"/> 2 <input checked="" type="checkbox"/> 5.5 <input checked="" type="checkbox"/> 11 <input type="checkbox"/> 6 <input type="checkbox"/> 9 <input type="checkbox"/> 12 <input type="checkbox"/> 18 <input type="checkbox"/> 24 <input type="checkbox"/> 36 <input type="checkbox"/> 48 <input type="checkbox"/> 54 |
| 2.4GHz Support Rate (Mbps) : | <input checked="" type="checkbox"/> 1 <input checked="" type="checkbox"/> 2 <input checked="" type="checkbox"/> 5.5 <input checked="" type="checkbox"/> 11 <input checked="" type="checkbox"/> 6 <input checked="" type="checkbox"/> 9 <input checked="" type="checkbox"/> 12 <input checked="" type="checkbox"/> 18 <input checked="" type="checkbox"/> 24 <input checked="" type="checkbox"/> 36 <input checked="" type="checkbox"/> 48 <input checked="" type="checkbox"/> 54 |
| 2.4GHz MCS Rate (Mbps) : | <input checked="" type="checkbox"/> 0 <input checked="" type="checkbox"/> 1 <input checked="" type="checkbox"/> 2 <input checked="" type="checkbox"/> 3 <input checked="" type="checkbox"/> 4 <input checked="" type="checkbox"/> 5 <input checked="" type="checkbox"/> 6 <input checked="" type="checkbox"/> 7 <input checked="" type="checkbox"/> 8 <input checked="" type="checkbox"/> 9 <input checked="" type="checkbox"/> 10 <input checked="" type="checkbox"/> 11 <input checked="" type="checkbox"/> 12 <input checked="" type="checkbox"/> 13 <input checked="" type="checkbox"/> 14 <input checked="" type="checkbox"/> 15 |
| Multicast Settings | |
| Transmission Mode : | <input type="radio"/> Multicast to Unicast <input checked="" type="radio"/> Fixed Multicast Rate |
| 2.4GHz Multicast Rate (Mbps) : | <input checked="" type="radio"/> 1 <input type="radio"/> 2 <input type="radio"/> 5.5 <input type="radio"/> 11 <input type="radio"/> 6 <input type="radio"/> 9 <input type="radio"/> 12 <input type="radio"/> 18 <input type="radio"/> 24 <input type="radio"/> 36 <input type="radio"/> 48 <input type="radio"/> 54 |
| MBSSID Settings | |
| SSID Profile 1 : | default ▼ |
| SSID Profile 2 : | disable ▼ |
| SSID Profile 3 : | disable ▼ |
| SSID Profile 4 : | disable ▼ |
| SSID Profile 5 : | disable ▼ |
| SSID Profile 6 : | disable ▼ |
| SSID Profile 7 : | disable ▼ |
| SSID Profile 8 : | disable ▼ |
| <input type="button" value="Apply"/> <input type="button" value="Cancel"/> | |

The following table describes the labels in this screen.

Table 77 Network Settings > AP Profile > Add/Modify New Profile

| LABEL | DESCRIPTION |
|------------------|---|
| General Settings | |
| Enable | Select this option to make this profile active. |
| Profile Name | Enter up to 31 alphanumeric characters to be used as this profile's name. Spaces and underscores are allowed. |
| 802.11 Band | Select the wireless band which this radio profile should use. 2.4 GHz is the frequency used by IEEE 802.11b/g/n wireless clients. 5 GHz is the frequency used by IEEE 802.11a/n wireless clients. |

Table 77 Network Settings > AP Profile > Add/Modify New Profile (continued)

| LABEL | DESCRIPTION |
|---------------------------|---|
| Mode | <p>Select how to let wireless clients connect to the AP.</p> <p>When using the 2.4 GHz band, select b/g to let IEEE 802.11b and IEEE 802.11g compliant WLAN devices associate with the AP.</p> <p>When using the 2.4 GHz band, select b/g/n to let IEEE 802.11b, IEEE 802.11g, and IEEE 802.11n compliant WLAN devices associate with the AP.</p> <p>When using the 5 GHz band, select a to let only IEEE 802.11a compliant WLAN devices associate with the AP.</p> <p>When using the 5 GHz band, select a/n to let IEEE 802.11a and IEEE 802.11n compliant WLAN devices associate with the AP.</p> |
| Channel | <p>Select the wireless channel which this radio profile should use.</p> <p>It is recommended that you choose the channel least in use by other APs in the region where this profile will be implemented. This will reduce the amount of interference between wireless clients and the AP to which this profile is assigned.</p> <p>Some 5 GHz channels include the label indoor use only. These are for use with an indoor AP only. Do not use them with an outdoor AP.</p> |
| Advanced Settings | |
| Channel Width | <p>Select the channel bandwidth you want to use for your wireless network.</p> <p>Select Auto to allow the SBG3600-N Series to adjust the channel bandwidth to 40 MHz or 20 MHz depending on network conditions.</p> <p>Select 20 MHz if you want to lessen radio interference with other wireless devices in your neighborhood.</p> |
| Guard Interval | <p>Set the guard interval for this radio profile to either short or long.</p> <p>The guard interval is the gap introduced between data transmission from users in order to reduce interference. Reducing the interval increases data transfer rates but also increases interference. Increasing the interval reduces data transfer rates but also reduces interference.</p> |
| Enable A-MPDU Aggregation | <p>Select this to enable A-MPDU aggregation.</p> <p>Message Protocol Data Unit (MPDU) aggregation collects Ethernet frames along with their 802.11n headers and wraps them in a 802.11n MAC header. This method is useful for increasing bandwidth throughput in environments that are prone to high error rates.</p> |
| A-MPDU Limit | Enter the maximum frame size to be aggregated. |
| A-MPDU Subframe | Enter the maximum number of frames to be aggregated each time. |
| Enable A-MSDU Aggregation | <p>Select this to enable A-MSDU aggregation.</p> <p>Mac Service Data Unit (MSDU) aggregation collects Ethernet frames without any of their 802.11n headers and wraps the header-less payload in a single 802.11n MAC header. This method is useful for increasing bandwidth throughput. It is also more efficient than A-MPDU except in environments that are prone to high error rates.</p> |
| A-MSDU Limit | Enter the maximum frame size to be aggregated. |
| RTS/CTS Threshold | <p>Use RTS/CTS to reduce data collisions on the wireless network if you have wireless clients that are associated with the same AP but out of range of one another. When enabled, a wireless client sends an RTS (Request To Send) and then waits for a CTS (Clear To Send) before it transmits. This stops wireless clients from transmitting packets at the same time (and causing data collisions).</p> <p>A wireless client sends an RTS for all packets larger than the number (of bytes) that you enter here. Set the RTS/CTS equal to or higher than the fragmentation threshold to turn RTS/CTS off.</p> |

Table 77 Network Settings > AP Profile > Add/Modify New Profile (continued)

| LABEL | DESCRIPTION |
|--|--|
| Beacon Interval | When a wirelessly networked device sends a beacon, it includes with it a beacon interval. This specifies the time period before the device sends the beacon again. The interval tells receiving devices on the network how long they can wait in low-power mode before waking up to handle the beacon. A high value helps save current consumption of the access point. |
| DTIM | Delivery Traffic Indication Message (DTIM) is the time period after which broadcast and multicast packets are transmitted to mobile clients in the Active Power Management mode. A high DTIM value can cause clients to lose connectivity with the network. This value can be set from 1 to 255. |
| Output Power | Set the output power of the AP in this field. If there is a high density of APs in an area, decrease the output power of the NWA5160N to reduce interference with other APs. Select one of the following 100% , 50% , 25% , or 12.5% . See the product specifications for more information on your SBG3600-N Series's output power. Note: Reducing the output power also reduces the SBG3600-N Series's effective broadcast radius. |
| Signal Threshold | Use the Received Signal Strength Indication (RSSI) threshold to ensure wireless clients receive good throughput. This allows only wireless clients with a strong signal to connect to the AP. Clear the check box to not require wireless clients to have a minimum signal strength to connect to the AP. |
| Station Signal Threshold | Enter a Received Signal Strength Indication (RSSI) threshold and set a minimum client signal strength for connecting to the AP. -20 dBm is the strongest signal you can require and -76 is the weakest. |
| Disassociate Station Threshold | Enter a Disassociation Station Threshold and set a minimum client signal strength for disconnecting the AP. -20 dBm is the strongest signal you can require and -90 is the weakest. |
| Allow Station Connection after Retries | Click this check box to allow client APs to retry to connect to the SBG3600-N Series. |
| Station Retry Count | Enter a number that a client AP can try to reconnect to the SBG3600-N Series. The range is from 1 to 100. |
| Rate Configuration | This section controls the data rates permitted for clients. For each Rate , select a rate option from its list. The rates are: <ul style="list-style-type: none">• Basic Rate (Mbps) - Set the basic rate configuration in Mbps.• Support Rate (Mbps) - Set the support rate configuration in Mbps.• MCS Rate - Set the MCS rate configuration. IEEE 802.11n supports many different data rates which are called MCS rates. MCS stands for Modulation and Coding Scheme. This is an 802.11n feature that increases the wireless network performance in terms of throughput. |
| Multicast Settings | Use this section to set a transmission mode and maximum rate for multicast traffic. |
| Transmission Mode | Set how the AP handles multicast traffic. Select Multicast to Unicast to broadcast wireless multicast traffic to all of the wireless clients as unicast traffic. Unicast traffic dynamically changes the data rate based on the application's bandwidth requirements. The retransmit mechanism of unicast traffic provides more reliable transmission of the multicast traffic, although it also produces duplicate packets. Select Fixed Multicast Rate to send wireless multicast traffic at a single data rate. You must know the multicast application's bandwidth requirements and set it in the following field. |
| Multicast Rate (Mbps) | If you set the multicast transmission mode to fixed multicast rate, set the data rate for multicast traffic here. For example, to deploy 4 Mbps video, select a fixed multicast rate higher than 4 Mbps. |

Table 77 Network Settings > AP Profile > Add/Modify New Profile (continued)

| LABEL | DESCRIPTION |
|-----------------|--|
| MBSSID Settings | This section allows you to associate an SSID profile with the radio profile. |
| SSID Profile | Click the drop down list next to the SSID Profile number. If you want to reassign the SSID profile, choose disable , otherwise, choose default . |
| Apply | Click Apply to save your changes to the SBG3600-N Series. |
| Cancel | Click Cancel to exit this screen without saving your changes. |

14.3 SSID Screen




The SSID screens allow you to configure three different types of profiles for your networked APs: an SSID list, which can assign specific SSID configurations to your APs; a security list, which can assign specific encryption methods to the APs when allowing wireless clients to connect to them; and a MAC filter list, which can limit connections to an AP based on wireless clients MAC addresses.

An SSID, or Service Set IDentifier, is basically the name of the wireless network to which a wireless client can connect. The SSID appears as readable text to any device capable of scanning for wireless frequencies (such as the WiFi adapter in a laptop), and is displayed as the wireless network name when a person makes a connection to it.

To access this screen click **Network Setting > AP Profile > SSID**.

Note: You can have a maximum of 16 SSID profiles on the SBG3600-N Series.

Figure 111 Network Setting > AP Profile > SSID

| Add New Profile (Up to 16 SSID Profiles can be added.) | | | | | | | | |
|--|--------------|-------|------------------|-----|---------------------|-----------------------|---------|---|
| # | Profile Name | SSID | Security Profile | QoS | MAC Filtering Pr... | Layer-2 Isolation ... | VLAN ID | Modify |
| 1 | default | ZyXEL | default | WMM | disable | disable | 1 |  |
| 2 | example | ZyXEL | default | WMM | disable | disable | 1 |   |

The following table describes the labels in this screen.

Table 78 Network Setting > AP Profile > SSID

| LABEL | DESCRIPTION |
|---------------------------|--|
| Add New Profile | Click this to add a new SSID profile. |
| # | This field is a sequential value, and it is not associated with a specific profile. |
| Profile Name | This field indicates the name assigned to the SSID profile. |
| SSID | This field indicates the SSID name as it appears to wireless clients. |
| Security Profile | This field indicates which (if any) security profile is associated with the SSID profile. |
| QoS | This field indicates the QoS type associated with the SSID profile. |
| MAC Filtering Profile | This field indicates which (if any) MAC Filter Profile is associated with the SSID profile. |
| Layer-2 Isolation Profile | This field indicates which (if any) Layer-2 Isolation profile is associated with the SSID profile. |

Table 78 Network Setting > AP Profile > SSID (continued)

| LABEL | DESCRIPTION |
|---------|---|
| VLAN ID | This field indicates the VLAN ID associated with the SSID profile. |
| Modify | Click the Edit icon to edit the SSID profile. Click the Delete icon to delete an existing SSID profile. Note that subsequent SSID profile moves up by one when you take this action. |

14.3.1 Add New Profile/Modify SSID Profile

This screen allows you to create a new SSID profile or edit an existing one. To access this screen, click the **Add New Profile** button or select an SSID profile from the list and click the **Modify** button.

Figure 112 Network Setting > AP Profile > SSID > Add New Profile/Modify SSID Profile

Profile Name :

SSID :

Security Profile :

MAC Filtering Profile :

Layer-2 Isolation Profile :

QoS :

Rate Limiting (Per Station Traffic Rate)

• Downlink : (0~160, 0 is unlimited)

• Uplink : (0~160, 0 is unlimited)

VLAN ID : (1-4094)

Hidden SSID : ☐

Enable Intra-BSS Traffic blocking : ☐

The following table describes the labels in this screen.

Table 79 Network Setting > AP Profile > SSID > Add New Profile/Modify SSID Profile

| LABEL | DESCRIPTION |
|---------------------------|---|
| Profile Name | Enter up to 31 alphanumeric characters for the profile name. This name is only visible in the Web Configurator and is only for management purposes. Spaces and underscores are allowed. |
| SSID | Enter the SSID name for this profile. This is the name visible on the network to wireless clients. Enter up to 32 characters, spaces and underscores are allowed. |
| Security Profile | Select a security profile from this list to associate with this SSID. Note: It is highly recommended that you create security profiles for all of your SSIDs to enhance your network security. |
| MAC Filtering Profile | Select a MAC filtering profile from the list to associate with this SSID. MAC filtering allows you to limit the wireless clients connecting to your network through a particular SSID by wireless client MAC addresses. Any clients that have MAC addresses not in the MAC filtering profile of allowed addresses are denied connections. The disable setting means no MAC filtering is used. |
| Layer-2 Isolation Profile | Select a Layer-2 Isolation Profile from the list to associate with this SSID. Layer-2 Isolation Profile prevents connected devices from communicating with each other in the SBG3600-N Series's local network(s). |

Table 79 Network Setting > AP Profile > SSID > Add New Profile/Modify SSID Profile (continued)

| LABEL | DESCRIPTION |
|--|---|
| QoS | <p>Select a Quality of Service (QoS) access category to associate with this SSID. Access categories minimize the delay of data packets across a wireless network. Certain categories, such as video or voice, are given a higher priority due to the time sensitive nature of their data packets.</p> <p>QoS access categories are as follows:</p> <p>disable: Turns off QoS for this SSID. All data packets are treated equally and not tagged with access categories.</p> <p>WMM: Enables automatic tagging of data packets. The SBG3600-N Series assigns access categories to the SSID by examining data as it passes through it and making a best guess effort. If something looks like video traffic, for instance, it is tagged as such.</p> <p>WMM_VOICE: All wireless traffic to the SSID is tagged as voice data. This is recommended if an SSID is used for activities like placing and receiving VoIP phone calls.</p> <p>WMM_VIDEO: All wireless traffic to the SSID is tagged as video data. This is recommended for activities like video conferencing.</p> <p>WMM_BEST_EFFORT: All wireless traffic to the SSID is tagged as “best effort,” meaning the data travels the best route it can without displacing higher priority traffic. This is good for activities that do not require the best bandwidth throughput, such as surfing the Internet.</p> <p>WMM_BACKGROUND: All wireless traffic to the SSID is tagged as low priority or “background traffic”, meaning all other access categories take precedence over this one. If traffic from an SSID does not have strict throughput requirements, then this access category is recommended. For example, an SSID that only has network printers connected to it.</p> |
| Rate Limiting (Per Station Traffic Rate) | |
| Downlink | Enter a number between 1 to 160 (Mbps) for maximum downlink data rate for this SSID |
| Uplink | Enter a maximum uplink data rate for this SSID |
| VLAN ID | Enter the VLAN ID that will be used to tag all traffic originating from this SSID if the VLAN is different from the native VLAN. |
| Hidden SSID | <p>Select this if you want to “hide” your SSID from wireless clients. This tells any wireless clients in the vicinity of the AP using this SSID profile not to display its SSID name as a potential connection. Not all wireless clients respect this flag and display it anyway.</p> <p>When an SSID is “hidden” and a wireless client cannot see it, the only way you can connect to the SSID is by manually entering the SSID name in your wireless connection setup screen(s) (these vary by client, client connectivity software, and operating system).</p> |
| Enable Intra-BSS Traffic Blocking | Select this option to prevent crossover traffic from within the same SSID. |
| OK | Click OK to save your changes back to the SBG3600-N Series. |
| Cancel | Click Cancel to exit this screen without saving your changes. |




14.4 Security Screen

This screen allows you to manage wireless security configurations that can be used by your SSIDs. Wireless security is implemented strictly between the AP broadcasting the SSID and the stations that are connected to it.

To access this screen click **Network Setting > AP Profile > Security**.

Note: You can have a maximum of 8 security profiles on the SBG3600-N Series.

Figure 113 Network Setting > AP Profile > Security

| Add New Profile (Up to 8 Security Profiles can be added.) | | | |
|---|--------------|----------|---|
| # | Profile Name | Mode | Modify |
| 1 | default | WPA2-mix |  |
| 2 | example | None |   |

The following table describes the labels in this screen.

Table 80 Network Setting > AP Profile > Security

| LABEL | DESCRIPTION |
|-----------------|---|
| Add New Profile | Click this to add a new security profile. |
| # | This field is a sequential value, and it is not associated with a specific profile. |
| Profile Name | This field indicates the name assigned to the security profile. |
| Mode | This field indicates this profile's security mode (if any). |
| Modify | Click the Edit icon to edit the security profile. Click the Delete icon to delete an existing security profile. Note that subsequent security profile moves up by one when you take this action. |

14.4.1 Add/Modify Security Profile

This screen allows you to create a new security profile or edit an existing one. To access this screen, click the **Add New Profile** button or select a security profile from the list and click the **Modify** button.

Note: This screen's options change based on the **Security Mode** selected. Only the default screen is displayed here.

Figure 114 Network Setting > AP Profile > Security > Add New Profile/Modify

General Settings

Profile Name :

Mode :

Radius Settings

Radius Server Type :

Primary Radius Server Activate : ☐

• Radius Server IP Address :

• Radius Server Port : (1-65535)

• Radius Server Secret : (1-64 characters)

Secondary Radius Server Activate : ☐

• Radius Server IP Address :

• Radius Server Port : (1-65535)

• Radius Server Secret : (1-64 characters)

MAC Authentication Setting

MAC Authentication : ☐

• Delimiter (Account) :

• Case (Account) :

• Delimiter (Calling Station ID) :

• Case (Calling Station ID) :

Authentication Settings

802.1X : ☐

• ReAuthentication Timer : (30~30000 seconds, 0 is unlimited)

Idle Timeout : (30~30000 seconds)

The following table describes the labels in this screen.

Table 81 Network Setting > AP Profile > Security > Add New Profile/Modify

| LABEL | DESCRIPTION |
|--|---|
| General Settings | |
| Profile Name | Enter up to 31 alphanumeric characters for the profile name. This name is only visible in the Web Configurator and is only for management purposes. Spaces and underscores are allowed. |
| Mode | Select a security mode from the list: wep , wpa , wpa2 , or wpa2-mix . |
| Radius Settings | |
| Radius Server Type | Select External to use an external RADIUS server for authentication. |
| Primary / Secondary Radius Server Activate | Select this to have the SBG3600-N Series use the specified RADIUS server. |
| Radius Server IP Address | Enter the IP address of the RADIUS server to be used for authentication. |
| Radius Server Port | Enter the port number of the RADIUS server to be used for authentication. |
| Radius Server Secret | Enter the shared secret password of the RADIUS server to be used for authentication. |
| MAC Authentication Setting | |

Table 81 Network Setting > AP Profile > Security > Add New Profile/Modify

| LABEL | DESCRIPTION |
|---|---|
| MAC Authentication | Select this to use an external server to authenticate wireless clients by their MAC address. Users cannot get an IP address if the MAC authentication fails. An external server can use the wireless client's account (username/password) or Calling Station ID for MAC authentication. Configure the ones the external server uses. |
| Delimiter (Account) | Select the separator the external server uses for the two-character pairs within account MAC address. |
| Case (Account) | Select the case (upper or lower) the external server requires for letters in the account MAC address. |
| Delimiter (Calling Station ID) | RADIUS servers can require the MAC address in the Calling Station ID RADIUS attribute. Select the separator the external server uses for the pairs in calling station MAC address. |
| Case (Calling Station ID) | Select the case (upper or lower) the external server requires for letters in the calling station MAC address. |
| Authentication Settings | |
| 802.1X | Select this to enable 802.1x secure authentication. |
| Reauthentication Timer | Enter the interval (in seconds) between authentication requests. Enter a 0 for unlimited requests. |
| The following fields are available if you set Security Mode to wep . | |
| Idle Timeout | Enter the idle interval (in seconds) that a client can be idle before authentication is discontinued. |
| Authentication Type | Select a WEP authentication method. Choices are Open or Share key. |
| Key Length | Select the bit-length of the encryption key to be used in WEP connections. If you select WEP-64 : <ul style="list-style-type: none"> Enter 10 hexadecimal digits in the range of "A-F", "a-f" and "0-9" (for example, 0x11AA22BB33) for each Key used. or <ul style="list-style-type: none"> Enter 5 ASCII characters (case sensitive) ranging from "a-z", "A-Z" and "0-9" (for example, MyKey) for each Key used. If you select WEP-128 : <ul style="list-style-type: none"> Enter 26 hexadecimal digits in the range of "A-F", "a-f" and "0-9" (for example, 0x00112233445566778899AABBCC) for each Key used. or <ul style="list-style-type: none"> Enter 13 ASCII characters (case sensitive) ranging from "a-z", "A-Z" and "0-9" (for example, MyKey12345678) for each Key used. |
| Key 1~4 | Based on your Key Length selection, enter the appropriate length hexadecimal or ASCII key. |
| The following fields are available if you set Security Mode to wpa , wpa2 or wpa2-mix . | |
| PSK | Select this option to use a Pre-Shared Key with WPA encryption. |
| Pre-Shared Key | Enter a pre-shared key of between 8 and 63 case-sensitive ASCII characters (including spaces and symbols) or 64 hexadecimal characters. |

Table 81 Network Setting > AP Profile > Security > Add New Profile/Modify





| LABEL | DESCRIPTION |
|------------------------|---|
| Cipher Type | <p>Select an encryption cipher type from the list.</p> <ul style="list-style-type: none"> auto - This automatically chooses the best available cipher based on the cipher in use by the wireless client that is attempting to make a connection. tkip - This is the Temporal Key Integrity Protocol encryption method added later to the WEP encryption protocol to further secure. Not all wireless clients may support this. aes - This is the Advanced Encryption Standard encryption method. It is a more recent development over TKIP and considerably more robust. Not all wireless clients may support this. |
| Idle Timeout | Enter the idle interval (in seconds) that a client can be idle before authentication is discontinued. |
| Group Key Update Timer | Enter the interval (in seconds) at which the AP updates the group WPA encryption key. |
| Pre-Authentication | <p>This field is available only when you set Security Mode to wpa2 or wpa2-mix and enable 802.1x authentication.</p> <p>Enable or Disable pre-authentication to allow the AP to send authentication information to other APs on the network, allowing connected wireless clients to switch APs without having to re-authenticate their network connection.</p> |
| Apply | Click Apply to save your changes to the SBG3600-N Series. |
| Cancel | Click Cancel to exit this screen without saving your changes. |

14.5 MAC Filtering Screen

This screen allows you to create and manage MAC filtering profiles that can be used by your SSIDs. To access this screen click **Network Setting > AP Profile > MAC Filtering**.

Note: You can have a maximum of 8 MAC filtering profiles on the SBG3600-N Series.

Figure 115 Network Setting > AP Profile > MAC Filtering

| Add New Profile (Up to 8 MAC Filtering Profiles can be added.) | | | |
|--|--------------|---------------|---|
| # | Profile Name | Filter Action | Modify |
| 1 | example1 | deny |   |
| 2 | example2 | deny |   |

The following table describes the labels in this screen.

Table 82 Network Setting > AP Profile > MAC Filtering

| LABEL | DESCRIPTION |
|-----------------|---|
| Add New Profile | Click this to add a new MAC filtering profile. |
| # | This field is a sequential value, and it is not associated with a specific profile. |
| Profile Name | This field indicates the name assigned to the MAC filtering profile. |
| Filter Action | This field indicates this profile's filter action (if any). |
| Modify | <p>Click the Edit icon to edit the MAC filtering profile.</p> <p>Click the Delete icon to delete an existing MAC filtering profile. Note that subsequent MAC filtering profile moves up by one when you take this action.</p> |

14.5.1 Add New Entry/Modify MAC Filtering Profile


This screen allows you to create a new MAC filtering profile or edit an existing one. To access this screen, click the **Add New Profile** button or select a MAC filter profile from the list and click the **Modify** button.

Figure 116 Network Setting > AP Profile > MAC Filtering > Add New Profile/Modify

Profile Name :

Filter Action : deny ▼

Add New Entry (Up to 128 entries can be added.)

| # | MAC | Description | Modify |
|---|----------------------|----------------------|---|
| 1 | <input type="text"/> | <input type="text"/> |  |

Apply Cancel

The following table describes the labels in this screen.

Table 83 Network Setting > AP Profile > MAC Filtering > Add New Profile/Modify

| LABEL | DESCRIPTION |
|---------------|--|
| Profile Name | Enter up to 31 alphanumeric characters for the profile name. This name is only visible in the Web Configurator and is only for management purposes. Spaces and underscores are allowed. |
| Filter Action | Select allow to permit the wireless client with the MAC addresses in this profile to connect to the network through the associated SSID; select deny to block the wireless clients with the specified MAC addresses. |
| Add New Entry | Click this to add a MAC address that is associated with the MAC Filtering Profile's list. You can add up to 128 entries in this profile. |
| # | This field is a sequential value, and it is not associated with a specific profile. |
| MAC | Enter a MAC address that is associated with this MAC Filtering Profile. |
| Description | Enter This field displays a description for the MAC address associated with this profile. You can click the description to make it editable. Enter up to 60 characters, spaces and underscores allowed. |
| Modify | Click the Edit icon to edit the MAC filtering profile. Click the Delete icon to delete a MAC filtering profile. Note that subsequent MAC filtering profile moves up by one when you take this action. |
| Apply | Click Apply to save your changes back to the SBG3600-N Series. |
| Cancel | Click Cancel to exit this screen without saving your changes. |


14.6 Layer-2 Isolation Overview

When Layer-2 isolation is enabled, it prevents connected devices from communicating with each other in the SBG3600-N Series's local network(s).

Layer-2 isolation only checks the wireless traffic that goes through the SBG3600-N Series interfaces, such as the virtual interface and the bridge interface. between the 2.4 and 5 GHz WLAN. T

In the following example, layer-2 isolation is enabled on the SBG3600-N Series' interface Vlan1. A printer, PC and AP are in the Vlan1. The IP address of network printer (C) is added to the white list. The connected AP then cannot communicate with the PC (D), but can access the network printer (C), server (B), wireless client (A) and the Internet.

Figure 117 Layer-2 Isolation Application

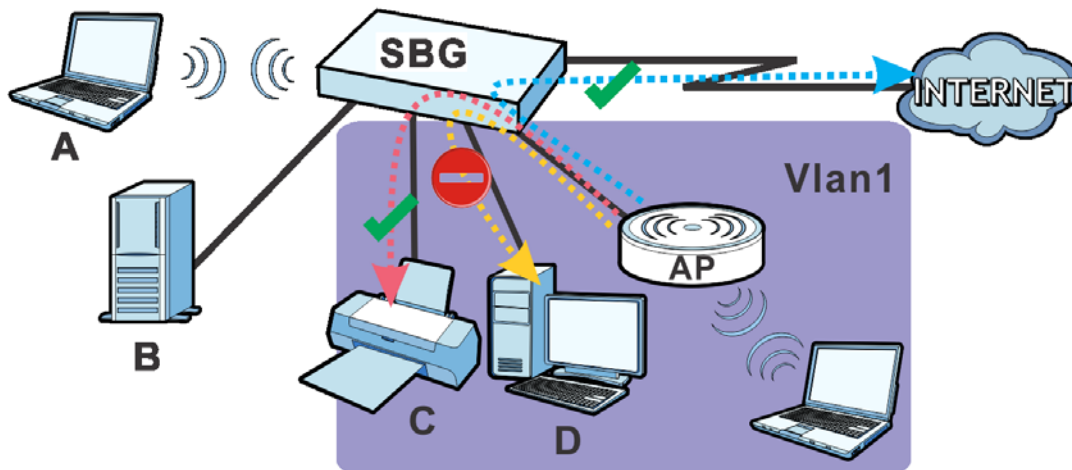



14.7 Layer-2 Isolation Screen

This screen allows you to create and manage layer-2 isolation profiles that can be used by your SSIDs. To access this screen click **Network Setting > AP Profile > Layer-2 Isolation**.

Note: You can have a maximum of 16 Layer-2 Isolation profiles on the SBG3600-N Series.

Figure 118 Network Setting > AP Profile > Layer-2 Isolation

| Add New Profile (Up to 16 Layer-2 Isolation Profiles can be added.) | | |
|---|--------------|---|
| # | Profile Name | Modify |
| 1 | example |   |

The following table describes the labels in this screen.

Table 84 Network Setting > AP Profile > Layer-2 Isolation

| LABEL | DESCRIPTION |
|-----------------|--|
| Add New Profile | Click the Add New Profile button to add a new Layer-2 Isolation Profile. |
| # | This field is a sequential value, and it is not associated with a specific profile. |
| Profile Name | This field displays the Layer-2 Isolation Profile name. |
| Modify | Click the Edit icon to edit the Layer-2 isolation profile. Click the Delete icon to delete an existing Layer-2 isolation profile. Note that subsequent Layer-2 isolation profile moves up by one when you take this action. |

14.7.1 Add New Profile/Modify Layer-2 Isolation

This screen allows you to create a new Layer-2 Isolation profile or edit an existing one. To access this screen, click the **Add New Profile** button or select an entry from the list and click the **Modify** button.

Figure 119 Network Setting > AP Profile > Layer-2 Isolation > Add New Profile/Modify

Profile Name :

Filter Action : Allow

Add New Entry (Up to 32 entries can be added.)

| # | MAC | Description | Modify |
|---|----------------------|----------------------|--------|
| 1 | <input type="text"/> | <input type="text"/> | |

The following table describes the labels in this screen.

Table 85 Network Setting > AP Profile > Layer-2 Isolation > Add New Profile/Modify

| LABEL | DESCRIPTION |
|---------------|--|
| Profile Name | Enter a name for this Layer-2 Isolation Profile. Enter up to 18 characters, spaces and underscores allowed. |
| Filter Action | This shows whether the wireless client with the MAC addresses in the Layer-2 Isolation Profile is allowed to connect to the network through the associated SSID. The default value is Allow . |
| Add New Entry | Click Add New Entry button to add a MAC address to the profile's list. |
| # | This field is a sequential value, and it is not associated with a specific profile. |
| MAC | Enter a MAC address associated with the layer-2 isolation profile. |
| Description | Enter a description of the MAC address associated with the layer-2 isolation profile in this field. Enter up to 60 characters, spaces and underscores allowed. |
| Modify | Click the Delete icon to remove the MAC address from the profile's list. |

Interface Group

15.1 Overview

By default, the four LAN interfaces on the SBG3600-N Series are in the same group and can communicate with each other. Creating a new interface will create a new LAN bridge interface (subnet) (for example, 192.168.2.0/24) that acts as a dependent LAN network, and is a different subnet from default LAN subnet (192.168.1.0/24).

15.2 The Interface Group/VLAN Screen


You can manually add a LAN interface to a new group. Alternatively, you can have the SBG3600-N Series automatically add the incoming traffic and the LAN interface on which traffic is received to an interface group when its DHCP Vendor ID option information matches one listed for the interface group.

Use the **LAN** screen to configure the private IP addresses the DHCP server on the SBG3600-N Series assigns to the clients in the default and/or user-defined groups. If you set the SBG3600-N Series to assign IP addresses based on the client's DHCP Vendor ID option information, you must enable DHCP server and configure LAN TCP/IP settings for both the default and user-defined groups. See [Chapter 8 on page 168](#) for more information.

Use the **Interface Group/VLAN** screen to create a new interface group, which is a new LAN bridge interface (subnet). Click **Network Setting > Interface Group/VLAN** to open the following screen.

Figure 120 Network Setting > Interface Group/VLAN

| Add New Interface Group | | | | | |
|-------------------------|------------|--------|-------------------|--|--------|
| St... | Group Name | 802.1q | IPv4 | Port Members | Modify |
| | Default | 1 | 172.23.30.219/... | Untagged: LAN1,LAN2,LAN3,LAN4,WL_ZyXEL5F5B4 Tagged: - | |

 **Note:**
When new group is created, you can go to Network Setting->LAN->LAN Setup to select the group name and configure the DHCP or other settings for the new subnet.

The following table describes the fields in this screen.

Table 86 Network Setting > Interface Group/VLAN

| LABEL | DESCRIPTION |
|-------------------------|--|
| Add New Interface Group | Click this button to create a new interface group. |
| Status | This field displays whether the interface group is active or not. A yellow bulb signifies that this group is active. A gray bulb signifies that the group is not active. |

Table 86 Network Setting > Interface Group/VLAN (continued)

| LABEL | DESCRIPTION |
|--------------|--|
| Group Name | This shows the descriptive name of the group. |
| 802.1p | This shows the VLAN ID number (from 0 to 4094) of the interface group. |
| IPv4 | This shows the IP address of the interface group where the traffic passes through. |
| Port Members | This shows the tagged and untagged ports of the interface group. |
| Modify | Click the Delete icon to remove the group. |

15.2.1 Interface Group Configuration

Click the **Add New Interface Group** button in the **Interface Group/VLAN** screen to open the following screen. Use this screen to create a new interface group.

Note: An interface can belong to only one group at a time.

Figure 121 Interface Group Configuration

Group Name :
802.1p :
802.1q : (1~4094)

VLAN Port Membership

| Port | Member | Tagged |
|----------------------|--------------------------|--------------------------|
| LAN1 | <input type="checkbox"/> | <input type="checkbox"/> |
| LAN2 | <input type="checkbox"/> | <input type="checkbox"/> |
| LAN3 | <input type="checkbox"/> | <input type="checkbox"/> |
| LAN4 | <input type="checkbox"/> | <input type="checkbox"/> |
| WL_ZyXEL5F5B4 | <input type="checkbox"/> | |
| WL_ZyXEL5F5B4_Guest1 | <input type="checkbox"/> | |
| WL_ZyXEL5F5B4_Guest2 | <input type="checkbox"/> | |
| WL_ZyXEL5F5B4_Guest3 | <input type="checkbox"/> | |

Automatically Add Clients With the following DHCP Vendor IDs

| # | Filter Criteria | Wildcard Support | Remove |
|------------------------------------|-----------------|------------------|--------|
| <input type="button" value="Add"/> | | | |

Note:

If a vendor ID is configured for a specific client device,
please REBOOT the client device attached to the modem to allow it to obtain an appropriate IP address.

The following table describes the fields in this screen.

Table 87 Interface Group Configuration

| LABEL | DESCRIPTION |
|----------------------|--|
| Group Name | Enter a name to identify this group. You can enter up to 30 characters. You can use letters, numbers, hyphens (-) and underscores (_). Spaces are not allowed. |
| 802.1p | IEEE 802.1p defines up to 8 separate traffic types by inserting a tag into a MAC-layer frame that contains bits to define class of service. Select the IEEE 802.1p priority level (from 0 to 7) to add to traffic through this connection. The greater the number, the higher the priority level. |
| 802.1q | Type the VLAN ID number (from 0 to 4094) for traffic through this connection. |
| VLAN Port Membership | |
| Port | This is the available LAN interface (Ethernet LAN or Wireless LAN) that can be selected to form a VLAN interface group. |
| Member | Click the check box to select the LAN port as a member of the VLAN interface group. |
| Tagged | Click the check box to set the port to tag or not to tag all outgoing traffic with the VLAN ID. |
| # | This shows the index number of the rule. |
| Filter Criteria | This shows the filtering criteria. The LAN interface on which the matched traffic is received will belong to this group automatically. |
| Wildcard Support | This shows if wildcard on DHCP option 60 is enabled. |
| Remove | Click the Remove icon to delete this rule from the SBG3600-N Series. |
| Apply | Click Apply to save your changes back to the SBG3600-N Series. |
| Cancel | Click Cancel to exit this screen without saving. |

15.2.2 Interface Grouping Criteria

Click the **Add** button in the **Interface Grouping Configuration** screen to open the following screen.

Figure 122 Interface Grouping Criteria

Criteria

☐ Source MAC Address:

☐ DHCP option 60

☐ Enable wildcard on DHCP option 60

☐ DHCP option 61

IAID:

DUID type:

☐ DHCP option 125

Enterprise Number:

Manufacturer OUI:

Product Class:

Model Name:

Serial Number:

Apply **Cancel**

The following table describes the fields in this screen.

Table 88 Interface Grouping Criteria

| LABEL | DESCRIPTION |
|--|---|
| Source MAC Address | Enter the source MAC address of the packet. |
| DHCP Option 60 | Select this option and enter the Vendor Class Identifier (Option 60) of the matched traffic, such as the type of the hardware or firmware. |
| Enable wildcard on DHCP option 60 option | Select this option to be able to use wildcards in the Vendor Class Identifier configured for DHCP option 60. |
| DHCP Option 61 | Select this and enter the device identity of the matched traffic. |
| IAID | Enter the Identity Association Identifier (IAID) of the device, for example, the WAN connection index number. |
| DUID type | <p>Select DUID-LLT (DUID Based on Link-layer Address Plus Time) to enter the hardware type, a time value and the MAC address of the device.</p> <p>Select DUID-EN (DUID Assigned by Vendor Based upon Enterprise Number) to enter the vendor's registered enterprise number.</p> <p>Select DUID-LL (DUID Based on Link-layer Address) to enter the device's hardware type and hardware address (MAC address) in the following fields.</p> <p>Select Other to enter any string that identifies the device in the DUID field.</p> |
| DHCP Option 125 | Select this and enter vendor specific information of the matched traffic. |
| Enterprise Number | Enter the vendor's 32-bit enterprise number registered with the IANA (Internet Assigned Numbers Authority). |
| Manufacturer OUI | Specify the vendor's OUI (Organization Unique Identifier). It is usually the first three bytes of the MAC address. |

Table 88 Interface Grouping Criteria (continued)

| LABEL | DESCRIPTION |
|---------------|---|
| Product Class | Enter the product class of the device. |
| Model Name | Enter the model name of the device. |
| Serial Number | Enter the serial number of the device. |
| Apply | Click Apply to save your changes back to the SBG3600-N Series. |
| Cancel | Click Cancel to exit this screen without saving. |

USB Service

16.1 Overview

The SBG3600-N Series has a USB port used to share files via a USB memory stick or a USB hard drive. In the **USB Service** screens, you can enable the file-sharing server.

16.1.1 What You Can Do in this Chapter

- Use the **File Sharing** screen to enable file-sharing server ([Section 16.2 on page 259](#)).

16.1.2 What You Need To Know

The following terms and concepts may help as you read this chapter.

Workgroup name

This is the name given to a set of computers that are connected on a network and share resources such as a printer or files. Windows automatically assigns the workgroup name when you set up a network.

Shares

When settings are set to default, each USB device connected to the SBG3600-N Series is given a folder, called a "share". If a USB hard drive connected to the SBG3600-N Series has more than one partition, then each partition will be allocated a share. You can also configure a "share" to be a sub-folder or file on the USB device.

File Systems

A file system is a way of storing and organizing files on your hard drive and storage device. Often different operating systems such as Windows or Linux have different file systems. The file sharing feature on your SBG3600-N Series supports File Allocation Table (FAT) and FAT32.

Common Internet File System

The SBG3600-N Series uses Common Internet File System (CIFS) protocol for its file sharing functions. CIFS compatible computers can access the USB file storage devices connected to the SBG3600-N Series. CIFS protocol is supported on Microsoft Windows, Linux Samba and other operating systems (refer to your systems specifications for CIFS compatibility).

Samba

SMB is a client-server protocol used by Microsoft Windows systems for sharing files, printers, and so on.

Samba is a free SMB server that runs on most Unix and Unix-like systems. It provides an implementation of an SMB client and server for use with non-Microsoft operating systems. It allows file and print sharing between computers running Windows and computers running Unix.


16.2 The File Sharing Screen

You can share files on a USB memory stick or hard drive connected to your SBG3600-N Series with users on your network.

The SBG3600-N Series supports Samba. This allows network users to access shared files in USB storage. To use file sharing you must enable it in the file sharing screen and also edit individual user accounts in the **Maintenance > User Account** screen. See [Chapter 34 on page 338](#) for more information.

The following figure is an overview of the SBG3600-N Series's file server feature. Computers **A** and **B** can access files on a USB device (**C**) which is connected to the SBG3600-N Series.

Figure 123 File Sharing Overview

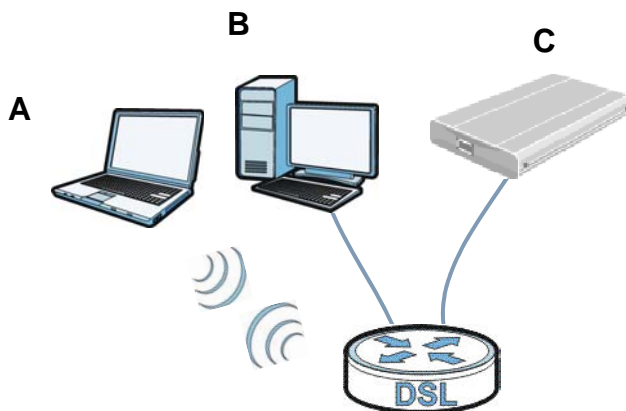

Note: The SBG3600-N Series will not be able to join the workgroup if your local area network has restrictions set up that do not allow devices to join a workgroup. In this case, contact your network administrator.

16.2.1 Before You Begin

Make sure the SBG3600-N Series is connected to your network and turned on.


- 1 Connect the USB device to one of the SBG3600-N Series's USB port. Make sure the SBG3600-N Series is connected to your network.

- 2 The SBG3600-N Series detects the USB device and makes its contents available for browsing. If you are connecting a USB hard drive that comes with an external power supply, make sure it is connected to an appropriate power source that is on.

Note: If your USB device cannot be detected by the SBG3600-N Series, see the troubleshooting for suggestions.

Use this screen to set up file sharing using the SBG3600-N Series. To access this screen, click **Network Setting > USB Service > File Sharing**.

Figure 124 Network Setting > USB Service > File Sharing

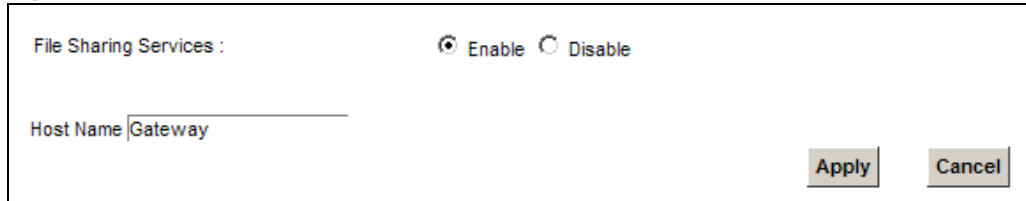

File Sharing Services : ☒ Enable ☐ Disable

Host Name

Apply Cancel

Each field is described in the following table.

Table 89 Network Setting > LAN > File Sharing

| LABEL | DESCRIPTION |
|-----------------------|---|
| File Sharing Services | Select Enable to activate file sharing through the SBG3600-N Series. |
| Host Name | Enter the host name on the share. |
| Apply | Click Apply to save your changes. |
| Cancel | Click Cancel to restore your previously saved settings. |

Firewall


17.1 Overview

This chapter shows you how to enable and configure the SBG3600-N Series's security settings. Use the firewall to protect your SBG3600-N Series and network from attacks by hackers on the Internet and control access to it. By default the firewall:

- allows traffic that originates from your LAN computers to go to all other networks.
- blocks traffic that originates on other networks from going to the LAN.

The following figure illustrates the default firewall action. User **A** can initiate an IM (Instant Messaging) session from the LAN to the WAN (1). Return traffic for this session is also allowed (2). However other traffic initiated from the WAN is blocked (3 and 4).

Figure 125 Default Firewall Action

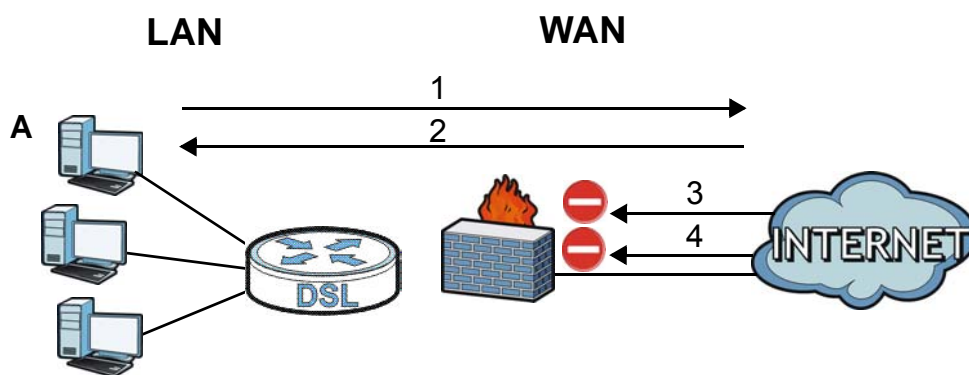

17.1.1 What You Can Do in this Chapter

- Use the **General** screen to activate the firewall feature on the SBG3600-N Series ([Section 17.2 on page 263](#)).
- Use the **DoS** screen to activate protection against Denial of Service (DoS) attacks ([Section 17.3 on page 263](#)).
- Use the **Service** screen to add or remove predefined Internet services and configure firewall rules ([Section 17.4 on page 264](#)).
- Use the **Access Control** screen to view and configure incoming/outgoing filtering rules ([Section 17.5 on page 266](#)).
- Use the **Zone Control** screen to set the firewall's default actions based on the direction of travel of packets ([Section 17.6 on page 269](#)).

17.1.2 What You Need to Know

SYN Attack

A SYN attack floods a targeted system with a series of SYN packets. Each packet causes the targeted system to issue a SYN-ACK response. While the targeted system waits for the ACK that follows the SYN-ACK, it queues up all outstanding SYN-ACK responses on a backlog queue. SYN-ACKs are moved off the queue only when an ACK comes back or when an internal timer terminates the three-way handshake. Once the queue is full, the system will ignore all incoming SYN requests, making the system unavailable for legitimate users.

DoS

Denials of Service (DoS) attacks are aimed at devices and networks with a connection to the Internet. Their goal is not to steal information, but to disable a device or network so users no longer have access to network resources. The ZyXEL Device is pre-configured to automatically detect and thwart all known DoS attacks.

DDoS

A DDoS attack is one in which multiple compromised systems attack a single target, thereby causing denial of service for users of the targeted system.

LAND Attack

In a LAND attack, hackers flood SYN packets into the network with a spoofed source IP address of the target system. This makes it appear as if the host computer sent the packets to itself, making the system unavailable while the target system tries to respond to itself.

Ping of Death

Ping of Death uses a "ping" utility to create and send an IP packet that exceeds the maximum 65,536 bytes of data allowed by the IP specification. This may cause systems to crash, hang or reboot.


SPI

Stateful Packet Inspection (SPI) tracks each connection crossing the firewall and makes sure it is valid. Filtering decisions are based not only on rules but also context. For example, traffic from the WAN may only be allowed to cross the firewall in response to a request from the LAN.

ZWO (ZyXEL Wireless Optimizer)

The ZyXEL Wireless Optimizer is a software tool that enhances wireless network management by providing a visualization of the performance of the wireless network. You can perform AP planning, check coverage detection and see wireless health management in the site map. To use this tool you will need to create an ACL rule using port number 18443 in the ACL screen. See [Section 17.5 on page 266](#) for details. You can download the ZWO tool at www.zyxel.com.

Figure 126 ZWO

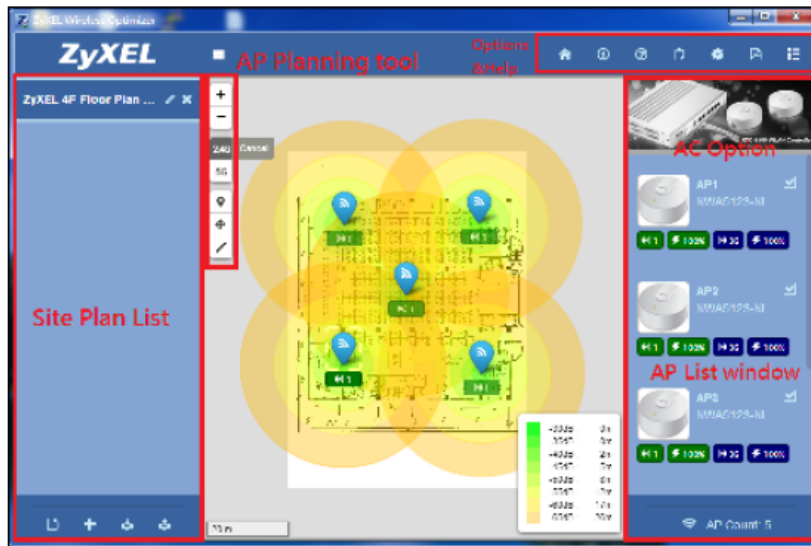

17.2 The Firewall Screen

Use this screen to enable the firewall on the SBG3600-N Series.

Click **Security > Firewall** to display the **General** screen.

Figure 127 Security > Firewall > General

Firewall :
☒ Enable
☐ Disable

Note:

- When firewall is disabled, DoS, Access Control and Zone Control will be disabled, too.
- The precedence of security rules in this device is (from high to low): DoS > Access Control > Remote Management > Zone Control.

Select **Enable** to activate the firewall feature on the SBG3600-N Series.

17.3 The DoS Screen

DoS (Denial of Service) attacks can flood your Internet connection with invalid packets and connection requests, using so much bandwidth and so many resources that Internet access becomes unavailable.

Use the **DoS** screen to activate protection against DoS attacks. Click **Security > Firewall > DoS** to display the following screen.

Figure 128 Security > Firewall > DoS

DoS Protection Blocking : ☐ Enable ☒ Disable (settings are invalid when disabled)

Deny Ping Response : ☐ Enable ☒ Disable

Note:
When the firewall is disabled, DoS and Deny Ping cannot be setup.

Apply Cancel

The following table describes the labels in this screen.

Table 90 Security > Firewall > DoS

| LABEL | DESCRIPTION |
|-------------------------|--|
| DoS Protection Blocking | Select Enable to enable protection against DoS attacks. |
| Deny Ping Response | Select Enable to block ping request packets. |
| Apply | Click Apply to save your changes. |
| Cancel | Click Cancel to exit this screen without saving. |

17.4 The Service Screen

You can configure customized services and port numbers in the **Service** screen. For a comprehensive list of port numbers and services, visit the IANA (Internet Assigned Number Authority) website. See [Appendix F on page 432](#) for some examples.

Click **Security > Firewall > Service** to display the following screen.

Figure 129 Security > Firewall > Service

| Add new service entry | | | |
|-----------------------|---|--------------------------------|--------|
| Name | Description | Ports/Protocol Number | Modify |
| AH | The IPSEC AH (Authentication He... | Other: 51 | |
| BOOTP_CLIENT | DHCP Client. | UDP: Any->68 | |
| BOOTP_SERVER | DHCP Server. | UDP: Any->67 | |
| DNS | Domain Name Server, a service t... | TCP: Any->53 UDP: Any->53 | |
| ESP | The IPSEC ESP (Encapsulation S... | Other: 50 | |
| FTP | File Transfer Program, a program... | TCP: Any->20 TCP: Any->21 | |
| H.323 | NetMeeting uses this protocol. | TCP: Any->1720 | |
| HTTP | Hyper Text Transfer Protocol - a cl... | TCP: Any->80 | |
| HTTPS | HTTPS is a secured http session ... | TCP: Any->443 | |
| ICMP | Internet C... Message Protoco... | Other: 1 | |
| ISAKMP | Internet Security Association and Key Management Protocol | TCP: Any->500 UDP: Any->500 | |
| SYSLOG | Syslog allows you to send syste... | TCP: Any->514 | |
| TELNET | Telnet is the login and terminal e... | TCP: Any->23 | |
| TFTP | Trivial File Transfer Protocol is an... | UDP: Any->69 | |
| VDOLIVE | Another videoconferencing soluti... | TCP: Any->7000 | |

The following table describes the labels in this screen.

Table 91 Security > Firewall > Service

| LABEL | DESCRIPTION |
|-----------------------|---|
| Add new service entry | Click this to add a new service. |
| Name | This is the name of your customized service. |
| Description | This is the description of your customized service. |
| Ports/Protocol Number | This shows the IP protocol (TCP , UDP , ICMP , or TCP/UDP) and the port number or range of ports that defines your customized service. Other and the protocol number displays if the service uses another IP protocol. |
| Modify | Click the Edit icon to edit the entry. Click the Delete icon to remove this entry. |

17.4.1 Add/Edit a Service

Use this screen to add a customized service rule that you can use in the firewall's ACL rule configuration. Click **Add new service entry** or the edit icon next to an existing service rule in the **Service** screen to display the following screen.

Figure 130 Service: Add/Edit

Protocol: Other ▼

Protocol Number: (0-255) Add

Rule List

| Protocol | Ports/Protocol Number | Modify |
|--|-----------------------|--------|
| <div>Service Name: <input type="text"/></div> <div>Service Description: <input type="text"/></div> | | |

Apply Cancel

The following table describes the labels in this screen.

Table 92 Service: Add/Edit

| LABEL | DESCRIPTION |
|-----------------------------|---|
| Protocol | Choose the IP protocol (TCP , UDP , ICMP , or Other) that defines your customized port from the drop-down list box. Select Other to be able to enter a protocol number. |
| Source/ Destination Port | These fields are displayed if you select TCP or UDP as the IP port. Select Single to specify one port only or Range to specify a span of ports that define your customized service. If you select Any , the service is applied to all ports. Type a single port number or the range of port numbers that define your customized service. |
| Protocol Number | This field is displayed if you select Other as the protocol. Enter the protocol number of your customized port. |
| Add | Click this to add the protocol to the Rule List below. |
| Rule List | |
| Protocol | This is the IP port (TCP , UDP , ICMP , or Other) that defines your customized port. |
| Ports/Protocol Number | For TCP , UDP , ICMP , or TCP/UDP protocol rules this shows the port number or range that defines the custom service. For other IP protocol rules this shows the protocol number. |
| Modify | Click the Delete icon to remove the rule. |
| Service Name | Enter a unique name (up to 32 printable English keyboard characters, including spaces) for your customized port. |
| Service Description | Enter a description for your customized port. |
| Apply | Click Apply to save your changes. |
| Cancel | Click Cancel to exit this screen without saving. |

17.5 The Access Control Screen

Click **Security > Firewall > Access Control** to display the following screen. This screen displays a list of the configured incoming or outgoing filtering rules.

Figure 131 Security > Firewall > Access Control

Rules Storage Space usage(%): 2%

Firewall: Enabled

Direction: From All To All

| # | En | Name | From | To | Src IP | Dst IP | Service | Action | Modify |
|---|----|---------|------|-----|--------|--------|----------------|--------|--------|
| 1 | | example | WAN | LAN | Any | Any | None: Any->Any | ACCEPT | |

Note:

- If an ACL rule is created that results in loss of management (e.g. Deny Any to Router) the unit must be restored to factory defaults.
- An 'L' in the 'En' field of an ACL rule indicates logging enabled.
An 'R' in the 'En' field of an ACL rule indicates rate limit enabled.
An 'S' in the 'En' field of an ACL rule indicates scheduler rule set.

The following table describes the labels in this screen.

Table 93 Security > Firewall > Access Control

| LABEL | DESCRIPTION |
|---------------------------|--|
| Rules Storage Space usage | This bar shows the percentage of the SBG3600-N Series's space has been used. If the usage is almost full, you may need to remove an existing filter rule before you create a new one. |
| Direction | This displays the direction of the ACL rule. |
| Add new ACL rule | Click this to go to add a filter rule for incoming or outgoing IP traffic. |
| # | This is the index number of the entry. |
| Enable | This field displays whether the ACL rule is active or not. A yellow bulb signifies that this rule is active. A gray bulb signifies that this rule is not active. |
| Name | This displays the name of the rule. |
| From/To | This is the packet direction. Choose the interfaces from the drop-down list to set the direction of the packet that the ACL rule applies. |
| Src IP | This displays the source IP addresses to which this rule applies. Please note that a blank source address is equivalent to Any . |
| Dst IP | This displays the destination IP addresses to which this rule applies. Please note that a blank destination address is equivalent to Any . |
| Service | This displays the transport layer protocol that defines the service and the direction of traffic to which this rule applies. |
| Action | This is the policy of the access control. Choose the following option from the drop-down list: Select Drop to silently discard the packets without sending a TCP reset packet or an ICMP destination-unreachable message to the sender. Select Reject to deny the packets and send a TCP reset packet (for a TCP packet) or an ICMP destination-unreachable message (for a UDP packet) to the sender. Select Accept to allow the passage of the packets. |
| Modify | Click the Edit icon to edit the rule. Click the Delete icon to delete an existing rule. Note that subsequent rules move up by one when you take this action. Click the Move To icon to change the order of the rule. Enter the number in the # field. |

17.5.1 Add/Edit an ACL Rule

Click **Add new ACL rule** or the **Edit** icon next to an existing ACL rule in the **Access Control** screen. The following screen displays.

Figure 132 Access Control: Add/Edit

| | |
|--|---|
| Enable: | <input checked="" type="checkbox"/> |
| Logging: | <input type="checkbox"/> |
| Filter Name: | <input type="text"/> |
| Order: | 1 ▼ |
| Direction: | From: Any ▼ To: Any (excl. ROUTER) ▼ |
| Select Source Device: | Specific IP Address ▼ |
| Source IP address: | <input type="text"/> [prefix length] |
| Select Destination Device: | Specific IP Address ▼ |
| Destination IP address: | <input type="text"/> [prefix length] |
| IP Type: | IPv4 ▼ |
| Select Service: | Specific Service ▼ |
| Protocol: | ▼ |
| Custom Source Port: | <input type="text"/> (port or port:port) |
| Custom Destination Port: | <input type="text"/> (port or port:port) |
| Policy: | ACCEPT ▼ |
| Enable Rate Limit | <input type="checkbox"/> |
| | <input type="text"/> packet(s) per Minute ▼ (1-512) |
| Scheduler Rules: | ▼ |
| Filter Description: | <input type="text"/> |
| <input type="button" value="Apply"/> <input type="button" value="Cancel"/> | |

The following table describes the labels in this screen.

Table 94 Access Control: Add/Edit

| LABEL | DESCRIPTION |
|---------------------------|---|
| Enable | Click the check box to activate the ACL. |
| Logging | Click the check box if you want to log the packet throughput in this ACL. |
| Filter Name | Enter a descriptive name of up to 16 alphanumeric characters, not including spaces, underscores, and dashes. You must enter the filter name to add an ACL rule. This field is read-only if you are editing the ACL rule. |
| Order | Select the order of the ACL rule. |
| Direction | Select the direction of the ACL rule. You may select from WAN to LAN , WAN to Router , WAN to DMZ , LAN to WAN , LAN to Router , LAN to DMZ , DMZ to WAN , DMZ to LAN , and DMZ to Router . The DMZ zone is available when there's a specified DMZ group. Note: To use ZWO , select from WAN to Router in this field. |
| Select Source Device | Select the source device to which the ACL rule applies. If you select Specific IP Address , enter the source IP address in the field below. |
| Source IP Address | Enter the source IP address. |
| Select Destination Device | Select the destination device to which the ACL rule applies. If you select Specific IP Address , enter the destination IP address in the field below. |
| Destination IP Address | Enter the destination IP address. |
| IP Type | Select whether your IP type is IPv4 or IPv6 . |

Table 94 Access Control: Add/Edit (continued)

| LABEL | DESCRIPTION |
|-------------------------|--|
| Select Service | Select the transport layer protocol that defines your customized port from the drop-down list box. The specific protocol rule sets you add in the Security > Firewall > Service > Add screen display in this list. If you want to configure a customized protocol, select Specific Service . |
| Protocol | This field is displayed only when you select Specific Protocol in Select Protocol . Choose the IP port (TCP/UDP, TCP, UDP, ICMP, or ICMPv6) that defines your customized port from the drop-down list box. |
| Custom Source Port | This field is displayed only when you select Specific Protocol in Select Protocol . Enter a single port number or the range of port numbers of the source. |
| Custom Destination Port | This field is displayed only when you select Specific Protocol in Select Protocol . Enter a single port number or the range of port numbers of the destination. Note: To use ZWO , enter 18443 in this field. |
| Policy | Use the drop-down list box to select whether to discard (DROP), deny and send an ICMP destination-unreachable message to the sender of (REJECT) or allow the passage of (ACCEPT) packets that match this rule. |
| Enable Rate Limit | Select this check box to set a limit on the upstream/downstream transmission rate for the specified protocol. Specify how many packets per minute or second the transmission rate is. |
| Scheduler Rules | Select a schedule rule for this ACL rule from the drop-down list box. You can configure a new schedule rule by click Add New Rule . This will bring you to the Security > Scheduler Rules screen. |
| Filter Description | Type a description of the Filter of this ACL rule. This field is optional. |
| Apply | Click Apply to save your changes. |
| Cancel | Click Cancel to exit this screen without saving. |

17.6 The Zone Control Screen

Use this screen to set the firewall's default actions. Firewall rules are grouped based on the direction of travel of packets to which they apply.

Click **Security > Firewall > Zone Control** to display the following screen.

Figure 133 Security > Firewall > Zone Control

| From ► | WAN | | LAN | | WLAN | | DMZ | | EXTRA | |
|--------|-------------------------------------|--------------------------|-------------------------------------|--------------------------|-------------------------------------|--------------------------|-------------------------------------|--------------------------|-------------------------------------|--------------------------|
| To ▼ | Permit | Log | Permit | Log | Permit | Log | Permit | Log | Permit | Log |
| WAN | -- | -- | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> |
| LAN | <input type="checkbox"/> | <input type="checkbox"/> | -- | -- | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| WLAN | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | -- | -- | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| DMZ | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | -- | -- | <input checked="" type="checkbox"/> | <input type="checkbox"/> |
| EXTRA | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | -- | -- |
| ROUTER | <input type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> |

Note:

1. Communication within the same zone (except WAN) is always permitted.
2. When disallowing any zone to Router, hosts on that zone may need to be set static LAN and DNS IP addresses.

The following table describes the labels in this screen.

Table 95 Security > Firewall > Zone Control

| LABEL | DESCRIPTION |
|---------|---|
| From/To | <p>The firewall rules are grouped by the direction of packet travel and their zones (WAN, LAN, WLAN, DMZ, EXTRA and Router). By default, the firewall allows passage of packets traveling in the same zone (a LAN to a LAN, a WAN to a WAN). Here are some example descriptions of the directions of travel.</p> <p>From LAN To LAN means packets traveling from a computer on one LAN subnet to a computer on another LAN subnet on the LAN interface of the device.</p> <p>You can define the EXTRA zone to include the VPN connection. The Router zone can only be controlled in ingress direction "to" because it is reserved for the router's CPU. However, packets sent from the router zone are always permitted. For example, if your packet come from a LAN zone and is going to the Router zone. The SBG3600-N Series will apply the firewall rules to the LAN packets if you did not click the Permit check box.</p> <p>When Permit box is unchecked and Log box is checked, it means the "dropped" packets will be logged. When both Permit and Log boxes are checked, it means the "permitted" packets will be logged.</p> |
| Permit | Click the check box Permit to allow the passage of the packets. |
| Log | Click the check box Log to create a log when an action from Firewall rule is taken. |
| Apply | Click Apply to save your changes. |
| Cancel | Click Cancel to restore your previously saved settings. |

MAC Filter

18.1 Overview

You can configure the SBG3600-N Series to permit access to clients based on their MAC addresses in the **MAC Filter** screen. This applies to wired and wireless connections. Every Ethernet device has a unique MAC (Media Access Control) address. The MAC address is assigned at the factory and consists of six pairs of hexadecimal characters, for example, 00:A0:C5:00:00:02. You need to know the MAC addresses of the devices to configure this screen.


18.2 The MAC Filter Screen

Use this screen to allow wireless and LAN clients access to the SBG3600-N Series. Click **Security > MAC Filter**. The screen appears as shown.

Figure 134 Security > MAC Filter

MAC Address Filter: ☐ Enable ☒ Disable (settings are invalid when disabled)

| Set | Allow | Host name | MAC Address |
|-----|--------------------------|----------------------|----------------------|
| 1 | <input type="checkbox"/> | <input type="text"/> | <input type="text"/> |
| 2 | <input type="checkbox"/> | <input type="text"/> | <input type="text"/> |
| 3 | <input type="checkbox"/> | <input type="text"/> | <input type="text"/> |
| 4 | <input type="checkbox"/> | <input type="text"/> | <input type="text"/> |
| 5 | <input type="checkbox"/> | <input type="text"/> | <input type="text"/> |
| 6 | <input type="checkbox"/> | <input type="text"/> | <input type="text"/> |
| 7 | <input type="checkbox"/> | <input type="text"/> | <input type="text"/> |
| 8 | <input type="checkbox"/> | <input type="text"/> | <input type="text"/> |
| 9 | <input type="checkbox"/> | <input type="text"/> | <input type="text"/> |
| 10 | <input type="checkbox"/> | <input type="text"/> | <input type="text"/> |
| 29 | <input type="checkbox"/> | <input type="text"/> | <input type="text"/> |
| 30 | <input type="checkbox"/> | <input type="text"/> | <input type="text"/> |
| 31 | <input type="checkbox"/> | <input type="text"/> | <input type="text"/> |
| 32 | <input type="checkbox"/> | <input type="text"/> | <input type="text"/> |

 **Note:**
Only devices listed here are granted access to the network.

The following table describes the labels in this screen.

Table 96 Security > MAC Filter

| LABEL | DESCRIPTION |
|--------------------|--|
| MAC Address Filter | Select Enable to activate the MAC filter function. |
| Set | This is the index number of the MAC address. |
| Allow | Select Allow to permit access to the SBG3600-N Series. MAC addresses not listed will be denied access to the SBG3600-N Series. If you clear this, the MAC Address field for this set clears. |
| Host name | Enter the host name of the wireless or LAN clients that are allowed access to the SBG3600-N Series. |
| MAC Address | Enter the MAC addresses of the wireless or LAN clients that are allowed access to the SBG3600-N Series in these address fields. Enter the MAC addresses in a valid MAC address format, that is, six hexadecimal character pairs, for example, 12:34:56:78:9a:bc. |

Table 96 Security > MAC Filter (continued)

| LABEL | DESCRIPTION |
|--------|--|
| Apply | Click Apply to save your changes. |
| Cancel | Click Cancel to restore your previously saved settings. |

User Access Control

19.1 Overview

User access control allows you to block web sites with the specific URL. You can also define time periods and days during which the SBG3600-N Series performs User Access control on a specific user.

19.2 The User Access Control Screen

Use this screen to enable User Access control, view the User Access control rules and schedules.

Click **Security > User Access Control** to open the following screen.

Figure 135 Security > User Access Control

General
User Access Control : ☐ Enable ☒ Disable (settings are invalid when disabled)

User Access Control Profile
Add new profile

| # | Status | Name | Network... | Internet Access Schedule | Network Service | Website Blocked | Modify |
|---|--------|--------|------------|--------------------------|-----------------|-----------------|------------|
| 1 | | Max-PC | unknown... | M T W T F S S | 00:00-24:00 | None | Configured |

Apply Cancel

The following table describes the fields in this screen.

Table 97 Security > User Access Control

| LABEL | DESCRIPTION |
|--------------------------|--|
| User Access Control | Select Enable to activate User Access control. |
| Add new profile | Click this if you want to configure a new User Access control rule. |
| # | This shows the index number of the rule. |
| Status | This indicates whether the rule is active or not. A yellow bulb signifies that this rule is active. A gray bulb signifies that this rule is not active. |
| Name | This shows the name of the rule. |
| Network User (MAC) | This shows the MAC address of the LAN user's computer to which this rule applies. |
| Internet Access Schedule | This shows the day(s) and time on which User Access control is enabled. |

Table 97 Security > User Access Control (continued)

| LABEL | DESCRIPTION |
|-----------------|---|
| Network Service | This shows whether the network service is configured. If not, None will be shown. |
| Website Block | This shows whether the website block is configured. If not, None will be shown. |
| Modify | Click the Edit icon to go to the screen where you can edit the rule. Click the Delete icon to delete an existing rule. |
| Apply | Click Apply to save your changes. |
| Cancel | Click Cancel to restore your previously saved settings. |

19.2.1 Add/Edit a User Access Control Rule

Click **Add new profile** in the **User Access Control** screen to add a new rule or click the **Edit** icon next to an existing rule to edit it. Use this screen to configure a restricted access schedule and/or URL filtering settings to block the users on your network from accessing certain web sites.

Figure 136 User Access Control Rule: Add/Edit

General
☐ Active
 User Access Control Profile Name :
 Network User : Custom

Internet Access Schedule
 Day : ☐ Everyday ☐ Monday ☐ Tuesday ☐ Wednesday ☐ Thursday ☐ Friday
☐ Saturday ☐ Sunday
 Time (Start - End) : 00:00-24:00

☐ No access ☒ Authorized access

Network Service
 Network Service Setting : Block selected service(s)

| # | | Service Name | Protocol:Port | Modify |
|---|--|--------------|---------------|--------|
| | | | | |

Blocked Site/URL Keyword

The following table describes the fields in this screen.

Table 98 User Access Control Rule: Add/Edit

| LABEL | DESCRIPTION |
|----------------------------------|--|
| General | |
| Active | Select the checkbox to activate this User Access control rule. |
| User Access Control Profile Name | Enter a descriptive name for the rule. |

Table 98 User Access Control Rule: Add/Edit (continued)

| LABEL | DESCRIPTION |
|--------------------------|---|
| Network User | Select the LAN user that you want to apply this rule to from the drop-down list box. If you select Custom , enter the LAN user's MAC address. If you select All , the rule applies to all LAN users. |
| Internet Access Schedule | |
| Day | Select check boxes for the days that you want the SBG3600-N Series to perform User Access control. |
| Time | Drag the time bar to define the time that the LAN user is allowed access. |
| Network Service | |
| Network Service Setting | If you select Block , the SBG3600-N Series prohibits the users from viewing the Web sites with the URLs listed below. If you select Allow , the SBG3600-N Series blocks access to all URLs except ones listed below. |
| Add new service | Click this to show a screen in which you can add a new service rule. You can configure the Service Name , Protocol , and Name of the new rule. |
| # | This shows the index number of the rule. Select the checkbox next to the rule to activate it. |
| Service Name | This shows the name of the rule. |
| Protocol:Port | This shows the protocol and the port of the rule. |
| Modify | Click the Edit icon to go to the screen where you can edit the rule. Click the Delete icon to delete an existing rule. |
| Blocked Site/URL Keyword | Click Add to show a screen to enter the URL of web site or URL keyword to which the SBG3600-N Series blocks access. Click Delete to remove it. |
| Apply | Click this button to save your settings back to the SBG3600-N Series. |
| Cancel | Click Cancel to restore your previously saved settings. |

Scheduler Rules

20.1 Overview



You can define time periods and days during which the SBG3600-N Series performs scheduled rules of certain features (such as Firewall Access Control, User Access Control) on a specific user in the **Scheduler Rules** screen.

20.2 The Scheduler Rules Screen

Use this screen to view, add, or edit time schedule rules.

Click **Security > Scheduler Rules** to open the following screen.

Figure 137 Security > Scheduler Rules

| Add new rule | | | | | | |
|--------------|-----------|-------------|---------------|-------------|---|--|
| # | Rule Name | Day | Time | Description | Modify | |
| 1 | Example1 | S M T W T F | 08:00 - 17:00 | Business |   | |

The following table describes the fields in this screen.

Table 99 Security > Scheduler Rules

| LABEL | DESCRIPTION |
|--------------|---|
| Add new rule | Click this to create a new rule. |
| # | This is the index number of the entry. |
| Rule Name | This shows the name of the rule. |
| Day | This shows the day(s) on which this rule is enabled. |
| Time | This shows the period of time on which this rule is enabled. |
| Description | This shows the description of this rule. |
| Modify | Click the Edit icon to edit the schedule. Click the Delete icon to delete a scheduler rule. Note: You cannot delete a scheduler rule once it is applied to a certain feature. |

20.2.1 Add/Edit a Schedule

Click the **Add** button in the **Scheduler Rules** screen or click the **Edit** icon next to a schedule rule to open the following screen. Use this screen to configure a restricted access schedule for a specific user on your network.

Figure 138 Scheduler Rules: Add/Edit

| | | |
|---|--|----------------------------------|
| Rule Name : | <input type="text"/> | |
| Day : | <input type="checkbox"/> SUN <input type="checkbox"/> MON <input type="checkbox"/> TUE <input type="checkbox"/> WED <input type="checkbox"/> THU <input type="checkbox"/> FRI <input type="checkbox"/> SAT | |
| Time of Day Range : | From: <input type="text"/> | To: <input type="text"/> (hh:mm) |
| Description : | <input type="text"/> | |
| <div> <input type="button" value="Apply"/> <input type="button" value="Cancel"/> </div> | | |

The following table describes the fields in this screen.

Table 100 Scheduler Rules: Add/Edit

| LABEL | DESCRIPTION |
|-------------------|--|
| Rule Name | Enter a name (up to 31 printable English keyboard characters, not including spaces) for this schedule. |
| Day | Select check boxes for the days that you want the SBG3600-N Series to perform this scheduler rule. |
| Time if Day Range | Enter the time period of each day, in 24-hour format, during which User Access control will be enforced. |
| Description | Enter a description for this scheduler rule. |
| Apply | Click Apply to save your changes. |
| Cancel | Click Cancel to exit this screen without saving. |

Certificates

21.1 Overview

The SBG3600-N Series can use certificates (also called digital IDs) to authenticate users. Certificates are based on public-private key pairs. A certificate contains the certificate owner's identity and public key. Certificates provide a way to exchange public keys for use in authentication.

21.1.1 What You Can Do in this Chapter

- The **Local Certificates** screen lets you generate certification requests and import the SBG3600-N Series's CA-signed certificates ([Section 21.4 on page 283](#)).
- The **Trusted CA** screen lets you save the certificates of trusted CAs to the SBG3600-N Series ([Section 21.4 on page 283](#)).

21.2 What You Need to Know

The following terms and concepts may help as you read through this chapter.

Certification Authority

A Certification Authority (CA) issues certificates and guarantees the identity of each certificate owner. There are commercial certification authorities like CyberTrust or VeriSign and government certification authorities. The certification authority uses its private key to sign certificates. Anyone can then use the certification authority's public key to verify the certificates. You can use the SBG3600-N Series to generate certification requests that contain identifying information and public keys and then send the certification requests to a certification authority.

21.3 The Local Certificates Screen

Click **Security > Certificates** to open the **Local Certificates** screen. This is the SBG3600-N Series's summary list of certificates and certification requests.

Figure 139 Security > Certificates > Local Certificates

Replace PrivateKey/Certificate file in PEM format

☐ Private Key is protected by a password??

No file chosen

| Current File | Subject | Issuer | Valid From | Valid To | Modify |
|--------------|---------------------------|--------|------------|----------|--------|
| test | CN=107bef-SBG3500-S130... | - | - | - | |

The following table describes the labels in this screen.

Table 101 Security > Certificates > Local Certificates

| LABEL | DESCRIPTION |
|---|---|
| Private Key is protected by a password? | Select the checkbox and enter the private key into the text box to store it on the SBG3600-N Series. The private key should not exceed 63 ASCII characters (not including spaces). |
| Browse... | Click this to find the certificate file you want to upload. |
| Import Certificate | Click this button to save the certificate that you have enrolled from a certification authority from your computer to the SBG3600-N Series. |
| Create Certificate Request | Click this button to go to the screen where you can have the SBG3600-N Series generate a certification request. |
| Current File | This field displays the name used to identify this certificate. It is recommended that you give each certificate a unique name. |
| Subject | This field displays identifying information about the certificate's owner, such as CN (Common Name), OU (Organizational Unit or department), O (Organization or company) and C (Country). It is recommended that each certificate have unique subject information. |
| Issuer | This field displays identifying information about the certificate's issuing certification authority, such as a common name, organizational unit or department, organization or company and country. |
| Valid From | This field displays the date that the certificate becomes applicable. The text displays in red and includes a Not Yet Valid! message if the certificate has not yet become applicable. |
| Valid To | This field displays the date that the certificate expires. The text displays in red and includes an Expiring! or Expired! message if the certificate is about to expire or has already expired. |
| Modify | Click the View icon to open a screen with an in-depth list of information about the certificate (or certification request). For a certification request, click Load Signed to import the signed certificate. Click the Remove icon to delete the certificate (or certification request). You cannot delete a certificate that one or more features is configured to use. |

21.3.1 Create Certificate Request

Click **Security > Certificates > Local Certificates** and then **Create Certificate Request** to open the following screen. Use this screen to have the SBG3600-N Series generate a certification request.

Figure 140 Create Certificate Request

Certificate Name:

Common Name: ☒ Auto ☐ Customize

Organization Name:

State/Province Name:

Country/Region Name:

The following table describes the labels in this screen.

Table 102 Create Certificate Request

| LABEL | DESCRIPTION |
|---------------------|---|
| Certificate Name | Type up to 63 ASCII characters (not including spaces) to identify this certificate. |
| Common Name | Select Auto to have the SBG3600-N Series configure this field automatically. Or select Customize to enter it manually. Type the IP address (in dotted decimal notation), domain name or e-mail address in the field provided. The domain name or e-mail address can be up to 63 ASCII characters. The domain name or e-mail address is for identification purposes only and can be any string. |
| Organization Name | Type up to 63 characters to identify the company or group to which the certificate owner belongs. You may use any character, including spaces, but the SBG3600-N Series drops trailing spaces. |
| State/Province Name | Type up to 32 characters to identify the state or province where the certificate owner is located. You may use any character, including spaces, but the SBG3600-N Series drops trailing spaces. |
| Country/Region Name | Select a country to identify the nation where the certificate owner is located. |
| Apply | Click Apply to save your changes. |
| Cancel | Click Cancel to exit this screen without saving. |

After you click **Apply**, the following screen displays to notify you that you need to get the certificate request signed by a Certificate Authority. If you already have, click **Load_Signed** to import the signed certificate into the SBG3600-N Series. Otherwise click **Back** to return to the **Local Certificates** screen.

Figure 141 Certificate Request Created

The screenshot shows a dialog box titled "Certificate Details". Inside, there is a message: "Certificate signing request successfully created. Note a request is not yet functional - have it signed by a Certificate Authority and load the signed certificate to this device." Below the message is a table with the following details:

| | |
|-----------------|--|
| Name | test |
| Type | request |
| Subject | CN=cc5d4e-DSL-491HNU-B1Bv2-S090Y0000000/O=abc/ST=tw/C=US |
| Signing Request | -----BEGIN CERTIFICATE REQUEST----- MIIBMDCCAQECAQAwWDEuMCwGA1UEAxMY2M1ZDRILURTTTC00OTFITlUtQjFCdjt |

At the bottom right of the dialog box are two buttons: "Load_Signed" and "Close".

21.3.2 Load Signed Certificate

After you create a certificate request and have it signed by a Certificate Authority, in the **Local Certificates** screen click the certificate request's **Load Signed** icon to import the signed certificate into the SBG3600-N Series.

Note: You must remove any spaces from the certificate's filename before you can import it.

Figure 142 Load Signed Certificate

The screenshot shows a dialog box titled "Paste signed certificate." Below the title bar is a text input field for "Certificate Name:" with the value "test". Below that is a text area for "Certificate:" containing the following text:

```
-----BEGIN CERTIFICATE-----  
<insert certificate here>  
-----END CERTIFICATE-----
```

At the bottom right of the dialog box are two buttons: "Apply" and "Cancel".

The following table describes the labels in this screen.


Table 103 Load Signed Certificate

| LABEL | DESCRIPTION |
|------------------|--|
| Certificate Name | This is the name of the signed certificate. |
| Certificate | Copy and paste the signed certificate into the text box to store it on the SBG3600-N Series. |
| Apply | Click Apply to save your changes. |
| Cancel | Click Cancel to exit this screen without saving. |

21.4 The Trusted CA Screen

Click **Security > Certificates > Trusted CA** to open the following screen. This screen displays a summary list of certificates of the certification authorities that you have set the SBG3600-N Series to accept as trusted. The SBG3600-N Series accepts any valid certificate signed by a certification authority on this list as being trustworthy; thus you do not need to import any certificate that is signed by one of these certification authorities.

Figure 143 Security > Certificates > Trusted CA

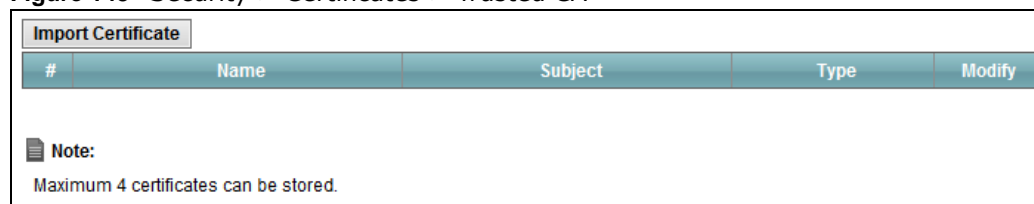

| # | Name | Subject | Type | Modify |
|---|------|---------|------|--------|
| <p>Note: Maximum 4 certificates can be stored.</p> | | | | |

The following table describes the fields in this screen.

Table 104 Security > Certificates > Trusted CA

| LABEL | DESCRIPTION |
|--------------------|---|
| Import Certificate | Click this button to open a screen where you can save the certificate of a certification authority that you trust to the SBG3600-N Series. |
| # | This is the index number of the entry. |
| Name | This field displays the name used to identify this certificate. |
| Subject | This field displays information that identifies the owner of the certificate, such as Common Name (CN), OU (Organizational Unit or department), Organization (O), State (ST) and Country (C). It is recommended that each certificate have unique subject information. |
| Type | This field displays general information about the certificate. ca means that a Certification Authority signed the certificate. |
| Modify | <p>Click the View icon to open a screen with an in-depth list of information about the certificate (or certification request).</p> <p>Click the Remove button to delete the certificate (or certification request). You cannot delete a certificate that one or more features is configured to use.</p> |

21.4.1 Import Trusted CA Certificate

Click the **Import Certificate** button in the **Trusted CA** screen to open the following screen. The SBG3600-N Series trusts any valid certificate signed by any of the imported trusted CA certificates.

Figure 144 Trusted CA: Import Certificate

The certificate is in one of the following formats.

- Binary X.509
- PEM (Base-64) encoded
- Binary PKCS#7
- PEM (Base-64) encoded PKCS#7

Certificate File Path :

☐ Enable Trusted CA for 802.1x Authentication

The following table describes the fields in this screen.

Table 105 Trusted CA: Import Certificate

| LABEL | DESCRIPTION |
|---|--|
| Certificate File Path | Type in the location of the certificate you want to upload in this field or click Browse ... to find it. |
| Enable Trusted CA for 802.1x Authentication | If you select this checkbox, the trusted CA will be used for 802.1x authentication. The selected trusted CA will be displayed in the Network Setting > Broadband > 802.1x: Edit screen. |
| Certificate | Copy and paste the certificate into the text box to store it on the SBG3600-N Series. |
| OK | Click OK to save your changes. |
| Cancel | Click Cancel to exit this screen without saving. |

IPSec VPN


22.1 Overview

A virtual private network (VPN) provides secure communications between sites without the expense of leased site-to-site lines. A secure VPN is a combination of tunneling, encryption, authentication, access control and auditing. It is used to transport traffic over the Internet or any insecure network that uses TCP/IP for communication.

Internet Protocol Security (IPSec) is a standards-based VPN that offers flexible solutions for secure data communications across a public network like the Internet. IPSec is built around a number of standardized cryptographic techniques to provide confidentiality, data integrity and authentication at the IP layer.

The following figure provides one perspective of a VPN tunnel.

Figure 145 IPSec VPN: Overview

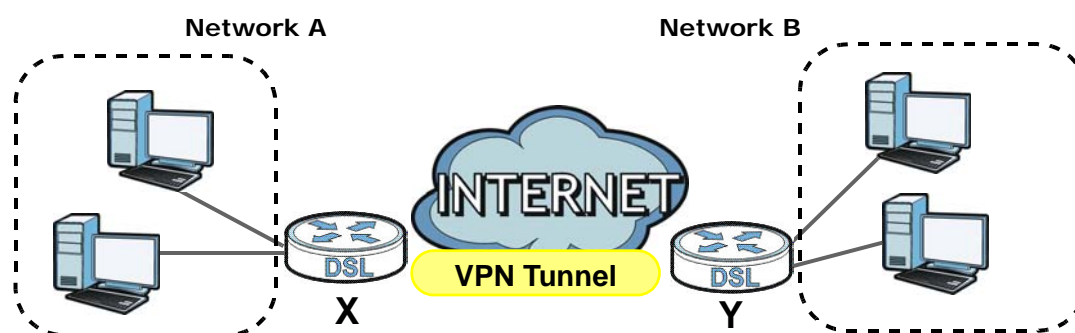

The VPN tunnel connects the SBG3600-N Series (X) and the remote IPSec router (Y). These routers then connect the local network (A) and remote network (B).

22.2 What You Can Do in this Chapter

- Use the **Setup** screen to display and manage the SBG3600-N Series's IPSec VPN rules (tunnels) ([Section 22.4 on page 286](#)).
- Use the **Monitor** screen to display and manage active IPSec VPN connections ([Section 22.5 on page 295](#)).
- Use the **Radius** screen to configure the RADIUS server the SBG3600-N Series can use in authenticating users ([Section 22.6 on page 296](#)).

22.3 What You Need To Know

A VPN tunnel is usually established in two phases. Each phase establishes a security association (SA), a contract indicating what security parameters the SBG3600-N Series and the remote IPsec router will use.

The first phase establishes an Internet Key Exchange (IKE) SA between the SBG3600-N Series and remote IPsec router. The second phase uses the IKE SA to securely establish an IPsec SA through which the SBG3600-N Series and remote IPsec router can send data between computers on the local network and remote network. The following figure illustrates this.

Figure 146 VPN: IKE SA and IPsec SA




In this example, a computer in network **A** is exchanging data with a computer in network **B**. Inside networks **A** and **B**, the data is transmitted the same way data is normally transmitted in the networks. Between routers **X** and **Y**, the data is protected by tunneling, encryption, authentication, and other security features of the IPsec SA. The IPsec SA is established securely using the IKE SA that routers **X** and **Y** established first.

22.4 The Setup Screen

The following figure helps explain the main fields in the web configurator.

Figure 147 IPsec Fields Summary

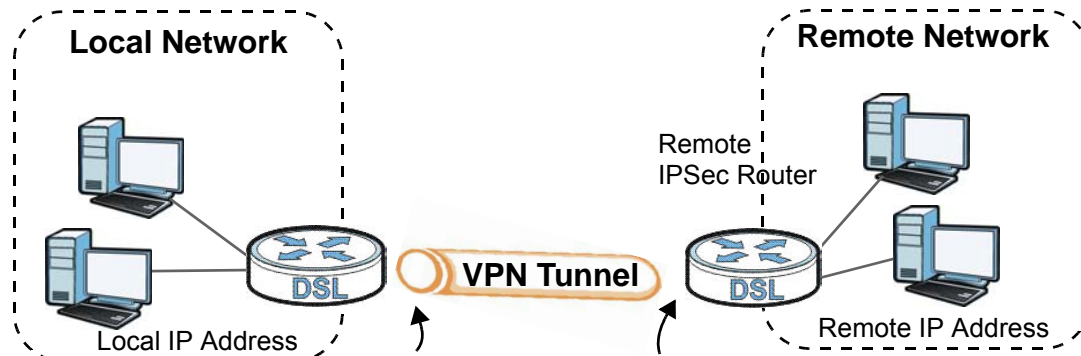

Local and remote IP addresses must be static.

Click **VPN > IPSec VPN** to display the **Setup** screen. This is a read-only menu of your IPSec VPN rules (tunnels). Edit a VPN rule by clicking the **Edit** icon.

Note: The default IPsec rule **Default_L2TPVPN** cannot be disconnected on the **VPN > IPSec VPN > Monitor** screen. However, you may disconnect L2TP tunnels in the **VPN > L2TP > Monitor** screen.

Figure 148 VPN > IPSec VPN > Setup

| Add New Entry | | | | | | | |
|---------------|--------|-----------------|------------------------|-----------------------|-----------------------|-----------------------|--------|
| # | Enable | Name | Remote Gateway Address | Local Gateway Address | Remote Policy | Local Policy | Modify |
| 1 | | Default_L2TPVPN | Dynamic | Any | N/A | N/A | |
| 2 | | vpn1 | 22.23.24.25 | 0.0.0.0 | 172.23.9.0 / 255.2... | 192.168.1.0 / 255.... | |
| 3 | | vpn2 | 22.23.24.25 | 0.0.0.0 | 172.23.9.0 / 255.2... | 192.160.1.0 / 255.... | |

The following table describes the fields in this screen.

Table 106 VPN > IPSec VPN > Setup

| LABEL | DESCRIPTION |
|------------------------|---|
| Add New Entry | Click this button to set up VPN policies for a new tunnel. |
| # | This is the VPN policy index number. |
| Enable | This field displays whether the VPN policy is active or not. This icon is turned on when the rule is enabled. |
| Name | This field displays the identification name for this VPN policy. |
| Remote Gateway Address | This field displays the Secure Gateway Address of the IPSec router with which you're making the VPN connection. |
| Local Gateway Address | This field displays the IP address used by the SBG3600-N Series. If the selected interface is not available, this field will display 0.0.0.0. |
| Remote Policy | This field displays the remote policy. |
| Local Policy | This field displays the local policy. |
| Modify | Click the Edit icon to go to the screen where you can edit the VPN rule. Click the Remove icon to remove an existing VPN rule. |

22.4.1 Add/Edit VPN Rule

You can click the **Add New Entry** button or a policy's **Edit** icon in the **IPSec VPN > Setup** screen to either add or edit a VPN policy.

Note: The SBG3600-N Series uses the system default gateway interface's WAN IP address as its WAN IP address to set up a VPN tunnel.

22.4.2 The VPN Connection Add/Edit Screen

Configure the VPN connection settings in the **IPSec VPN > Setup > Edit** screen.

Figure 149 VPN > IPsec VPN > Setup > Edit

General

Enable : ☒

Connection Name :

Nailed-up : ☒

NAT Traversal (NAT-T) : ☒

Application Scenario :

My Address :

Primary Peer Gateway Address :

Secondary Peer Gateway Address :

Fall Back to Primary Peer Gateway ☐

when possible :

Authentication

Key Exchange Mode :

☒ Pre-Shared Key :

☐ Certificate :

Local ID Type :

Remote ID Type :

Phase 1

SA Life Time :

Negotiation Mode :

Encryption :

Authentication :

Add

| Encryption | Authentication | Modify |
|------------|----------------|--------|
| AES192 | SHA1 | |

Key Group :

Dead Peer Detection (DPD) : ☒

☐ Extended Authentication (XAUTH)

Phase 2

SA Life Time :

Tunnel Mode :

Encapsulation :

Encryption : **Add** **Reset**

AES192

Authentication : **Add** **Reset**

SHA1

☒ Perfect Forward Secrecy (PFS) :

Policy

Local IP Type :

Local IP Address :

Local Subnet Mask :

Remote IP Type :

Remote IP Address :

Remote Subnet Mask :

Force SBG Go VPN Tunnel : ☐

Apply **Cancel**

The following table describes the labels in this screen.

Table 107 VPN > IPsec VPN > Setup > Edit

| LABEL | DESCRIPTION |
|--------------------------------|---|
| General | |
| Enable | Select the checkbox to activate this VPN policy. |
| Connection Name | <p>Enter a name to identify this VPN policy. If you are editing an existing policy, this field is not editable.</p> <p>Note: The Connection Name of an IPsec rule must be unique and cannot be changed once it has been created.</p> |
| Nailed-up | <p>Select this if you want the SBG3600-N Series to automatically renegotiate the IPsec SA when the VPN connection is down.</p> <p>This feature is only applicable if you set the Application Scenario to Site-to-Site.</p> <p>When Nailed-up is enabled, you cannot disconnect the specified IPsec VPN tunnel in the VPN > IPsec VPN > Monitor screen.</p> |
| NAT Traversal (NAT-T) | <p>Select this check box to enable NAT traversal. NAT traversal allows you to set up a VPN connection when there are NAT routers between the two IPsec routers.</p> <p>The remote IPsec router must also have NAT traversal enabled.</p> <p>You can use NAT traversal with ESP protocol using Transport or Tunnel mode, but not with AH protocol nor with manual key management. In order for an IPsec router behind a NAT router to receive an initiating IPsec packet, set the NAT router to forward UDP ports 500 and 4500 to the IPsec router behind the NAT router.</p> <p>Note: It is suggested to always enable the NAT Traversal (NAT-T) feature if you are not sure if a NAT device is connected to your VPN gateway. Once this feature is enabled, it will automatically detect connected NAT devices for you.</p> |
| Application Scenario | <p>Select the scenario that best describes your intended VPN connection.</p> <p>Site-to-Site - Choose this if the remote IPsec router has a static IP address or a domain name. This SBG3600-N Series can initiate the VPN tunnel.</p> <p>Site-to-Site with Dynamic Peer - Choose this if the remote IPsec router has a dynamic IP address. Only the remote IPsec router can initiate the VPN tunnel.</p> <p>Remote Access - Choose this to allow incoming connections from IPsec VPN clients. The clients have dynamic IP addresses and are also known as dial-in users. Only the clients can initiate the VPN tunnel.</p> |
| My Address | <p>Select an interface from the drop-down list and its IP address will be shown. The IP address of the SBG3600-N Series is the IP address of the interface.</p> <p>Note:</p> |
| Primary Peer Gateway Address | Type a primary gateway address in this field. The primary peer gateway address is applicable (and required) when you choose Site-to-Site in the Application Scenario field. The SBG3600-N Series primarily attempts to establish the VPN tunnel with this remote address. The peer gateway address can be either an IP address or FQDN. |
| Secondary Peer Gateway Address | Type a secondary gateway address in this field. The secondary peer gateway IP address is applicable (and optional) if you choose Site-to-Site in the Application Scenario field. The SBG3600-N Series attempts to establish the VPN tunnel with this remote address if it fails to connect to the primary peer gateway address. The secondary peer gateway address can be either an IP address or FQDN. |

Table 107 VPN > IPSec VPN > Setup > Edit (continued)

| LABEL | DESCRIPTION |
|---|--|
| Fall Back to Primary Peer Gateway when possible | When this box is checked, the SBG3600-N Series attempts to re-connect to the primary peer gateway address again when it is back up. The SBG3600-N Series will use secondary gateway address when the primary address is down. The VPN connection is briefly lost when SBG3600-N Series tries to reconnect using the primary address. Note that the peer devices using the secondary address cannot use a nailed-up VPN connecton setting. |
| Authentication | Note: The SBG3600-N Series and remote IPSec router must use the same authentication method to establish the IKE SA. |
| Key Exchange Mode: Auto, Manual. | |
| Auto | |
| Pre-Shared Key | <p>Select this to have the SBG3600-N Series and remote IPSec router use a pre-shared key (password) to identify each other when they negotiate the IKE SA. Type the pre-shared key in the field to the right. The pre-shared key can be</p> <ul style="list-style-type: none"> 8 - 32 alphanumeric characters or ; `~!@#\$%^&*()_+{\}'./<>=-". 8 - 32 pairs of hexadecimal (0-9, A-F) characters, preceded by "0x". <p>If you want to enter the key in hexadecimal, type "0x" at the beginning of the key. For example, "0x0123456789ABCDEF" is in hexadecimal format; in "0123456789ABCDEF" is in ASCII format. If you use hexadecimal, you must enter twice as many characters since you need to enter pairs.</p> <p>The SBG3600-N Series and remote IPSec router must use the same pre-shared key.</p> <p>Note: All remote access application scenario of IPsec rules must use the same pre-shared key.</p> |
| Certificate | <p>In order to use Certificate for IPsec authentication, you need to add new host certificates in the Security > Certificates screen. See a tutorial on how to add new host certificates in Chapter 4 on page 64.</p> <p>Select this to have the SBG3600-N Series and remote IPSec router use certificates to authenticate each other when they negotiate the IKE SA. Then select the certificate the SBG3600-N Series uses to identify itself to the remote IPsec router.</p> <p>This certificate is one of the certificates in Certificates. If this certificate is self-signed, import it into the remote IPsec router. If this certificate is signed by a CA, the remote IPsec router must trust that CA.</p> <p>Note: The IPSec routers must trust each other's certificates.</p> <p>The SBG3600-N Series uses one of its Trusted Certificates to authenticate the remote IPSec router's certificate. The trusted certificate can be a self-signed certificate or that of a trusted CA that signed the remote IPSec router's certificate.</p> |
| Local/Remote ID Type | <p>Select which type of identification is used to identify the SBG3600-N Series during authentication.</p> <p>Any - The SBG3600-N Series does not check the identity of the itself/remote IPSec router.</p> <p>IP - The SBG3600-N Series/remote IPSec router is identified by its IP address.</p> <p>FQDN - The SBG3600-N Series/remote IPSec router is identified by a domain name.</p> <p>User-FQDN - The SBG3600-N Series/remote IPSec router is identified by an e-mail address.</p> <p>Note: The options FQDN and User-FQDN of Local ID Type and Remote ID Type are not applicable if you select Main as the Negotiation Mode with Pre-Shared Key.</p> |
| Manual | |

Table 107 VPN > IPSec VPN > Setup > Edit (continued)

| LABEL | DESCRIPTION |
|-----------------------|--|
| SPI (HEX) | Type a hexadecimal value (between 256 and 4095) for the Security Parameter Index (SPI). Make sure the remote VPN endpoint has the same value in its SPI field. |
| Tunnel Mode | <p>Choose from the following tunnel modes in the drop-down list.</p> <ul style="list-style-type: none"> Encapsulated Security Payload (ESP) - provides encryption and the same services offered by AH, but its authentication is weaker. If you select ESP, you must select an Encryption algorithm and Authentication algorithm. Authenticating Header (AH) - provides integrity, authentication, sequence integrity (replay resistance), and non-repudiation but not encryption. If you select AH, you must select an Authentication algorithm. specifies the authentication protocol for the VPN header. Note the AH settings must match the remote VPN endpoint. |
| Encapsulation | <p>Choose the encapsulation method for the VPN from the drop-down list.</p> <ul style="list-style-type: none"> Tunnel - encrypts the IP header information and the data. Transport - encrypts the data. <p>The SBG3600-N Series and remote IPSec router must use the same encapsulation.</p> |
| Encryption | <p>Choose the encryption algorithm for the ESP mode from the drop-down list.</p> <p>DES - a 56-bit key with the DES encryption algorithm, the default</p> <p>3DES - a 168-bit key with the DES encryption algorithm, more secure</p> <p>AES128 - a 128-bit key with the AES encryption algorithm</p> <p>AES192 - a 192-bit key with the AES encryption algorithm</p> <p>AES256 - a 256-bit key with the AES encryption algorithm</p> <p>The SBG3600-N Series and the remote IPSec router must use the same algorithms and keys. Longer keys require more processing power, resulting in increased latency and decreased throughput.</p> |
| Encryption Key (CHAR) | <p>Type the encryption key (any alphanumeric characters or ; '~!@#\$%^&*()_+{\}":<>/=) in the field per following rule.</p> <p>DES - 8-31 characters</p> <p>3DES - 24-31 characters</p> <p>AES128 - 16-32 characters</p> <p>AES192 - 24-31 characters</p> <p>AES256 - 31 characters</p> <p>You can also use hexadecimal by typing "0x" in the beginning of the key.</p> <p>The remote IPSec router must have the same encryption key.</p> |
| Authentication | <p>Choose the authentication algorithm from the drop-down list.</p> <ul style="list-style-type: none"> MD5 - default SHA1 - more secure |
| Authentication Key | <p>Type the encryption key (any alphanumeric characters or ; '~!@#\$%^&*()_+{\}":<>/=) in the field per following rule.</p> <p>MD5 - 16-20 characters</p> <p>SHA1 - 20 characters</p> <p>You can also use hexadecimal by typing "0x" in the beginning of the key.</p> <p>The remote IPSec router must have the same encryption key.</p> |

Table 107 VPN > IPsec VPN > Setup > Edit (continued)

| LABEL | DESCRIPTION |
|------------------|---|
| Phase 1 | <p>Phase 1 Encryption and Authentication can have up to 3 algorithm pairs. You cannot use phase 1 Encryption, Authentication, and Key Group pairs that already exist in other enabled IPsec rules with Remote Access selected as the Application Scenario. AES is considered as the same encryption regardless of bit length. The following are two examples:</p> <ol style="list-style-type: none"> 1. Example1: An IPsec rule remote1 has phase 1 Encryption, Authentication, and Key Group set as 3DES, SHA1, and DH2. You cannot add new IPsec rule remote2 to have the same algorithm pair. You can change either one algorithm to make it unique, such as using 3DES, SHA1, and DH1 for remote2. 2. IPsec rule remote1 has phase1 Encryption, Authentication, and Key Group set as AES256, SHA1, and DH2. You cannot use AES128, SHA1, and DH2 to add new IPsec rule remote2 because AES is considered as the same regardless of bit length. <p>Note: When the default IPsec rule Default_L2TPVPN is enabled, if you want to add a new Remote Access IPsec rule, you can use phase 1 Encryption, Authentication, and Key Group pair DES, MD5, and DH2 or DES, SHA1, and DH2, or any algorithm combination with DH1 or DH5.</p> |
| SA Life Time | <p>Define the length of time before an IKE or IPsec SA automatically renegotiates in this field. It may range from 1 to 99,999 seconds.</p> <p>A short SA Life Time increases security by forcing the two VPN gateways to update the encryption and authentication keys. However, every time the VPN tunnel renegotiates, all users accessing remote resources are temporarily disconnected.</p> |
| Negotiation Mode | <p>Select the negotiation mode to use to negotiate the IKE SA. Choices are:</p> <p>Main - this encrypts the SBG3600-N Series's and remote IPsec router's identities but takes more time to establish the IKE SA.</p> <p>Aggressive - this is faster but does not encrypt the identities</p> <p>The SBG3600-N Series and the remote IPsec router must use the same negotiation mode.</p> |
| Encryption | <p>Select which key size and encryption algorithm to use in the IKE SA.</p> <p>Choices are:</p> <p>DES - a 56-bit key with the DES encryption algorithm</p> <p>3DES - a 168-bit key with the DES encryption algorithm</p> <p>AES128 - a 128-bit key with the AES encryption algorithm</p> <p>AES192 - a 192-bit key with the AES encryption algorithm</p> <p>AES256 - a 256-bit key with the AES encryption algorithm</p> <p>The SBG3600-N Series and the remote IPsec router must use the same algorithms and keys. Longer keys require more processing power, resulting in increased latency and decreased throughput.</p> |
| Authentication | <p>Select which hash algorithm to use to authenticate packet data in the IKE SA. Choices are SHA1 and MD5. SHA1 is generally considered stronger than MD5, but it is also slower.</p> |
| Add | Click this to add phase 1 Encryption and Authentication . |
| Modify | Select an entry and click the delete icon to remove it. |

Table 107 VPN > IPSec VPN > Setup > Edit (continued)

| LABEL | DESCRIPTION |
|---------------------------------|--|
| Key Group | <p>Select which Diffie-Hellman key group (DHx) you want to use for encryption keys. Choices are:</p> <p>DH1 - use a 768-bit random number</p> <p>DH2 - use a 1024-bit random number</p> <p>DH5 - use a 1536-bit random number</p> <p>The longer the key, the more secure the encryption, but also the longer it takes to encrypt and decrypt information. Both routers must use the same DH key group.</p> |
| Dead Peer Detection (DPD) | <p>Select this check box if you want the SBG3600-N Series to make sure the remote IPSec router is there before it transmits data through the IKE SA. The remote IPSec router must support DPD. If there has been no traffic for at least 15 seconds, the SBG3600-N Series sends a message to the remote IPSec router. If the remote IPSec router responds, the SBG3600-N Series transmits the data. If the remote IPSec router does not respond, the SBG3600-N Series shuts down the IKE SA.</p> |
| Extended Authentication (XAUTH) | <p>When multiple IPSec routers use the same VPN tunnel to connect to a single VPN tunnel (telecommuters sharing a tunnel for example), use extended authentication to enforce a user name and password check. This way even though they all know the VPN tunnel's security settings, each still has to provide a unique user name and password.</p> <p>Select the checkbox if one of the routers (the SBG3600-N Series or the remote IPSec router) verifies a user name and password from the other router using the local user database and/or an external server.</p> <p>Note: If you want to use Radius for Extended Authentication (XAUTH), you need to configure the settings in the VPN > IPSecVPN > Radius screen beforehand. See Section 22.6 on page 296.</p> <p>Note: If you want to use Local DB for Extended Authentication (XAUTH), make sure the user account exists in the Maintenance > User Account screen.</p> |
| Phase 2 | <p>Phase 2 Encryption can have up to 3 different algorithms and Authentication can have up to 2 different algorithms. To add new algorithms, click the Add button next to Encryption or Authentication.</p> |
| SA Life Time | <p>Type the maximum number of seconds the IPSec SA can last. Shorter life times provide better security. The SBG3600-N Series automatically negotiates a new IPSec SA before the current one expires, if there are users who are accessing remote resources.</p> |
| Tunnel Mode | <p>Select the security protocols used for an SA. Choices are:</p> <p>AH (RFC 2402) - provides integrity, authentication, sequence integrity (replay resistance), and non-repudiation but not encryption. If you select AH, you must select an Authentication algorithm.</p> <p>ESP (RFC 2406) - provides encryption and the same services offered by AH, but its authentication is weaker. If you select ESP, you must select an Encryption algorithm and Authentication algorithm.</p> <p>Both AH and ESP increase processing requirements and latency (delay).</p> <p>The SBG3600-N Series and remote IPSec router must use the same active protocol.</p> |
| Encapsulation | <p>Select which type of encapsulation the IPSec SA uses. Choices are:</p> <p>Tunnel - this mode encrypts the IP header information and the data.</p> <p>Transport - this mode only encrypts the data. If you set Encapsulation to Transport, Policy (Local and Remote) is not applicable.</p> <p>The SBG3600-N Series and remote IPSec router must use the same encapsulation.</p> |

Table 107 VPN > IPsec VPN > Setup > Edit (continued)

| LABEL | DESCRIPTION |
|-------------------------------|---|
| Encryption | <p>Select which key size and encryption algorithm to use in the IKE SA.</p> <p>Choices are:</p> <p>DES - a 56-bit key with the DES encryption algorithm</p> <p>3DES - a 168-bit key with the DES encryption algorithm</p> <p>AES128 - a 128-bit key with the AES encryption algorithm</p> <p>AES192 - a 192-bit key with the AES encryption algorithm</p> <p>AES256 - a 256-bit key with the AES encryption algorithm</p> <p>The SBG3600-N Series and the remote IPsec router must use the same algorithms and keys. Longer keys require more processing power, resulting in increased latency and decreased throughput.</p> |
| Authentication | <p>Select which hash algorithm to use to authenticate packet data in the IKE SA. Choices are SHA1 and MD5. SHA1 is generally considered stronger than MD5, but it is also slower.</p> |
| Perfect Forward Secrecy (PFS) | <p>Select whether or not you want to enable Perfect Forward Secrecy (PFS) and, if you do, which Diffie-Hellman key group to use for encryption. Choices are:</p> <p>DH1 - enable PFS and use a 768-bit random number</p> <p>DH2 - enable PFS and use a 1024-bit random number</p> <p>DH5 - enable PFS and use a 1536-bit random number</p> <p>PFS changes the root key that is used to generate encryption keys for each IPsec SA. The longer the key, the more secure the encryption, but also the longer it takes to encrypt and decrypt information. Both routers must use the same DH key group.</p> |
| Policy | |
| Local IP Type | <p>Select the IP type of the local device that is linked to the IPsec router.</p> <ul style="list-style-type: none"> • Subnet - you will need to enter the network mask address • Single - only a single PC (no LAN) at the remote endpoint • Range - you will need to enter a starting IP address and a finishing IP address |
| Local IP Address | <p>Type the IP address of the device linked to the local IPsec router. This must match the remote IP address configured on the remote IPsec device.</p> |
| Local Subnet Mask | <p>Type the subnet mask address of the device linked to the local IPsec router. This must match the remote IP address configure on the remote IPsec device.</p> |
| Remote IP Type | <p>Choose the remote IP type of the device linked to the remote IPsec router.</p> <ul style="list-style-type: none"> • Subnet - you will need to enter the network mask address • Single - only a single PC (no LAN) at the remote endpoint • Range - you will need to enter a starting IP address and a finishing IP address |
| Remote IP Address | <p>Type the IP address of the device linked to the remote IPsec router. This must match the local IP address configured on the remote IPsec device.</p> |
| Remote Subnet Mask | <p>Type the subnet mask address of a device linked to the remote IPsec router. This must match the local IP address configured on the remote IPsec device.</p> |
| Force SBG Go VPN Tunnel | <p>Click this checkbox to force data traffic to go through VPN tunnel when its destination IP address matches an entry in the IPsec VPN policy rule.</p> |
| Apply | <p>Click Apply to save your changes back to the SBG3600-N Series.</p> |
| Cancel | <p>Click Cancel to restore your previous settings.</p> |

22.4.3 The Default_L2TPVPN IPsec VPN Rule

A default IPsec VPN rule (**Default_L2TP_VPN**) is predefined. It can be edited but cannot be removed. This rule is used for L2TP VPN exclusively and is disabled by default.

The following table lists the default settings for the **Default_L2TP_VPN** IPsec VPN.

Table 108 Default settings for **Default_L2TP_VPN**

| GENERAL | | AUTHENTICATION | |
|-----------------------------|--|-------------------------------|--------------------------|
| Enabled | No | Pre-Shared Key | selected (text) 12345678 |
| Nailed-up | No | Certificate | none |
| NAT Traversal | Yes | Local ID Type | IP |
| Application Scenario | Remote Access | Content | 0.0.0.0 |
| My Address | Any | Remote ID Type | Any |
| PHASE 1 | | PHASE 2 | |
| Life time | 86400 | Life time | 3600 |
| Negotiation Mode | Main | Tunnel Mode | ESP |
| Encryption / Authentication | 3DES / SHA1 3DES / MD5 AES256 / SHA1 | Encryption | DES 3DES AES256 |
| | | Authentication | MD5 SHA1 |
| Key Group | DH2 | Perfect Forward Secrecy (PFS) | No |
| Dead Peer Detection (DPD) | Yes | Encapsulation | Transport |
| XAUTH | No | | |

22.5 The IPsec VPN Monitor Screen

In the Web Configurator, click **VPN > IPsec VPN > Monitor**. Use this screen to display and manage active VPN connections.

Figure 150 VPN > IPsec VPN > Monitor

| | Name | Status | Application Scenario | Remote Gateway Address | Local Gateway Address |
|----------------------------------|------|--------------|----------------------|------------------------|-----------------------|
| <input checked="" type="radio"/> | vpn1 | Disconnected | Site-to-Site | 22.23.24.25 | 0.0.0.0 |
| <input type="radio"/> | vpn2 | Disconnected | Site-to-Site | 22.23.24.25 | 0.0.0.0 |

The following table describes the labels in this screen.

Table 109 VPN > IPsec VPN > Monitor

| LABEL | DESCRIPTION |
|------------------------|---|
| Radio Buttons | Click the radio button to choose the VPN client you want to connect or disconnect. |
| Name | This field displays the identification name for this IPsec VPN policy. |
| Status | This field displays whether the IPsec VPN connection is up (yellow bulb) or down (gray bulb). |
| Application Scenario | This field displays the encryption algorithm used for an SA. |
| Remote Gateway Address | This is the WAN IP address of the remote IPsec Gateway device. |
| Local Gateway Address | This is the WAN IP address of the local IPsec Gateway device. |
| Connect | Click this to connect. |
| Disconnect | Click this to disconnect. |

22.6 The Radius Screen

Use the **Radius** screen to configure the RADIUS server the SBG3600-N Series can use in authenticating users. In the Web Configurator, click **VPN > IPsec VPN > Radius**.

Note: Your settings here will also apply to the **Maintenance > User Account > Radius** screen.

Figure 151 VPN > IPsec VPN > Radius

Radius Setup

Server Address :

Authentication Port :

Backup Server Address :

Backup Authentication Port :

Key :

Timeout :

Retries :

The following table describes the labels in this screen.

Table 110 VPN > IPsec VPN > Radius

| LABEL | DESCRIPTION |
|-----------------------|---|
| Radius Setup | |
| Server Address | Enter the address of the RADIUS server. |
| Authentication Port | Specify the port number on the RADIUS server to which the SBG3600-N Series sends authentication requests. Enter a number between 1 and 65535. |
| Backup Server Address | If the RADIUS server has a backup server, enter its address here. |

Table 110 VPN > IPSec VPN > Radius (continued)


| LABEL | DESCRIPTION |
|----------------------------|---|
| Backup Authentication Port | Specify the port number on the RADIUS server to which the SBG3600-N Series sends authentication requests. Enter a number between 1 and 65535. |
| Key | Enter a password (up to 15 alphanumeric characters) as the key to be shared between the external authentication server and the SBG3600-N Series. The key is not sent over the network. This key must be the same on the external authentication server and the SBG3600-N Series. |
| Timeout | Specify the timeout period (between 1 and 300 seconds) before the SBG3600-N Series disconnects from the RADIUS server. In this case, user authentication fails. Search timeout occurs when either the user information is not in the RADIUS server or the RADIUS server is down. |
| Retries | Specify the number of connection retries before the SBG3600-N Series disconnects from the RADIUS server. |
| Apply | Click Apply to save your changes back to the SBG3600-N Series. |
| Cancel | Click Cancel to restore your previous settings. |

22.7 Technical Reference

This section provides some technical background information about the topics covered in this chapter.

22.7.1 IPSec Architecture

The overall IPSec architecture is shown as follows.

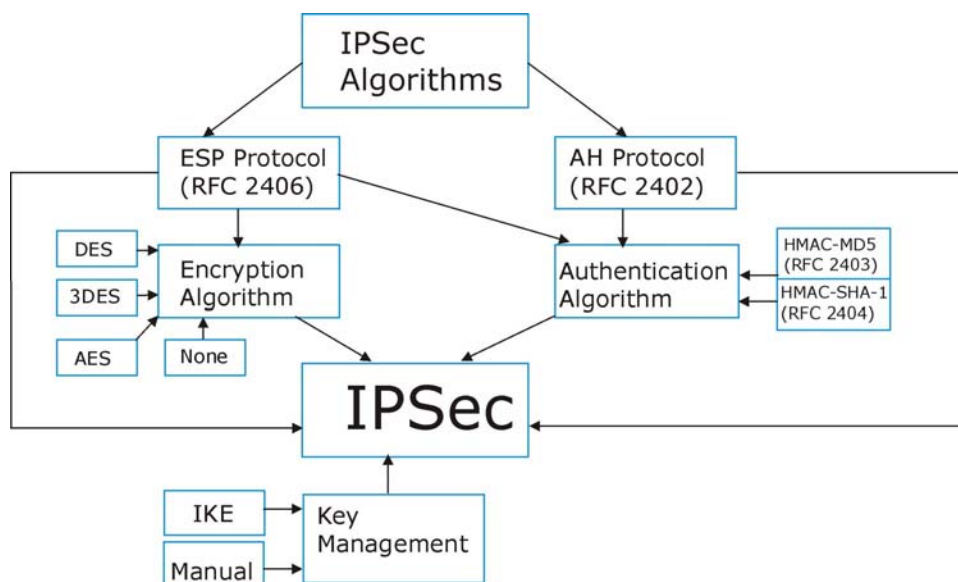Figure 152 IPSec Architecture

IPsec Algorithms

The **ESP** (Encapsulating Security Payload) Protocol (RFC 2406) and **AH** (Authentication Header) protocol (RFC 2402) describe the packet formats and the default standards for packet structure (including implementation algorithms).

The Encryption Algorithm describes the use of encryption techniques such as DES (Data Encryption Standard) and Triple DES algorithms.

The Authentication Algorithms, HMAC-MD5 (RFC 2403) and HMAC-SHA-1 (RFC 2404), provide an authentication mechanism for the **AH** and **ESP** protocols.


Key Management

Key management allows you to determine whether to use IKE (ISAKMP) or manual key configuration in order to set up a VPN.

22.7.2 Encapsulation

The two modes of operation for IPsec VPNs are **Transport** mode and **Tunnel** mode. At the time of writing, the SBG3600-N Series supports **Tunnel** mode only.

Figure 153 Transport and Tunnel Mode IPsec Encapsulation

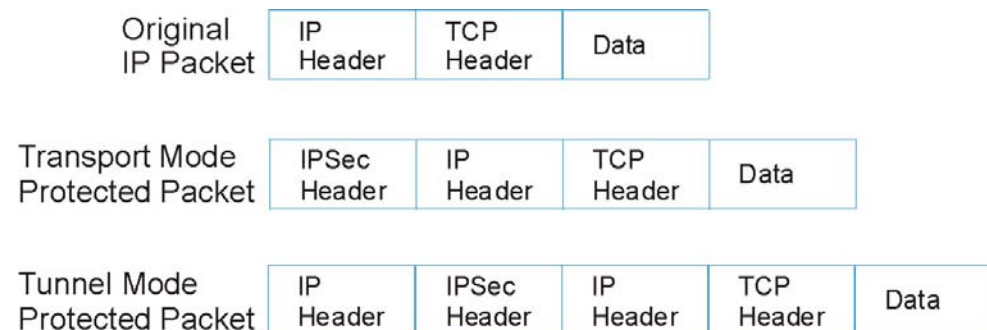

Transport Mode

Transport mode is used to protect upper layer protocols and only affects the data in the IP packet. In **Transport** mode, the IP packet contains the security protocol (**AH** or **ESP**) located after the original IP header and options, but before any upper layer protocols contained in the packet (such as TCP and UDP).

With **ESP**, protection is applied only to the upper layer protocols contained in the packet. The IP header information and options are not used in the authentication process. Therefore, the originating IP address cannot be verified for integrity against the data.

With the use of **AH** as the security protocol, protection is extended forward into the IP header to verify the integrity of the entire packet by use of portions of the original IP header in the hashing process.

Tunnel Mode


Tunnel mode encapsulates the entire IP packet to transmit it securely. A **Tunnel** mode is required for gateway services to provide access to internal systems. **Tunnel** mode is fundamentally an IP tunnel with authentication and encryption. This is the most common mode of operation. **Tunnel** mode is required for gateway to gateway and host to gateway communications. **Tunnel** mode communications have two sets of IP headers:

- **Outside header:** The outside IP header contains the destination IP address of the VPN gateway.
- **Inside header:** The inside IP header contains the destination IP address of the final system behind the VPN gateway. The security protocol appears after the outer IP header and before the inside IP header.

22.7.3 IKE Phases

There are two phases to every IKE (Internet Key Exchange) negotiation – phase 1 (Authentication) and phase 2 (Key Exchange). A phase 1 exchange establishes an IKE SA and the second one uses that SA to negotiate SAs for IPSec.

Figure 154 Two Phases to Set Up the IPSec SA

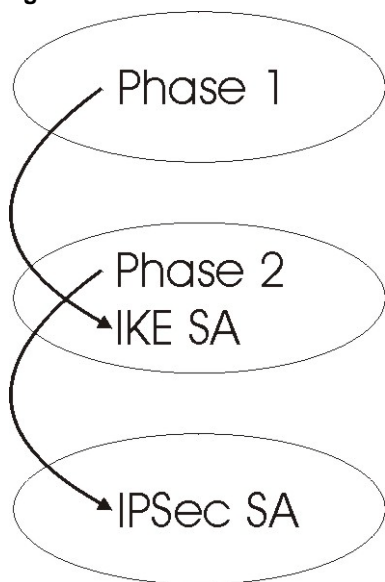

In phase 1 you must:

- Choose a negotiation mode.
- Authenticate the connection by entering a pre-shared key.
- Choose an encryption algorithm.
- Choose an authentication algorithm.
- Choose a Diffie-Hellman public-key cryptography key group (**DH1** or **DH2**).
- Set the IKE SA lifetime. This field allows you to determine how long an IKE SA should stay up before it times out. An IKE SA times out when the IKE SA lifetime period expires. If an IKE SA times out when an IPSec SA is already established, the IPSec SA stays connected.

In phase 2 you must:

- Choose an encryption algorithm.
- Choose an authentication algorithm
- Choose a Diffie-Hellman public-key cryptography key group.
- Set the IPSec SA lifetime. This field allows you to determine how long the IPSec SA should stay up before it times out. The SBG3600-N Series automatically renegotiates the IPSec SA if there is traffic when the IPSec SA lifetime period expires. If an IPSec SA times out, then the IPSec router must renegotiate the SA the next time someone attempts to send traffic.

22.7.4 Negotiation Mode

The phase 1 **Negotiation Mode** you select determines how the Security Association (SA) will be established for each connection through IKE negotiations.

- **Main Mode** ensures the highest level of security when the communicating parties are negotiating authentication (phase 1). It uses 6 messages in three round trips: SA negotiation, Diffie-Hellman exchange and an exchange of nonces (a nonce is a random number). This mode features identity protection (your identity is not revealed in the negotiation).
- **Aggressive Mode** is quicker than **Main Mode** because it eliminates several steps when the communicating parties are negotiating authentication (phase 1). However the trade-off is that faster speed limits its negotiating power and it also does not provide identity protection. It is useful in remote access situations where the address of the initiator is not known by the responder and both parties want to use pre-shared key authentication.

22.7.5 IPSec and NAT

Read this section if you are running IPSec on a host computer behind the SBG3600-N Series.

NAT is incompatible with the **AH** protocol in both **Transport** and **Tunnel** mode. An IPSec VPN using the **AH** protocol digitally signs the outbound packet, both data payload and headers, with a hash value appended to the packet. When using **AH** protocol, packet contents (the data payload) are not encrypted.

A NAT device in between the IPSec endpoints will rewrite either the source or destination address with one of its own choosing. The VPN device at the receiving end will verify the integrity of the incoming packet by computing its own hash value, and complain that the hash value appended to the received packet doesn't match. The VPN device at the receiving end doesn't know about the NAT in the middle, so it assumes that the data has been maliciously altered.

IPSec using **ESP** in **Tunnel** mode encapsulates the entire original packet (including headers) in a new IP packet. The new IP packet's source address is the outbound address of the sending VPN gateway, and its destination address is the inbound address of the VPN device at the receiving end. When using **ESP** protocol with authentication, the packet contents (in this case, the entire original packet) are encrypted. The encrypted contents, but not the new headers, are signed with a hash value appended to the packet.

Tunnel mode **ESP** with authentication is compatible with NAT because integrity checks are performed over the combination of the "original header plus original payload," which is unchanged by a NAT device.

Transport mode **ESP** with authentication is not compatible with NAT.

Table 111 VPN and NAT


| SECURITY PROTOCOL | MODE | NAT |
|-------------------|-----------|-----|
| AH | Transport | N |
| AH | Tunnel | N |
| ESP | Transport | N |
| ESP | Tunnel | Y |

22.7.6 VPN, NAT, and NAT Traversal

NAT is incompatible with the AH protocol in both transport and tunnel mode. An IPSec VPN using the AH protocol digitally signs the outbound packet, both data payload and headers, with a hash value appended to the packet, but a NAT device between the IPSec endpoints rewrites the source or destination address. As a result, the VPN device at the receiving end finds a mismatch between the hash value and the data and assumes that the data has been maliciously altered.

NAT is not normally compatible with ESP in transport mode either, but the SBG3600-N Series's **NAT Traversal** feature provides a way to handle this. NAT traversal allows you to set up an IKE SA when there are NAT routers between the two IPSec routers.

Figure 155 NAT Router Between IPSec Routers

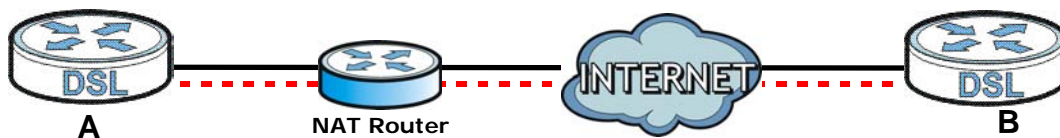

Normally you cannot set up an IKE SA with a NAT router between the two IPSec routers because the NAT router changes the header of the IPSec packet. NAT traversal solves the problem by adding a UDP port 500 header to the IPSec packet. The NAT router forwards the IPSec packet with the UDP port 500 header unchanged. In the above figure, when IPSec router **A** tries to establish an IKE SA, IPSec router **B** checks the UDP port 500 header, and IPSec routers **A** and **B** build the IKE SA.

For NAT traversal to work, you must:

- Use ESP security protocol (in either transport or tunnel mode).
- Use IKE keying mode.
- Enable NAT traversal on both IPSec endpoints.
- Set the NAT router to forward UDP port 500 to IPSec router **A**.

Finally, NAT is compatible with ESP in tunnel mode because integrity checks are performed over the combination of the "original header plus original payload," which is unchanged by a NAT device. The compatibility of AH and ESP with NAT in tunnel and transport modes is summarized in the following table.

Table 112 VPN and NAT

| SECURITY PROTOCOL | MODE | NAT |
|-------------------|-----------|-----|
| AH | Transport | N |
| AH | Tunnel | N |

Table 112 VPN and NAT

| SECURITY PROTOCOL | MODE | NAT |
|-------------------|-----------|-----|
| ESP | Transport | Y* |
| ESP | Tunnel | Y |

Y* - This is supported in the SBG3600-N Series if you enable NAT traversal.

22.7.7 ID Type and Content

With aggressive negotiation mode (see [Section 22.7.4 on page 300](#)), the SBG3600-N Series identifies incoming SAs by ID type and content since this identifying information is not encrypted. This enables the SBG3600-N Series to distinguish between multiple rules for SAs that connect from remote IPSec routers that have dynamic WAN IP addresses.

Regardless of the ID type and content configuration, the SBG3600-N Series does not allow you to save multiple active rules with overlapping local and remote IP addresses.

With main mode (see [Section 22.7.4 on page 300](#)), the ID type and content are encrypted to provide identity protection. In this case the SBG3600-N Series can only distinguish between different incoming SAs that connect from remote IPSec routers that have dynamic WAN IP addresses. The SBG3600-N Series can distinguish incoming SAs because you can select between three encryption algorithms (DES, 3DES and AES), two authentication algorithms (MD5 and SHA1) and eight key groups when you configure a VPN rule (see [Section 22.4 on page 286](#)). The ID type and content act as an extra level of identification for incoming SAs.

The type of ID can be a domain name, an IP address or an e-mail address. The content is the IP address, domain name, or e-mail address.

Table 113 Local ID Type and Content Fields

| LOCAL ID TYPE= | CONTENT= |
|----------------|--|
| IP | Type the IP address of your computer. |
| FQDN | Type a domain name (up to 31 characters) by which to identify this SBG3600-N Series. |
| User-FQDN | Type an e-mail address (up to 31 characters) by which to identify this SBG3600-N Series. |
| | The domain name or e-mail address that you use in the Local ID Content field is used for identification purposes only and does not need to be a real domain name or e-mail address. |

22.7.7.1 ID Type and Content Examples

Two IPSec routers must have matching ID type and content configuration in order to set up a VPN tunnel.

The two SBG3600-N Series in this example can complete negotiation and establish a VPN tunnel.

Table 114 Matching ID Type and Content Configuration Example

| SBG3600-N Series A | SBG3600-N Series B |
|---------------------------------------|--|
| Local ID type: User-FQDN | Local ID type: IP |
| Local ID content: tom@yourcompany.com | Local ID content: 1.1.1.2 |
| Remote ID type: IP | Remote ID type: E-mail |
| Remote ID content: 1.1.1.2 | Remote ID content: tom@yourcompany.com |

The two SBG3600-N Series in this example cannot complete their negotiation because SBG3600-N Series B's **Local ID type** is **IP**, but SBG3600-N Series A's **Remote ID type** is set to **E-mail**. An "ID mismatched" message displays in the IPSEC LOG.

Table 115 Mismatching ID Type and Content Configuration Example

| SBG3600-N SERIES A | SBG3600-N SERIES B |
|---------------------------------|----------------------------|
| Local ID type: IP | Local ID type: IP |
| Local ID content: 1.1.1.10 | Local ID content: 1.1.1.2 |
| Remote ID type: User-FQDN | Remote ID type: IP |
| Remote ID content: aa@yahoo.com | Remote ID content: 1.1.1.0 |

22.7.8 Pre-Shared Key

A pre-shared key identifies a communicating party during a phase 1 IKE negotiation (see [Section 22.7.3 on page 299](#) for more on IKE phases). It is called "pre-shared" because you have to share it with another party before you can communicate with them over a secure connection.

22.7.9 Diffie-Hellman (DH) Key Groups

Diffie-Hellman (DH) is a public-key cryptography protocol that allows two parties to establish a shared secret over an unsecured communications channel. Diffie-Hellman is used within IKE SA setup to establish session keys. 768-bit, 1024-bit 1536-bit, 2048-bit, and 3072-bit Diffie-Hellman groups are supported. Upon completion of the Diffie-Hellman exchange, the two peers have a shared secret, but the IKE SA is not authenticated. For authentication, use pre-shared keys.

PPTP VPN


23.1 Overview

Point-to-Point Tunneling Protocol (PPTP) is a network protocol that enables secure transfer of data from a remote client to a private server, creating a VPN using TCP/IP-based networks. PPTP supports on-demand, multi-protocol and virtual private networking over public networks, such as the Internet.

PPTP sets up two sessions and uses Generic Routing Encapsulation (GRE, RFC 2890) to transfer information between the computers. It is convenient and easy-to-use, but you have to make sure that firewalls support both PPTP sessions.

PPTP works on a client-server model and is suitable for remote access applications. For example, an employee (**A**) can connect to the PPTP VPN gateway (**X**) as a PPTP client to gain access to the company network resources from outside the office. When you connect to a remote network (**B**) through a PPTP VPN, all of your traffic goes through the PPTP VPN gateway (**X**).

Figure 156 PPTP VPN Example

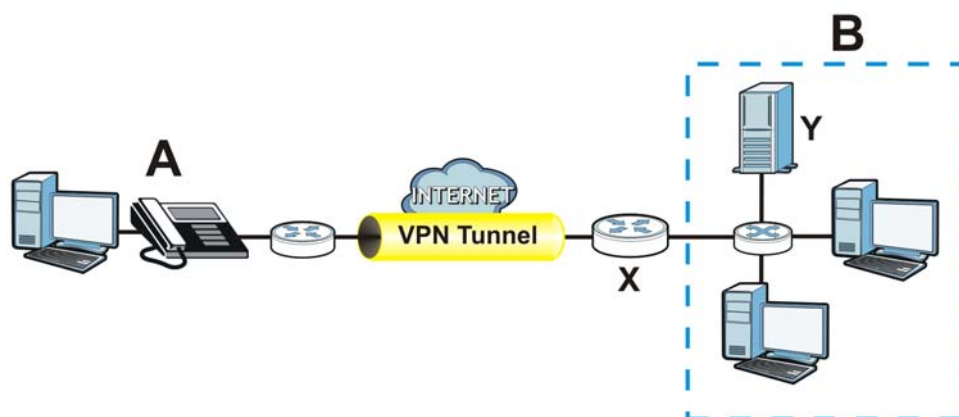

23.2 What You Can Do in this Chapter

- Use the **Setup** screen to configure the PPTP VPN settings in the SBG3600-N Series ([Section 23.3 on page 305](#)).
- Use the **Monitor** screen to view settings for PPTP clients ([Section 23.4 on page 306](#)).

23.3 PPTP VPN Setup

Use this screen to configure settings for a Point to Point Tunneling Protocol (PPTP) server.

Click **VPN > PPTP VPN** to open the **Setup** screen as shown next.

Figure 157 VPN > PPTP VPN > Setup

PPTP Setup

Enable : ☐

Local WAN Interface : Any

IP Address Pool : 10.1.1.1 - 10.1.1.32 (Subnet Mask : 255.255.255.0)

Access Group (Optional) :

Group 1 : IP Address: Subnet Mask:

Group 2 : IP Address: Subnet Mask:

Note:

1. Maximum number of IP address is limited to 32.
2. Each PPTP connection will use two IP addresses from the IP Address Pool. Thus, the maximum concurrent PPTP connections will be limited to 16.
3. Modifying Local WAN Interface, IP Address Pool, Access Group will disconnect all existing PPTP VPN connections.
4. If no Access Group is configured, by default all LAN groups can be accessed.

Authentication Method : default

Keep Alive Timer : 60

DNS Server (Optional) : User Defined

WINS Server (Optional) :

Note:

1. Keep Alive Timer modification will not take effect until you restart PPTP VPN.
2. DNS Server and WINS Server modification will be applied to new PPTP VPN connections only.

Apply Cancel

This screen contains the following fields:

Table 116 VPN > PPTP VPN > Setup

| LABEL | DESCRIPTION |
|-------------------------|--|
| PPTP Setup | |
| Enable | Use this field to turn the SBG3600-N Series'S PPTP VPN function on or off. |
| Local WAN Interface | Select an interface from the drop-down list and its IP address will be shown. This is the WAN interface upon which PPTP VPN listens to a client's connection request. |
| IP Address Pool | Enter the pool of IP addresses that the SBG3600-N Series uses to assign to the PPTP VPN clients. Note: This is with a 24-bit netmask and should not conflict with any configured WAN, LAN, DMZ, WLAN, or L2TP VPN subnet even if they are not in use. |
| Access Group (Optional) | Specify up to 2 LAN groups (subnets) which a PPTP VPN client is allowed to access. If none is specified, all LAN groups can be accessed. Enter the IP address and subnet mask for the LAN group(s). |

Table 116 VPN > PPTP VPN > Setup (continued)

| LABEL | DESCRIPTION |
|------------------------|---|
| Authentication Method | Select how the SBG3600-N Series authenticates a remote user before allowing access to the PPTP VPN tunnel. The authentication method has the SBG3600-N Series check a user's user name and password against the SBG3600-N Series's local database, which is configured in the Maintenance > User Account screen. |
| Keep Alive Timer | The SBG3600-N Series sends a Hello message after waiting this long without receiving any traffic from the remote user. The SBG3600-N Series disconnects the VPN tunnel if the remote user does not respond. |
| DNS Server (Optional) | Specify the IP addresses of DNS servers to assign to the remote users. You can choose from one of the DNS servers from the list, or choose User Defined to enter the static IP addresses for the first and second DNS servers manually. |
| WINS Server (Optional) | The WINS (Windows Internet Naming Service) server keeps a mapping table of the computer names on your network and the IP addresses that they are currently using. Type the IP addresses of up to two WINS servers to assign to the remote users. |
| Apply | Click Apply to save your changes back to the SBG3600-N Series. |
| Cancel | Click Cancel to restore your previous settings. |

23.4 The PPTP VPN Monitor Screen

In the Web Configurator, click **VPN > PPTP VPN > Monitor**. Use this screen to view settings for PPTP clients.

Figure 158 VPN > PPTP VPN > Monitor

| # | User Name | Hostname | Assigned IP | Public IP |
|-----------------------|-----------|----------|-------------|-----------|
| <div>Disconnect</div> | | | | |

The following table describes the labels in this screen.

Table 117 VPN > PPTP VPN > Monitor

| LABEL | DESCRIPTION |
|-------------|---|
| User Name | This field displays the client's login name for this connection. |
| Hostname | This is the client's host name of this connection. |
| Assigned IP | This is the local point-to-point IP address assigned to the client. |
| Public IP | This is the client's public IP address for this connection. |
| Disconnect | Select a VPN client connection and click this to disconnect. |

23.5 PPTP VPN Troubleshooting Tips

This section lists the common troubleshooting tips for PPTP VPN.

- 1 A PPTP client device (such as a PC, smart phone, tablet) cannot connect to the SBG3600-N Series.

TIP: This could be due to one of the following reasons:

- a. The client device is not connected to the Internet successfully.

Action: Check the client device's Internet connection.

- b. Incorrect server address configured on the client device.

(1) If the **Local WAN Interface** is **"Any"**:

From the SBG3600-N Series's GUI, click **Status**. The client device should be configured with one of the WAN interface IP addresses.

(2) If the **Local WAN Interface** is an interface (IP address shown to the right):

Use that IP address for the client device to connect.

- c. The WAN interface which the SBG3600-N Series's PPTP VPN is using is not connected.

Action: From the SBG3600-N Series's GUI, click **Status**. Check if the WAN interface the client device is connected has an IP address present.

- d. The PPTP VPN is not enabled.

Action: From the SBG3600-N Series's GUI, click **VPN > PPTP VPN**. Check **Enable** checkbox and click **Apply**.

- e. PPTP is not configured correctly on the client device.

Action: Refer to [Section 4.14 on page 72](#) for an example of PPTP VPN.

- f. The client entered an incorrect username or password.

Action: From the SBG3600-N Series's GUI, click **Maintenance > User Account**. The client should use one of the accounts to make the connection.

- g. The SBG3600-N Series has already reached the maximum number of concurrent PPTP VPN connections.

Action: There are too many clients connected. Wait a while and then retry.

2 A PPTP client is disconnected unexpectedly.

Tip: A PPTP connection will be dropped when one of the followings occurs on the SBG3600-N Series:

- a. The client has no activity for a period of time.

- b. The client loses connectivity to the SBG3600-N Series for a period of time.

- c. PPTP VPN is disabled on the SBG3600-N Series.

- d. When any one of these configuration changes is applied on the SBG3600-N Series: WAN interface used for PPTP VPN, IP address pool, access group.

e. The SBG3600-N Series's WAN interface on which the PPTP connection is established is disconnected.

- 3 A PPTP client is connected successfully but cannot access the local host or server behind the SBG3600-N Series.

Tip: This may be caused by one of the followings:

a. The local host or server is disconnected.

b. The access group is not configured correctly. From the SBG3600-N Series's GUI, go to **VPN > PPTP VPN > Setup** to check. Note that all local hosts are by default accessible unless access group is configured.

c. **IP Address Pool** for PPTP VPN conflicts with any WAN, LAN, DMZ, WLAN, or L2TP VPN subnet configured on the SBG3600-N Series. Note that the **IP Address Pool** for PPTP VPN has a 24-bit netmask and should not conflict with any others listed above even if they are not in use.

- 4 A PPTP client is connected successfully but cannot browse the Internet.

Tip: From the SBG3600-N Series's GUI, click **VPN > PPTP VPN > Setup**. Check if **DNS Server** is configured. A client cannot browse the Internet without DNS resolved. Note that when a new DNS server is configured, the client must disconnect then reconnect in order for the new DNS Server to take effect.

- 5 An Android device cannot connect to the SBG3600-N Series's PPTP VPN.

Tip: Devices running an Android OS older than version 4.1 have issues with PPTP/MPPE encryption. Avoid using devices that run an Android OS older than version 4.1 for PPTP VPN connection.


L2TP VPN

24.1 Overview

The Layer 2 Tunneling Protocol (L2TP) works at layer 2 (the data link layer) to tunnel network traffic between two peers over another network (like the Internet). In L2TP VPN, an IPsec VPN tunnel (defined by the IPsec VPN rule **Default_L2TPVPN**, refer to [Section 22.4.3 on page 295](#)) is established first and then an L2TP tunnel is built inside it. See [Chapter 22 on page 285](#) for information on IPsec VPN.

L2TP VPN lets remote users use the L2TP and IPsec client software included with their computers' operating systems to securely connect to the network behind the SBG3600-N Series. The remote users do not need their own IPsec gateways or VPN client software.

Figure 159 L2TP VPN Overview

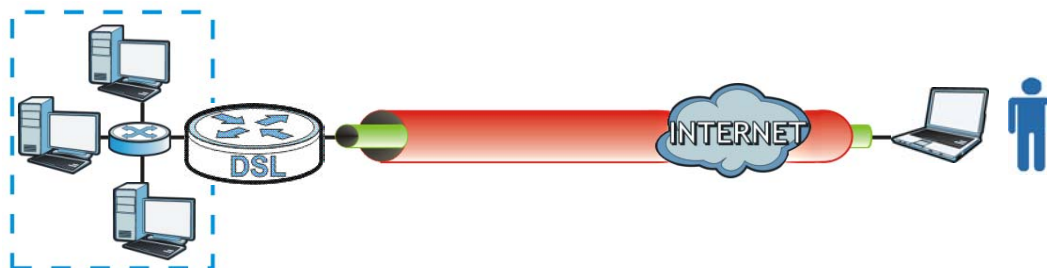

24.1.1 What You Can Do in this Chapter

- Use the **L2TP VPN** screen to configure the SBG3600-N Series's L2TP VPN settings ([Section 24.2 on page 309](#)).
- Use the **Monitor** screen to view settings for L2TP clients ([Chapter 24 on page 311](#)).

Note: You need to configure the **Default_L2TPVPN** VPN rule in the **VPN > IPsec > IPsec Setup** screen. See [Chapter 22 on page 285](#) for information on IPsec VPN.

24.2 L2TP VPN Screen

Click **VPN > L2TP VPN** to open the **Setup** screen. Use this screen to configure the SBG3600-N Series's L2TP VPN settings.

Figure 160 VPN > L2TP VPN > Setup

L2TP Setup

Enable : ☐

VPN Connection : Default_L2TPVPN (WAN Interface : any)

IP Address Pool : - (Subnet Mask : 255.255.255.0)

Access Group (Optional) :

Group 1 : IP Address: Subnet Mask:

Group 2 : IP Address: Subnet Mask:

Note:

1. Maximum number of IP address is limited to 32.
2. Each L2TP connection will use two IP addresses from the IP Address Pool. Thus, the maximum concurrent L2TP connections will be limited to 16.
3. Modifying IP Address Pool and Access Group will disconnect all existing L2TP/IPSec VPN connections.
4. If no Access Group is configured, by default all LAN groups can be accessed.

Authentication Method :

Keep Alive Timer :

DNS Server (Optional) :

WINS Server (Optional) :

Note:

1. Keep Alive Timer modification will not take effect until you restart L2TP/IPSec VPN.
2. DNS Server and WINS Server modification will be applied to new L2TP/IPSec VPN connections only.

The following table describes the fields in this screen.

Table 118 VPN > L2TP VPN > Setup

| LABEL | DESCRIPTION |
|-------------------------|---|
| Enable | Select the checkbox to enable the SBG3600-N Series's L2TP VPN function. |
| VPN Connection | This is the WAN interface where L2TP VPN listens for a client connection request. It is configured in the Default_L2TPVPN IPsec VPN rule in the VPN > IPsec > IPsec Setup screen. See Chapter 22 on page 285 for information on IPsec VPN. |
| IP Address Pool | Enter the pool of IP addresses that the SBG3600-N Series uses to assign to the L2TP VPN clients. Note: These addresses use a 24-bit netmask and should not conflict with any WAN, LAN, DMZ, WLAN, or PPTP VPN subnet even if they are not in use. |
| Access Group (Optional) | Specify up to 2 LAN groups (subnets) which a L2TP VPN client is allowed to access. If none is specified, all LAN groups can be accessed. Enter the IP address and subnet mask for the LAN group(s). |
| Authentication Method | Select how the SBG3600-N Series authenticates a remote user before allowing access to the L2TP VPN tunnel. The authentication method has the SBG3600-N Series check a user's user name and password against the SBG3600-N Series's local database, which is configured in the Maintenance > User Account screen. |
| Keep Alive Timer | The SBG3600-N Series sends a Hello message after waiting this long without receiving any traffic from the remote user. The SBG3600-N Series disconnects the VPN tunnel if the remote user does not respond. |
| DNS Server (Optional) | Specify the IP addresses of DNS servers to assign to the remote users. You can choose from one of the DNS servers from the list, or choose User Defined to enter the static IP addresses for the first and second DNS servers manually. |

Table 118 VPN > L2TP VPN > Setup (continued)

| LABEL | DESCRIPTION |
|------------------------|---|
| WINS Server (Optional) | The WINS (Windows Internet Naming Service) server keeps a mapping table of the computer names on your network and the IP addresses that they are currently using. Type the IP addresses of up to two WINS servers to assign to the remote users. |
| Apply | Click Apply to save your changes back to the SBG3600-N Series. |
| Cancel | Click Cancel to restore your previous settings. |

24.3 The L2TP VPN Monitor Screen

In the Web Configurator, click **VPN > L2TP VPN > Monitor**. Use this screen to view settings for PPTP clients.

Figure 161 VPN > L2TP VPN > Monitor


| # | User Name | Hostname | Assigned IP | Public IP |
|------------|-----------|----------|-------------|-----------|
| Disconnect | | | | |

The following table describes the labels in this screen.

Table 119 VPN > L2TP VPN > Monitor

| LABEL | DESCRIPTION |
|-------------|---|
| User Name | This field displays the client's login name for this connection. |
| Hostname | This is the client's host name of this connection. |
| Assigned IP | This is the local point-to-point IP address assigned to the client. |
| Public IP | This is the client's public IP address for this connection. |
| Disconnect | Select a VPN client connection and click this to disconnect. |

24.4 L2TP VPN Troubleshooting Tips

This section lists the common troubleshooting tips for L2TP VPN.

- 1 A L2TP client device (such as a PC, smart phone, tablet) cannot connect to the SBG3600-N Series.

TIP: This could be due to one of the following reasons:

- a. The client device is not connected to the Internet successfully.

Action: Check the client device's Internet connection.

- b. Incorrect server address configured on the client device.

Action: From the SBG3600-N Series's GUI, click **VPN > IPsec VPN > Setup**.

- (1) If the **Local Gateway Address** for **Default_L2TPVPN** is set to **"Any"**:

From the SBG3600-N Series's GUI, click **Status**. The client device should be configured with one of the WAN interface IP addresses.

(2) If the **Local Gateway Address** for **Default_L2TPVPN** is an IP address:

Use that IP address for the client device to connect.

c. The WAN interface which the SBG3600-N Series's L2TP VPN is using is not connected.

Action: From the SBG3600-N Series's GUI, click **Status**. Check if the WAN interface used by L2TP VPN is connected.

d. The client device has an incorrect IPSec pre-shared key configured.

Action: From the SBG3600-N Series's GUI, click **VPN > IPSec VPN > Edit Default_L2TPVPN**. The client device should use the same pre-shared key.

e. The L2TP VPN is not fully enabled.

Action: From the SBG3600-N Series's GUI,

(1) Click **VPN > IPSec > Edit Default_L2TPVPN**. Select the **Enable** checkbox and click **Apply**.

(2) Click **VPN > L2TP VPN > Setup**. Select the **Enable** checkbox and click **Apply**.

f. L2TP or IPSec is not configured correctly on the client device.

Action: Refer to [Section 4.15 on page 83](#) for an example of L2TP VPN.

g. The client entered an incorrect username or password.

Action: From the SBG3600-N Series's GUI, click **Maintenance > User Account**. The client should use one of the accounts to make the connection.

h. The SBG3600-N Series exceeds the maximum number of concurrent L2TP VPN connections.

Action: There are too many clients connected. Wait a while and then retry.

- 2 A windows L2TP client fails to connect to the SBG3600-N Series with an "invalid certificate" message.

Tip: Windows sometimes may show this error even if the client device has been configured with a correct pre-shared key for authentication. This usually happens at the first connection attempt after a new connection profile is created. Reconfigure the pre-shared key on the client Windows device and retry the connection.

- 3 An L2TP client device cannot reconnect after it is disconnected.

Tip: If a client reconnects right after it is disconnected, the reconnection may fail. Wait 60 seconds before reconnecting.

- 4 An L2TP client is disconnected unexpectedly.

Tip: An L2TP connection will be dropped when one of the followings occurs on the SBG3600-N Series:

- (1) Client has no activity for a period of time.
- (2) Client loses connectivity to the SBG3600-N Series for a period of time.
- (3) Any IPsec VPN configuration change is applied on the SBG3600-N Series.
- (4) Either Default_L2TPVPN IPsec configuration or L2TP VPN is disabled on the SBG3600-N Series.
- (5) When any one of these configuration changes is applied on the SBG3600-N Series: WAN Interface used for L2TP VPN, IP Address Pool, Access Group.
- (6) The SBG3600-N Series WAN interface on which the L2TP connection established is disconnected.

- 5 An L2TP client is connected successfully but cannot access the local host or server behind the SBG3600-N Series.

Tip: This may be caused by one of the followings:

- (1) The local host or server is disconnected.
- (2) The Access Group is not configured correctly. From the SBG3600-N Series's GUI, go to the **VPN > L2TP VPN > Setup** screen to check. Note that all local hosts are by default accessible unless Access Group is configured.
- (3) **IP Address Pool** for L2TP VPN is conflicting with any WAN, LAN, DMZ, WLAN, or PPTP VPN subnet configured on the SBG3600-N Series. Note that **IP Address Pool** for L2TP VPN has 24-bit netmask and should not conflict with any others listed above even if they are not in use.

- 6 An L2TP client is connected successfully but cannot browse Internet.

Tip: From the SBG3600-N Series's GUI, click **VPN > L2TP VPN > Setup**. Check if DNS Server is configured. A client cannot browse Internet without DNS resolved. Note that when a new DNS Server is configured, the client must disconnect then reconnect in order for the new DNS Server to take effect.

- 7 The L2TP client can no longer connect to SBG3600-N Series after the **Encryption** or **Authentication** for the **Default_L2TPVPN** IPsec VPN rule is changed.

Tip: A user usually do not need change the default **Encryption** or **Authentication** algorithms in the **Default_L2TPVPN** IPsec VPN rule. The default **Encryption** and **Authentication** algorithms should support the built-in L2TP/IPsec client software in the popular operating systems (Windows (XP, Vista, 7), Android, and iOS).

Refer to [Table 108 on page 295](#) for the default setting of the **Default_L2TPVPN** IPsec VPN rule.

As a reference, [Table 120 on page 314](#) lists the IPsec proposals provided by a built-in L2TP client in the popular operating systems during IPsec phase 1 negotiation. The first proposal that can be supported by the phase 1 setting in the **Default_L2TPVPN** IPsec VPN rule will be accepted by the SBG3600-N Series. The algorithms in red in [Table 120 on page 314](#) indicate the ones that will be accepted based on [Table 108 on page 295](#).

Table 120 Phase 1 IPSec proposals provided by the built-in L2TP client in popular operating systems (Encryption/Authentication/Key Group)

| | WINDOWS XP | WINDOWS VISTA | WINDOWS 7 | IOS 5.1 | ANDROID 4.1 |
|---|----------------|----------------|----------------|---------------|---------------|
| 1 | 3DES/SHA1/DH15 | 3DES/SHA1/DH15 | AES/SHA1/DH15 | AES/SHA1/DH2 | AES/SHA1/DH2 |
| 2 | 3DES/SHA1/DH2 | 3DES/SHA1/DH2 | 3DES/SHA1/DH15 | AES/MD5/DH2 | AES/MD5/DH2 |
| 3 | 3DES/MD5/DH2 | | 3DES/SHA1/DH2 | 3DES/SHA1/DH2 | 3DES/SHA1/DH2 |
| 4 | DES/SHA1/DH1 | | | 3DES/MD5/DH2 | 3DES/MD5/DH2 |
| 5 | DES/MD5/DH1 | | | | DES/SHA1/DH2 |
| 6 | | | | | DES/MD5/DH2 |

After phase 1 tunnel is established, IPSec phase 2 negotiations begin. [Table 121 on page 314](#) lists the IPSec phase 2 proposals provided by a built-in L2TP client in the popular operating systems. The first proposal that can be supported by the phase 2 setting in the **Default_L2TPVPN** IPSec VPN rule will be accepted by the SBG3600-N Series. The algorithms in red in [Table 121 on page 314](#) indicate the ones that will be accepted based on [Table 108 on page 295](#).

Table 121 Phase 2 IPSec proposals provided by the built-in L2TP client in popular operating systems (Tunnel Mode/Encryption/Authentication) [Encapsulation = Transport]

| | WINDOWS XP | WINDOWS VISTA | WINDOWS 7 | IOS 5.1 | ANDROID 4.1 |
|---|--------------------------------|--------------------------------|---------------|--|---|
| 1 | ESP/3DES/MD5 ESP/3DES/SHA1 | ESP/AES/SHA1 | ESP/AES/SHA1 | ESP/AES/SHA1 ESP/AES/MD5 ESP/3DES/SHA1 ESP/3DES/MD5 | ESP/AES/SHA1 ESP/AES/MD5 ESP/3DES/SHA1 ESP/3DES/MD5 ESP/DES/SHA1 ESP/DES/MD5 |
| 2 | AH/-/SHA1 and ESP/3DES/- | ESP/3DES/SHA1 | ESP/3DES/SHA1 | | |
| 3 | AH/-/MD5 and ESP/3DES/- | AH/-/SHA1 and ESP/AES/- | ESP/DES/SHA1 | | |
| 4 | AH/-/SHA1 and ESP/3DES/SHA1 | AH/-/SHA1 and ESP/3DES/- | ESP/-/SHA1 | | |
| 5 | AH/-/MD5 and ESP/3DES/MD5 | AH/-/SHA1 and ESP/3DES/SHA1 | AH/-/SHA1 | | |
| 6 | ESP/DES/MD5 ESP/DES/SHA1 | ESP/-/SHA1 | | | |
| | | AH/-/SHA1 | | | |

25.1 Overview

The web configurator allows you to choose which categories of events and/or alerts to have the SBG3600-N Series log and then display the logs or have the SBG3600-N Series send them to an administrator (as e-mail) or to a syslog server.

25.1.1 What You Can Do in this Chapter

- Use the **System Log** screen to see the system logs ([Section 25.2 on page 316](#)).
- Use the **Security Log** screen to see the security-related logs for the categories that you select ([Section 25.3 on page 316](#)).

25.1.2 What You Need To Know

The following terms and concepts may help as you read this chapter.

Alerts and Logs

An alert is a type of log that warrants more serious attention. They include system errors, attacks (access control) and attempted access to blocked web sites. Some categories such as **System Errors** consist of both logs and alerts. You may differentiate them by their color in the **View Log** screen. Alerts display in red and logs display in black.

Syslog Overview

The syslog protocol allows devices to send event notification messages across an IP network to syslog servers that collect the event messages. A syslog-enabled device can generate a syslog message and send it to a syslog server.

Syslog is defined in RFC 3164. The RFC defines the packet format, content and system log related information of syslog messages. Each syslog message has a facility and severity level. The syslog facility identifies a file in the syslog server. Refer to the documentation of your syslog program for details. The following table describes the syslog severity levels.

Table 122 Syslog Severity Levels

| CODE | SEVERITY |
|------|--|
| 0 | Emergency: The system is unusable. |
| 1 | Alert: Action must be taken immediately. |
| 2 | Critical: The system condition is critical. |
| 3 | Error: There is an error condition on the system. |
| 4 | Warning: There is a warning condition on the system. |

Table 122 Syslog Severity Levels

| CODE | SEVERITY |
|------|--|
| 5 | Notice: There is a normal but significant condition on the system. |
| 6 | Informational: The syslog contains an informational message. |
| 7 | Debug: The message is intended for debug-level purposes. |

25.2 The System Log Screen

Use the **System Log** screen to see the system logs. Click **System Monitor > Log** to open the **System Log** screen.

Figure 162 System Monitor > Log > System Log

The screenshot shows the 'System Log' interface. At the top, there are two dropdown menus: 'Level' set to 'Alert' and 'Category' set to 'All'. Below these are three buttons: 'Clear Log', 'Refresh', and 'Export Log'. At the bottom, there is a table header with five columns: '#', 'Time', 'Facility', 'Level', and 'Messages'.

The following table describes the fields in this screen.

Table 123 System Monitor > Log > System Log

| LABEL | DESCRIPTION |
|------------|--|
| Level | Select a severity level from the drop-down list box. This filters search results according to the severity level you have selected. When you select a severity, the SBG3600-N Series searches through all logs of that severity or higher. |
| Category | Select the type of logs to display. |
| Clear Log | Click this to delete all the logs. |
| Refresh | Click this to renew the log screen. |
| Export Log | Click this to export the selected log(s). |
| # | This field is a sequential value and is not associated with a specific entry. |
| Time | This field displays the time the log was recorded. |
| Facility | The log facility allows you to send logs to different files in the syslog server. Refer to the documentation of your syslog program for more details. |
| Level | This field displays the severity level of the logs that the device is to send to this syslog server. |
| Messages | This field states the reason for the log. |

25.3 The Security Log Screen

Use the **Security Log** screen to see the security-related logs for the categories that you select. Click **System Monitor > Log > Security Log** to open the following screen.

Figure 163 System Monitor > Log > Security Log

Level: Category:

| # | Time | Facility | Level | Messages |
|---|------|----------|-------|----------|
|---|------|----------|-------|----------|

The following table describes the fields in this screen.

Table 124 System Monitor > Log > Security Log

| LABEL | DESCRIPTION |
|------------|--|
| Level | Select a severity level from the drop-down list box. This filters search results according to the severity level you have selected. When you select a severity, the SBG3600-N Series searches through all logs of that severity or higher. |
| Category | Select the type of logs to display. |
| Clear Log | Click this to delete all the logs. |
| Refresh | Click this to renew the log screen. |
| Export Log | Click this to export the selected log(s). |
| # | This field is a sequential value and is not associated with a specific entry. |
| Time | This field displays the time the log was recorded. |
| Facility | The log facility allows you to send logs to different files in the syslog server. Refer to the documentation of your syslog program for more details. |
| Level | This field displays the severity level of the logs that the device is to send to this syslog server. |
| Messages | This field states the reason for the log. |

Network Status

26.1 Overview

Use the **Network Status** screens to look at network status and statistics of the WAN and LAN interfaces.


26.1.1 What You Can Do in this Chapter

- Use the **WAN** screen to view the WAN traffic statistics ([Section 26.2 on page 318](#)).
- Use the **LAN** screen to view the LAN traffic statistics ([Section 26.3 on page 319](#)).
- Use the **DHCP Client** screen to view the DHCP Client list ([Section 26.4 on page 320](#)).

26.2 The WAN Status Screen

Click **System Monitor > Network Status** to open the **WAN** screen. This screen shows the number of bytes received and sent through the WAN interface of the SBG3600-N Series.

Figure 164 System Monitor > Network Status > WAN

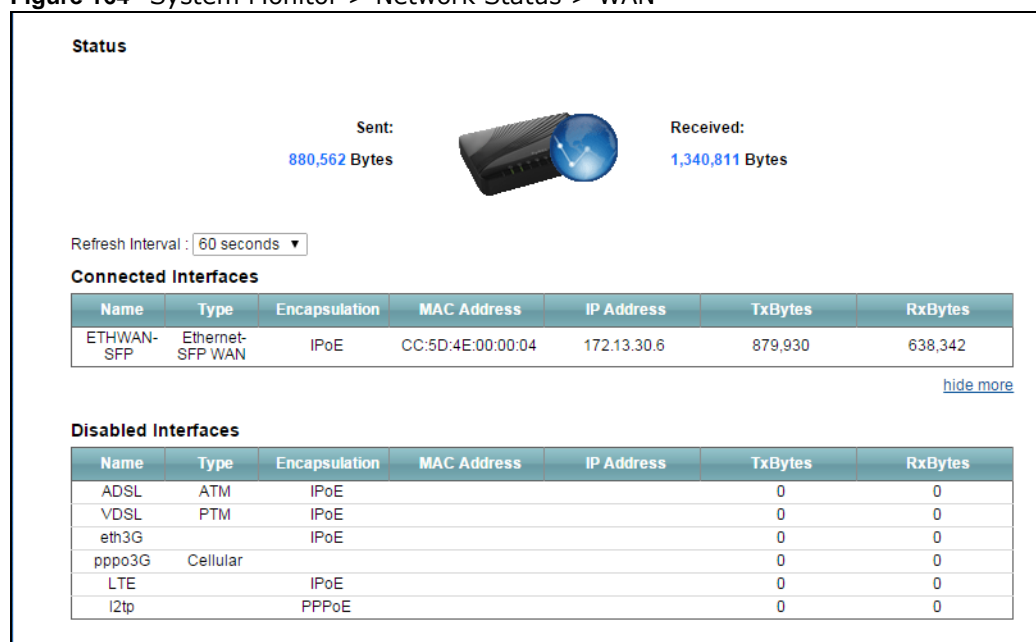

The following table describes the fields in this screen.

Table 125 System Monitor > Network Status > WAN

| LABEL | DESCRIPTION |
|---------------------|---|
| Refresh Interval | Select how often you want the SBG3600-N Series to update this screen. |
| Connected Interface | This shows the name of the WAN interface that is currently connected. |
| Disabled Interface | This shows the name of the WAN interface that is currently inactive. |
| Name | This shows the name of the WAN interface. |
| Type | This shows the type of the WAN interface. |
| Encapsulation | This shows the method of encapsulation used by this interface. |
| MAC Address | This shows the MAC address of the interface. |
| IP Address | This shows the IP address of the interface. |
| TxBytes | This indicates the number of bytes transmitted on this interface. |
| RxBytes | This indicates the number of bytes received on this interface. |

26.3 The LAN Status Screen

Click **System Monitor > Network Status > LAN** to open the following screen. This screen shows the number of bytes received and sent through the LAN or WLAN interface of the SBG3600-N Series.

Figure 165 System Monitor > Network Status > LAN

| Refresh Interval : 60 seconds ▼ | | | | | |
|---------------------------------|-----------|-------------|--------|------|----------|
| Interface | LAN1 | LAN2 | LAN3 | LAN4 | Wireless |
| Bytes Sent | 2,237,498 | 528,143,555 | 0 | 0 | 0 |
| Bytes Received | 563,423 | 33,038,823 | 0 | 0 | 0 |
| hide more | | | | | |
| Interface | LAN1 | LAN2 | LAN3 | LAN4 | Wireless |
| Sent (Packet) | Data | 4393 | 443389 | 0 | 0 |
| | Error | 0 | 0 | 0 | 0 |
| | Drop | 0 | 0 | 0 | 0 |
| Received (Packet) | Data | 4173 | 280931 | 0 | 0 |
| | Error | 0 | 0 | 0 | 0 |
| | Drop | 0 | 0 | 0 | 0 |

The following table describes the fields in this screen.

Table 126 System Monitor > Network Status > LAN

| LABEL | DESCRIPTION |
|------------------|---|
| Refresh Interval | Select how often you want the SBG3600-N Series to update this screen. |
| Interface | This shows the name of the LAN or WLAN interface. |
| Bytes Sent | This indicates the number of bytes transmitted on this interface. |
| Bytes Received | This indicates the number of bytes received on this interface. |
| Sent (Packets) | |


Table 126 System Monitor > Network Status > LAN (continued)

| LABEL | DESCRIPTION |
|--------------------|--|
| Data | This indicates the number of transmitted packets on this interface. |
| Error | This indicates the number of frames with errors transmitted on this interface. |
| Drop | This indicates the number of outgoing packets dropped on this interface. |
| Received (Packets) | |
| Data | This indicates the number of received packets on this interface. |
| Error | This indicates the number of frames with errors received on this interface. |
| Drop | This indicates the number of received packets dropped on this interface. |

26.4 The DHCP Client Screen

Click **System Monitor > Network Status > DHCP Client** to open the following screen. This screen shows the information of the DHCP clients that are currently connected to the SBG3600-N Series.

Figure 166 System Monitor > Network Status > DHCP Client

| Refresh Interval : 15 seconds ▼ | | | | |
|---|-------------|-------------|-------------------|-----------------|
| # | Device Name | IP Address | MAC Address | Connection Type |
|  | unknown | 192.168.1.2 | 00:1e:0b:24:f8:93 | Ethernet |

The following table describes the fields in this screen.

Table 127 System Monitor > Network Status > DHCP Client

| LABEL | DESCRIPTION |
|------------------|--|
| Refresh Interval | Choose the screen refresh time (15, 30, 60 seconds) from the drop-down list to see changes in the devices that are on the network. |
| # | This displays the device that is connected to the SBG3600-N Series. |
| Device Name | This displays the system name of the device connected to the SBG3600-N Series. |
| IP Address | This displays the IP address of the device connected to the SBG3600-N Series. |
| MAC Address | This displays the MAC address of the device connected to the SBG3600-N Series. |
| Connection Type | This displays the connection type that the device is using to connect to the SBG3600-N Series. |

ARP Table

27.1 Overview

Address Resolution Protocol (ARP) is a protocol for mapping an Internet Protocol address (IP address) to a physical machine address, also known as a Media Access Control or MAC address, on the local area network.

An IP (version 4) address is 32 bits long. In an Ethernet LAN, MAC addresses are 48 bits long. The ARP Table maintains an association between each MAC address and its corresponding IP address.

27.1.1 How ARP Works

When an incoming packet destined for a host device on a local area network arrives at the device, the device's ARP program looks in the ARP Table and, if it finds the address, sends it to the device.

If no entry is found for the IP address, ARP broadcasts the request to all the devices on the LAN. The device fills in its own MAC and IP address in the sender address fields, and puts the known IP address of the target in the target IP address field. In addition, the device puts all ones in the target MAC field (FF.FF.FF.FF.FF.FF is the Ethernet broadcast address). The replying device (which is either the IP address of the device being sought or the router that knows the way) replaces the broadcast address with the target's MAC address, swaps the sender and target pairs, and unicasts the answer directly back to the requesting machine. ARP updates the ARP Table for future reference and then sends the packet to the MAC address that replied.

27.2 ARP Table Screen

Use the ARP table to view IP-to-MAC address mapping(s). To open this screen, click **System Monitor > ARP Table**.

Figure 167 System Monitor > ARP Table

| # | IP Address | MAC Address | Device |
|---|-------------|-------------------|---------------------|
| 1 | 172.23.30.4 | 00:16:41:ee:e5:55 | LAN |
| 2 | 172.23.30.6 | 10:78:d2:c5:19:cd | LAN |
| 3 | 172.23.30.8 | 00:1e:0b:24:f8:93 | LAN |

The following table describes the labels in this screen.

Table 128 System Monitor > ARP Table

| LABEL | DESCRIPTION |
|------------|---|
| # | This is the ARP table entry number. |
| IP Address | This is the learned IP address of a device connected to a port. |

Table 128 System Monitor > ARP Table (continued)

| LABEL | DESCRIPTION |
|-------------|---|
| MAC Address | This is the MAC address of the device with the listed IP address. |
| Device | This is the type of interface used by the device. You can click on the device type to go to its configuration screen. |

Routing Table

28.1 Overview

Routing is based on the destination address only and the SBG3600-N Series takes the shortest path to forward a packet.

28.2 The Routing Table Screen

Click **System Monitor > Routing Table** to open the following screen.

Figure 168 System Monitor > Routing Table

| Destination | Gateway | Subnet Mask | Flag | Metric | Service | Interface |
|-------------|---------|---------------|------|--------|---------|-----------|
| 172.23.30.0 | * | 255.255.255.0 | U | 0 | 0 | br0 |

The following table describes the labels in this screen.

Table 129 System Monitor > Routing Table

| LABEL | DESCRIPTION |
|-------------|---|
| Destination | This indicates the destination IP address of this route. |
| Gateway | This indicates the IP address of the gateway that helps forward this route's traffic. |
| Subnet Mask | This indicates the destination subnet mask of this route. |
| Flag | <p>This indicates the route status.</p> <p>U-Up: The route is up.</p> <p>!-Reject: The route is blocked and will force a route lookup to fail.</p> <p>G-Gateway: The route uses a gateway to forward traffic.</p> <p>H-Host: The target of the route is a host.</p> <p>R-Reinstate: The route is reinstated for dynamic routing.</p> <p>D-Dynamic (redirect): The route is dynamically installed by a routing daemon or redirect.</p> <p>M-Modified (redirect): The route is modified from a routing daemon or redirect.</p> |
| Metric | The metric represents the "cost of transmission". A router determines the best route for transmission by choosing a path with the lowest "cost". The smaller the number, the lower the "cost". |

Table 129 System Monitor > Routing Table (continued)

| LABEL | DESCRIPTION |
|-----------|---|
| Service | This indicates the name of the service used to forward the route. |
| Interface | <p>This indicates the name of the interface through which the route is forwarded.</p> <p>br0 indicates the LAN interface.</p> <p>ptm0 indicates the WAN interface using IPoE or in bridge mode.</p> <p>ppp0 indicates the WAN interface using PPPoE.</p> |

IGMP Status

29.1 Overview

Use the **IGMP Status** screens to look at IGMP group status and traffic statistics.

29.2 The IGMP Group Status Screen

Use this screen to look at the current list of multicast groups the SBG3600-N Series has joined and which ports have joined it. To open this screen, click **System Monitor > IGMP Group Status**.

Figure 169 System Monitor > IGMP Group Status

| | | | |
|-----------|-----------------|-------------|-------------|
| Interface | Multicast Group | Filter Mode | Source List |
|-----------|-----------------|-------------|-------------|

The following table describes the labels in this screen.

Table 130 System Monitor > IGMP Group Status

| LABEL | DESCRIPTION |
|-----------------|---|
| Interface | This field displays the name of an interface on the SBG3600-N Series that belongs to an IGMP multicast group. |
| Multicast Group | This field displays the name of the IGMP multicast group to which the interface belongs. |
| Filter Mode | <p>INCLUDE means that only the IP addresses in the Source List get to receive the multicast group's traffic.</p> <p>EXCLUDE means that the IP addresses in the Source List are not allowed to receive the multicast group's traffic but other IP addresses can.</p> |
| Source List | This is the list of IP addresses that are allowed or not allowed to receive the multicast group's traffic depending on the filter mode. |

xDSL Statistics

30.1 The xDSL Statistics Screen

Use this screen to view detailed DSL statistics. Click **System Monitor > xDSL Statistics** to open the following screen.

Figure 170 System Monitor > xDSL Statistics

Monitor
Refresh Interval: No Refresh

Status :

```

=====
xDSL Training Status:  Idle
                      Mode:  G.DMT
                      Traffic Type:  Inactive
                      Link Uptime:  N/A
=====
xDSL Port Details      Upstream      Downstream
Line Rate:             0.000 Mbps    0.000 Mbps
Actual Net Data Rate:  0.000 Mbps    0.000 Mbps
Trellis Coding:        N/A           N/A
SNR Margin:            0.0 dB         0.0 dB
Actual Delay:          0 ms           0 ms
Transmit Power:        0.0 dBm        0.0 dBm
Receive Power:         0.0 dBm        0.0 dBm
Actual INP:            0.0 symbols    0.0 symbols
Total Attenuation:     0.0 dB         0.0 dB
Attainable Net Data Rate: 0.000 Mbps 0.000 Mbps
=====
xDSL Counters
Downstream      Upstream
Since Link time = 0 sec
FEC:            0          0
CRC:            0          0
ES:             0          0
SES:            0          0
UAS:            26507       0
LOS:            0          0
LOF:            0          0
LOM:            0          0
Latest 15 minutes time = 14 min 13 sec
FEC:            0          0
CRC:            0          0
ES:             0          0
SES:            0          0
UAS:            760         760
LOS:            0          0
LOF:            0          0
LOM:            0          0
Previous 15 minutes time = 15 min 0 sec
FEC:            0          0
CRC:            0          0
ES:             0          0
SES:            0          0
UAS:            813         813
LOS:            0          0
LOF:            0          0
LOM:            0          0
Latest 1 day time = 8 hours 14 min 13 sec
FEC:            0          0
CRC:            0          0
ES:             0          0
SES:            0          0
UAS:            26507       26507
LOS:            0          0
LOF:            0          0
LOM:            0          0
Previous 1 day time = 0 sec
FEC:            0          0
CRC:            0          0
ES:             0          0
SES:            0          0
UAS:            0          0
LOS:            0          0
LOF:            0          0
LOM:            0          0
Total time = 8 hours 14 min 13 sec
FEC:            0          0
CRC:            0          0
ES:             0          0
SES:            0          0
UAS:            26507       26507
LOS:            0          0
LOF:            0          0
LOM:            0          0
=====

```


The following table describes the labels in this screen.

Table 131 System Monitor > xDSL Statistics

| LABEL | DESCRIPTION |
|--------------------------|--|
| Refresh Interval | Select the time interval for refreshing statistics. |
| xDSL Training Status | This displays the current state of setting up the DSL connection. |
| Mode | This displays the ITU standard used for this connection. |
| Traffic Type | This displays the type of traffic the DSL port is sending and receiving. Inactive displays if the DSL port is not currently sending or receiving traffic. |
| Link Uptime | This displays how long the port has been running (or connected) since the last time it was started. |
| xDSL Port Details | |
| Upstream | These are the statistics for the traffic direction going out from the port to the service provider. |
| Downstream | These are the statistics for the traffic direction coming into the port from the service provider. |
| Line Rate | These are the data transfer rates at which the port is sending and receiving data. |
| Actual Net Data Rate | These are the rates at which the port is sending and receiving the payload data without transport layer protocol headers and traffic. |
| Trellis Coding | This displays whether or not the port is using Trellis coding for traffic it is sending and receiving. Trellis coding helps to reduce the noise in ADSL transmissions. Trellis may reduce throughput but it makes the connection more stable. |
| SNR Margin | This is the upstream and downstream Signal-to-Noise Ratio margin (in dB). A DMT sub-carrier's SNR is the ratio between the received signal power and the received noise power. The signal-to-noise ratio margin is the maximum that the received noise power could increase with the system still being able to meet its transmission targets. |
| Actual Delay | This is the upstream and downstream interleave delay. It is the wait (in milliseconds) that determines the size of a single block of data to be interleaved (assembled) and then transmitted. Interleave delay is used when transmission error correction (Reed- Solomon) is necessary due to a less than ideal telephone line. The bigger the delay, the bigger the data block size, allowing better error correction to be performed. |
| Transmit Power | This is the upstream and downstream far end actual aggregate transmit power (in dBm). Upstream is how much power the port is using to transmit to the service provider. Downstream is how much power the service provider is using to transmit to the port. |
| Receive Power | Upstream is how much power the service provider is receiving from the port. Downstream is how much power the port is receiving from the service provider. |
| Actual INP | Sudden spikes in the line's level of external noise (impulse noise) can cause errors and result in lost packets. This could especially impact the quality of multimedia traffic such as voice or video. Impulse noise protection (INP) provides a buffer to allow for correction of errors caused by error correction to deal with this. The number of DMT (Discrete Multi-Tone) symbols shows the level of impulse noise protection for the upstream and downstream traffic. A higher symbol value provides higher error correction capability, but it causes overhead and higher delay which may increase error rates in received multimedia data. |
| Total Attenuation | This is the upstream and downstream line attenuation, measured in decibels (dB). This attenuation is the difference between the power transmitted at the near-end and the power received at the far-end. Attenuation is affected by the channel characteristics (wire gauge, quality, condition and length of the physical line). |
| Attainable Net Data Rate | These are the highest theoretically possible transfer rates at which the port could send and receive payload data without transport layer protocol headers and traffic. |
| xDSL Counters | |

Table 131 System Monitor > xDSL Statistics (continued)

| LABEL | DESCRIPTION |
|--------------|--|
| Downstream | These are the statistics for the traffic direction coming into the port from the service provider. |
| Upstream | These are the statistics for the traffic direction going out from the port to the service provider. |
| FEC | This is the number of Far End Corrected blocks. |
| CRC | This is the number of Cyclic Redundancy Checks. |
| ES | This is the number of Errored Seconds meaning the number of seconds containing at least one errored block or at least one defect. |
| SES | This is the number of Severely Errored Seconds meaning the number of seconds containing 30% or more errored blocks or at least one defect. This is a subset of ES. |
| UAS | This is the number of UnAvailable Seconds. |
| LOS | This is the number of Loss Of Signal seconds. |
| LOF | This is the number of Loss Of Frame seconds. |
| LOM | This is the number of Loss of Margin seconds. |

LTE Statistics

31.1 The LTE Statistics Screen

Use this screen to view the status of the LTE connection and traffic statistics. Click **System Monitor > LTE Statistics** to open the following screen.

Figure 171 System Monitor > LTE Statistics

LTE Detail Stats displays the Details of LTE information.

Refresh

| Device Status | | | |
|--------------------------|-------------------------|----------------|-----------------|
| Software Version: | V1.00(AAKO.0)b1 | Device IMEI: | 000000000000000 |
| Module Firmware Version: | ALT3100_04_05_06_00_... | SIM Card IMSI: | 466924250111147 |

| LTE Status | | | |
|------------------|----------------------------|--------------------|----------------|
| Device Status: | Connected | SIM Card Status: | PIN disable |
| Signal Strength: | -77 dBm | Signal Quality: | Excellent |
| Connection Time: | 0 days: 0 hours: 1 minutes | Service Provider: | 46692 |
| Frequency Band: | 3, | Transmission Mode: | Open loop MIMO |
| Duplexing Mode: | FDD | BandWidth: | 15MHz |
| RSSI: | -52 dBm,-53 dBm | SINR: | 27 dB |
| RSRP: | -77 dBm | RSRQ: | -4 dB |
| RX THROUGHPUT: | 0 kbps | TX THROUGHPUT: | 2 kbps |
| RX Total: | 26561 bytes | TX Total: | 22555 bytes |
| APN: | internet.mnc092.mcc466... | Global CID: | 04DE480D |
| Physical CID: | 315 | | |

The following table describes the labels in this screen.

Table 132 System Monitor > LTE Statistics

| LABEL | DESCRIPTION |
|-------------------------|---|
| Refresh | Click this button to update this screen immediately. |
| Device Status | |
| Software Version | This displays the current firmware version of the SBG3600-N Series. |
| Device IMEI | This displays the International Mobile Equipment Number (IMEI) which is the serial number of the built-in LTE module. IMEI is a unique 15-digit number used to identify a mobile device. |
| Module Firmware Version | This displays the firmware version of the LTE module on the SBG3600-N Series. |
| SIM Card IMSI | This displays the International Mobile Subscriber Identity (IMSI) stored in the SIM (Subscriber Identity Module) card. The SIM card is installed in a mobile device and used for authenticating a customer to the carrier network. IMSI is a unique 15-digit number used to identify a user on a network. |

Table 132 System Monitor > LTE Statistics (continued)

| LABEL | DESCRIPTION |
|-------------------|--|
| LTE Status | |
| Device Status | <p>This displays the status of the built-in LTE module or the LTE device attached to the SBG3600-N Series.</p> <p>SIM not insert or invalid: There is no SIM card inserted or the SIM card is invalid.</p> <p>Checking SIMCard: The LTE module is checking whether the SIM card is blocked due to a wrong PIN code.</p> <p>Searching Network: The LTE device is searching for an available LTE network.</p> <p>Connected: The LTE device is registered and successfully connected to the LTE network.</p> <p>Connected, Roaming: The LTE device is registered and successfully connected to another service provider's LTE network using roaming.</p> <p>Initialize Fail: The built-in LTE module failed to initialize. There may be a hardware problem.</p> <p>Initializing: The built-in LTE module has completed initialization successfully and will get the module information, such as the Firmware version.</p> |
| SIM Card Status | <p>This displays the status of the inserted SIM card.</p> <p>PIN Disable: PIN code authentication is disabled on the SIM card.</p> <p>PIN required: The SIM card has PIN code authentication enabled, but you didn't enter a PIN code yet.</p> <p>PIN verified: SIM card has PIN code authentication enabled, and you entered the correct PIN code.</p> <p>Wrong PIN code: You entered a wrong pin code. The number of times you can enter the PIN code is decreased.</p> <p>PIN locked: You entered the PIN code incorrectly three times, the SIM card has been blocked by your ISP and you cannot use the account to access the Internet. You will need to contact your ISP to get a PUK (PIN Unlock Key) code.</p> <p>SIM card locked call operator - The PUK (PIN Unlock Key) failed and the SIM card has been blocked and is unusable.</p> <p>No SIM card: There is no SIM card inserted.</p> <p>SIM card Error: Other SIM card problems.</p> |
| Signal Strength | This displays the LTE signal strength in dBm. |
| Signal Quality | This displays the current LTE signal quality (Excellent, Good, Fair, Poor, Very Poor or No Service). See Table 1 on page 23 for more information. |
| Connection Time | This displays how long the LTE connection has been up since it last connected. |
| Service Provider | This displays the service provider name. |
| Frequency Band | This displays the frequency band supported by the LTE device. |
| Transmission Mode | <p>This displays the current transmission mode.</p> <p>Open Loop MIMO means MIMO (Multi-input Multi-output) with open loop power control.</p> |
| Duplexing Mode | <p>This displays the current duplexing mode.</p> <p>FDD: Frequency-Division duplexing mode, in which the transmitter and receiver operate at different frequencies.</p> <p>TDD: Time-division duplexing mode. Signals are transmitted or received at the same frequency channel but in different time slots.</p> |
| Bandwidth | This displays the current LTE bandwidth. |

Table 132 System Monitor > LTE Statistics (continued)

| LABEL | DESCRIPTION |
|---------------|---|
| RSSI | This displays the Received Signal Strength Indication (RSSI) in the main radio path and diversity radio path. |
| SINR | This displays the Signal to Interference plus Noise Ratio (SINR) in dB. This is also a measure of signal quality and used by the UE (User Equipment) to calculate the Channel Quality Indicator (CQI) that it reports to the network. The greater the value, the better the RF conditions. |
| RSRP | This displays the Reference Signal Received Power (RSRP), which is the average power received by the UE and a measure of signal strength. |
| RSRQ | This displays the Reference Signal Received Quality (RSRQ), which is a measure of signal quality. |
| RX_THROUGHPUT | This displays the current downlink throughput in kbps. |
| TX_THROUGHPUT | This displays the current uplink throughput in kbps. |
| RX Total | This displays the total number of packets received since it was last connected. |
| TX Total | This displays the total number of packets sent since it was last connected. |
| APN | This displays the current APN (Access Point Name) with which the SBG3600-N Series is connecting to a 4G LTE network. |
| Global CID | This displays the global identifier of a particular cell. |
| Physical CID | This displays the Physical CID (Cell ID). Both Global CID and Physical CID are used to judge whether the handover procedure is performed. |

AP Monitor

32.1 Overview

Use the AP Monitor screens to check status and information on the APs that are connected to the SBG3600-N Series.

32.1.1 What You Can Do in this Chapter

- Use the **AP List** screen to display which APs are currently connected to the SBG3600-N Series ([Section 32.2 on page 332](#)).
- Use the **Radio List** screen to display statistics about wireless radio transmitters in each of the APs connected to the SBG3600-N Series ([Section 32.3 on page 333](#)).
- Use the **Station List** screen to display statistics pertaining to the connected stations (or “wireless clients”) ([Section 32.4 on page 334](#)).

32.2 AP List Screen

Use this screen to manage all of the APs connected to the SBG3600-N Series. Click **System Monitor > AP Monitor > AP List**.

Figure 172 System Monitor > AP Monitor > AP List

| # | Description | Registr... | CPU U... | IP | MAC | Model | AC/A... | Sta... | Recent O... | Recent Of... | Action |
|--|-------------|------------|----------|----|-----|-------|---------|--------|-------------|--------------|--------|
| <p>Note:</p> <ol style="list-style-type: none"> 1. Un-managed AP is not available if AP Control Registration is not Manual Type. 2. This page is not available when AP Control is disabled. | | | | | | | | | | | |
| <div>Refresh</div> | | | | | | | | | | | |

The following table describes the labels in this screen.

Table 133 System Monitor > AP Monitor > AP List






| LABEL | DESCRIPTION |
|--------------|---|
| # | This field is a sequential value, and it is not associated with a specific profile. |
| Status | This field displays the AP's connection status with icons. For details on the different Status states, see the next table. |
| Description | This field indicates the AP's associated description. The default description is “AP-” + the AP's MAC address. |
| Registration | This field indicates whether the AP is registered with the managed AP list. |
| CPU Usage | This field indicates what percentage of the SBG3600-N Series processing capability is currently being used. |

Table 133 System Monitor > AP Monitor > AP List (continued)

| LABEL | DESCRIPTION |
|----------------------|--|
| IP | This field indicates the AP's IP address. |
| MAC | This field indicates the AP's MAC address. |
| Model | This field indicates the AP's model number. |
| AC/AP Mgmt VLAN | This field indicates the Access Controller (the SBG3600-N Series) management VLAN ID setting for the AP and the runtime management VLAN ID setting on the AP. |
| Station | This field indicates the number of stations (aka wireless clients) associated with the AP. |
| Recent On-line Time | This field indicates the most recent time the AP came on-line. N/A displays if the AP has not come on-line since the SBG3600-N Series last started up. |
| Recent Off-line Time | This field indicates the most recent time the AP went off-line. N/A displays if the AP has either not come on-line or gone off-line since the SBG3600-N Series last started up. |
| Action | Click Action icon to add or delete the selected AP to the managed AP list. |
| Refresh | Click Refresh button to see the latest changes to the AP list. |

The following table describes the icons in this screen.

Table 134 System Monitor > AP Monitor > AP List > AP List Icons

| LABEL | DESCRIPTION |
|---|---|
|  | This AP is not on the management list. |
|  | This AP is on the management list and online. |
|  | This AP is in the process of having its firmware updated. |
|  | This AP is on the management list but offline. |
|  | This indicates one of the following cases: <ul style="list-style-type: none"> This AP has a runtime management VLAN ID setting that conflicts with the VLAN ID setting on the Access Controller (the SBG3600-N Series). A setting the SBG3600-N Series assigns to this AP does not match the AP's capability. |

32.3 Radio List Screen

Use this screen to view statistics about the wireless radio transmitters in each of the APs connected to the SBG3600-N Series. To access this screen click **System Monitor > AP Monitor > Radio List**.

Figure 173 System Monitor > AP Monitor > Radio List



The following table describes the labels in this screen.

Table 135 System Monitor > AP Monitor > Radio List

| LABEL | DESCRIPTION |
|--------------------|--|
| # | This field is a sequential value, and it is not associated with a specific profile. |
| Loading | This indicates the AP's load balance status (UnderLoad or OverLoad) when load balancing is enabled on the AP. Otherwise, it shows - when load balancing is disabled or the radio is in monitor mode. See below table for icons that appears in this field. |
| AP Description | This field displays the description of the AP to which the radio belongs. |
| Model | This field displays the model of the AP to which the radio belongs. |
| MAC Address | This field displays the MAC address of the radio. |
| Radio | This field displays the radio number on the AP to which it belongs. |
| Profile | This field displays the profile name to which the radio belongs. |
| Frequency Band | This field displays the wireless frequency currently being used by the radio. |
| Channel ID | This field displays the radio's channel ID. |
| Station | This field displays the number of stations (aka wireless clients) associated with the radio. |
| Rx PKT | This field displays the total number of packets received by the radio. |
| Tx PKT | This field displays the total number of packets transmitted by the radio. |
| Rx FCS Error Count | This field displays the number of received packets errors accrued by the radio. |
| Tx Retry Count | This field displays the number of times the radio has attempted to re-transmit packets. |
| Action | Click Action icon to add or delete the selected radio to the radio list. |
| Refresh | Click Refresh button to see the latest changes to the SSID list. |

The following table describes the icons in this screen.

Table 136 System Monitor > AP Monitor > Radio List Icons

| LABEL | DESCRIPTION |
|---|---|
|  | When an AP is being load balanced, this icon means it is operating over the maximum allocated bandwidth. |
|  | When an AP is being load balanced, this icon means it is operating under the maximum allocated bandwidth. |

32.4 Station List Screen

Use this screen to view statistics pertaining to the associated stations (or "wireless clients"). Click **System Monitor > AP Monitor > Station List** to access this screen.

Figure 174 System Monitor > AP Monitor > Station List



The following table describes the labels in this screen.

Table 137 System Monitor > AP Monitor > Station List

| LABEL | DESCRIPTION |
|------------------|--|
| # | This field is a sequential value, and it is not associated with a specific profile. |
| MAC Address | This field indicates the station's MAC address. |
| Associated AP | This field indicates this profile's security mode (if any). |
| SSID Name | This field indicates the SSID name with which at least one station is associated. Click + or - to display or hide details about wireless stations that are connected to the SSID. |
| Security Mode | This field indicates which secure encryption methods is being used by the station to connect to the network. |
| Signal Strength | This field indicates the signal strength of the station. The signal strength mainly depends on the antenna output power and the distance between the station and the AP. |
| IP Address | This field indicates the station's IP address. |
| Tx Rate | This field indicates the current data transmission rate of the station. |
| Rx Rate | This field indicates the current data receiving rate of the station. |
| Association Time | This field indicates the time a wireless station first associated with the AP. |
| Refresh | Click Refresh button to see the latest changes to the Station list. |

33.1 MyZyXEL Overview

MyZyXEL.com is ZyXEL's online services center where you can register your SBG3600-N Series and manage subscription services available for the SBG3600-N Series. To use a subscription service, you have to register the SBG3600-N Series and activate the corresponding service at myZyXEL.com (through the SBG3600-N Series).

Note: You need to create a myZyXEL.com account before you can register your device and activate the services at myZyXEL.com.

Go to <http://portal.myZyXEL.com> with the SBG3600-N Series serial number and LAN MAC address to register it. Refer to the web site's on-line help for details.

Note: To activate a service on a SBG3600-N Series, you need to access myZyXEL.com via the SBG3600-N Series.

Subscription Services Available on the SBG3600-N Series

At the time of writing, the SBG3600-N Series can use the upgrade service to extend the maximum number of the supported managed APs and the LAN/WLAN users that can connect to the SBG3600-N Series at one time.

Maximum Number of Managed APs

The SBG3600-N Series is initially configured to support up to two local AP and ten remote managed APs. You can increase this by subscribing to additional licenses. As of this writing, each license upgrade allows an additional ten remote managed APs while the maximum number of remote managed APs a single SBG3600-N Series can support is ten.

33.2 The License Status Screen

Use this screen to see the status of the service license that is available to the SBG3600-N Series. Click **Maintenance > MyZyXEL** to open the **License Status** screen.

Figure 175 Maintenance > MyZyXEL > License Status

| License Status | | | | | |
|----------------|--------------------|---------|-------------------|-----------------|------|
| # | Service | Status | Registration Type | Expiration Date | C... |
| 1 | Managed AP Service | Default | | | 2 |

License Refresh

Note:
Update device license information from myZyXEL.com server. If you want to activate license, please go to portal.myzyxel.com

The following table describes the fields in this screen.

Table 138 Maintenance > MyZyXEL > License Status

| LABEL | DESCRIPTION |
|-------------------------|---|
| License Status | |
| # | This is the entry's position in the list. |
| Service | This lists the services that available on the SBG3600-N Series. |
| Status | This field displays whether this is a default service (Default) or an activated license upgrade (Licensed). |
| Registration Type | This field displays standard when you registered a service with your iCard's PIN number. This field is blank when a service is not activated. |
| Expiration Date | This field displays the date your service expires. |
| Count | This field displays how many managed AP service you can use with your current license. This field does not apply to the other services. Default is 2, maximum is 8. |
| Service License Refresh | Click this button to renew service license information (such as the registration status and expiration day). |

User Account

34.1 Overview

Use the **User Account** screen to manage user accounts, which includes configuring the username, password, retry times, file sharing, captive portal, and customizing the login message.

34.2 The User Account Screen

Click **Maintenance > User Account** to open the following screen.

Figure 176 Maintenance > User Account

The screenshot shows the 'User Account' screen. At the top left is a button labeled 'Add new user'. Below it is a table with the following data:

| # | User Name | Retry Times | Idle Timeout | Lock Period | Group | Modify |
|---|-----------|-------------|--------------|-------------|---------------|--------|
| 1 | admin | 0 | 10 min(s) | 15 min(s) | Administrator | |
| 2 | zyuser | 0 | 10 min(s) | 15 min(s) | User | |

Below the table, there are two sections:

- Web Captive Portal :** with radio buttons for ☐ Enable and ☒ Disable.
- Customize Login Message :** with a text input field.

A **Note:** section follows, containing three numbered points:

1. Click Edit for more user account configurations.
2. Enable Web Captive Portal will redirect to login page when access Internet from LAN to WAN Web sites at first time of a day.
3. You can customize the message displayed in login page (maximum 255 characters).

At the bottom right are two buttons: **Apply** and **Cancel**.

The following table describes the labels in this screen.

Table 139 Maintenance > User Account

| LABEL | DESCRIPTION |
|--------------|---|
| Add new user | Click this to configure a new user account. |
| # | This is the index number of the entry. |
| User Name | This field displays the name of the user. |
| Retry Times | This field indicates how many times a user can re-enter his/her account information before the SBG3600-N Series locks the user out. |
| Idle Timeout | This field indicates the number of minutes that the system can idle before being logged out. |

Table 139 Maintenance > User Account (continued)

| LABEL | DESCRIPTION |
|-------------------------|--|
| Lock Period | This field indicates the number of minutes for the lockout period. A user cannot log into the SBG3600-N Series during the lockout period, even if he/she enters correct account information. |
| Group | This field displays the login account type of the user. Different login account types have different privilege levels. The web configurator screens and privileges vary depending on which account type you use to log in. |
| Modify | Click the Edit icon to edit this user account. Click the Delete icon to remove an account. |
| Web Captive Portal | Enable this feature to redirect each LAN host to the SBG3600-N Series's login page for user authentication during its first connection to the Internet. The authentication time will be valid for 1 day after the user logs in successfully. |
| Customize Login Message | You can customize a message to display in the Login screen. |

34.2.1 Add/Edit a User Account

Use this screen to add or edit a users account. Click **Add new user** in the **User Account** screen or the **Edit** icon next to the user account you want to edit. The screen shown next appears.

Figure 177 User Account: Add/Edit

The screenshot shows the 'User Account Edit' window. It contains the following fields and options:

- User Name : admin
- New Password : (6~15 words)
- Verify New Password :
- Retry Times : 3 (0~5, 0 : Not limit)
- Idle Timeout : 10 Minute(s)(1~60)
- Lock Period : 15 Minute(s)(15~90)
- Group : Administrator
- File Sharing Service (SMB) : ☒ Enable ☐ Disable
- File Share Name : admin
- File Share Directory : /
- File Sharing Writable : ☒ Yes ☐ No
- Note:
- Buttons: Apply, Cancel

The following table describes the labels in this screen.

Table 140 User Account: Add/Edit

| LABEL | DESCRIPTION |
|------------------------------|--|
| User Name | This field is read-only if you are editing the user account. Enter a descriptive name for the user account. The user name can be up to 15 alphanumeric characters (0-9, A-Z, a-z, -, _ with no spaces). With advanced account security enabled, the user names must be a minimum length of six characters and include both letters and numbers. |
| New Password | Specify the password associated to this account. The password can be 6 to 15 alphanumeric characters (0-9, A-Z, a-z, -, _ with no spaces), not containing the user name. It must contain both letters and numbers. The characters are displayed as asterisks (*) in this field. |
| Verify New Password | Enter the exact same password that you just entered in the above field. |
| Retry Times | The SBG3600-N Series can lock a user out if you use a wrong user name or password to log in the SBG3600-N Series. Enter up to how many times a user can re-enter his/her account information before the SBG3600-N Series locks the user out. |
| Idle Timeout | Enter the number of minutes that the system can idle before being logged out. |
| Lock Period | Enter the number of minutes for the lockout period. A user cannot log into the SBG3600-N Series during the lockout period, even if he/she enters correct account information. |
| Group | This field is read-only if you are editing the user account. Select a type of login account. The web configurator screens and privileges vary depending on which account type you use to log in. Administrator accounts can configure the SBG3600-N Series while User accounts can only view some status information. Users logged in with either type of account can access the Internet. |
| File Sharing Service (SAMBA) | Select Enable to allow the file sharing feature with this user account. This allows the user to access shared files in USB storage. Samba allows file and print sharing between computers running Windows and computers running Unix. |
| File Share Name | Enter a name for the shared resource (profile). For example, the user can connect to 192.168.1.1/<File Share Name>. |
| File Share Directory | Enter the shared root directory. |
| File Sharing Writable | Select if you want the files in the shared directory to be writable or not. |
| Apply | Click Apply to save your changes. |
| Cancel | Click Cancel to exit this screen without saving. |

34.3 The Radius Screen

Use the **Radius** screen to manage the list of RADIUS servers the SBG3600-N Series can use in authenticating users. In the Web Configurator, click **Maintenance > User Account > Radius**.

Note: Your settings here will also apply to the **VPN > IPSec VPN > Radius** screen.

Figure 178 Maintenance > User Account > Radius

Radius Setup

Server Address :

Authentication Port :

Backup Server Address :

Backup Authentication Port :

Key :

Timeout :

Retries :

The following table describes the labels in this screen.

Table 141 Maintenance > User Account > Radius

| LABEL | DESCRIPTION |
|----------------------------|---|
| Radius Setup | |
| Server Address | Enter the address of the RADIUS server. |
| Authentication Port | Specify the port number on the RADIUS server to which the SBG3600-N Series sends authentication requests. Enter a number between 1 and 65535. |
| Backup Server Address | If the RADIUS server has a backup server, enter its address here. |
| Backup Authentication Port | Specify the port number on the RADIUS server to which the SBG3600-N Series sends authentication requests. Enter a number between 1 and 65535. |
| Key | Enter a password (up to 15 alphanumeric characters) as the key to be shared between the external authentication server and the SBG3600-N Series. The key is not sent over the network. This key must be the same on the external authentication server and the SBG3600-N Series. |
| Timeout | Specify the timeout period (between 1 and 300 seconds) before the SBG3600-N Series disconnects from the RADIUS server. In this case, user authentication fails. Search timeout occurs when either the user information is not in the RADIUS server or the RADIUS server is down. |
| Retries | Specify the number of connection retries before the SBG3600-N Series disconnects from the RADIUS server. |
| Apply | Click Apply to save your changes back to the SBG3600-N Series. |
| Cancel | Click Cancel to restore your previous settings. |

Remote Management

35.1 Overview

Remote Management allows you to manage your SBG3600-N Series from a remote location through the following interfaces:

- LAN/WLAN
- WAN
- Trust Domain

Note: The SBG3600-N Series is managed using the Web Configurator.

35.2 The Remote MGMT Screen

Use this screen to configure through which interface(s) users can use which service(s) to manage the SBG3600-N Series.

Click **Maintenance > Remote MGMT** to open the following screen.

Figure 179 Maintenance > Remote MGMT

| Services | LAN/WLAN | WAN/WAN IP | Trust Domain | Port |
|----------|--|--|--|------|
| HTTPS | <input checked="" type="checkbox"/> Enable | <input checked="" type="checkbox"/> Enable | <input type="checkbox"/> Enable | 443 |
| HTTP | <input checked="" type="checkbox"/> Enable | <input type="checkbox"/> Enable | <input checked="" type="checkbox"/> Enable | 80 |
| TELNET | <input checked="" type="checkbox"/> Enable | <input type="checkbox"/> Enable | <input checked="" type="checkbox"/> Enable | 23 |
| FTP | <input type="checkbox"/> Enable | <input checked="" type="checkbox"/> Enable | <input type="checkbox"/> Enable | 21 |
| SSH | <input checked="" type="checkbox"/> Enable | <input type="checkbox"/> Enable | <input type="checkbox"/> Enable | 22 |

Trust Domain

Status : ☒ Enable

IP Address :

Certificate

HTTPS Certificate:

The following table describes the fields in this screen.

Table 142 Maintenance > Remote MGMT

| LABEL | DESCRIPTION |
|-------------------|--|
| Services | This is the service you may use to access the SBG3600-N Series. |
| LAN/WLAN | Select the Enable check box for the corresponding services that you want to allow access to the SBG3600-N Series from the LAN/WLAN. |
| WAN/WAN IP | Select the Enable check box for the corresponding services that you want to allow access to the SBG3600-N Series from the WAN. You also need to specify the IP address of the computer that can access the SBG3600-N Series through the WAN interface. This is not configurable if you enable Trust Domain for the corresponding service, and vice versa. |
| Trust Domain | Select the Enable check box for the corresponding services that you want to allow access to the SBG3600-N Series from the Trust Domain. This is not configurable if you enable WAN/WAN IP for the corresponding service, and vice versa. |
| Port | You may change the server port number for a service if needed, however you must use the same port number in order to use that service for remote management. |
| Trust Domain | |
| Status | This field displays whether the Trust Domain is active or not. |
| IP Address | Enter the Trust Domain IP address. |
| Add | Click Add to add an IP address with which the computer is allowed to access and manage the SBG3600-N Series. |
| Delete | Select one or multiple entries and click Delete to remove the selected IP address(es) . |
| Edit | Select an entry and click Edit to make changes to the selected IP address with which the computer is allowed to access and manage the the SBG3600-N Series. |
| Certificate | |
| HTTPS Certificate | Select a certificate the HTTPS server (the SBG3600-N Series) uses to authenticate itself to the HTTPS client. You must have certificates already configured in the Certificates screen. |
| Apply | Click Apply to save your changes back to the SBG3600-N Series. |
| Cancel | Click Cancel to restore your previously saved settings. |

TR-069 Client

36.1 Overview

This chapter explains how to configure the SBG3600-N Series's TR-069 auto-configuration settings.

36.2 The TR-069 Client Screen

TR-069 defines how Customer Premise Equipment (CPE), for example your SBG3600-N Series, can be managed over the WAN by an Auto Configuration Server (ACS). TR-069 is based on sending Remote Procedure Calls (RPCs) between an ACS and a client device. RPCs are sent in Extensible Markup Language (XML) format over HTTP or HTTPS.

An administrator can use an ACS to remotely set up the SBG3600-N Series, modify settings, perform firmware upgrades as well as monitor and diagnose the SBG3600-N Series. You have to enable the device to be managed by the ACS and specify the ACS IP address or domain name and username and password.

Click **Maintenance > TR-069 Client** to open the following screen. Use this screen to configure your SBG3600-N Series to be managed by an ACS.

Figure 180 Maintenance > TR-069 Client

The screenshot shows the 'Maintenance > TR-069 Client' configuration window. It includes the following elements:

- Inform**: Radio buttons for ☐ Enable and ☒ Disable.
- Inform Interval**: A text input field containing the value '300'.
- ACS URL**: A text input field.
- ACS User Name**: A text input field containing 'admin'.
- ACS Password**: A password input field with masked characters (dots).
- WAN Interface used by TR-069 client**: A dropdown menu showing 'Any_WAN'.
- Display SOAP messages on serial console**: Radio buttons for ☐ Enable and ☒ Disable.
- Connection Request Authentication**: A checked checkbox.
- Connection Request User Name**: A text input field containing 'admin'.
- Connection Request Password**: A password input field with masked characters (dots).
- Connection Request URL**: A text input field.
- Local certificate used by TR-069 client**: A dropdown menu.
- Buttons**: 'Apply' and 'Cancel' buttons at the bottom right.

The following table describes the fields in this screen.


Table 143 Maintenance > TR-069 Client

| LABEL | DESCRIPTION |
|---|---|
| Inform | Select Enable for the SBG3600-N Series to send periodic inform via TR-069 on the WAN. Otherwise, select Disable . |
| Inform Interval | Enter the time interval (in seconds) at which the SBG3600-N Series sends information to the auto-configuration server. |
| ACS URL | Enter the URL or IP address of the auto-configuration server. |
| ACS User Name | Enter the TR-069 user name for authentication with the auto-configuration server. |
| ACS Password | Enter the TR-069 password for authentication with the auto-configuration server. |
| WAN Interface used by TR-069 client | Select a WAN interface through which the TR-069 traffic passes. If you select Any_WAN , you should also select the pre-configured WAN connection(s). |
| Display SOAP messages on serial console | Select Enable to show the SOAP messages on the console. |
| Connection Request Authentication | Select this option to enable authentication when there is a connection request from the ACS. |
| Connection Request User Name | Enter the connection request user name. When the ACS makes a connection request to the SBG3600-N Series, this user name is used to authenticate the ACS. |
| Connection Request Password | Enter the connection request password. When the ACS makes a connection request to the SBG3600-N Series, this password is used to authenticate the ACS. |
| Connection Request URL | This shows the connection request URL. The ACS can use this URL to make a connection request to the SBG3600-N Series. |
| Local certificate used by TR-069 client | You can choose a local certificate used by TR-069 client. The local certificate should be imported in the Security > Certificates > Local Certificates screen. |
| Apply | Click Apply to save your changes. |
| Cancel | Click Cancel to exit this screen without saving. |

37.1 The SNMP Agent Screen

Simple Network Management Protocol is a protocol used for exchanging management information between network devices. Your SBG3600-N Series supports SNMP agent functionality, which allows a manager station to manage and monitor the SBG3600-N Series through the network. The SBG3600-N Series supports SNMP version one (SNMPv1) and version two (SNMPv2c). The next figure illustrates an SNMP management operation.

Figure 181 SNMP Management Model

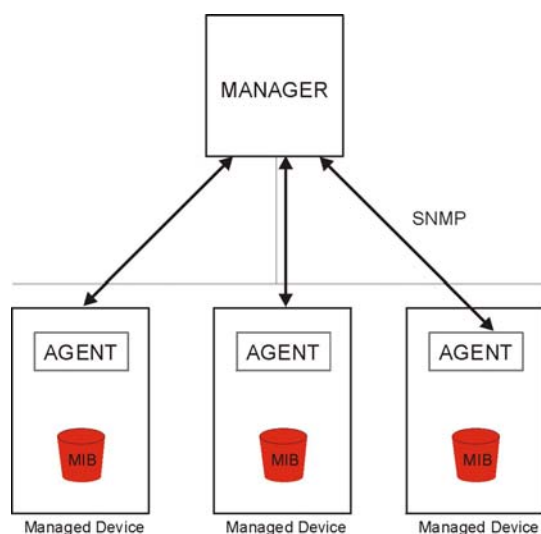

An SNMP managed network consists of two main types of component: agents and a manager.

An agent is a management software module that resides in a managed device (the SBG3600-N Series). An agent translates the local management information from the managed device into a form compatible with SNMP. The manager is the console through which network administrators perform network management functions. It executes applications that control and monitor managed devices.

The managed devices contain object variables/managed objects that define each piece of information to be collected about a device. Examples of variables include such as number of packets received, node port status etc. A Management Information Base (MIB) is a collection of managed objects. SNMP allows a manager and agents to communicate for the purpose of accessing these objects.

SNMP itself is a simple request/response protocol based on the manager/agent model. The manager issues a request and the agent returns responses using the following protocol operations:

- Get - Allows the manager to retrieve an object variable from the agent.
- GetNext - Allows the manager to retrieve the next object variable from a table or list within an agent. In SNMPv1, when a manager wants to retrieve all elements of a table from an agent, it initiates a Get operation, followed by a series of GetNext operations.
- Set - Allows the manager to set values for object variables within an agent.
- Trap - Used by the agent to inform the manager of some events.

Click **Maintenance > SNMP** to open the following screen. Use this screen to configure the SBG3600-N Series SNMP settings.

Figure 182 Maintenance > SNMP

SNMP Agent : ☐ Enable ☒ Disable

Get Community :

Set Community :

System Name :

System Location :

System Contact :

Trap Destination :

The following table describes the fields in this screen.

Table 144 Maintenance > SNMP

| LABEL | DESCRIPTION |
|------------------|--|
| SNMP Agent | Select Enable to allow a manager station to manage and monitor the SBG3600-N Series through the network via SNMP. Otherwise, select Disable . |
| Get Community | Enter the password for the incoming Get and GetNext requests from the management station. The default is public and allows all requests. |
| Set Community | Enter the Set community , which is the password for incoming Set requests from the management station. The default is public and allows all requests. |
| System Name | Enter the system name of the SBG3600-N Series. |
| System Location | Specify the geographic location of the SBG3600-N Series. |
| System Contact | Enter the name of the person in charge of the SBG3600-N Series. |
| Trap Destination | Type the IP address of the station to send your SNMP traps to. |
| Apply | Click Apply to save your changes back to the SBG3600-N Series. |
| Cancel | Click Cancel to restore your previously saved settings. |

38.1 Overview

This chapter shows you how to configure system related settings, such as system time, password, name, the domain name and the inactivity timeout interval.

38.2 The Time Screen

To change your SBG3600-N Series's time and date, click **Maintenance > Time**. The screen appears as shown. Use this screen to configure the SBG3600-N Series's time based on your local time zone.

Figure 183 Maintenance > Time

Current Date/Time

Current Time : 06:12:22

Current Date : 04 Jan 2011

NTP Time Server

First NTP time server : time.nist.gov

Second NTP time server : ntp1.tummy.com

Third NTP time server : None

Fourth NTP time server : None

Fifth NTP time server : None

Time Zone

Time zone offset: (GMT-05:00) Eastern Time

Daylight Saving

State : ☒ Enable ☐ Disable

▪ **Start rule :**

Day : ☐ Day in

☒ Second Sunday in

Month : March

Time : 2 : 0

▪ **End rule :**

Day : ☐ Day in

☒ First Sunday in

Month : November

Time : 2 : 0

Apply Cancel

The following table describes the fields in this screen.

Table 145 Maintenance > Time

| LABEL | DESCRIPTION |
|-------------------------------|--|
| Current Date/Time | |
| Current Time | This field displays the time of your SBG3600-N Series. Each time you reload this page, the SBG3600-N Series synchronizes the time with the time server. |
| Current Date | This field displays the date of your SBG3600-N Series. Each time you reload this page, the SBG3600-N Series synchronizes the date with the time server. |
| NTP Time Server | |
| First ~ Fifth NTP time server | Select an NTP time server from the drop-down list box. Otherwise, select Other and enter the IP address or URL (up to 29 extended ASCII characters in length) of your time server. Select None if you don't want to configure the time server. Check with your ISP/network administrator if you are unsure of this information. |
| Time Zone | |

Table 145 Maintenance > Time (continued)

| LABEL | DESCRIPTION |
|------------------|--|
| Time zone offset | Choose the time zone of your location. This will set the time difference between your time zone and Greenwich Mean Time (GMT). |
| Daylight Saving | Daylight Saving Time is a period from late spring to early fall when many countries set their clocks ahead of normal local time by one hour to give more daytime light in the evening. |
| State | Select Enable if you use Daylight Saving Time. |
| Start rule: | <p>Configure the day and time when Daylight Saving Time starts if you enabled Daylight Saving. You can select a specific date in a particular month or a specific day of a specific week in a particular month. The Time field uses the 24 hour format. Here are a couple of examples:</p> <p>Daylight Saving Time starts in most parts of the United States on the second Sunday of March. Each time zone in the United States starts using Daylight Saving Time at 2 A.M. local time. So in the United States, set the day to Second, Sunday, the month to March and the time to 2 in the Hour field.</p> <p>Daylight Saving Time starts in the European Union on the last Sunday of March. All of the time zones in the European Union start using Daylight Saving Time at the same moment (1 A.M. GMT or UTC). So in the European Union you would set the day to Last, Sunday and the month to March. The time you select in the o'clock field depends on your time zone. In Germany for instance, you would select 2 in the Hour field because Germany's time zone is one hour ahead of GMT or UTC (GMT+1).</p> |
| End rule | <p>Configure the day and time when Daylight Saving Time ends if you enabled Daylight Saving. You can select a specific date in a particular month or a specific day of a specific week in a particular month. The Time field uses the 24 hour format. Here are a couple of examples:</p> <p>Daylight Saving Time ends in the United States on the first Sunday of November. Each time zone in the United States stops using Daylight Saving Time at 2 A.M. local time. So in the United States you would set the day to First, Sunday, the month to November and the time to 2 in the Hour field.</p> <p>Daylight Saving Time ends in the European Union on the last Sunday of October. All of the time zones in the European Union stop using Daylight Saving Time at the same moment (1 A.M. GMT or UTC). So in the European Union you would set the day to Last, Sunday, and the month to October. The time you select in the o'clock field depends on your time zone. In Germany for instance, you would select 2 in the Hour field because Germany's time zone is one hour ahead of GMT or UTC (GMT+1).</p> |
| Apply | Click Apply to save your changes. |
| Cancel | Click Cancel to exit this screen without saving. |

E-mail Notification

39.1 Overview


A mail server is an application or a computer that runs such an application to receive, forward and deliver e-mail messages.

To have the SBG3600-N Series send reports, logs or notifications via e-mail, you must specify an e-mail server and the e-mail addresses of the sender and receiver.

39.2 The Email Notification Screen

Click **Maintenance > Email Notification** to open the **Email Notification** screen. Use this screen to view, remove and add mail server information on the SBG3600-N Series.

Figure 184 Maintenance > Email Notification

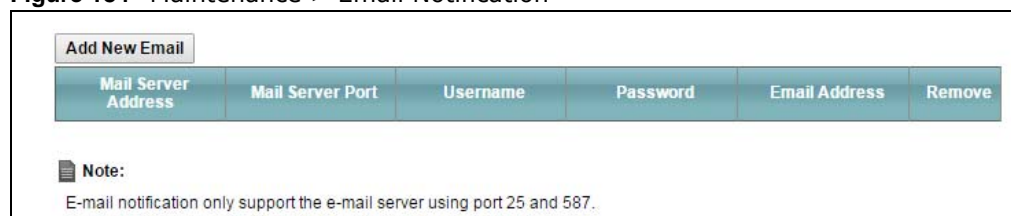

| Mail Server Address | Mail Server Port | Username | Password | Email Address | Remove |
|---|------------------|----------|----------|---------------|--------|
| <p>Note: E-mail notification only support the e-mail server using port 25 and 587.</p> | | | | | |

The following table describes the labels in this screen.

Table 146 Maintenance > Email Notification

| LABEL | DESCRIPTION |
|---------------------|---|
| Add New Email | Click this button to create a new entry. |
| Mail Server Address | This field displays the server name or the IP address of the mail server. |
| Mail Server Port | This field displays the mail server port number. |
| Username | This field displays the user name of the sender's mail account. |
| Password | This field displays the password of the sender's mail account. |
| Email Address | This field displays the e-mail address that you want to be in the from/sender line of the e-mail that the SBG3600-N Series sends. |
| Remove | Click this button to delete the selected entry(ies). |

39.2.1 Email Notification Edit

Click the **Add** button in the **Email Notification** screen. Use this screen to configure the required information for sending e-mail via a mail server.

Figure 185 Email Notification > Add

Email Notification Configuration

Mail Server Address: (SMTP Server NAME or IP)

Mail Server Port: ▼

Authentication Username:

Authentication Password:

Account Email Address:

Apply Cancel

The following table describes the labels in this screen.

Table 147 Email Notification > Add

| LABEL | DESCRIPTION |
|-------------------------|---|
| Mail Server Address | Enter the server name or the IP address of the mail server for the e-mail address specified in the Account Email Address field. If this field is left blank, reports, logs or notifications will not be sent via e-mail. |
| Mail Server Port | Choose a mail server port 25 or 587 from the drop-down list. Choose Port 25 if you're using mail server from your ISP. Choose port 587 if you are using your own mailserver that is out of network with your ISP. |
| Authentication Username | Enter the user name (up to 32 characters). This is usually the user name of a mail account you specified in the Account Email Address field. |
| Authentication Password | Enter the password associated with the user name above. |
| Account Email Address | Enter the e-mail address that you want to be in the from/sender line of the e-mail notification that the SBG3600-N Series sends. If you activate SSL/TLS authentication, the e-mail address must be able to be authenticated by the mail server as well. |
| Apply | Click this button to save your changes and return to the previous screen. |
| Cancel | Click this button to begin configuring this screen afresh. |

Logs Setting

40.1 Overview

You can configure where the SBG3600-N Series sends logs and which logs and/or immediate alerts the SBG3600-N Series records in the **Logs Setting** screen.

40.2 The Log Setting Screen

To change your SBG3600-N Series's log settings, click **Maintenance > Logs Setting**. The screen appears as shown.

Figure 186 Maintenance > Logs Setting

Syslog Setting

Syslog Logging : ☒ Enable ☐ Disable (settings are invalid when disabled)

Mode: (Server NAME or IP Address)

Syslog Server : (Server NAME or IP Address)

UDP Port : (Server Port)

E-mail Log Settings

Mail Server:

System Log Mail Subject:

Security Log Mail Subject:

Send Log to: (E-Mail Address)

Send Alarm to: (E-Mail Address)

Alarm Interval: second

Allowed Capacity Before Email: %

Notification:

Clear log after sending mail: ☐ Enable ☒ Disable (settings are invalid when disabled)

Active Log and Alert

| | | |
|--|--|--|
| <p>System Log</p> <p><input checked="" type="checkbox"/> System</p> <p><input checked="" type="checkbox"/> DHCP Client</p> <p><input checked="" type="checkbox"/> PPPoE</p> <p><input type="checkbox"/> Wireless</p> <p><input checked="" type="checkbox"/> DHCP Server</p> <p><input type="checkbox"/> UPnP</p> <p><input type="checkbox"/> NAT</p> <p><input type="checkbox"/> Static Route</p> <p><input type="checkbox"/> DDNS</p> <p><input type="checkbox"/> IGMP</p> <p><input type="checkbox"/> QoS</p> <p><input type="checkbox"/> TR-069</p> <p><input type="checkbox"/> NTP</p> <p><input type="checkbox"/> MultiWAN</p> <p><input type="checkbox"/> CAPWAP</p> <p><input type="checkbox"/> WLAN Station Info</p> <p><input type="checkbox"/> Budget Control</p> <p><input type="checkbox"/> LTE</p> | <p>Security Log</p> <p><input type="checkbox"/> Firewall</p> <p><input type="checkbox"/> MAC Filter</p> <p><input type="checkbox"/> Forward Web Sites</p> <p><input type="checkbox"/> Blocked Web Sites</p> <p><input type="checkbox"/> Attack</p> <p><input type="checkbox"/> Certificate</p> <p><input type="checkbox"/> IPSec</p> <p><input type="checkbox"/> PPTP</p> <p><input type="checkbox"/> L2TP</p> <p><input checked="" type="checkbox"/> Account</p> | <p>Send immediate alert</p> <p><input type="checkbox"/> Attacks</p> <p><input type="checkbox"/> Blocked Web Sites</p> |
|--|--|--|

The following table describes the fields in this screen.

Table 148 Maintenance > Logs Setting

| LABEL | DESCRIPTION |
|-------------------------------|---|
| Syslog Setting | |
| Syslog Logging | The SBG3600-N Series sends a log to an external syslog server. Select Enable to enable syslog logging. |
| Mode | Select the syslog destination from the drop-down list box. If you select Remote , the log(s) will be sent to a remote syslog server. If you select Local File , the log(s) will be saved in a local file. If you want to send the log(s) to a remote syslog server and save it in a local file, select Local File and Remote . |
| Syslog Server | Enter the server name or IP address of the syslog server that will log the selected categories of logs. |
| UDP Port | Enter the port number used by the syslog server. |
| E-mail Log Settings | |
| Mail Server | Enter the server name or the IP address of the mail server for the e-mail addresses specified below. If this field is left blank, logs and alert messages will not be sent via E-mail. |
| System Log Mail Subject | Type a title that you want to be in the subject line of the system log e-mail message that the SBG3600-N Series sends. |
| Security Log Mail Subject | Type a title that you want to be in the subject line of the security log e-mail message that the SBG3600-N Series sends. |
| Send Log to | The SBG3600-N Series sends logs to the e-mail address specified in this field. If this field is left blank, the SBG3600-N Series does not send logs via E-mail. |
| Send Alarm to | Alerts are real-time notifications that are sent as soon as an event, such as a DoS attack, system error, or forbidden web access attempt occurs. Enter the E-mail address where the alert messages will be sent. Alerts include system errors, attacks and attempted access to blocked web sites. If this field is left blank, alert messages will not be sent via E-mail. |
| Alarm Interval | Specify how often the alarm should be updated. |
| Allowed Capacity Before Email | Set what percent of the SBG3600-N Series's log storage space can be filled before the SBG3600-N Series sends a log e-mail. |
| Clear log after sending mail | Select this to delete all the logs after the SBG3600-N Series sends an E-mail of the logs. |
| Active Log and Alert | |
| System Log | Select the categories of system logs that you want to record. |
| Security Log | Select the categories of security logs that you want to record. |
| Send immediate alert | Select log categories for which you want the SBG3600-N Series to send E-mail alerts immediately. |
| Apply | Click Apply to save your changes. |
| Cancel | Click Cancel to restore your previously saved settings. |

40.2.1 Example E-mail Log

An "End of Log" message displays for each mail in which a complete log has been sent. The following is an example of a log sent by e-mail.

- You may edit the subject title.

- The date format here is Day-Month-Year.
- The date format here is Month-Day-Year. The time format is Hour-Minute-Second.
- "End of Log" message shows that a complete log has been sent.

Figure 187 E-mail Log Example

```

Subject:
    Firewall Alert From
Date:
    Fri, 07 Apr 2000 10:05:42
From:
    user@zyxel.com
To:
    user@zyxel.com
1|Apr  7 00 |From:192.168.1.1      To:192.168.1.255  |default policy |forward
  |09:54:03 |UDP      src port:00520 dest port:00520  |<1,00>         |
2|Apr  7 00 |From:192.168.1.131    To:192.168.1.255  |default policy |forward
  | 09:54:17 |UDP      src port:00520 dest port:00520  |<1,00>         |
3|Apr  7 00 |From:192.168.1.6      To:10.10.10.10 |match           |forward
  | 09:54:19 |UDP      src port:03516 dest port:00053  |<1,01>         |
.....{snip}.....
.....{snip}.....
126|Apr  7 00 |From:192.168.1.1      To:192.168.1.255  |match           |forward
   | 10:05:00 |UDP      src port:00520 dest port:00520  |<1,02>         |
127|Apr  7 00 |From:192.168.1.131    To:192.168.1.255  |match           |forward
   | 10:05:17 |UDP      src port:00520 dest port:00520  |<1,02>         |
128|Apr  7 00 |From:192.168.1.1      To:192.168.1.255  |match           |forward
   | 10:05:30 |UDP      src port:00520 dest port:00520  |<1,02>         |
End of Firewall Log

```


Firmware Upgrade

41.1 Overview

This chapter explains how to upload new firmware to your SBG3600-N Series. You can download new firmware releases from your nearest ZyXEL FTP site (or www.zyxel.com) to use to upgrade your device's performance.

Only use firmware for your device's specific model. Refer to the label on the bottom of your SBG3600-N Series.

41.2 The Firmware Screen

Click **Maintenance > Firmware Upgrade** to open the following screen. The upload process uses HTTP (Hypertext Transfer Protocol) and may take up to two minutes. After a successful upload, the system will reboot.

Do NOT turn off the SBG3600-N Series while firmware upload is in progress!

Figure 188 Maintenance > Firmware Upgrade

The screenshot displays the 'Maintenance > Firmware Upgrade' web interface. It contains two main sections for upgrading components:

- Upgrade Firmware**
Current Firmware Version: V1.00(AAKO.0)b2
File Path:
- Upgrade WWAN Package**
Current WWAN Package Version: 1.09
File Path:


The following table describes the labels in this screen.

Table 149 Maintenance > Firmware Upgrade

| LABEL | DESCRIPTION |
|------------------------------|---|
| Current Firmware Version | This is the present Firmware version. |
| File Path | Type in the location of the file you want to upload in this field or click Browse ... to find it. |
| Browse... | Click this to find the .bin file you want to upload. Remember that you must decompress compressed (.zip) files before you can upload them. |
| Upload | Click this to begin the upload process. This process may take up to two minutes. |
| Upgrade WWAN Package | This is the present WWAN package version. To update the supported 3G USB dongle list, download the latest WWAN package from the ZyXEL website and upload it to the SBG3600-N Series. |
| Current WWAN Package Version | Type in the location of the file you want to upload in this field or click Browse ... to find it. |
| File Path | Click this to find the file you want to upload. Remember that you must decompress compressed (.zip) files before you can upload them. |
| Browse... | Click this to begin the upload process. This process may take up to two minutes. |


After you see the firmware updating screen, wait two minutes before logging into the SBG3600-N Series again.

Figure 189 Firmware Uploading

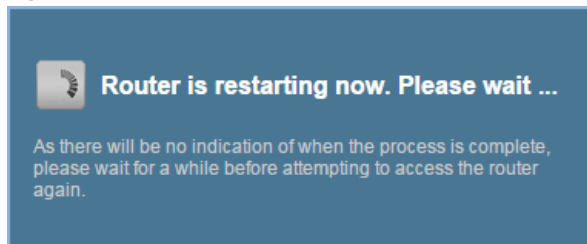

The SBG3600-N Series automatically restarts in this time causing a temporary network disconnect. In some operating systems, you may see the following icon on your desktop.

Figure 190 Network Temporarily Disconnected

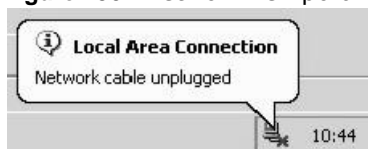

After two minutes, log in again and check your new firmware version in the **Status** screen.

If the upload was not successful, the following screen will appear. Click **OK** to go back to the **Firmware Upgrade** screen.

Figure 191 Error Message



LTE Firmware Upgrade

42.1 Overview

This chapter explains how to upload new firmware specific to the built-in LTE module on the SBG3600-N Series in order to improve the LTE module's reliability and performance.

Note: When you are using the **Maintenance > Firmware Upgrade** screen to upload the SBG3600-N Series firmware which is downloaded from the ZyXEL web site or FTP site, you are also uploading firmware for the LTE module.

Note: Use this screen to upload LTE firmware only when you are instructed by our technical support team and provided with new LTE firmware release.

42.2 The Firmware Screen

Click **Maintenance > LTE Firmware Upgrade** to open the following screen. The upload process uses HTTP (Hypertext Transfer Protocol) and may take up to two minutes. After a successful upload, the system will reboot.

Do NOT turn off the SBG3600-N Series while firmware upload is in progress!

Figure 192 Maintenance > LTE Firmware Upgrade

Firmware Upgrade is where you can update the device with newly released features by upgrading the latest firmware. You can download the latest firmware file from the manufacturer website of this device.

Upgrade Firmware
 Current Firmware Version: ALT3100_04_05_06_10_87_TF

File Path:

The following table describes the labels in this screen.


Table 150 Maintenance > LTE Firmware Upgrade

| LABEL | DESCRIPTION |
|--------------------------|--|
| Current Firmware Version | This is the present firmware version of the built-in LTE module. |
| File Path | Type in the location of the file you want to upload in this field or click Browse ... to find it. |

Table 150 Maintenance > LTE Firmware Upgrade

| LABEL | DESCRIPTION |
|-----------|--|
| Browse... | Click this to find the .bin file you want to upload. Remember that you must decompress compressed (.zip) files before you can upload them. |
| Upload | Click this to begin the upload process. This process may take up to two minutes. |

After you see the firmware updating screen, wait two minutes before logging into the SBG3600-N Series again.

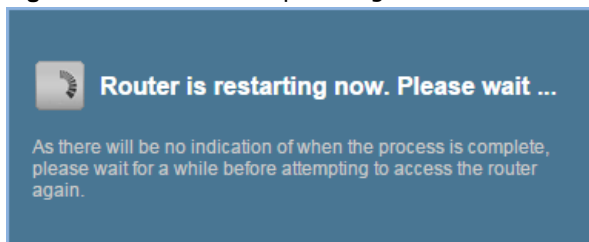
Figure 193 Firmware Uploading

The SBG3600-N Series automatically restarts in this time causing a temporary network disconnect. In some operating systems, you may see the following icon on your desktop.

Figure 194 Network Temporarily Disconnected

After two minutes, log in again and check your new firmware version in the **Status** screen.

If the upload was not successful, the following screen will appear. Click **OK** to go back to the **Firmware Upgrade** screen.

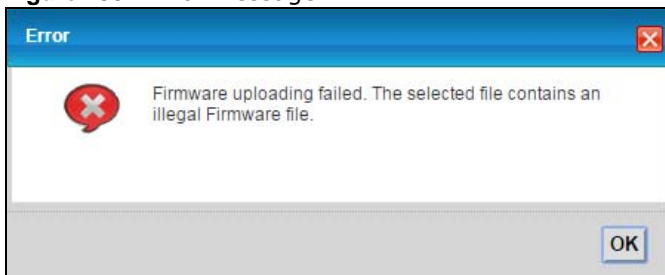Figure 195 Error Message

Configuration

43.1 Overview

The **Configuration** screen allows you to backup and restore device configurations. You can also reset your device settings back to the factory default.

43.2 The Configuration Screen

Click **Maintenance > Configuration**. Information related to factory defaults, backup configuration, and restoring configuration appears in this screen, as shown next.

Figure 196 Maintenance > Configuration

The screenshot shows a web interface for device configuration. It is divided into three main sections:

- Backup Configuration:** Contains the instruction "Click Backup to save the current configuration of your system to your computer." and a **Backup** button.
- Restore Configuration:** Features a "File Path" input field, a **Browse...** button, and an **Upload** button.
- Back to Factory Defaults:** Includes the instruction "Click Reset to clear all user-entered configuration information and return to factory defaults. After resetting, the" followed by two bullet points:
 - LAN IP address will be 192.168.1.1
 - DHCP will be reset to server
 and a **Reset** button.

Backup Configuration

Backup Configuration allows you to back up (save) the SBG3600-N Series's current configuration to a file on your computer. The configuration file should be saved and edited in UTF-8 (without BOM) format, if you're using Windows Notepad, make sure you choose **File > Save as UTF-8** in the text editor. Once your SBG3600-N Series is configured and functioning properly, it is highly recommended that you back up your configuration file before making configuration changes. The backup configuration file will be useful in case you need to return to your previous settings.

Click **Backup** to save the SBG3600-N Series's current configuration to your computer.

Restore Configuration

Restore Configuration allows you to upload a new or previously saved configuration file from your computer to your SBG3600-N Series.

Table 151 Restore Configuration

| LABEL | DESCRIPTION |
|-----------|---|
| File Path | Type in the location of the file you want to upload in this field or click Browse ... to find it. |
| Browse... | Click this to find the file you want to upload. Remember that you must decompress compressed (.ZIP) files before you can upload them. |
| Upload | Click this to begin the upload process. |

Do not turn off the SBG3600-N Series while configuration file upload is in progress.

After the SBG3600-N Series configuration has been restored successfully, the login screen appears. Login again to restart the SBG3600-N Series.

The SBG3600-N Series automatically restarts in this time causing a temporary network disconnect. In some operating systems, you may see the following icon on your desktop.


Figure 197 Network Temporarily Disconnected



If you uploaded the default configuration file you may need to change the IP address of your computer to be in the same subnet as that of the default device IP address (192.168.1.1). See [Appendix A on page 376](#) for details on how to set up your computer's IP address.



If the upload was not successful, the following screen will appear. Click **OK** to go back to the **Configuration** screen.

Figure 198 Configuration Upload Error

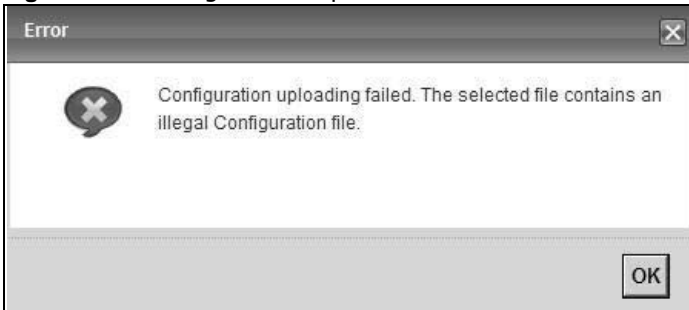

Reset to Factory Defaults

Click the **Reset** button to clear all user-entered configuration information and return the SBG3600-N Series to its factory defaults. The following warning screen appears.

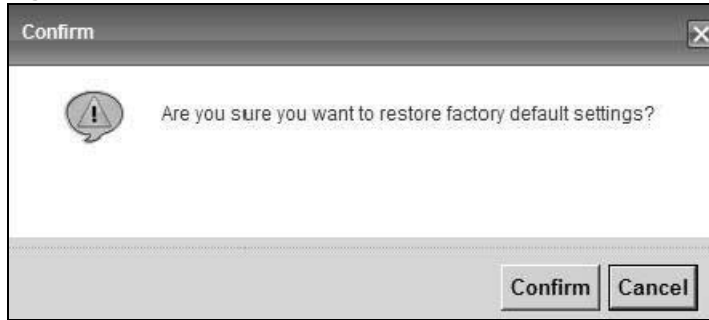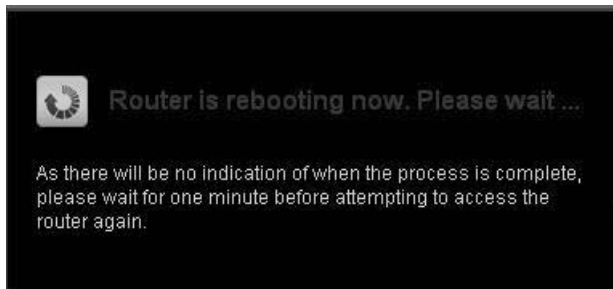Figure 199 Reset Warning Message**Figure 200** Reset In Process Message

You can also press the **RESET** button on the rear panel to reset the factory defaults of your SBG3600-N Series. Refer to [Section 1.6 on page 25](#) for more information on the **RESET** button.

43.3 The Reboot Screen

System restart allows you to reboot the SBG3600-N Series remotely without turning the power off. You may need to do this if the SBG3600-N Series hangs, for example.

Click **Maintenance > Reboot**. Click **Reboot** to have the SBG3600-N Series reboot. This does not affect the SBG3600-N Series's configuration.

Figure 201 Maintenance > Reboot

Diagnostic

44.1 Overview

The **Diagnostic** screens display information to help you identify problems with the SBG3600-N Series.

The route between a CO VDSL switch and one of its CPE may go through switches owned by independent organizations. A connectivity fault point generally takes time to discover and impacts subscriber's network access. In order to eliminate the management and maintenance efforts, IEEE 802.1ag is a Connectivity Fault Management (CFM) specification which allows network administrators to identify and manage connection faults. Through discovery and verification of the path, CFM can detect, analyze and isolate connectivity faults in bridged LANs.

44.1.1 What You Can Do in this Chapter

- The **Ping & TraceRoute & NsLookup** screen lets you ping an IP address or trace the route packets take to a host ([Section 44.3 on page 365](#)).
- The **802.1ag** screen lets you perform CFM actions ([Section 44.5 on page 366](#)).
- The **OAM Ping Test** screen lets you send an ATM OAM (Operation, Administration and Maintenance) packet to verify the connectivity of a specific PVC. ([Section 44.5 on page 366](#)).

44.2 What You Need to Know

The following terms and concepts may help as you read through this chapter.

How CFM Works

A Maintenance Association (MA) defines a VLAN and associated Maintenance End Point (MEP) ports on the device under a Maintenance Domain (MD) level. An MEP port has the ability to send Connectivity Check Messages (CCMs) and get other MEP ports information from neighbor devices' CCMs within an MA.

CFM provides two tests to discover connectivity faults.

- Loopback test - checks if the MEP port receives its Loop Back Response (LBR) from its target after it sends the Loop Back Message (LBM). If no response is received, there might be a connectivity fault between them.
- Link trace test - provides additional connectivity fault analysis to get more information on where the fault is. If an MEP port does not respond to the source MEP, this may indicate a fault. Administrators can take further action to check and resume services from the fault according to the line connectivity status report.

44.3 Ping & TraceRoute & NsLookup

Use this screen to ping, traceroute, or nslookup an IP address. Click **Maintenance > Diagnostic > Ping & TraceRoute & NsLookup** to open the screen shown next.

Figure 202 Maintenance > Diagnostic > Ping & TraceRoute & NsLookup

Result

- Info -

Ping/TraceRoute Test

Bound Interface: LAN ▾ Address: URL or IP Address

Name Service lookup

Domain name: URL

The following table describes the fields in this screen.

Table 152 Maintenance > Diagnostic > Ping & TraceRoute & NsLookup

| LABEL | DESCRIPTION |
|----------------------|--|
| Ping/Traceroute Test | |
| Bound Interface | Choose a connected interface from the drop-down list (LAN, WAN) to perform the ping/tracer route test. |
| Address | Type the URL or IP address of a computer that you want to perform ping, traceroute, or nslookup in order to test a connection. |
| Ping | Click this to ping the IP address that you entered. |
| TraceRoute | Click this button to perform the traceroute function. This determines the path a packet takes to the specified computer. |
| Name Service lookup | |
| Domain Name | Type a domain name in this field for the name service lookup. |
| Nslookup | Click this button to perform a DNS lookup on the IP address of a computer you entered. |

44.4 802.1ag

Click **Maintenance > Diagnostic > 8.2.1ag** to open the following screen. Use this screen to perform CFM actions.

Figure 203 Maintenance > Diagnostic > 802.1ag

802.1ag Connectivity Fault Management
Maintenance Domain (MD) Level:
Destination MAC Address:
802.1Q VLAN ID: [0-4095]
VDSL Traffic Type:

Test the connection to another Maintenance End Point (MEP)
Loopback Message (LBM):

Test the connection to another Maintenance End Point (MEP)
Linktrace Message (LTM):

The following table describes the fields in this screen.

Table 153 Maintenance > Diagnostic > 802.1ag

| LABEL | DESCRIPTION |
|---------------------------------------|--|
| 802.1ag Connectivity Fault Management | |
| Maintenance Domain (MD) Level | Select a level (0-7) under which you want to create an MA. |
| Destination MAC Address | Enter the target device's MAC address to which the SBG3600-N Series performs a CFM loopback test. |
| 802.1Q VLAN ID | Type a VLAN ID (0-4095) for this MA. |
| VDSL Traffic Type | This shows whether the VDSL traffic is activated. |
| Loopback Message (LBM) | This shows how many Loop Back Messages (LBMs) are sent and if there is any in-order or out-of-order Loop Back Response (LBR) received from a remote MEP. |
| Linktrace Message (LTM) | This shows the destination MAC address in the Link Trace Response (LTR). |
| Set MD Level | Click this button to configure the MD (Maintenance Domain) level. |
| Send Loopback | Click this button to have the selected MEP send the LBM (Loop Back Message) to a specified remote end point. |
| Send Linktrace | Click this button to have the selected MEP send the LTMs (Link Trace Messages) to a specified remote end point. |

44.5 OAM Ping Test


Click **Maintenance > Diagnostic > OAM Ping Test** to open the screen shown next. Use this screen to perform an OAM (Operation, Administration and Maintenance) F4 or F5 loopback test on a

PVC. The SBG3600-N Series sends an OAM F4 or F5 packet to the DSLAM or ATM switch and then returns it to the SBG3600-N Series. The test result then displays in the text box.

ATM sets up virtual circuits over which end systems communicate. The terminology for virtual circuits is as follows:

- Virtual Channel (VC) Logical connections between ATM devices
- Virtual Path (VP) A bundle of virtual channels
- Virtual Circuits A series of virtual paths between circuit end points

Figure 204 Virtual Circuit Topology

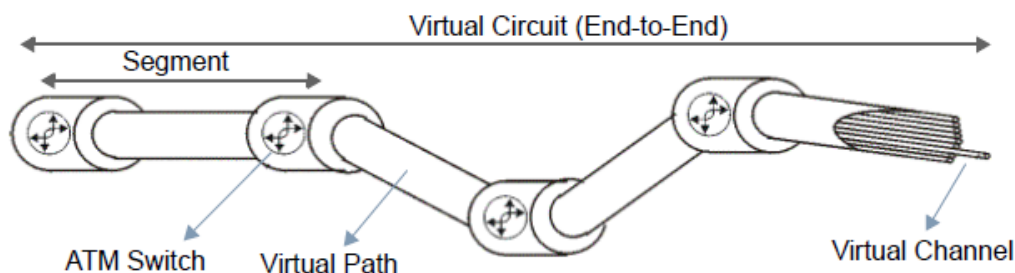

Think of a virtual path as a cable that contains a bundle of wires. The cable connects two points and wires within the cable provide individual circuits between the two points. In an ATM cell header, a VPI (Virtual Path Identifier) identifies a link formed by a virtual path; a VCI (Virtual Channel Identifier) identifies a channel within a virtual path. A series of virtual paths make up a virtual circuit.


F4 cells operate at the virtual path (VP) level, while F5 cells operate at the virtual channel (VC) level. F4 cells use the same VPI as the user data cells on VP connections, but use different predefined VCI values. F5 cells use the same VPI and VCI as the user data cells on the VC connections, and are distinguished from data cells by a predefined Payload Type Identifier (PTI) in the cell header. Both F4 flows and F5 flows are bidirectional and have two types.

- segment F4 flows (VCI=3)
- end-to-end F4 flows (VCI=4)
- segment F5 flows (PTI=100)
- end-to-end F5 flows (PTI=101)

OAM F4 or F5 tests are used to check virtual path or virtual channel availability between two DSL devices. Segment flows are terminated at the connecting point which terminates a VP or VC segment. End-to-end flows are terminated at the end point of a VP or VC connection, where an ATM link is terminated. Segment loopback tests allow you to verify integrity of a PVC to the nearest neighboring ATM device. End-to-end loopback tests allow you to verify integrity of an end-to-end PVC.

Note: The DSLAM to which the SBG3600-N Series is connected must also support ATM F4 and/or F5 to use this test.

Note: This screen is available only when you configure an ATM layer-2 interface.

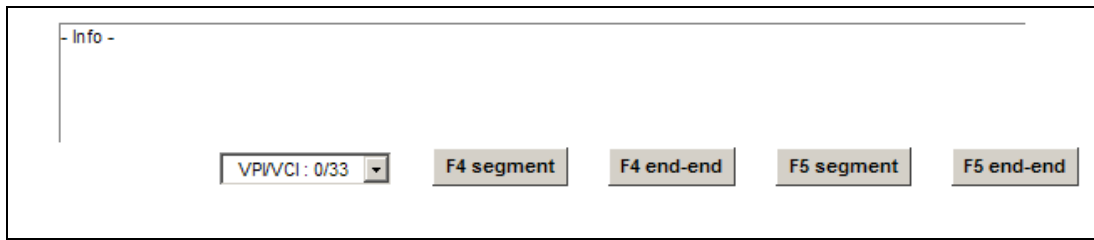Figure 205 Maintenance > Diagnostic > OAM Ping Test

- Info -

VP/VCI: 0/33

F4 segment F4 end-end F5 segment F5 end-end

The following table describes the fields in this screen.

Table 154 Maintenance > Diagnostic > OAM Ping Test

| LABEL | DESCRIPTION |
|------------|--|
| | Select a PVC on which you want to perform the loopback test. |
| F4 segment | Press this to perform an OAM F4 segment loopback test. |
| F4 end-end | Press this to perform an OAM F4 end-to-end loopback test. |
| F5 segment | Press this to perform an OAM F5 segment loopback test. |
| F5 end-end | Press this to perform an OAM F5 end-to-end loopback test. |

Troubleshooting

This chapter offers some suggestions to solve problems you might encounter. The potential problems are divided into the following categories.

- [Power, Hardware Connections, and LEDs](#)
- [SBG3600-N Series Access and Login](#)
- [Internet Access](#)
- [Wireless Connection](#)
- [USB Device Connection](#)
- [UPnP](#)

45.1 Power, Hardware Connections, and LEDs

The SBG3600-N Series does not turn on. None of the LEDs turn on.

- 1 Make sure the SBG3600-N Series is turned on.
- 2 Make sure you are using the power adaptor or cord included with the SBG3600-N Series.
- 3 Make sure the power adaptor or cord is connected to the SBG3600-N Series and plugged in to an appropriate power source. Make sure the power source is turned on.
- 4 Turn the SBG3600-N Series off and on.
- 5 If the problem continues, contact the vendor.

One of the LEDs does not behave as expected.

- 1 Make sure you understand the normal behavior of the LED. See [Section 1.3 on page 22](#).
- 2 Check the hardware connections.
- 3 Inspect your cables for damage. Contact the vendor to replace any damaged cables.
- 4 Turn the SBG3600-N Series off and on.

- 5 If the problem continues, contact the vendor.

45.2 SBG3600-N Series Access and Login

I forgot the IP address for the SBG3600-N Series.

- 1 The default LAN IP address is 192.168.1.1.
- 2 If you changed the IP address and have forgotten it, you might get the IP address of the SBG3600-N Series by looking up the IP address of the default gateway for your computer. To do this in most Windows computers, click **Start > Run**, enter **cmd**, and then enter **ipconfig**. The IP address of the **Default Gateway** might be the IP address of the SBG3600-N Series (it depends on the network), so enter this IP address in your Internet browser.
- 3 If this does not work, you have to reset the device to its factory defaults. See [Section 1.6 on page 25](#).

I forgot the password.

- 1 The default admin password is **1234**.
- 2 If this does not work, you have to reset the device to its factory defaults. See [Section 1.6 on page 25](#).

I cannot see or access the **Login** screen in the web configurator.

- 1 Make sure you are using the correct IP address.
 - The default IP address is [192.168.1.1](#).
 - If you changed the IP address ([Section 8.2 on page 170](#)), use the new IP address.
 - If you changed the IP address and have forgotten it, see the troubleshooting suggestions for [I forgot the IP address for the SBG3600-N Series](#).
- 2 Check the hardware connections, and make sure the LEDs are behaving as expected. See [Section 1.3 on page 22](#).
- 3 Make sure your Internet browser does not block pop-up windows and has JavaScripts and Java enabled. See [Appendix C on page 404](#).
- 4 If it is possible to log in from another interface, check the service control settings for HTTP and HTTPS (**Maintenance > Remote MGMT**).

- 5 Reset the device to its factory defaults, and try to access the SBG3600-N Series with the default IP address. See [Section 1.6 on page 25](#).
- 6 If the problem continues, contact the network administrator or vendor, or try one of the advanced suggestions.

Advanced Suggestions

- Make sure you have logged out of any earlier management sessions using the same user account even if they were through a different interface or using a different browser.
- Try to access the SBG3600-N Series using another service, such as Telnet. If you can access the SBG3600-N Series, check the remote management settings and firewall rules to find out why the SBG3600-N Series does not respond to HTTP.

I can see the **Login** screen, but I cannot log in to the SBG3600-N Series.

- 1 Make sure you have entered the password correctly. The default admin password is **1234**. The field is case-sensitive, so make sure [Caps Lock] is not on.
- 2 You cannot log in to the web configurator while someone is using Telnet to access the SBG3600-N Series. Log out of the SBG3600-N Series in the other session, or ask the person who is logged in to log out.
- 3 Turn the SBG3600-N Series off and on.
- 4 If this does not work, you have to reset the device to its factory defaults. See [Section 45.1 on page 369](#).

I cannot Telnet to the SBG3600-N Series.

See the troubleshooting suggestions for [I cannot see or access the Login screen in the web configurator](#). Ignore the suggestions about your browser.

I cannot use FTP to upload / download the configuration file. / I cannot use FTP to upload new firmware.

See the troubleshooting suggestions for [I cannot see or access the Login screen in the web configurator](#). Ignore the suggestions about your browser.

45.3 Internet Access

I cannot access the Internet.

- 1 Check the hardware connections, and make sure the LEDs are behaving as expected. See the **Quick Start Guide** and [Section 1.3 on page 22](#).
- 2 Make sure you entered your ISP account information correctly in the **Network Setting > Broadband** screen. These fields are case-sensitive, so make sure [Caps Lock] is not on.
- 3 If you are trying to access the Internet wirelessly, make sure that you enabled the wireless LAN in the SBG3600-N Series and your wireless client and that the wireless settings in the wireless client are the same as the settings in the SBG3600-N Series.
- 4 Disconnect all the cables from your device and reconnect them.
- 5 If the problem continues, contact your ISP.

I cannot access the Internet through a DSL connection.

- 1 Make sure you have the **DSL WAN** port connected to a telephone jack (or the DSL or modem jack on a splitter if you have one).
- 2 Make sure you configured a proper DSL WAN interface (**Network Setting > Broadband** screen) with the Internet account information provided by your ISP and that it is enabled.
- 3 Check that the LAN interface you are connected to is in the same interface group as the DSL connection (**Network Setting > Interface Group**).
- 4 If you set up a WAN connection using bridging service, make sure you turn off the DHCP feature in the **LAN** screen to have the clients get WAN IP addresses directly from your ISP's DHCP server.

I cannot connect to the Internet using a second DSL connection.

ADSL and VDSL connections cannot work at the same time. You can only use one type of DSL connection, either ADSL or VDSL connection at one time.

I cannot connect to the Internet using an Ethernet connection.

- 1 Make sure you have the Ethernet WAN port connected to a MODEM or Router.

- 2 Make sure you configured a proper EthernetWAN interface (**Network Setting > Broadband > Multi-WAN** screen) with the Internet account information provided by your ISP and that it is enabled.
- 3 Check that the WAN interface you are connected to is in the same interface group as the Ethernet connection (**Network Setting > Interface Group/VLAN**).
- 4 If you set up a WAN connection using bridging service, make sure you turn off the DHCP feature in the **LAN** screen to have the clients get WAN IP addresses directly from your ISP's DHCP server.

I cannot access the Internet anymore. I had access to the Internet (with the SBG3600-N Series), but my Internet connection is not available anymore.

- 1 Your session with the SBG3600-N Series may have expired. Try logging into the SBG3600-N Series again.
- 2 Check the hardware connections, and make sure the LEDs are behaving as expected. See the **Quick Start Guide** and [Section 1.3 on page 22](#).
- 3 Turn the SBG3600-N Series off and on.
- 4 If the problem continues, contact your ISP.

45.4 Wireless Connection

What factors may cause intermittent or unstabled wireless connection? How can I solve this problem?

The following factors may cause interference:

- Obstacles: walls, ceilings, furniture, and so on.
- Building Materials: metal doors, aluminum studs.
- Electrical devices: microwaves, monitors, electric motors, cordless phones, and other wireless devices.

To optimize the speed and quality of your wireless connection, you can:

- Move your wireless device closer to the AP if the signal strength is low.
- Reduce wireless interference that may be caused by other wireless networks or surrounding wireless electronics such as cordless phones.
- Place the AP where there are minimum obstacles (such as walls and ceilings) between the AP and the wireless client.
- Reduce the number of wireless clients connecting to the same AP simultaneously, or add additional APs if necessary.

- Try closing some programs that use the Internet, especially peer-to-peer applications. If the wireless client is sending or receiving a lot of information, it may have too many programs open that use the Internet.

What is a Server Set ID (SSID)?

An SSID is a name that uniquely identifies a wireless network. The AP and all the clients within a wireless network must use the same SSID.

What wireless security modes does my SBG3600-N Series support?

Wireless security is vital to your network. It protects communications between wireless stations, access points and the wired network.

The available security modes in your SBG3600-N Series are as follows:

- **WPA2-PSK:** (recommended) This uses a pre-shared key with the WPA2 standard.
- **WPA-PSK:** This has the device use either WPA-PSK or WPA2-PSK depending on which security mode the wireless client uses.
- **WPA2:** WPA2 (IEEE 802.11i) is a wireless security standard that defines stronger encryption, authentication and key management than WPA. It requires the use of a RADIUS server and is mostly used in business networks.
- **WPA:** Wi-Fi Protected Access (WPA) is a subset of the IEEE 802.11i standard. It requires the use of a RADIUS server and is mostly used in business networks.
- **WEP:** Wired Equivalent Privacy (WEP) encryption scrambles the data transmitted between the wireless stations and the access points to keep network communications private.

45.5 USB Device Connection

The SBG3600-N Series fails to detect my USB device.

- 1 Disconnect the USB device.
- 2 Reboot the SBG3600-N Series.
- 3 Log into the web configurator and go to the **Maintenance > User Account** screen. Click the Edit icon on the account you are currently using. Check if the **File Sharing Service (SAMBAs)** feature is enabled. You need to enable it to allow uses to access shared files in USB storage.
- 4 If you are connecting a USB hard drive that comes with an external power supply, make sure it is connected to an appropriate power source that is on.

- 5 Re-connect your USB device to the SBG3600-N Series.

45.6 UPnP

When using UPnP and the SBG3600-N Series reboots, my computer cannot detect UPnP and refresh **My Network Places > Local Network**.

- 1 Disconnect the Ethernet cable from the SBG3600-N Series's LAN port or from your computer.
- 2 Re-connect the Ethernet cable.

The **Local Area Connection** icon for UPnP disappears in the screen.

Restart your computer.

I cannot open special applications such as white board, file transfer and video when I use the MSN messenger.

- 1 Wait more than three minutes.
- 2 Restart the applications.

Setting up Your Computer's IP Address

All computers must have a 10M or 100M Ethernet adapter card and TCP/IP installed.

Windows 95/98/Me/NT/2000/XP/Vista, Macintosh OS 7 and later operating systems and all versions of UNIX/LINUX include the software components you need to install and use TCP/IP on your computer. Windows 3.1 requires the purchase of a third-party TCP/IP application package.

TCP/IP should already be installed on computers using Windows NT/2000/XP, Macintosh OS 7 and later operating systems.


After the appropriate TCP/IP components are installed, configure the TCP/IP settings in order to "communicate" with your network.

If you manually assign IP information instead of using dynamic assignment, make sure that your computers have IP addresses that place them in the same subnet as the SBG3600-N Series's LAN port.

Windows 95/98/Me

Click **Start**, **Settings**, **Control Panel** and double-click the **Network** icon to open the **Network** window.

Figure 206 WIndows 95/98/Me: Network: Configuration

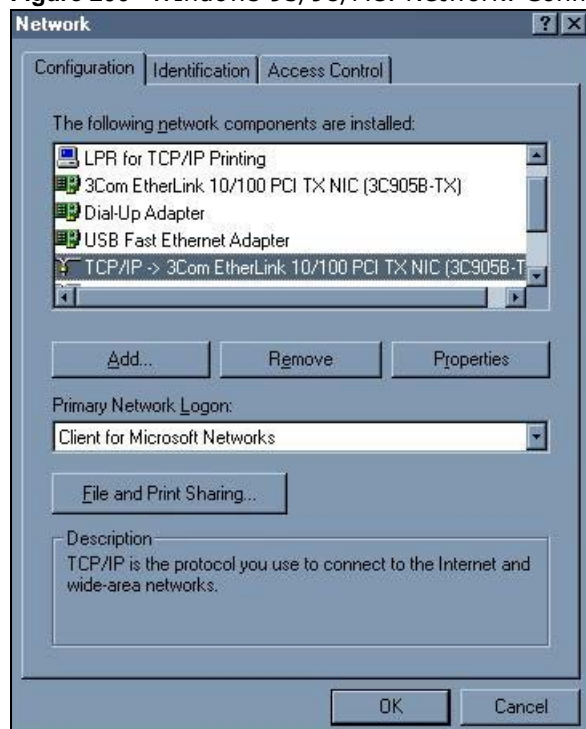

Installing Components

The **Network** window **Configuration** tab displays a list of installed components. You need a network adapter, the TCP/IP protocol and Client for Microsoft Networks.

If you need the adapter:

- 1 In the **Network** window, click **Add**.
- 2 Select **Adapter** and then click **Add**.
- 3 Select the manufacturer and model of your network adapter and then click **OK**.

If you need TCP/IP:


- 1 In the **Network** window, click **Add**.
- 2 Select **Protocol** and then click **Add**.
- 3 Select **Microsoft** from the list of **manufacturers**.
- 4 Select **TCP/IP** from the list of network protocols and then click **OK**.

If you need Client for Microsoft Networks:

- 1 Click **Add**.
- 2 Select **Client** and then click **Add**.
- 3 Select **Microsoft** from the list of manufacturers.
- 4 Select **Client for Microsoft Networks** from the list of network clients and then click **OK**.
- 5 Restart your computer so the changes you made take effect.


Configuring

- 1 In the **Network** window **Configuration** tab, select your network adapter's TCP/IP entry and click **Properties**
- 2 Click the **IP Address** tab.
 - If your IP address is dynamic, select **Obtain an IP address automatically**.
 - If you have a static IP address, select **Specify an IP address** and type your information into the **IP Address** and **Subnet Mask** fields.

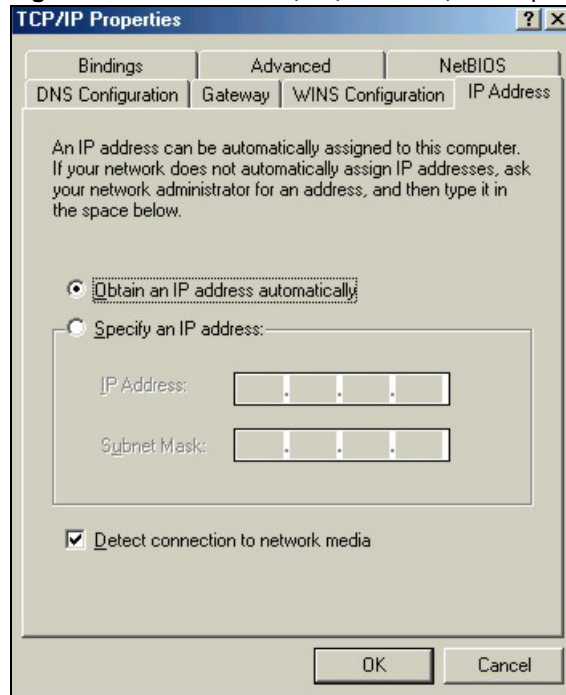Figure 207 Windows 95/98/Me: TCP/IP Properties: IP Address

3 Click the **DNS Configuration** tab.

- If you do not know your DNS information, select **Disable DNS**.
- If you know your DNS information, select **Enable DNS** and type the information in the fields below (you may not need to fill them all in).

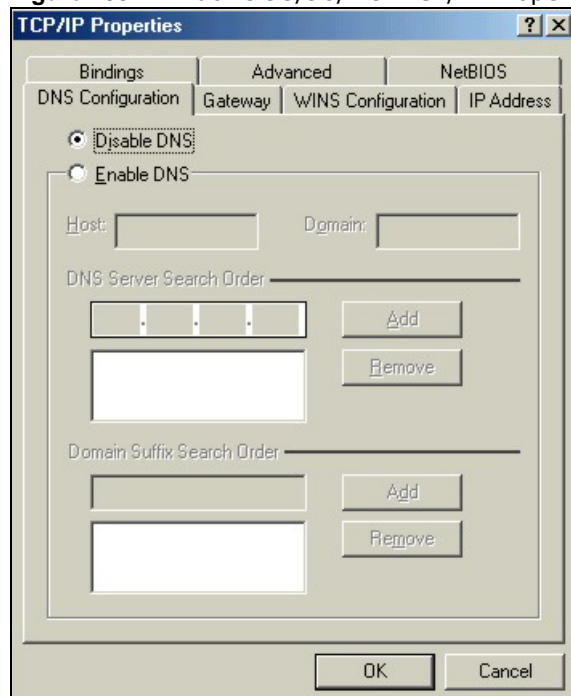Figure 208 Windows 95/98/Me: TCP/IP Properties: DNS Configuration

4 Click the **Gateway** tab.

- If you do not know your gateway's IP address, remove previously installed gateways.
 - If you have a gateway IP address, type it in the **New gateway field** and click **Add**.
- 5 Click **OK** to save and close the **TCP/IP Properties** window.
 - 6 Click **OK** to close the **Network** window. Insert the Windows CD if prompted.
 - 7 Turn on your SBG3600-N Series and restart your computer when prompted.

Verifying Settings


- 1 Click **Start** and then **Run**.
- 2 In the **Run** window, type "winipcfg" and then click **OK** to open the **IP Configuration** window.
- 3 Select your network adapter. You should see your computer's IP address, subnet mask and default gateway.

Windows 2000/NT/XP


The following example figures use the default Windows XP GUI theme.

- 1 Click **start** (**Start** in Windows 2000/NT), **Settings**, **Control Panel**.


Figure 209 Windows XP: Start Menu

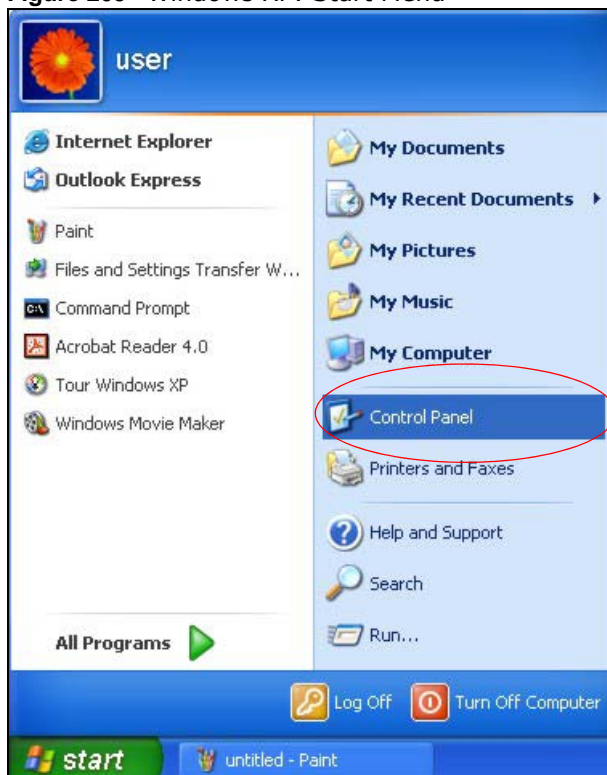


- 2 In the **Control Panel**, double-click **Network Connections** (**Network and Dial-up Connections** in Windows 2000/NT).

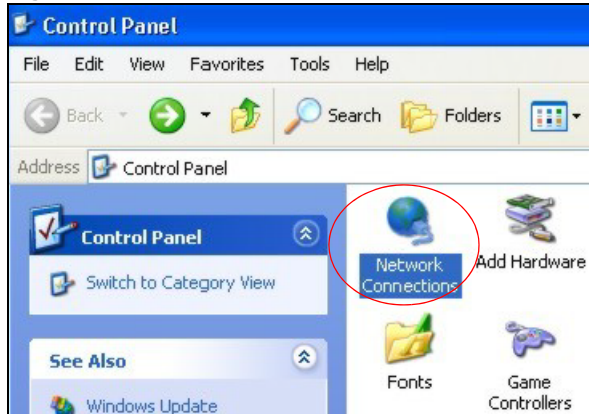Figure 210 Windows XP: Control Panel

- 3 Right-click **Local Area Connection** and then click **Properties**.

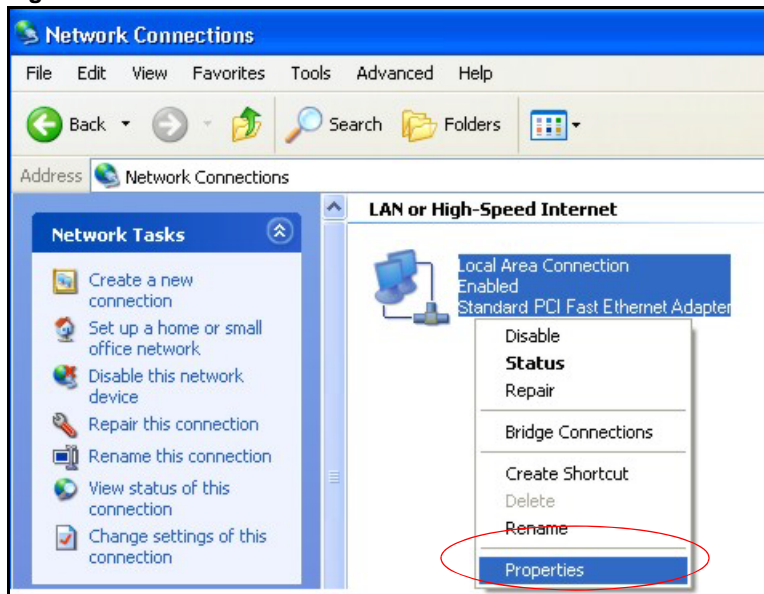
Figure 211 Windows XP: Control Panel: Network Connections: Properties

- 4 Select **Internet Protocol (TCP/IP)** (under the **General** tab in Win XP) and then click **Properties**.

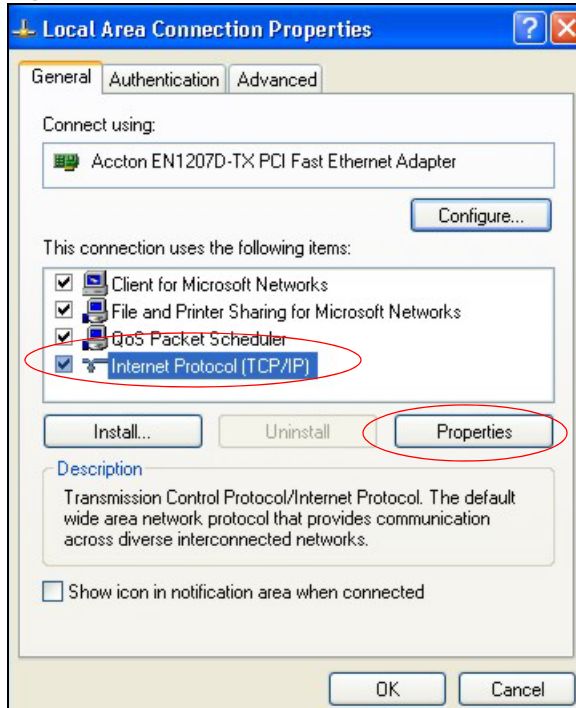Figure 212 Windows XP: Local Area Connection Properties

5 The **Internet Protocol TCP/IP Properties** window opens (the **General** tab in Windows XP).

- If you have a dynamic IP address click **Obtain an IP address automatically**.
- If you have a static IP address click **Use the following IP Address** and fill in the **IP address**, **Subnet mask**, and **Default gateway** fields.
- Click **Advanced**.

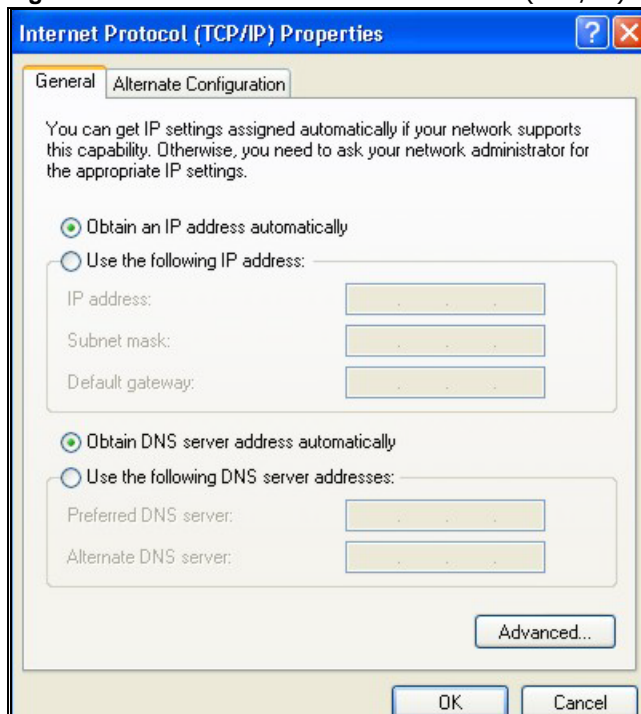
Figure 213 Windows XP: Internet Protocol (TCP/IP) Properties

- 6 If you do not know your gateway's IP address, remove any previously installed gateways in the **IP Settings** tab and click **OK**.


Do one or more of the following if you want to configure additional IP addresses:

- In the **IP Settings** tab, in IP addresses, click **Add**.
- In **TCP/IP Address**, type an IP address in **IP address** and a subnet mask in **Subnet mask**, and then click **Add**.
- Repeat the above two steps for each IP address you want to add.
- Configure additional default gateways in the **IP Settings** tab by clicking **Add** in **Default gateways**.
- In **TCP/IP Gateway Address**, type the IP address of the default gateway in **Gateway**. To manually configure a default metric (the number of transmission hops), clear the **Automatic metric** check box and type a metric in **Metric**.
- Click **Add**.
- Repeat the previous three steps for each default gateway you want to add.
- Click **OK** when finished.

Figure 214 Windows XP: Advanced TCP/IP Properties

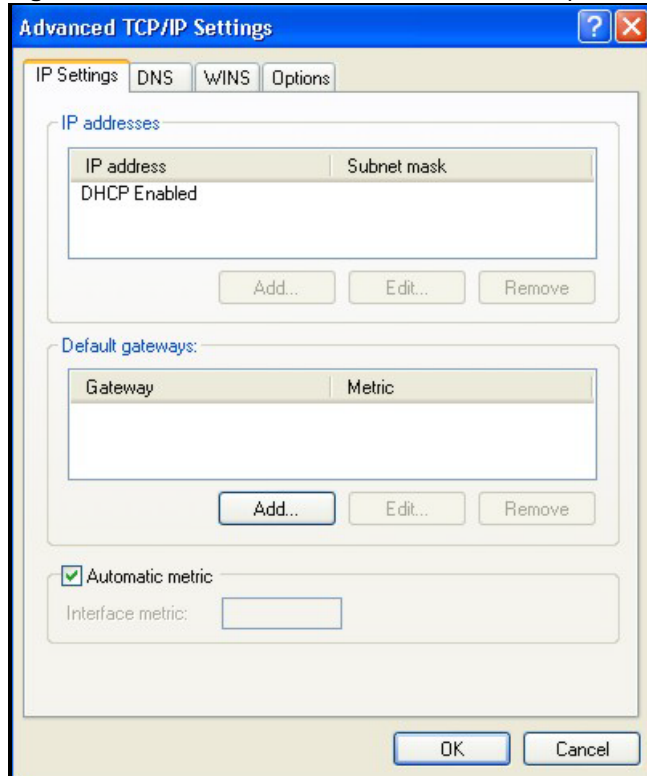

- 7 In the **Internet Protocol TCP/IP Properties** window (the **General** tab in Windows XP):
- Click **Obtain DNS server address automatically** if you do not know your DNS server IP address(es).
 - If you know your DNS server IP address(es), click **Use the following DNS server addresses**, and type them in the **Preferred DNS server** and **Alternate DNS server** fields. If you have previously configured DNS servers, click **Advanced** and then the **DNS** tab to order them.

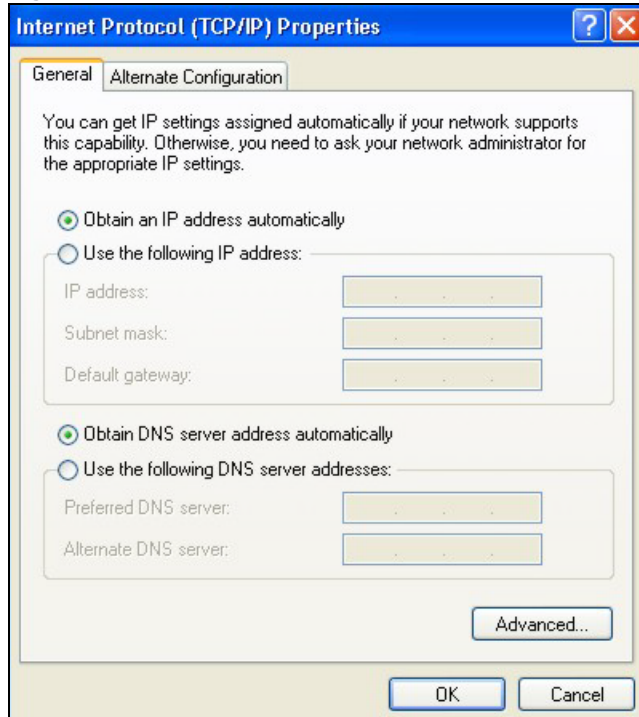Figure 215 Windows XP: Internet Protocol (TCP/IP) Properties

- 8 Click **OK** to close the **Internet Protocol (TCP/IP) Properties** window.
- 9 Click **Close** (**OK** in Windows 2000/NT) to close the **Local Area Connection Properties** window.
- 10 Close the **Network Connections** window (**Network and Dial-up Connections** in Windows 2000/NT).
- 11 Turn on your SBG3600-N Series and restart your computer (if prompted).

Verifying Settings


- 1 Click **Start**, **All Programs**, **Accessories** and then **Command Prompt**.
- 2 In the **Command Prompt** window, type "ipconfig" and then press [ENTER]. You can also open **Network Connections**, right-click a network connection, click **Status** and then click the **Support** tab.

Windows Vista

This section shows screens from Windows Vista Enterprise Version 6.0.


- 1 Click the **Start** icon, **Control Panel**.

Figure 216 Windows Vista: Start Menu

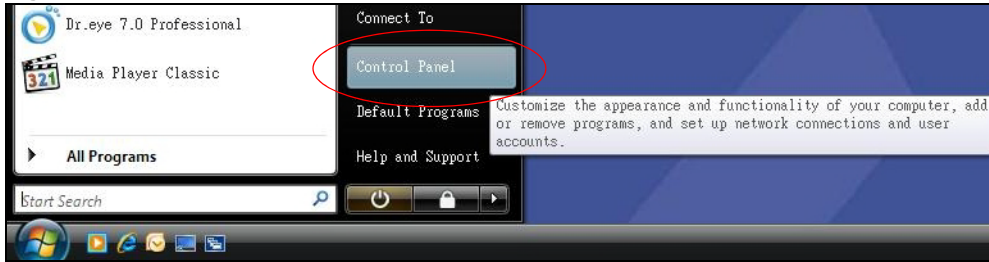


- 2 In the **Control Panel**, double-click **Network and Internet**.

Figure 217 Windows Vista: Control Panel

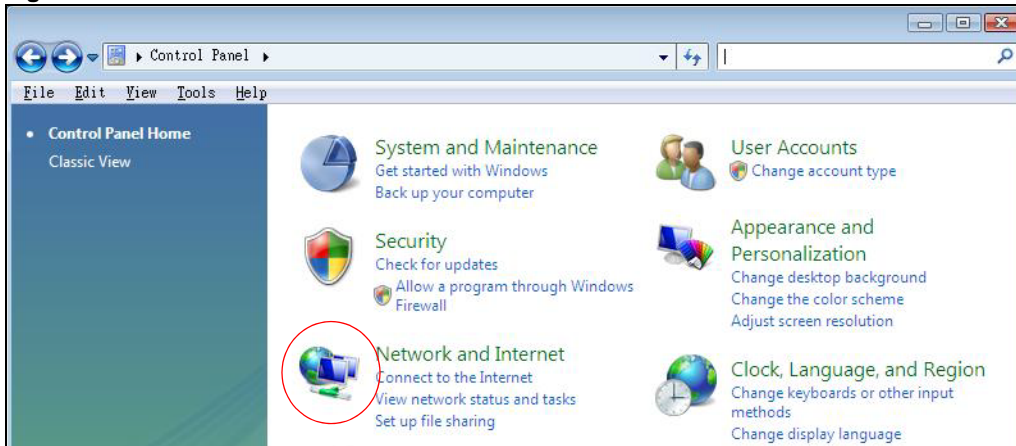


- 3 Click **Network and Sharing Center**.

Figure 218 Windows Vista: Network And Internet

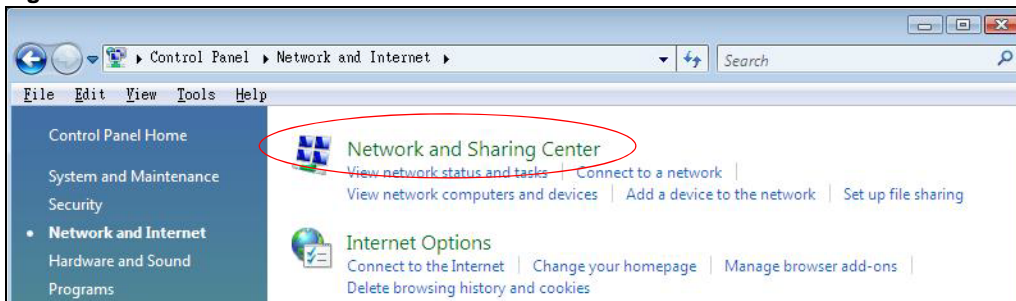

- 4 Click **Manage network connections**.


Figure 219 Windows Vista: Network and Sharing Center

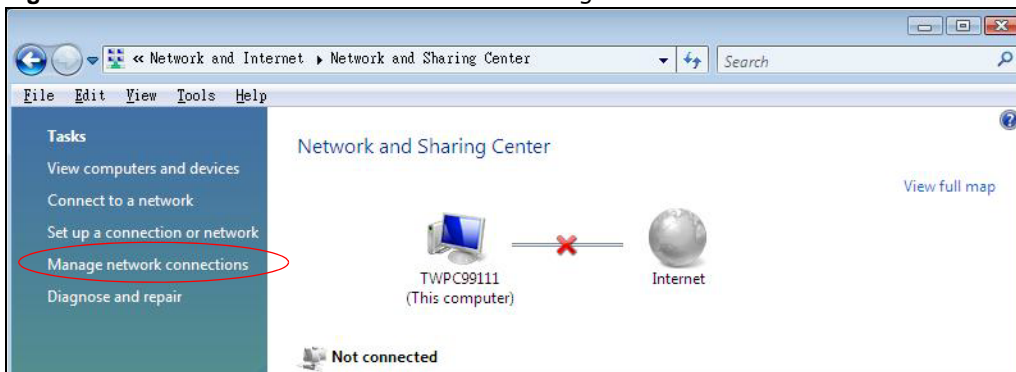

- 5 Right-click **Local Area Connection** and then click **Properties**.


Note: During this procedure, click **Continue** whenever Windows displays a screen saying that it needs your permission to continue.

Figure 220 Windows Vista: Network and Sharing Center

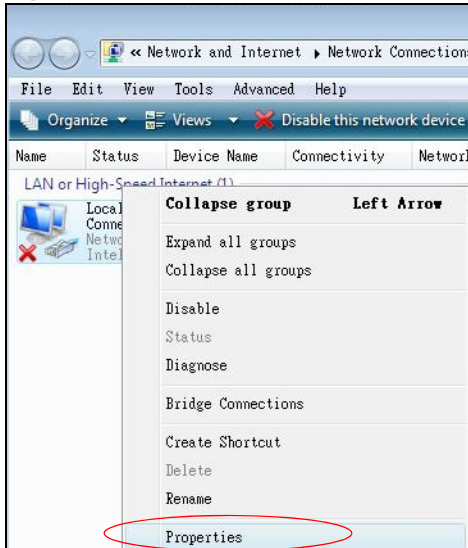

- 6 Select **Internet Protocol Version 4 (TCP/IPv4)** and click **Properties**.


Figure 221 Windows Vista: Local Area Connection Properties

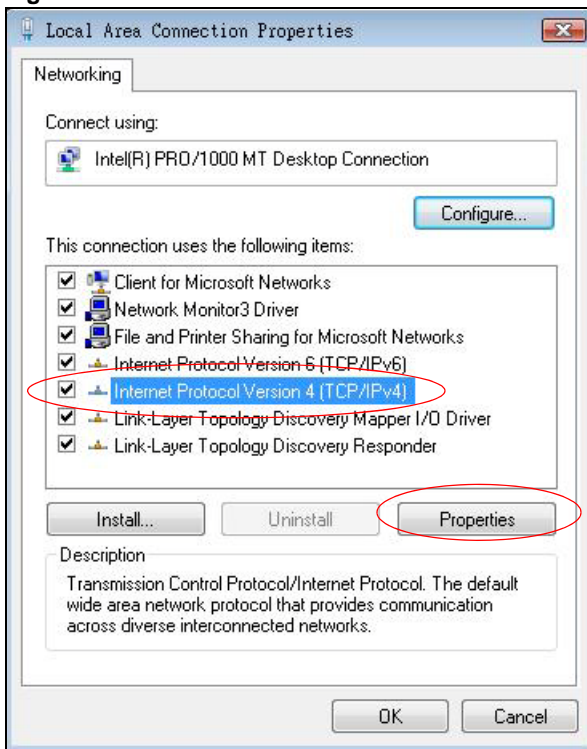

- 7 The **Internet Protocol Version 4 (TCP/IPv4) Properties** window opens (the **General** tab).
 - If you have a dynamic IP address click **Obtain an IP address automatically**.

- If you have a static IP address click **Use the following IP address** and fill in the **IP address**, **Subnet mask**, and **Default gateway** fields.
- Click **Advanced**.


Figure 222 Windows Vista: Internet Protocol Version 4 (TCP/IPv4) Properties

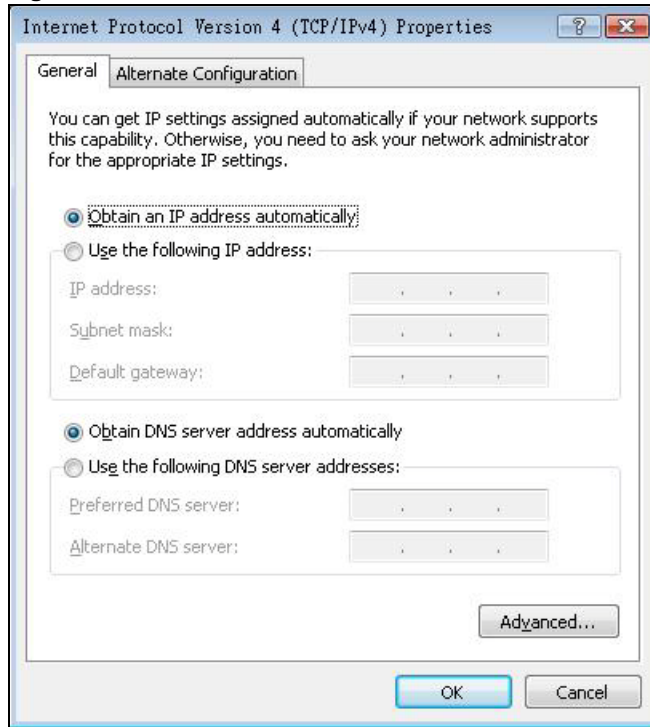

- 8 If you do not know your gateway's IP address, remove any previously installed gateways in the **IP Settings** tab and click **OK**.


Do one or more of the following if you want to configure additional IP addresses:

- In the **IP Settings** tab, in IP addresses, click **Add**.
- In **TCP/IP Address**, type an IP address in **IP address** and a subnet mask in **Subnet mask**, and then click **Add**.
- Repeat the above two steps for each IP address you want to add.
- Configure additional default gateways in the **IP Settings** tab by clicking **Add** in **Default gateways**.
- In **TCP/IP Gateway Address**, type the IP address of the default gateway in **Gateway**. To manually configure a default metric (the number of transmission hops), clear the **Automatic metric** check box and type a metric in **Metric**.
- Click **Add**.
- Repeat the previous three steps for each default gateway you want to add.
- Click **OK** when finished.

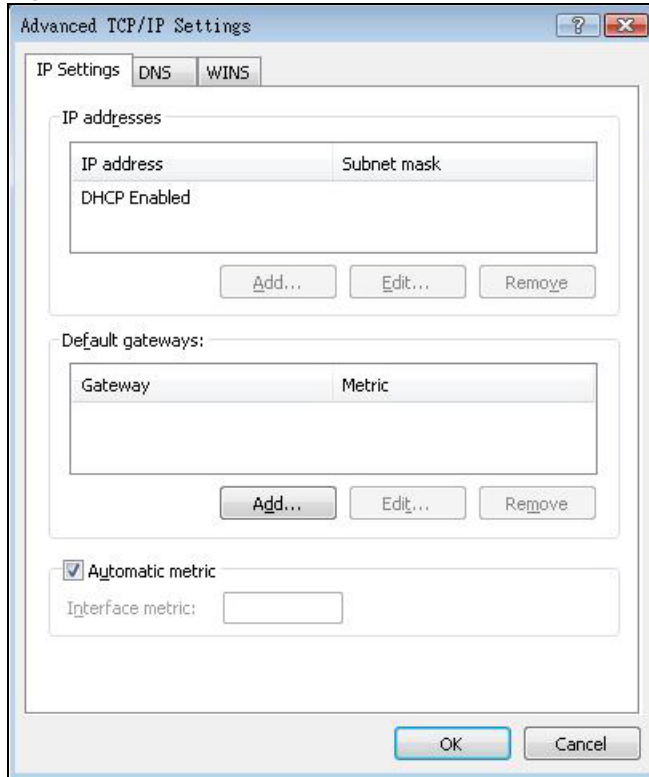Figure 223 Windows Vista: Advanced TCP/IP Properties

9 In the **Internet Protocol Version 4 (TCP/IPv4) Properties** window, (the **General** tab):

- Click **Obtain DNS server address automatically** if you do not know your DNS server IP address(es).
 - If you know your DNS server IP address(es), click **Use the following DNS server addresses**, and type them in the **Preferred DNS server** and **Alternate DNS server** fields.
- If you have previously configured DNS servers, click **Advanced** and then the **DNS** tab to order them.

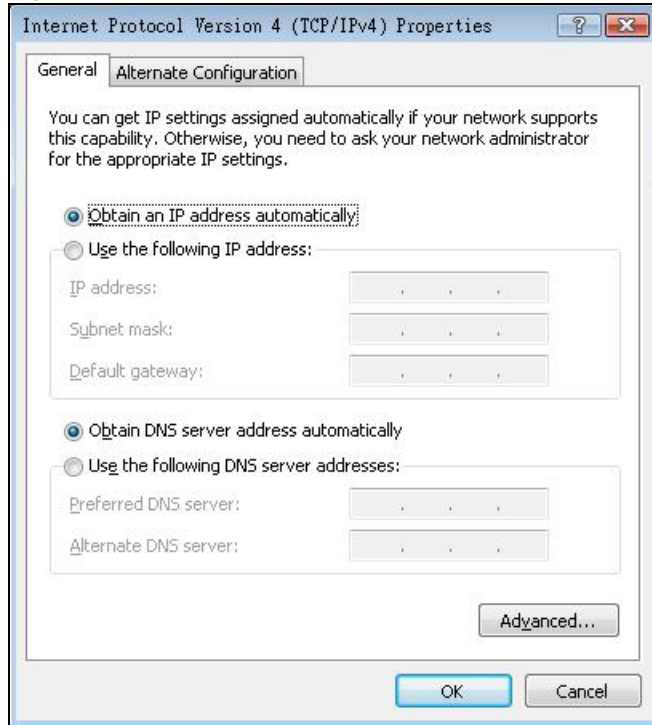Figure 224 Windows Vista: Internet Protocol Version 4 (TCP/IPv4) Properties

- 10 Click **OK** to close the **Internet Protocol Version 4 (TCP/IPv4) Properties** window.
- 11 Click **Close** to close the **Local Area Connection Properties** window.
- 12 Close the **Network Connections** window.
- 13 Turn on your SBG3600-N Series and restart your computer (if prompted).


Verifying Settings

- 1 Click **Start**, **All Programs**, **Accessories** and then **Command Prompt**.
- 2 In the **Command Prompt** window, type "ipconfig" and then press [ENTER]. You can also open **Network Connections**, right-click a network connection, click **Status** and then click the **Support** tab.

Macintosh OS 8/9


- 1 Click the **Apple** menu, **Control Panel** and double-click **TCP/IP** to open the **TCP/IP Control Panel**.

Figure 225 Macintosh OS 8/9: Apple Menu

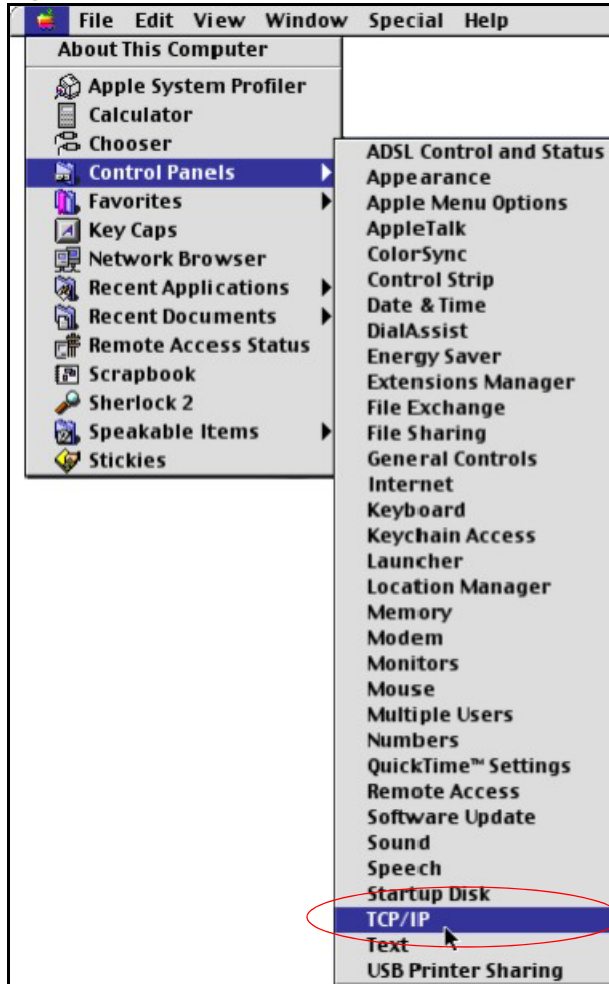

- 2 Select **Ethernet built-in** from the **Connect via** list.

Figure 226 Macintosh OS 8/9: TCP/IP

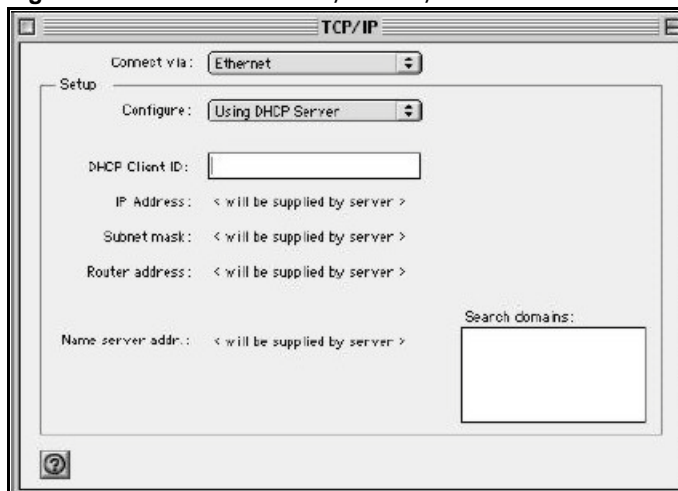

- 3 For dynamically assigned settings, select **Using DHCP Server** from the **Configure:** list.
- 4 For statically assigned settings, do the following:

- From the **Configure** box, select **Manually**.
 - Type your IP address in the **IP Address** box.
 - Type your subnet mask in the **Subnet mask** box.
 - Type the IP address of your SBG3600-N Series in the **Router address** box.
- 5 Close the **TCP/IP Control Panel**.
 - 6 Click **Save** if prompted, to save changes to your configuration.
 - 7 Turn on your SBG3600-N Series and restart your computer (if prompted).


Verifying Settings

Check your TCP/IP properties in the **TCP/IP Control Panel** window.

Macintosh OS X

- 1 Click the **Apple** menu, and click **System Preferences** to open the **System Preferences** window.

Figure 227 Macintosh OS X: Apple Menu

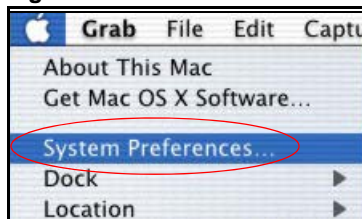

- 2 Click **Network** in the icon bar.
 - Select **Automatic** from the **Location** list.
 - Select **Built-in Ethernet** from the **Show** list.
 - Click the **TCP/IP** tab.
- 3 For dynamically assigned settings, select **Using DHCP** from the **Configure** list.

Figure 228 Macintosh OS X: Network

- 4 For statically assigned settings, do the following:
 - From the **Configure** box, select **Manually**.
 - Type your IP address in the **IP Address** box.
 - Type your subnet mask in the **Subnet mask** box.
 - Type the IP address of your SBG3600-N Series in the **Router address** box.
- 5 Click **Apply Now** and close the window.
- 6 Turn on your SBG3600-N Series and restart your computer (if prompted).

Verifying Settings

Check your TCP/IP properties in the **Network** window.

Linux

This section shows you how to configure your computer's TCP/IP settings in Red Hat Linux 9.0. Procedure, screens and file location may vary depending on your Linux distribution and release version.


Note: Make sure you are logged in as the root administrator.

Using the K Desktop Environment (KDE)

Follow the steps below to configure your computer IP address using the KDE.

- 1 Click the Red Hat button (located on the bottom left corner), select **System Setting** and click **Network**.

Figure 229 Red Hat 9.0: KDE: Network Configuration: Devices

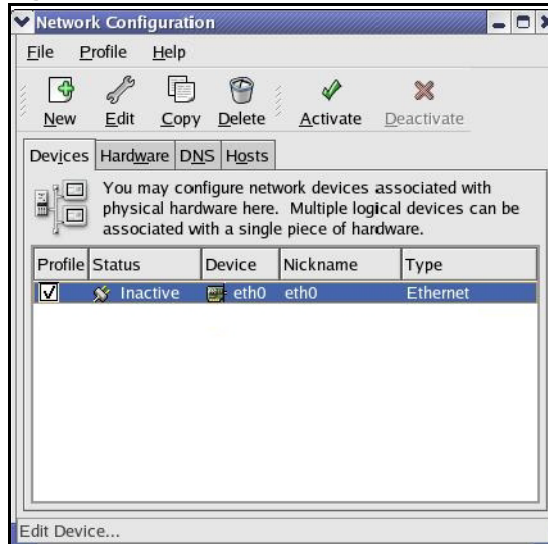

- 2 Double-click on the profile of the network card you wish to configure. The **Ethernet Device General** screen displays as shown.


Figure 230 Red Hat 9.0: KDE: Ethernet Device: General



- If you have a dynamic IP address, click **Automatically obtain IP address settings with** and select **dhcp** from the drop-down list.
 - If you have a static IP address, click **Statically set IP Addresses** and fill in the **Address**, **Subnet mask**, and **Default Gateway Address** fields.
- 3 Click **OK** to save the changes and close the **Ethernet Device General** screen.

- 4 If you know your DNS server IP address(es), click the **DNS** tab in the **Network Configuration** screen. Enter the DNS server information in the fields provided.

Figure 231 Red Hat 9.0: KDE: Network Configuration: DNS

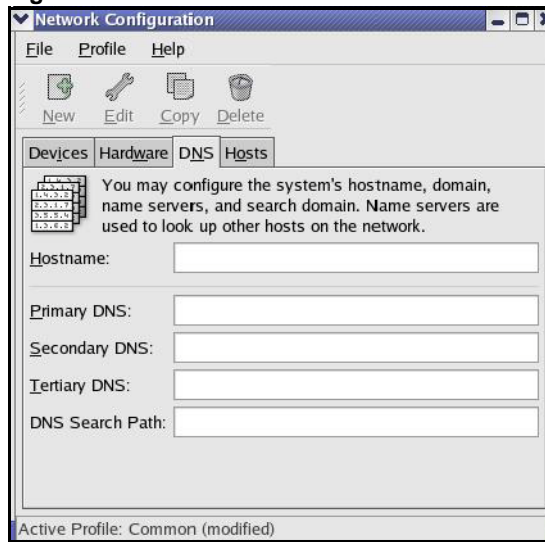

- 5 Click the **Devices** tab.
- 6 Click the **Activate** button to apply the changes. The following screen displays. Click **Yes to save the changes in all screens.**

Figure 232 Red Hat 9.0: KDE: Network Configuration: Activate



- 7 After the network card restart process is complete, make sure the **Status** is **Active** in the **Network Configuration** screen.

Using Configuration Files

Follow the steps below to edit the network configuration files and set your computer IP address.

- 1 Assuming that you have only one network card on the computer, locate the `ifconfig-eth0` configuration file (where `eth0` is the name of the Ethernet card). Open the configuration file with any plain text editor.
 - If you have a dynamic IP address, enter `dhcp` in the `BOOTPROTO=` field. The following figure shows an example.

Figure 233 Red Hat 9.0: Dynamic IP Address Setting in ifconfig-eth0

```
DEVICE=eth0
ONBOOT=yes
BOOTPROTO=dhcp
USERCTL=no
PEERDNS=yes
TYPE=Ethernet
```

- If you have a static IP address, enter **static** in the `BOOTPROTO=` field. Type `IPADDR=` followed by the IP address (in dotted decimal notation) and type `NETMASK=` followed by the subnet mask. The following example shows an example where the static IP address is 192.168.1.10 and the subnet mask is 255.255.255.0.

Figure 234 Red Hat 9.0: Static IP Address Setting in ifconfig-eth0

```
DEVICE=eth0
ONBOOT=yes
BOOTPROTO=static
IPADDR=192.168.1.10
NETMASK=255.255.255.0
USERCTL=no
PEERDNS=yes
TYPE=Ethernet
```

- 2 If you know your DNS server IP address(es), enter the DNS server information in the `resolv.conf` file in the `/etc` directory. The following figure shows an example where two DNS server IP addresses are specified.

Figure 235 Red Hat 9.0: DNS Settings in resolv.conf

```
nameserver 172.23.5.1
nameserver 172.23.5.2
```

- 3 After you edit and save the configuration files, you must restart the network card. Enter `./network restart` in the `/etc/rc.d/init.d` directory. The following figure shows an example.

Figure 236 Red Hat 9.0: Restart Ethernet Card

```
[root@localhost init.d]# network restart

Shutting down interface eth0:                [OK]
Shutting down loopback interface:            [OK]
Setting network parameters:                  [OK]
Bringing up loopback interface:               [OK]
Bringing up interface eth0:                   [OK]
```

Verifying Settings

Enter `ifconfig` in a terminal screen to check your TCP/IP properties.

Figure 237 Red Hat 9.0: Checking TCP/IP Properties

```
[root@localhost]# ifconfig
eth0      Link encap:Ethernet  HWaddr 00:50:BA:72:5B:44
          inet addr:172.23.19.129  Bcast:172.23.19.255  Mask:255.255.255.0
          UP BROADCAST RUNNING MULTICAST  MTU:1500  Metric:1
          RX packets:717 errors:0 dropped:0 overruns:0 frame:0
          TX packets:13 errors:0 dropped:0 overruns:0 carrier:0
          collisions:0 txqueuelen:100
          RX bytes:730412 (713.2 Kb)  TX bytes:1570 (1.5 Kb)
          Interrupt:10 Base address:0x1000
[root@localhost]#
```


IP Addresses and Subnetting

This appendix introduces IP addresses and subnet masks.

IP addresses identify individual devices on a network. Every networking device (including computers, servers, routers, printers, etc.) needs an IP address to communicate across the network. These networking devices are also known as hosts.

Subnet masks determine the maximum number of possible hosts on a network. You can also use subnet masks to divide one network into multiple sub-networks.

Introduction to IP Addresses


One part of the IP address is the network number, and the other part is the host ID. In the same way that houses on a street share a common street name, the hosts on a network share a common network number. Similarly, as each house has its own house number, each host on the network has its own unique identifying number - the host ID. Routers use the network number to send packets to the correct network, while the host ID determines to which host on the network the packets are delivered.

Structure

An IP address is made up of four parts, written in dotted decimal notation (for example, 192.168.1.1). Each of these four parts is known as an octet. An octet is an eight-digit binary number (for example 11000000, which is 192 in decimal notation).

Therefore, each octet has a possible range of 00000000 to 11111111 in binary, or 0 to 255 in decimal.

The following figure shows an example IP address in which the first three octets (192.168.1) are the network number, and the fourth octet (16) is the host ID.

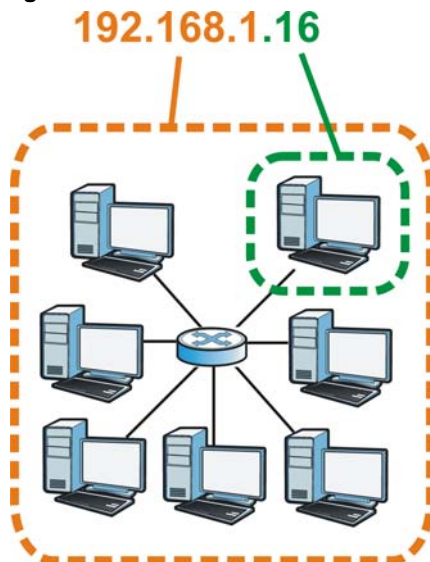Figure 238 Network Number and Host ID

How much of the IP address is the network number and how much is the host ID varies according to the subnet mask.

Subnet Masks

A subnet mask is used to determine which bits are part of the network number, and which bits are part of the host ID (using a logical AND operation). The term “subnet” is short for “sub-network”.

A subnet mask has 32 bits. If a bit in the subnet mask is a “1” then the corresponding bit in the IP address is part of the network number. If a bit in the subnet mask is “0” then the corresponding bit in the IP address is part of the host ID.

The following example shows a subnet mask identifying the network number (in bold text) and host ID of an IP address (192.168.1.2 in decimal).

Table 155 Subnet Masks

| | 1ST OCTET: (192) | 2ND OCTET: (168) | 3RD OCTET: (1) | 4TH OCTET (2) |
|----------------------|-----------------------------|-----------------------------|---------------------------|--------------------------|
| IP Address (Binary) | 11000000 | 10101000 | 00000001 | 00000010 |
| Subnet Mask (Binary) | 11111111 | 11111111 | 11111111 | 00000000 |
| Network Number | 11000000 | 10101000 | 00000001 | |
| Host ID | | | | 00000010 |

By convention, subnet masks always consist of a continuous sequence of ones beginning from the leftmost bit of the mask, followed by a continuous sequence of zeros, for a total number of 32 bits.

Subnet masks can be referred to by the size of the network number part (the bits with a “1” value). For example, an “8-bit mask” means that the first 8 bits of the mask are ones and the remaining 24 bits are zeroes.

Subnet masks are expressed in dotted decimal notation just like IP addresses. The following examples show the binary and decimal notation for 8-bit, 16-bit, 24-bit and 29-bit subnet masks.

Table 156 Subnet Masks

| | BINARY | | | | DECIMAL |
|-------------|-----------|-----------|-----------|-----------|-----------------|
| | 1ST OCTET | 2ND OCTET | 3RD OCTET | 4TH OCTET | |
| 8-bit mask | 11111111 | 00000000 | 00000000 | 00000000 | 255.0.0.0 |
| 16-bit mask | 11111111 | 11111111 | 00000000 | 00000000 | 255.255.0.0 |
| 24-bit mask | 11111111 | 11111111 | 11111111 | 00000000 | 255.255.255.0 |
| 29-bit mask | 11111111 | 11111111 | 11111111 | 11111000 | 255.255.255.248 |

Network Size

The size of the network number determines the maximum number of possible hosts you can have on your network. The larger the number of network number bits, the smaller the number of remaining host ID bits.

An IP address with host IDs of all zeros is the IP address of the network (192.168.1.0 with a 24-bit subnet mask, for example). An IP address with host IDs of all ones is the broadcast address for that network (192.168.1.255 with a 24-bit subnet mask, for example).

As these two IP addresses cannot be used for individual hosts, calculate the maximum number of possible hosts in a network as follows:

Table 157 Maximum Host Numbers

| SUBNET MASK | | HOST ID SIZE | | MAXIMUM NUMBER OF HOSTS |
|-------------|-----------------|--------------|--------------|-------------------------|
| 8 bits | 255.0.0.0 | 24 bits | $2^{24} - 2$ | 16777214 |
| 16 bits | 255.255.0.0 | 16 bits | $2^{16} - 2$ | 65534 |
| 24 bits | 255.255.255.0 | 8 bits | $2^8 - 2$ | 254 |
| 29 bits | 255.255.255.248 | 3 bits | $2^3 - 2$ | 6 |

Notation

Since the mask is always a continuous number of ones beginning from the left, followed by a continuous number of zeros for the remainder of the 32 bit mask, you can simply specify the number of ones instead of writing the value of each octet. This is usually specified by writing a "/" followed by the number of bits in the mask after the address.

For example, 192.1.1.0 /25 is equivalent to saying 192.1.1.0 with subnet mask 255.255.255.128.

The following table shows some possible subnet masks using both notations.

Table 158 Alternative Subnet Mask Notation

| SUBNET MASK | ALTERNATIVE NOTATION | LAST OCTET (BINARY) | LAST OCTET (DECIMAL) |
|-----------------|----------------------|---------------------|----------------------|
| 255.255.255.0 | /24 | 0000 0000 | 0 |
| 255.255.255.128 | /25 | 1000 0000 | 128 |
| 255.255.255.192 | /26 | 1100 0000 | 192 |

Table 158 Alternative Subnet Mask Notation (continued)


| SUBNET MASK | ALTERNATIVE NOTATION | LAST OCTET (BINARY) | LAST OCTET (DECIMAL) |
|-----------------|----------------------|---------------------|----------------------|
| 255.255.255.224 | /27 | 1110 0000 | 224 |
| 255.255.255.240 | /28 | 1111 0000 | 240 |
| 255.255.255.248 | /29 | 1111 1000 | 248 |
| 255.255.255.252 | /30 | 1111 1100 | 252 |

Subnetting

You can use subnetting to divide one network into multiple sub-networks. In the following example a network administrator creates two sub-networks to isolate a group of servers from the rest of the company network for security reasons.

In this example, the company network address is 192.168.1.0. The first three octets of the address (192.168.1) are the network number, and the remaining octet is the host ID, allowing a maximum of $2^8 - 2$ or 254 possible hosts.


The following figure shows the company network before subnetting.

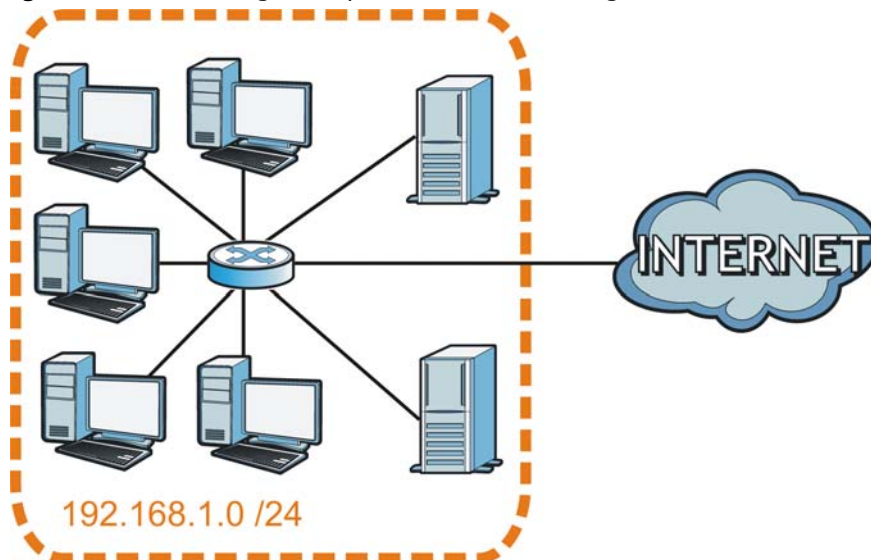Figure 239 Subnetting Example: Before Subnetting

You can “borrow” one of the host ID bits to divide the network 192.168.1.0 into two separate sub-networks. The subnet mask is now 25 bits (255.255.255.128 or /25).

The “borrowed” host ID bit can have a value of either 0 or 1, allowing two subnets; 192.168.1.0 /25 and 192.168.1.128 /25.

The following figure shows the company network after subnetting. There are now two sub-networks, **A** and **B**.

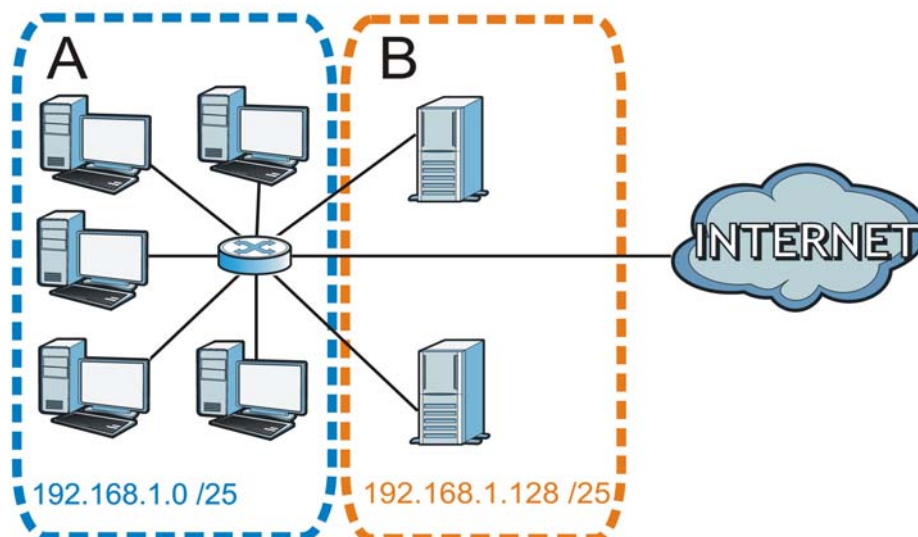Figure 240 Subnetting Example: After Subnetting

In a 25-bit subnet the host ID has 7 bits, so each sub-network has a maximum of $2^7 - 2$ or 126 possible hosts (a host ID of all zeroes is the subnet's address itself, all ones is the subnet's broadcast address).

192.168.1.0 with mask 255.255.255.128 is subnet **A** itself, and 192.168.1.127 with mask 255.255.255.128 is its broadcast address. Therefore, the lowest IP address that can be assigned to an actual host for subnet **A** is 192.168.1.1 and the highest is 192.168.1.126.

Similarly, the host ID range for subnet **B** is 192.168.1.129 to 192.168.1.254.

Example: Four Subnets

The previous example illustrated using a 25-bit subnet mask to divide a 24-bit address into two subnets. Similarly, to divide a 24-bit address into four subnets, you need to "borrow" two host ID bits to give four possible combinations (00, 01, 10 and 11). The subnet mask is 26 bits (11111111.11111111.11111111.11000000) or 255.255.255.192.

Each subnet contains 6 host ID bits, giving $2^6 - 2$ or 62 hosts for each subnet (a host ID of all zeroes is the subnet itself, all ones is the subnet's broadcast address).

Table 159 Subnet 1

| IP/SUBNET MASK | NETWORK NUMBER | LAST OCTET BIT VALUE |
|------------------------------------|-------------------------------|----------------------|
| IP Address (Decimal) | 192.168.1. | 0 |
| IP Address (Binary) | 11000000.10101000.00000001. | 00000000 |
| Subnet Mask (Binary) | 11111111.11111111.11111111. | 11000000 |
| Subnet Address: 192.168.1.0 | Lowest Host ID: 192.168.1.1 | |
| Broadcast Address: 192.168.1.63 | Highest Host ID: 192.168.1.62 | |

Table 160 Subnet 2

| IP/SUBNET MASK | NETWORK NUMBER | LAST OCTET BIT VALUE |
|-------------------------------------|--------------------------------|----------------------|
| IP Address | 192.168.1. | 64 |
| IP Address (Binary) | 11000000.10101000.00000001. | 01000000 |
| Subnet Mask (Binary) | 11111111.11111111.11111111. | 11000000 |
| Subnet Address: 192.168.1.64 | Lowest Host ID: 192.168.1.65 | |
| Broadcast Address: 192.168.1.127 | Highest Host ID: 192.168.1.126 | |

Table 161 Subnet 3

| IP/SUBNET MASK | NETWORK NUMBER | LAST OCTET BIT VALUE |
|-------------------------------------|--------------------------------|----------------------|
| IP Address | 192.168.1. | 128 |
| IP Address (Binary) | 11000000.10101000.00000001. | 10000000 |
| Subnet Mask (Binary) | 11111111.11111111.11111111. | 11000000 |
| Subnet Address: 192.168.1.128 | Lowest Host ID: 192.168.1.129 | |
| Broadcast Address: 192.168.1.191 | Highest Host ID: 192.168.1.190 | |

Table 162 Subnet 4

| IP/SUBNET MASK | NETWORK NUMBER | LAST OCTET BIT VALUE |
|-------------------------------------|--------------------------------|----------------------|
| IP Address | 192.168.1. | 192 |
| IP Address (Binary) | 11000000.10101000.00000001. | 11000000 |
| Subnet Mask (Binary) | 11111111.11111111.11111111. | 11000000 |
| Subnet Address: 192.168.1.192 | Lowest Host ID: 192.168.1.193 | |
| Broadcast Address: 192.168.1.255 | Highest Host ID: 192.168.1.254 | |

Example: Eight Subnets

Similarly, use a 27-bit mask to create eight subnets (000, 001, 010, 011, 100, 101, 110 and 111).

The following table shows IP address last octet values for each subnet.

Table 163 Eight Subnets

| SUBNET | SUBNET ADDRESS | FIRST ADDRESS | LAST ADDRESS | BROADCAST ADDRESS |
|--------|----------------|---------------|--------------|-------------------|
| 1 | 0 | 1 | 30 | 31 |
| 2 | 32 | 33 | 62 | 63 |
| 3 | 64 | 65 | 94 | 95 |
| 4 | 96 | 97 | 126 | 127 |
| 5 | 128 | 129 | 158 | 159 |
| 6 | 160 | 161 | 190 | 191 |
| 7 | 192 | 193 | 222 | 223 |
| 8 | 224 | 225 | 254 | 255 |

Subnet Planning

The following table is a summary for subnet planning on a network with a 24-bit network number.

Table 164 24-bit Network Number Subnet Planning

| NO. "BORROWED" HOST BITS | SUBNET MASK | NO. SUBNETS | NO. HOSTS PER SUBNET |
|--------------------------|-----------------------|-------------|----------------------|
| 1 | 255.255.255.128 (/25) | 2 | 126 |
| 2 | 255.255.255.192 (/26) | 4 | 62 |
| 3 | 255.255.255.224 (/27) | 8 | 30 |
| 4 | 255.255.255.240 (/28) | 16 | 14 |
| 5 | 255.255.255.248 (/29) | 32 | 6 |
| 6 | 255.255.255.252 (/30) | 64 | 2 |
| 7 | 255.255.255.254 (/31) | 128 | 1 |

The following table is a summary for subnet planning on a network with a 16-bit network number.

Table 165 16-bit Network Number Subnet Planning

| NO. "BORROWED" HOST BITS | SUBNET MASK | NO. SUBNETS | NO. HOSTS PER SUBNET |
|--------------------------|-----------------------|-------------|----------------------|
| 1 | 255.255.128.0 (/17) | 2 | 32766 |
| 2 | 255.255.192.0 (/18) | 4 | 16382 |
| 3 | 255.255.224.0 (/19) | 8 | 8190 |
| 4 | 255.255.240.0 (/20) | 16 | 4094 |
| 5 | 255.255.248.0 (/21) | 32 | 2046 |
| 6 | 255.255.252.0 (/22) | 64 | 1022 |
| 7 | 255.255.254.0 (/23) | 128 | 510 |
| 8 | 255.255.255.0 (/24) | 256 | 254 |
| 9 | 255.255.255.128 (/25) | 512 | 126 |
| 10 | 255.255.255.192 (/26) | 1024 | 62 |
| 11 | 255.255.255.224 (/27) | 2048 | 30 |
| 12 | 255.255.255.240 (/28) | 4096 | 14 |
| 13 | 255.255.255.248 (/29) | 8192 | 6 |
| 14 | 255.255.255.252 (/30) | 16384 | 2 |
| 15 | 255.255.255.254 (/31) | 32768 | 1 |

Configuring IP Addresses

Where you obtain your network number depends on your particular situation. If the ISP or your network administrator assigns you a block of registered IP addresses, follow their instructions in selecting the IP addresses and the subnet mask.

If the ISP did not explicitly give you an IP network number, then most likely you have a single user account and the ISP will assign you a dynamic IP address when the connection is established. If this is the case, it is recommended that you select a network number from 192.168.0.0 to 192.168.255.0. The Internet Assigned Number Authority (IANA) reserved this block of addresses specifically for private use; please do not use any other number unless you are told otherwise. You must also enable Network Address Translation (NAT) on the SBG3600-N Series.

Once you have decided on the network number, pick an IP address for your SBG3600-N Series that is easy to remember (for instance, 192.168.1.1) but make sure that no other device on your network is using that IP address.

The subnet mask specifies the network number portion of an IP address. Your SBG3600-N Series will compute the subnet mask automatically based on the IP address that you entered. You don't need to change the subnet mask computed by the SBG3600-N Series unless you are instructed to do otherwise.

Private IP Addresses

Every machine on the Internet must have a unique address. If your networks are isolated from the Internet (running only between two branch offices, for example) you can assign any IP addresses to the hosts without problems. However, the Internet Assigned Numbers Authority (IANA) has reserved the following three blocks of IP addresses specifically for private networks:

- 10.0.0.0 — 10.255.255.255
- 172.16.0.0 — 172.31.255.255
- 192.168.0.0 — 192.168.255.255

You can obtain your IP address from the IANA, from an ISP, or it can be assigned from a private network. If you belong to a small organization and your Internet access is through an ISP, the ISP can provide you with the Internet addresses for your local networks. On the other hand, if you are part of a much larger organization, you should consult your network administrator for the appropriate IP addresses.

Regardless of your particular situation, do not create an arbitrary IP address; always follow the guidelines above. For more information on address assignment, please refer to RFC 1597, *Address Allocation for Private Internets* and RFC 1466, *Guidelines for Management of IP Address Space*.

Pop-up Windows, JavaScript and Java Permissions

In order to use the web configurator you need to allow:

- Web browser pop-up windows from your device.
- JavaScript (enabled by default).
- Java permissions (enabled by default).

Note: Internet Explorer 6 screens are used here. Screens for other Internet Explorer versions may vary.

Internet Explorer Pop-up Blockers


You may have to disable pop-up blocking to log into your device.

Either disable pop-up blocking (enabled by default in Windows XP SP (Service Pack) 2) or allow pop-up blocking and create an exception for your device's IP address.

Disable Pop-up Blockers


- 1 In Internet Explorer, select **Tools, Pop-up Blocker** and then select **Turn Off Pop-up Blocker**.

Figure 241 Pop-up Blocker

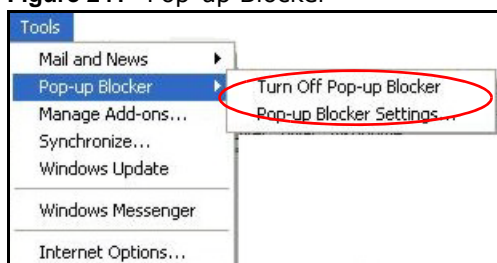

You can also check if pop-up blocking is disabled in the **Pop-up Blocker** section in the **Privacy** tab.

- 1 In Internet Explorer, select **Tools, Internet Options, Privacy**.
- 2 Clear the **Block pop-ups** check box in the **Pop-up Blocker** section of the screen. This disables any web pop-up blockers you may have enabled.

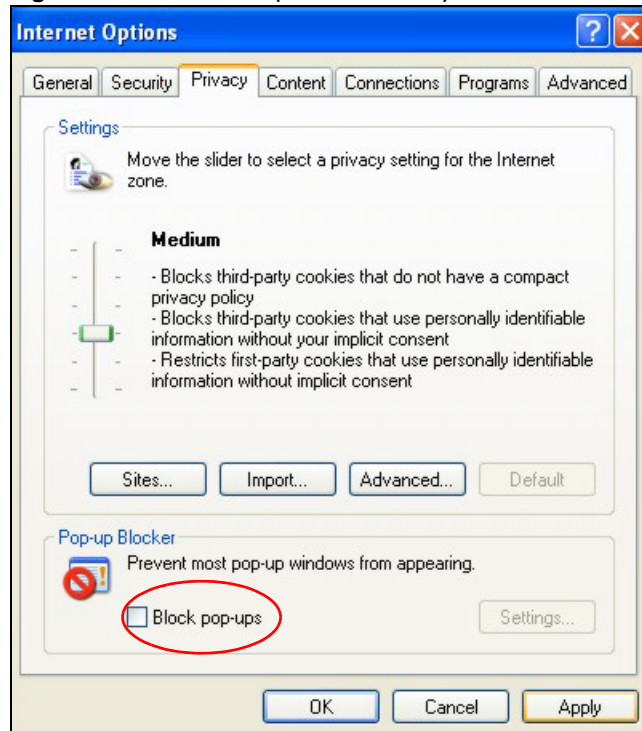
Figure 242 Internet Options: Privacy

- 3 Click **Apply** to save this setting.

Enable Pop-up Blockers with Exceptions

Alternatively, if you only want to allow pop-up windows from your device, see the following steps.

- 1 In Internet Explorer, select **Tools, Internet Options** and then the **Privacy** tab.
- 2 Select **Settings...** to open the **Pop-up Blocker Settings** screen.

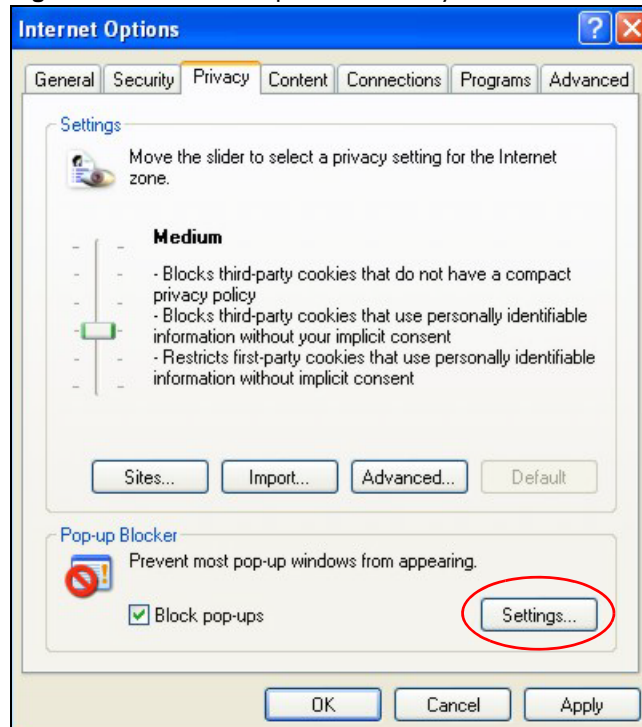Figure 243 Internet Options: Privacy

- 3 Type the IP address of your device (the web page that you do not want to have blocked) with the prefix "http://". For example, http://192.168.167.1.
- 4 Click **Add** to move the IP address to the list of **Allowed sites**.

Figure 244 Pop-up Blocker Settings


- 5 Click **Close** to return to the **Privacy** screen.
- 6 Click **Apply** to save this setting.

JavaScript


If pages of the web configurator do not display properly in Internet Explorer, check that JavaScript are allowed.

- 1 In Internet Explorer, click **Tools**, **Internet Options** and then the **Security** tab.

Figure 245 Internet Options: Security

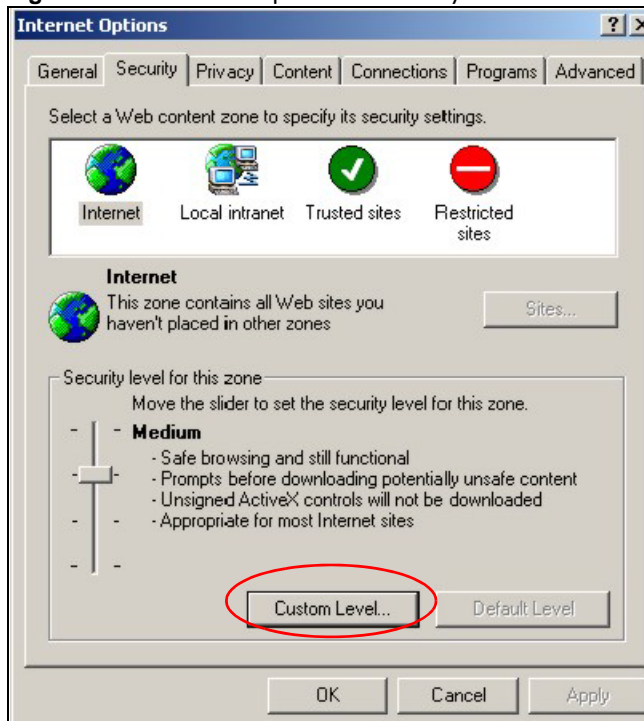


- 2 Click the **Custom Level...** button.
- 3 Scroll down to **Scripting**.
- 4 Under **Active scripting** make sure that **Enable** is selected (the default).
- 5 Under **Scripting of Java applets** make sure that **Enable** is selected (the default).
- 6 Click **OK** to close the window.

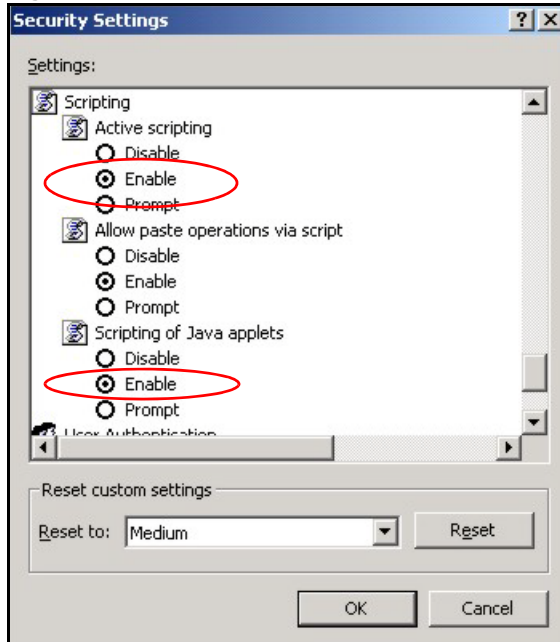Figure 246 Security Settings - Java Scripting


Java Permissions

- 1 From Internet Explorer, click **Tools, Internet Options** and then the **Security** tab.
- 2 Click the **Custom Level...** button.
- 3 Scroll down to **Microsoft VM**.
- 4 Under **Java permissions** make sure that a safety level is selected.
- 5 Click **OK** to close the window.

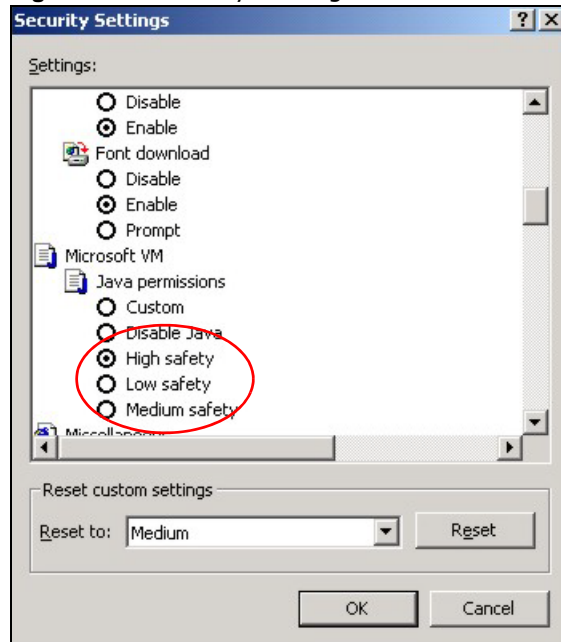Figure 247 Security Settings - Java

JAVA (Sun)

- 1 From Internet Explorer, click **Tools, Internet Options** and then the **Advanced** tab.
- 2 Make sure that **Use Java 2 for <applet>** under **Java (Sun)** is selected.
- 3 Click **OK** to close the window.

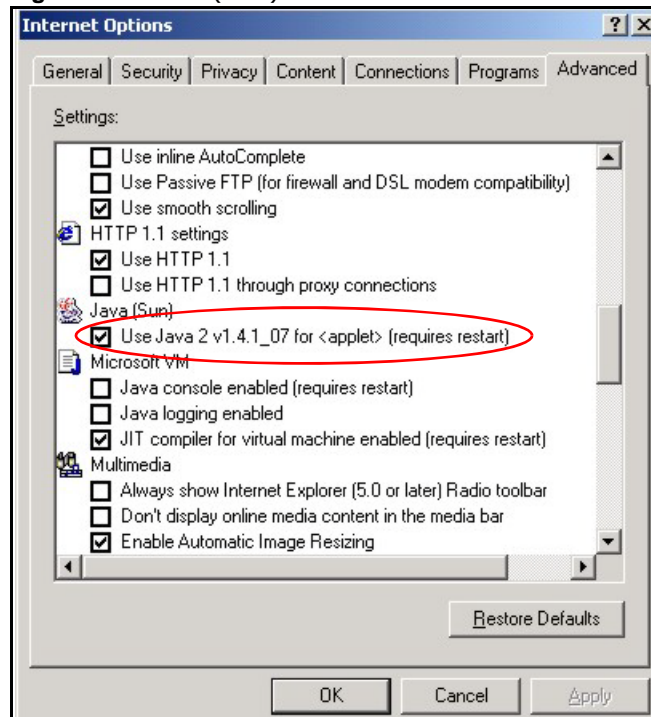
Figure 248 Java (Sun)

Mozilla Firefox

Mozilla Firefox 2.0 screens are used here. Screens for other versions may vary.


You can enable Java, Javascript and pop-ups in one screen. Click **Tools**, then click **Options** in the screen that appears.

Figure 249 Mozilla Firefox: Tools > Options

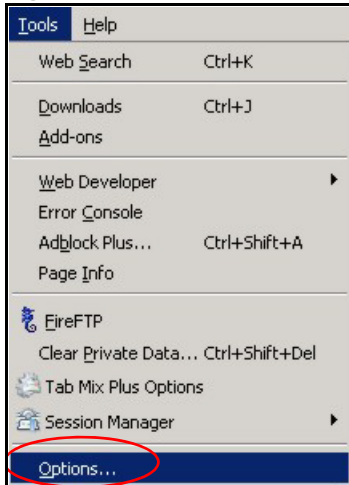

Click **Content** to show the screen below. Select the check boxes as shown in the following screen.

Figure 250 Mozilla Firefox Content Security

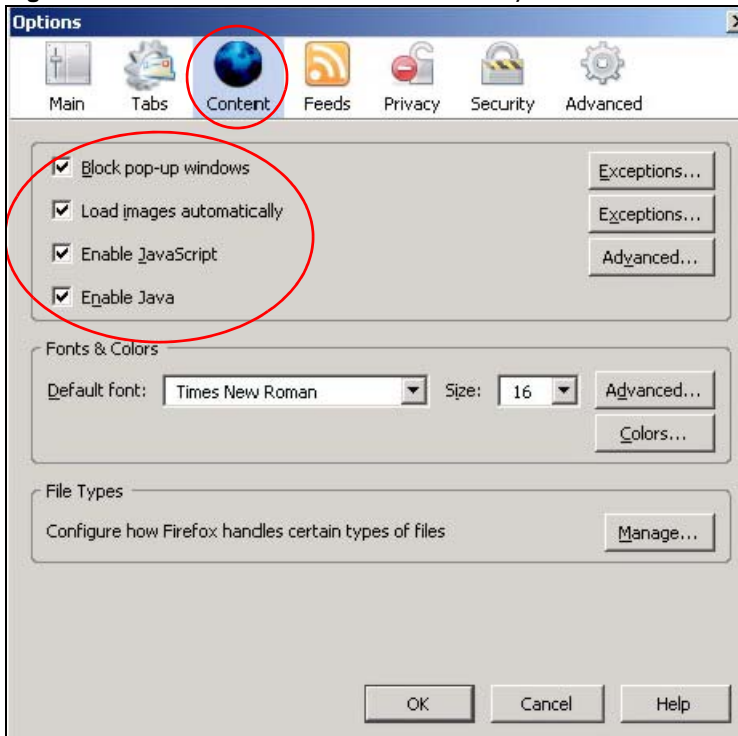

Wireless LANs


Wireless LAN Topologies

This section discusses ad-hoc and infrastructure wireless LAN topologies.

Ad-hoc Wireless LAN Configuration

The simplest WLAN configuration is an independent (Ad-hoc) WLAN that connects a set of computers with wireless adapters (A, B, C). Any time two or more wireless adapters are within range of each other, they can set up an independent network, which is commonly referred to as an ad-hoc network or Independent Basic Service Set (IBSS). The following diagram shows an example of notebook computers using wireless adapters to form an ad-hoc wireless LAN.


Figure 251 Peer-to-Peer Communication in an Ad-hoc Network

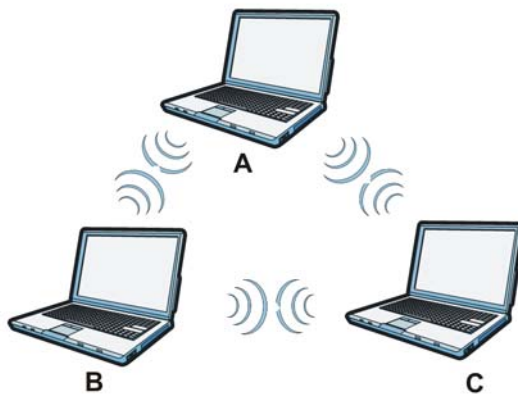

BSS

A Basic Service Set (BSS) exists when all communications between wireless clients or between a wireless client and a wired network client go through one access point (AP).

Intra-BSS traffic is traffic between wireless clients in the BSS. When Intra-BSS is enabled, wireless client **A** and **B** can access the wired network and communicate with each other. When Intra-BSS is disabled, wireless client **A** and **B** can still access the wired network but cannot communicate with each other.

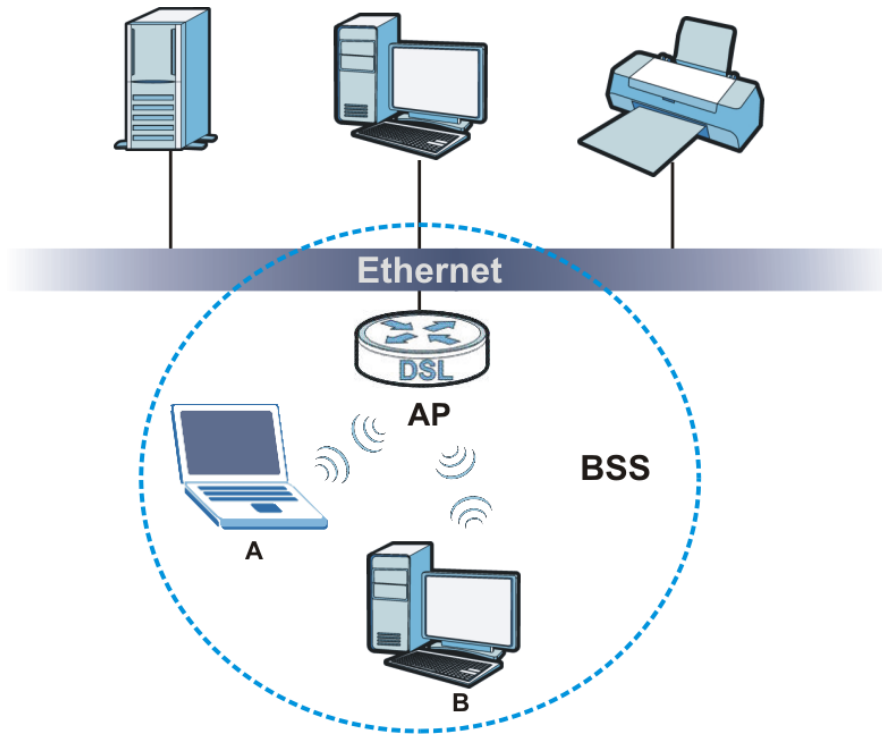
Figure 252 Basic Service Set

ESS

An Extended Service Set (ESS) consists of a series of overlapping BSSs, each containing an access point, with each access point connected together by a wired network. This wired connection between APs is called a Distribution System (DS).

This type of wireless LAN topology is called an Infrastructure WLAN. The Access Points not only provide communication with the wired network but also mediate wireless network traffic in the immediate neighborhood.

An ESSID (ESS IDentification) uniquely identifies each ESS. All access points and their associated wireless clients within the same ESS must have the same ESSID in order to communicate.

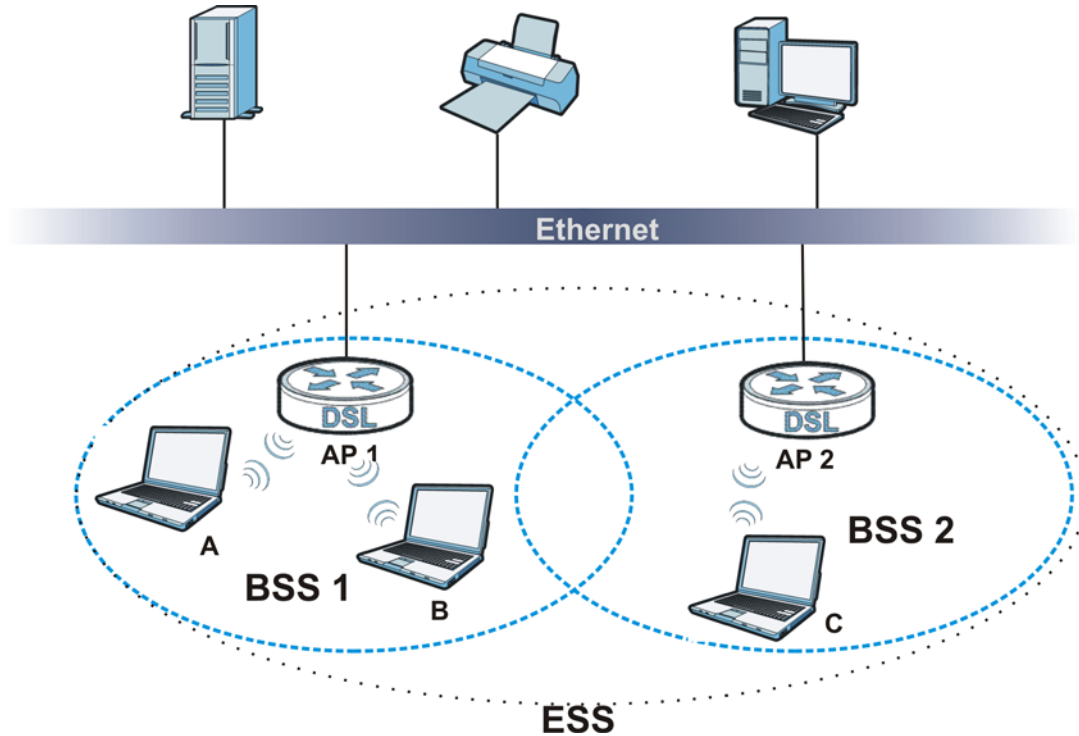Figure 253 Infrastructure WLAN


Channel

A channel is the radio frequency(ies) used by wireless devices to transmit and receive data. Channels available depend on your geographical area. You may have a choice of channels (for your region) so you should use a channel different from an adjacent AP (access point) to reduce interference. Interference occurs when radio signals from different access points overlap causing interference and degrading performance.

Adjacent channels partially overlap however. To avoid interference due to overlap, your AP should be on a channel at least five channels away from a channel that an adjacent AP is using. For example, if your region has 11 channels and an adjacent AP is using channel 1, then you need to select a channel between 6 or 11.

RTS/CTS

A hidden node occurs when two stations are within range of the same access point, but are not within range of each other. The following figure illustrates a hidden node. Both stations (STA) are within range of the access point (AP) or wireless gateway, but out-of-range of each other, so they cannot "hear" each other, that is they do not know if the channel is currently being used. Therefore, they are considered hidden from each other.

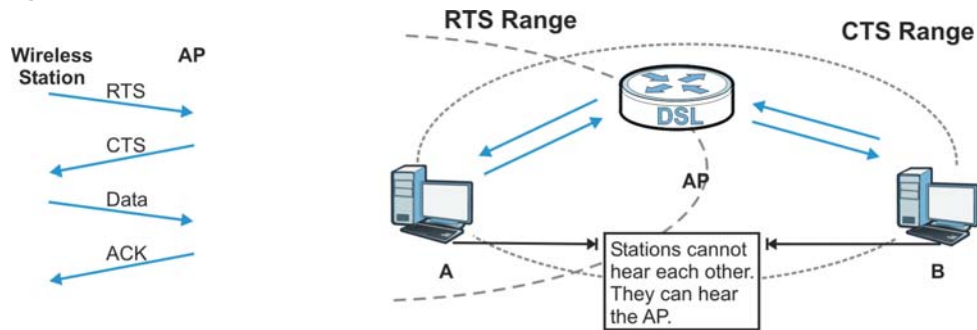Figure 254 RTS/CTS

When station **A** sends data to the AP, it might not know that the station **B** is already using the channel. If these two stations send data at the same time, collisions may occur when both sets of data arrive at the AP at the same time, resulting in a loss of messages for both stations.

RTS/CTS is designed to prevent collisions due to hidden nodes. An **RTS/CTS** defines the biggest size data frame you can send before an RTS (Request To Send)/CTS (Clear to Send) handshake is invoked.

When a data frame exceeds the **RTS/CTS** value you set (between 0 to 2432 bytes), the station that wants to transmit this frame must first send an RTS (Request To Send) message to the AP for permission to send it. The AP then responds with a CTS (Clear to Send) message to all other stations within its range to notify them to defer their transmission. It also reserves and confirms with the requesting station the time frame for the requested transmission.

Stations can send frames smaller than the specified **RTS/CTS** directly to the AP without the RTS (Request To Send)/CTS (Clear to Send) handshake.

You should only configure **RTS/CTS** if the possibility of hidden nodes exists on your network and the "cost" of resending large frames is more than the extra network overhead involved in the RTS (Request To Send)/CTS (Clear to Send) handshake.

If the **RTS/CTS** value is greater than the **Fragmentation Threshold** value (see next), then the RTS (Request To Send)/CTS (Clear to Send) handshake will never occur as data frames will be fragmented before they reach **RTS/CTS** size.

Note: Enabling the RTS Threshold causes redundant network overhead that could negatively affect the throughput performance instead of providing a remedy.

Fragmentation Threshold

A **Fragmentation Threshold** is the maximum data fragment size (between 256 and 2432 bytes) that can be sent in the wireless network before the AP will fragment the packet into smaller data frames.

A large **Fragmentation Threshold** is recommended for networks not prone to interference while you should set a smaller threshold for busy networks or networks that are prone to interference.

If the **Fragmentation Threshold** value is smaller than the **RTS/CTS** value (see previously) you set then the RTS (Request To Send)/CTS (Clear to Send) handshake will never occur as data frames will be fragmented before they reach **RTS/CTS** size.

IEEE 802.11g Wireless LAN

IEEE 802.11g is fully compatible with the IEEE 802.11b standard. This means an IEEE 802.11b adapter can interface directly with an IEEE 802.11g access point (and vice versa) at 11 Mbps or lower depending on range. IEEE 802.11g has several intermediate rate steps between the maximum and minimum data rates. The IEEE 802.11g data rate and modulation are as follows:

Table 166 IEEE 802.11g

| DATA RATE (MBPS) | MODULATION |
|---------------------------|--|
| 1 | DBPSK (Differential Binary Phase Shift Keyed) |
| 2 | DQPSK (Differential Quadrature Phase Shift Keying) |
| 5.5 / 11 | CCK (Complementary Code Keying) |
| 6/9/12/18/24/36/48/ 54 | OFDM (Orthogonal Frequency Division Multiplexing) |

Wireless Security Overview

Wireless security is vital to your network to protect wireless communication between wireless clients, access points and the wired network.

Wireless security methods available on the SBG3600-N Series are data encryption, wireless client authentication, restricting access by device MAC address and hiding the SBG3600-N Series identity.

The following figure shows the relative effectiveness of these wireless security methods available on your SBG3600-N Series.

Table 167 Wireless Security Levels

| SECURITY LEVEL | SECURITY TYPE |
|----------------|--|
| Least Secure | Unique SSID (Default) |
| | Unique SSID with Hide SSID Enabled |
| | MAC Address Filtering |
| | WEP Encryption |
| | IEEE802.1x EAP with RADIUS Server Authentication |
| | Wi-Fi Protected Access (WPA) |
| Most Secure | WPA2 |

Note: You must enable the same wireless security settings on the SBG3600-N Series and on all wireless clients that you want to associate with it.

IEEE 802.1x

In June 2001, the IEEE 802.1x standard was designed to extend the features of IEEE 802.11 to support extended authentication as well as providing additional accounting and control features. It is supported by Windows XP and a number of network devices. Some advantages of IEEE 802.1x are:

- User based identification that allows for roaming.

- Support for RADIUS (Remote Authentication Dial In User Service, RFC 2138, 2139) for centralized user profile and accounting management on a network RADIUS server.
- Support for EAP (Extensible Authentication Protocol, RFC 2486) that allows additional authentication methods to be deployed with no changes to the access point or the wireless clients.

RADIUS

RADIUS is based on a client-server model that supports authentication, authorization and accounting. The access point is the client and the server is the RADIUS server. The RADIUS server handles the following tasks:

- Authentication
Determines the identity of the users.
- Authorization
Determines the network services available to authenticated users once they are connected to the network.
- Accounting
Keeps track of the client's network activity.

RADIUS is a simple package exchange in which your AP acts as a message relay between the wireless client and the network RADIUS server.

Types of RADIUS Messages

The following types of RADIUS messages are exchanged between the access point and the RADIUS server for user authentication:

- Access-Request
Sent by an access point requesting authentication.
- Access-Reject
Sent by a RADIUS server rejecting access.
- Access-Accept
Sent by a RADIUS server allowing access.
- Access-Challenge
Sent by a RADIUS server requesting more information in order to allow access. The access point sends a proper response from the user and then sends another Access-Request message.

The following types of RADIUS messages are exchanged between the access point and the RADIUS server for user accounting:

- Accounting-Request
Sent by the access point requesting accounting.
- Accounting-Response
Sent by the RADIUS server to indicate that it has started or stopped accounting.

In order to ensure network security, the access point and the RADIUS server use a shared secret key, which is a password, they both know. The key is not sent over the network. In addition to the

shared key, password information exchanged is also encrypted to protect the network from unauthorized access.

Types of EAP Authentication

This section discusses some popular authentication types: EAP-MD5, EAP-TLS, EAP-TTLS, PEAP and LEAP. Your wireless LAN device may not support all authentication types.

EAP (Extensible Authentication Protocol) is an authentication protocol that runs on top of the IEEE 802.1x transport mechanism in order to support multiple types of user authentication. By using EAP to interact with an EAP-compatible RADIUS server, an access point helps a wireless station and a RADIUS server perform authentication.

The type of authentication you use depends on the RADIUS server and an intermediary AP(s) that supports IEEE 802.1x.

For EAP-TLS authentication type, you must first have a wired connection to the network and obtain the certificate(s) from a certificate authority (CA). A certificate (also called digital IDs) can be used to authenticate users and a CA issues certificates and guarantees the identity of each certificate owner.

EAP-MD5 (Message-Digest Algorithm 5)

MD5 authentication is the simplest one-way authentication method. The authentication server sends a challenge to the wireless client. The wireless client 'proves' that it knows the password by encrypting the password with the challenge and sends back the information. Password is not sent in plain text.

However, MD5 authentication has some weaknesses. Since the authentication server needs to get the plaintext passwords, the passwords must be stored. Thus someone other than the authentication server may access the password file. In addition, it is possible to impersonate an authentication server as MD5 authentication method does not perform mutual authentication. Finally, MD5 authentication method does not support data encryption with dynamic session key. You must configure WEP encryption keys for data encryption.

EAP-TLS (Transport Layer Security)

With EAP-TLS, digital certifications are needed by both the server and the wireless clients for mutual authentication. The server presents a certificate to the client. After validating the identity of the server, the client sends a different certificate to the server. The exchange of certificates is done in the open before a secured tunnel is created. This makes user identity vulnerable to passive attacks. A digital certificate is an electronic ID card that authenticates the sender's identity. However, to implement EAP-TLS, you need a Certificate Authority (CA) to handle certificates, which imposes a management overhead.

EAP-TTLS (Tunneled Transport Layer Service)

EAP-TTLS is an extension of the EAP-TLS authentication that uses certificates for only the server-side authentications to establish a secure connection. Client authentication is then done by sending username and password through the secure connection, thus client identity is protected. For client authentication, EAP-TTLS supports EAP methods and legacy authentication methods such as PAP, CHAP, MS-CHAP and MS-CHAP v2.

PEAP (Protected EAP)

Like EAP-TTLS, server-side certificate authentication is used to establish a secure connection, then use simple username and password methods through the secured connection to authenticate the clients, thus hiding client identity. However, PEAP only supports EAP methods, such as EAP-MD5, EAP-MSCHAPv2 and EAP-GTC (EAP-Generic Token Card), for client authentication. EAP-GTC is implemented only by Cisco.

LEAP

LEAP (Lightweight Extensible Authentication Protocol) is a Cisco implementation of IEEE 802.1x.

Dynamic WEP Key Exchange

The AP maps a unique key that is generated with the RADIUS server. This key expires when the wireless connection times out, disconnects or reauthentication times out. A new WEP key is generated each time reauthentication is performed.

If this feature is enabled, it is not necessary to configure a default encryption key in the wireless security configuration screen. You may still configure and store keys, but they will not be used while dynamic WEP is enabled.

Note: EAP-MD5 cannot be used with Dynamic WEP Key Exchange

For added security, certificate-based authentications (EAP-TLS, EAP-TTLS and PEAP) use dynamic keys for data encryption. They are often deployed in corporate environments, but for public deployment, a simple user name and password pair is more practical. The following table is a comparison of the features of authentication types.

Table 168 Comparison of EAP Authentication Types

| | EAP-MD5 | EAP-TLS | EAP-TTLS | PEAP | LEAP |
|----------------------------|---------|---------|----------|----------|----------|
| Mutual Authentication | No | Yes | Yes | Yes | Yes |
| Certificate – Client | No | Yes | Optional | Optional | No |
| Certificate – Server | No | Yes | Yes | Yes | No |
| Dynamic Key Exchange | No | Yes | Yes | Yes | Yes |
| Credential Integrity | None | Strong | Strong | Strong | Moderate |
| Deployment Difficulty | Easy | Hard | Moderate | Moderate | Moderate |
| Client Identity Protection | No | No | Yes | Yes | No |

WPA and WPA2

Wi-Fi Protected Access (WPA) is a subset of the IEEE 802.11i standard. WPA2 (IEEE 802.11i) is a wireless security standard that defines stronger encryption, authentication and key management than WPA.

Key differences between WPA or WPA2 and WEP are improved data encryption and user authentication.

If both an AP and the wireless clients support WPA2 and you have an external RADIUS server, use WPA2 for stronger data encryption. If you don't have an external RADIUS server, you should use

WPA2-PSK (WPA2-Pre-Shared Key) that only requires a single (identical) password entered into each access point, wireless gateway and wireless client. As long as the passwords match, a wireless client will be granted access to a WLAN.

If the AP or the wireless clients do not support WPA2, just use WPA or WPA-PSK depending on whether you have an external RADIUS server or not.

Select WEP only when the AP and/or wireless clients do not support WPA or WPA2. WEP is less secure than WPA or WPA2.

Encryption

WPA improves data encryption by using Temporal Key Integrity Protocol (TKIP), Message Integrity Check (MIC) and IEEE 802.1x. WPA2 also uses TKIP when required for compatibility reasons, but offers stronger encryption than TKIP with Advanced Encryption Standard (AES) in the Counter mode with Cipher block chaining Message authentication code Protocol (CCMP).

TKIP uses 128-bit keys that are dynamically generated and distributed by the authentication server. AES (Advanced Encryption Standard) is a block cipher that uses a 256-bit mathematical algorithm called Rijndael. They both include a per-packet key mixing function, a Message Integrity Check (MIC) named Michael, an extended initialization vector (IV) with sequencing rules, and a re-keying mechanism.

WPA and WPA2 regularly change and rotate the encryption keys so that the same encryption key is never used twice.

The RADIUS server distributes a Pairwise Master Key (PMK) key to the AP that then sets up a key hierarchy and management system, using the PMK to dynamically generate unique data encryption keys to encrypt every data packet that is wirelessly communicated between the AP and the wireless clients. This all happens in the background automatically.

The Message Integrity Check (MIC) is designed to prevent an attacker from capturing data packets, altering them and resending them. The MIC provides a strong mathematical function in which the receiver and the transmitter each compute and then compare the MIC. If they do not match, it is assumed that the data has been tampered with and the packet is dropped.

By generating unique data encryption keys for every data packet and by creating an integrity checking mechanism (MIC), with TKIP and AES it is more difficult to decrypt data on a Wi-Fi network than WEP and difficult for an intruder to break into the network.

The encryption mechanisms used for WPA(2) and WPA(2)-PSK are the same. The only difference between the two is that WPA(2)-PSK uses a simple common password, instead of user-specific credentials. The common-password approach makes WPA(2)-PSK susceptible to brute-force password-guessing attacks but it's still an improvement over WEP as it employs a consistent, single, alphanumeric password to derive a PMK which is used to generate unique temporal encryption keys. This prevents all wireless devices sharing the same encryption keys. (a weakness of WEP)

User Authentication

WPA and WPA2 apply IEEE 802.1x and Extensible Authentication Protocol (EAP) to authenticate wireless clients using an external RADIUS database. WPA2 reduces the number of key exchange messages from six to four (CCMP 4-way handshake) and shortens the time required to connect to a network. Other WPA2 authentication features that are different from WPA include key caching and

pre-authentication. These two features are optional and may not be supported in all wireless devices.

Key caching allows a wireless client to store the PMK it derived through a successful authentication with an AP. The wireless client uses the PMK when it tries to connect to the same AP and does not need to go through the authentication process again.

Pre-authentication enables fast roaming by allowing the wireless client (already connecting to an AP) to perform IEEE 802.1x authentication with another AP before connecting to it.

Wireless Client WPA Supplicants


A wireless client supplicant is the software that runs on an operating system instructing the wireless client how to use WPA. At the time of writing, the most widely available supplicant is the WPA patch for Windows XP, Funk Software's Odyssey client.

The Windows XP patch is a free download that adds WPA capability to Windows XP's built-in "Zero Configuration" wireless client. However, you must run Windows XP to use it.

WPA(2) with RADIUS Application Example

To set up WPA(2), you need the IP address of the RADIUS server, its port number (default is 1812), and the RADIUS shared secret. A WPA(2) application example with an external RADIUS server looks as follows. "A" is the RADIUS server. "DS" is the distribution system.

- 1 The AP passes the wireless client's authentication request to the RADIUS server.
- 2 The RADIUS server then checks the user's identification against its database and grants or denies network access accordingly.
- 3 A 256-bit Pairwise Master Key (PMK) is derived from the authentication process by the RADIUS server and the client.
- 4 The RADIUS server distributes the PMK to the AP. The AP then sets up a key hierarchy and management system, using the PMK to dynamically generate unique data encryption keys. The keys are used to encrypt every data packet that is wirelessly communicated between the AP and the wireless clients.

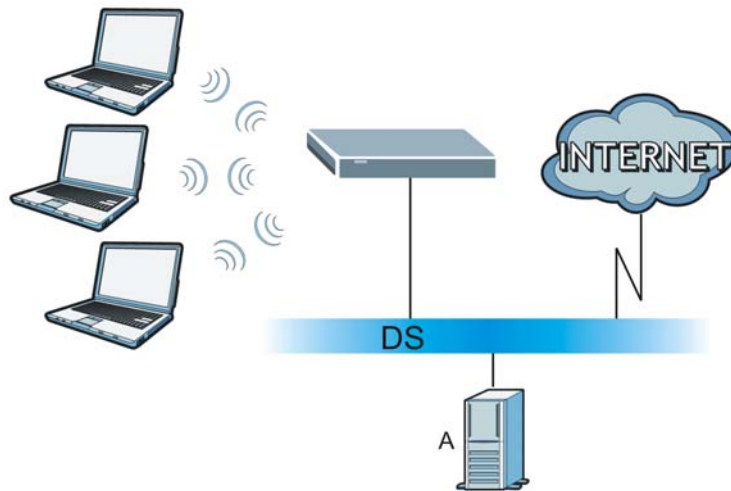Figure 255 WPA(2) with RADIUS Application Example

WPA(2)-PSK Application Example

A WPA(2)-PSK application looks as follows.

- 1 First enter identical passwords into the AP and all wireless clients. The Pre-Shared Key (PSK) must consist of between 8 and 63 ASCII characters or 64 hexadecimal characters (including spaces and symbols).
- 2 The AP checks each wireless client's password and allows it to join the network only if the password matches.
- 3 The AP and wireless clients generate a common PMK (Pairwise Master Key). The key itself is not sent over the network, but is derived from the PSK and the SSID.
- 4 The AP and wireless clients use the TKIP or AES encryption process, the PMK and information exchanged in a handshake to create temporal encryption keys. They use these keys to encrypt data exchanged between them.

Figure 256 WPA(2)-PSK Authentication

Security Parameters Summary

Refer to this table to see what other security parameters you should configure for each authentication method or key management protocol type. MAC address filters are not dependent on how you configure these security features.

Table 169 Wireless Security Relational Matrix

| AUTHENTICATION METHOD/ KEY MANAGEMENT PROTOCOL | ENCRYPTION METHOD | ENTER MANUAL KEY | IEEE 802.1X |
|--|----------------------|---------------------|--------------------------------|
| Open | None | No | Disable |
| | | | Enable without Dynamic WEP Key |
| Open | WEP | No | Enable with Dynamic WEP Key |
| | | Yes | Enable without Dynamic WEP Key |
| | | Yes | Disable |
| Shared | WEP | No | Enable with Dynamic WEP Key |
| | | Yes | Enable without Dynamic WEP Key |
| | | Yes | Disable |
| WPA | TKIP/AES | No | Enable |
| WPA-PSK | TKIP/AES | Yes | Disable |
| WPA2 | TKIP/AES | No | Enable |
| WPA2-PSK | TKIP/AES | Yes | Disable |

Antenna Overview

An antenna couples RF signals onto air. A transmitter within a wireless device sends an RF signal to the antenna, which propagates the signal through the air. The antenna also operates in reverse by capturing RF signals from the air.

Positioning the antennas properly increases the range and coverage area of a wireless LAN.

Antenna Characteristics

Frequency

An antenna in the frequency of 2.4GHz (IEEE 802.11b and IEEE 802.11g) or 5GHz (IEEE 802.11a) is needed to communicate efficiently in a wireless LAN

Radiation Pattern

A radiation pattern is a diagram that allows you to visualize the shape of the antenna's coverage area.

Antenna Gain

Antenna gain, measured in dB (decibel), is the increase in coverage within the RF beam width. Higher antenna gain improves the range of the signal for better communications.

For an indoor site, each 1 dB increase in antenna gain results in a range increase of approximately

2.5%. For an unobstructed outdoor site, each 1dB increase in gain results in a range increase of approximately 5%. Actual results may vary depending on the network environment.

Antenna gain is sometimes specified in dBi, which is how much the antenna increases the signal power compared to using an isotropic antenna. An isotropic antenna is a theoretical perfect antenna that sends out radio signals equally well in all directions. dBi represents the true gain that the antenna provides.

Types of Antennas for WLAN

There are two types of antennas used for wireless LAN applications.

- Omni-directional antennas send the RF signal out in all directions on a horizontal plane. The coverage area is torus-shaped (like a donut) which makes these antennas ideal for a room environment. With a wide coverage area, it is possible to make circular overlapping coverage areas with multiple access points.
- Directional antennas concentrate the RF signal in a beam, like a flashlight does with the light from its bulb. The angle of the beam determines the width of the coverage pattern. Angles typically range from 20 degrees (very directional) to 120 degrees (less directional). Directional antennas are ideal for hallways and outdoor point-to-point applications.

Positioning Antennas

In general, antennas should be mounted as high as practically possible and free of obstructions. In point-to-point application, position both antennas at the same height and in a direct line of sight to each other to attain the best performance.

For omni-directional antennas mounted on a table, desk, and so on, point the antenna up. For omni-directional antennas mounted on a wall or ceiling, point the antenna down. For a single AP application, place omni-directional antennas as close to the center of the coverage area as possible.

For directional antennas, point the antenna in the direction of the desired coverage area.

Overview

IPv6 (Internet Protocol version 6), is designed to enhance IP address size and features. The increase in IPv6 address size to 128 bits (from the 32-bit IPv4 address) allows up to 3.4×10^{38} IP addresses.

IPv6 Addressing

The 128-bit IPv6 address is written as eight 16-bit hexadecimal blocks separated by colons (:). This is an example IPv6 address `2001:0db8:1a2b:0015:0000:0000:1a2f:0000`.

IPv6 addresses can be abbreviated in two ways:

- Leading zeros in a block can be omitted. So `2001:0db8:1a2b:0015:0000:0000:1a2f:0000` can be written as `2001:db8:1a2b:15:0:0:1a2f:0`.
- Any number of consecutive blocks of zeros can be replaced by a double colon. A double colon can only appear once in an IPv6 address. So `2001:0db8:0000:0000:1a2f:0000:0000:0015` can be written as `2001:0db8::1a2f:0000:0000:0015`, `2001:0db8:0000:0000:1a2f::0015`, `2001:db8::1a2f:0:0:15` or `2001:db8:0:0:1a2f::15`.

Prefix and Prefix Length

Similar to an IPv4 subnet mask, IPv6 uses an address prefix to represent the network address. An IPv6 prefix length specifies how many most significant bits (start from the left) in the address compose the network address. The prefix length is written as "/x" where x is a number. For example,

`2001:db8:1a2b:15::1a2f:0/32`

means that the first 32 bits (`2001:db8`) is the subnet prefix.

Link-local Address

A link-local address uniquely identifies a device on the local network (the LAN). It is similar to a "private IP address" in IPv4. You can have the same link-local address on multiple interfaces on a device. A link-local unicast address has a predefined prefix of `fe80::/10`. The link-local unicast address format is as follows.

Table 170 Link-local Unicast Address Format

| | | |
|--------------|---------|--------------|
| 1111 1110 10 | 0 | Interface ID |
| 10 bits | 54 bits | 64 bits |

Global Address

A global address uniquely identifies a device on the Internet. It is similar to a “public IP address” in IPv4. A global unicast address starts with a 2 or 3.

Unspecified Address

An unspecified address (0:0:0:0:0:0:0 or ::) is used as the source address when a device does not have its own address. It is similar to “0.0.0.0” in IPv4.

Loopback Address

A loopback address (0:0:0:0:0:0:0:1 or ::1) allows a host to send packets to itself. It is similar to “127.0.0.1” in IPv4.

Multicast Address

In IPv6, multicast addresses provide the same functionality as IPv4 broadcast addresses. Broadcasting is not supported in IPv6. A multicast address allows a host to send packets to all hosts in a multicast group.

Multicast scope allows you to determine the size of the multicast group. A multicast address has a predefined prefix of ff00::/8. The following table describes some of the predefined multicast addresses.

Table 171 Predefined Multicast Address

| MULTICAST ADDRESS | DESCRIPTION |
|--------------------|--|
| FF01:0:0:0:0:0:0:1 | All hosts on a local node. |
| FF01:0:0:0:0:0:0:2 | All routers on a local node. |
| FF02:0:0:0:0:0:0:1 | All hosts on a local connected link. |
| FF02:0:0:0:0:0:0:2 | All routers on a local connected link. |
| FF05:0:0:0:0:0:0:2 | All routers on a local site. |
| FF05:0:0:0:0:0:1:3 | All DHCP servers on a local site. |

The following table describes the multicast addresses which are reserved and can not be assigned to a multicast group.

Table 172 Reserved Multicast Address

| MULTICAST ADDRESS |
|--------------------|
| FF00:0:0:0:0:0:0:0 |
| FF01:0:0:0:0:0:0:0 |
| FF02:0:0:0:0:0:0:0 |
| FF03:0:0:0:0:0:0:0 |
| FF04:0:0:0:0:0:0:0 |
| FF05:0:0:0:0:0:0:0 |
| FF06:0:0:0:0:0:0:0 |
| FF07:0:0:0:0:0:0:0 |

Table 172 Reserved Multicast Address (continued)

| MULTICAST ADDRESS |
|--------------------|
| FF08:0:0:0:0:0:0:0 |
| FF09:0:0:0:0:0:0:0 |
| FF0A:0:0:0:0:0:0:0 |
| FF0B:0:0:0:0:0:0:0 |
| FF0C:0:0:0:0:0:0:0 |
| FF0D:0:0:0:0:0:0:0 |
| FF0E:0:0:0:0:0:0:0 |
| FF0F:0:0:0:0:0:0:0 |

Subnet Masking

Both an IPv6 address and IPv6 subnet mask compose of 128-bit binary digits, which are divided into eight 16-bit blocks and written in hexadecimal notation. Hexadecimal uses four bits for each character (1 ~ 10, A ~ F). Each block's 16 bits are then represented by four hexadecimal characters. For example, FFFF:FFFF:FFFF:FFFF:FC00:0000:0000:0000.

Interface ID

In IPv6, an interface ID is a 64-bit identifier. It identifies a physical interface (for example, an Ethernet port) or a virtual interface (for example, the management IP address for a VLAN). One interface should have a unique interface ID.

EUI-64

The EUI-64 (Extended Unique Identifier) defined by the IEEE (Institute of Electrical and Electronics Engineers) is an interface ID format designed to adapt with IPv6. It is derived from the 48-bit (6-byte) Ethernet MAC address as shown next. EUI-64 inserts the hex digits ffe between the third and fourth bytes of the MAC address and complements the seventh bit of the first byte of the MAC address. See the following example.


| | |
|--------|---------------------------------------|
| MAC | 00 : 13 : 49 : 12 : 34 : 56 |
| EUI-64 | 02 : 13 : 49 : FF : FE : 12 : 34 : 56 |

Identity Association

An Identity Association (IA) is a collection of addresses assigned to a DHCP client, through which the server and client can manage a set of related IP addresses. Each IA must be associated with exactly one interface. The DHCP client uses the IA assigned to an interface to obtain configuration from a DHCP server for that interface. Each IA consists of a unique IAID and associated IP information.

The IA type is the type of address in the IA. Each IA holds one type of address. IA_NA means an identity association for non-temporary addresses and IA_TA is an identity association for temporary addresses. An IA_NA option contains the T1 and T2 fields, but an IA_TA option does not. The DHCPv6 server uses T1 and T2 to control the time at which the client contacts with the server to extend the lifetimes on any addresses in the IA_NA before the lifetimes expire. After T1, the client sends the server (S1) (from which the addresses in the IA_NA were obtained) a Renew message. If

the time T2 is reached and the server does not respond, the client sends a Rebind message to any available server (**S2**). For an IA_TA, the client may send a Renew or Rebind message at the client's discretion.

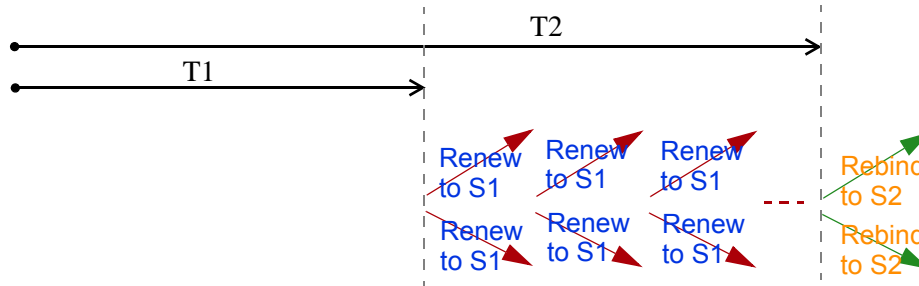

DHCP Relay Agent

A DHCP relay agent is on the same network as the DHCP clients and helps forward messages between the DHCP server and clients. When a client cannot use its link-local address and a well-known multicast address to locate a DHCP server on its network, it then needs a DHCP relay agent to send a message to a DHCP server that is not attached to the same network.

The DHCP relay agent can add the remote identification (remote-ID) option and the interface-ID option to the Relay-Forward DHCPv6 messages. The remote-ID option carries a user-defined string, such as the system name. The interface-ID option provides slot number, port information and the VLAN ID to the DHCPv6 server. The remote-ID option (if any) is stripped from the Relay-Reply messages before the relay agent sends the packets to the clients. The DHCP server copies the interface-ID option from the Relay-Forward message into the Relay-Reply message and sends it to the relay agent. The interface-ID should not change even after the relay agent restarts.

Prefix Delegation

Prefix delegation enables an IPv6 router to use the IPv6 prefix (network address) received from the ISP (or a connected uplink router) for its LAN. The SBG3600-N Series uses the received IPv6 prefix (for example, 2001:db2::/48) to generate its LAN IP address. Through sending Router Advertisements (RAs) regularly by multicast, the SBG3600-N Series passes the IPv6 prefix information to its LAN hosts. The hosts then can use the prefix to generate their IPv6 addresses.

ICMPv6

Internet Control Message Protocol for IPv6 (ICMPv6 or ICMP for IPv6) is defined in RFC 4443. ICMPv6 has a preceding Next Header value of 58, which is different from the value used to identify ICMP for IPv4. ICMPv6 is an integral part of IPv6. IPv6 nodes use ICMPv6 to report errors encountered in packet processing and perform other diagnostic functions, such as "ping".

Neighbor Discovery Protocol (NDP)

The Neighbor Discovery Protocol (NDP) is a protocol used to discover other IPv6 devices and track neighbor's reachability in a network. An IPv6 device uses the following ICMPv6 messages types:

- Neighbor solicitation: A request from a host to determine a neighbor's link-layer address (MAC address) and detect if the neighbor is still reachable. A neighbor being "reachable" means it responds to a neighbor solicitation message (from the host) with a neighbor advertisement message.

- Neighbor advertisement: A response from a node to announce its link-layer address.
- Router solicitation: A request from a host to locate a router that can act as the default router and forward packets.
- Router advertisement: A response to a router solicitation or a periodical multicast advertisement from a router to advertise its presence and other parameters.

IPv6 Cache

An IPv6 host is required to have a neighbor cache, destination cache, prefix list and default router list. The SBG3600-N Series maintains and updates its IPv6 caches constantly using the information from response messages. In IPv6, the SBG3600-N Series configures a link-local address automatically, and then sends a neighbor solicitation message to check if the address is unique. If there is an address to be resolved or verified, the SBG3600-N Series also sends out a neighbor solicitation message. When the SBG3600-N Series receives a neighbor advertisement in response, it stores the neighbor's link-layer address in the neighbor cache. When the SBG3600-N Series uses a router solicitation message to query for a router and receives a router advertisement message, it adds the router's information to the neighbor cache, prefix list and destination cache. The SBG3600-N Series creates an entry in the default router list cache if the router can be used as a default router.

When the SBG3600-N Series needs to send a packet, it first consults the destination cache to determine the next hop. If there is no matching entry in the destination cache, the SBG3600-N Series uses the prefix list to determine whether the destination address is on-link and can be reached directly without passing through a router. If the address is unlinked, the address is considered as the next hop. Otherwise, the SBG3600-N Series determines the next-hop from the default router list or routing table. Once the next hop IP address is known, the SBG3600-N Series looks into the neighbor cache to get the link-layer address and sends the packet when the neighbor is reachable. If the SBG3600-N Series cannot find an entry in the neighbor cache or the state for the neighbor is not reachable, it starts the address resolution process. This helps reduce the number of IPv6 solicitation and advertisement messages.

Multicast Listener Discovery

The Multicast Listener Discovery (MLD) protocol (defined in RFC 2710) is derived from IPv4's Internet Group Management Protocol version 2 (IGMPv2). MLD uses ICMPv6 message types, rather than IGMP message types. MLDv1 is equivalent to IGMPv2 and MLDv2 is equivalent to IGMPv3.

MLD allows an IPv6 switch or router to discover the presence of MLD listeners who wish to receive multicast packets and the IP addresses of multicast groups the hosts want to join on its network.

MLD snooping and MLD proxy are analogous to IGMP snooping and IGMP proxy in IPv4.

MLD filtering controls which multicast groups a port can join.

MLD Messages

A multicast router or switch periodically sends general queries to MLD hosts to update the multicast forwarding table. When an MLD host wants to join a multicast group, it sends an MLD Report message for that address.

An MLD Done message is equivalent to an IGMP Leave message. When an MLD host wants to leave a multicast group, it can send a Done message to the router or switch. The router or switch then

sends a group-specific query to the port on which the Done message is received to determine if other devices connected to this port should remain in the group.

Example - Enabling IPv6 on Windows XP/2003/Vista

By default, Windows XP and Windows 2003 support IPv6. This example shows you how to use the `ipv6 install` command on Windows XP/2003 to enable IPv6. This also displays how to use the `ipconfig` command to see auto-generated IP addresses.

```
C:\>ipv6 install
Installing...
Succeeded.

C:\>ipconfig

Windows IP Configuration

Ethernet adapter Local Area Connection:

    Connection-specific DNS Suffix  . : 
    IP Address. . . . . : 10.1.1.46
    Subnet Mask . . . . . : 255.255.255.0
    IP Address. . . . . : fe80::2d0:59ff:feb8:103c%4
    Default Gateway . . . . . : 10.1.1.254
```


IPv6 is installed and enabled by default in Windows Vista. Use the `ipconfig` command to check your automatic configured IPv6 address as well. You should see at least one IPv6 address available for the interface on your computer.

Example - Enabling DHCPv6 on Windows XP


Windows XP does not support DHCPv6. If your network uses DHCPv6 for IP address assignment, you have to additionally install a DHCPv6 client software on your Windows XP. (Note: If you use static IP addresses or Router Advertisement for IPv6 address assignment in your network, ignore this section.)

This example uses Dibbler as the DHCPv6 client. To enable DHCPv6 client on your computer:

- 1 Install Dibbler and select the DHCPv6 client option on your computer.
- 2 After the installation is complete, select **Start > All Programs > Dibbler-DHCPv6 > Client Install as service**.
- 3 Select **Start > Control Panel > Administrative Tools > Services**.
- 4 Double click **Dibbler - a DHCPv6 client**.

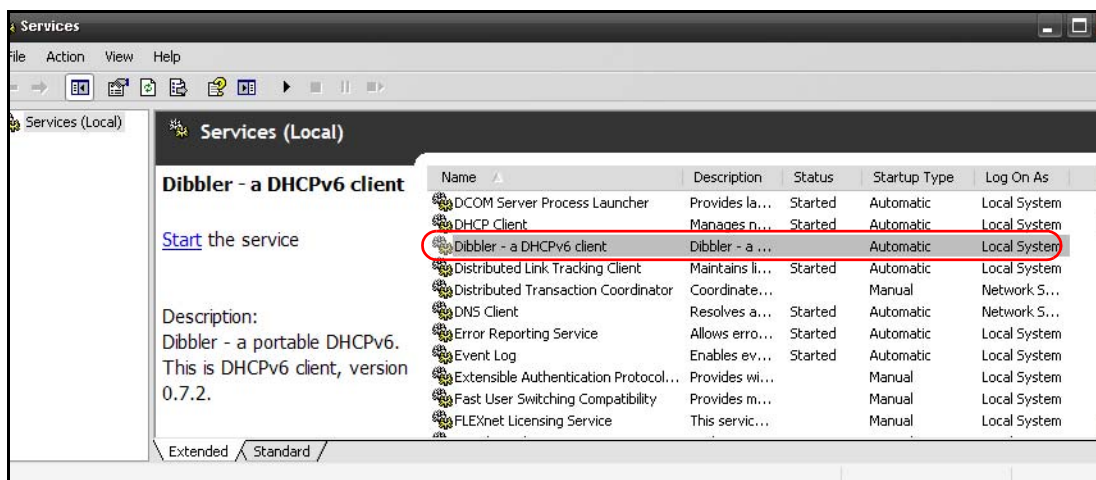

- 5 Click **Start** and then **OK**.

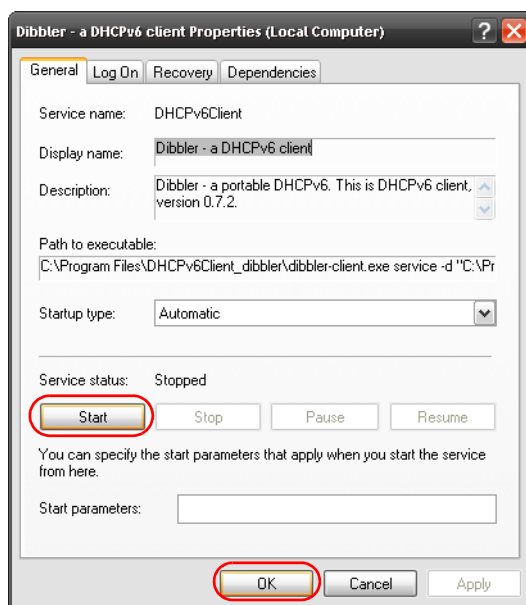


- 6 Now your computer can obtain an IPv6 address from a DHCPv6 server.

Example - Enabling IPv6 on Windows 7

Windows 7 supports IPv6 by default. DHCPv6 is also enabled when you enable IPv6 on a Windows 7 computer.

To enable IPv6 in Windows 7:

- 1 Select **Control Panel > Network and Sharing Center > Local Area Connection**.
- 2 Select the **Internet Protocol Version 6 (TCP/IPv6)** checkbox to enable it.
- 3 Click **OK** to save the change.

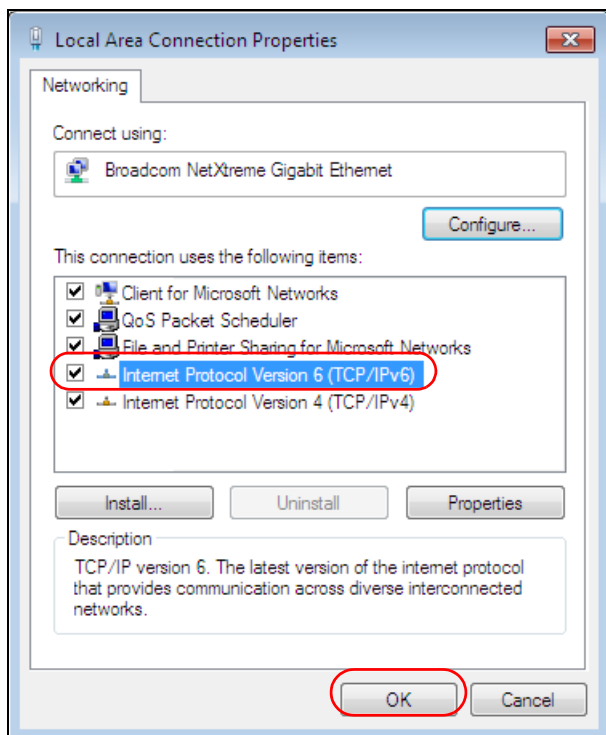

- 4 Click **Close** to exit the **Local Area Connection Status** screen.
- 5 Select **Start > All Programs > Accessories > Command Prompt**.
- 6 Use the `ipconfig` command to check your dynamic IPv6 address. This example shows a global address (2001:b021:2d::1000) obtained from a DHCP server.

```
C:\>ipconfig

Windows IP Configuration

Ethernet adapter Local Area Connection:

    Connection-specific DNS Suffix  . : 
    IPv6 Address. . . . . : 2001:b021:2d::1000
    Link-local IPv6 Address . . . . . : fe80::25d8:dcab:c80a:5189%11
    IPv4 Address. . . . . : 172.16.100.61
    Subnet Mask . . . . . : 255.255.255.0
    Default Gateway . . . . . : fe80::213:49ff:feaa:7125%11
                                172.16.100.254
```


Services

The following table lists some commonly-used services and their associated protocols and port numbers.

- **Name:** This is a short, descriptive name for the service. You can use this one or create a different one, if you like.
- **Protocol:** This is the type of IP protocol used by the service. If this is **TCP/UDP**, then the service uses the same port number with TCP and UDP. If this is **USER-DEFINED**, the **Port(s)** is the IP protocol number, not the port number.
- **Port(s):** This value depends on the **Protocol**.
 - If the **Protocol** is **TCP**, **UDP**, or **TCP/UDP**, this is the IP port number.
 - If the **Protocol** is **USER**, this is the IP protocol number.
- **Description:** This is a brief explanation of the applications that use this service or the situations in which this service is used.

Table 173 Examples of Services

| NAME | PROTOCOL | PORT(S) | DESCRIPTION |
|--------------------|--------------|---------|--|
| AH (IPSEC_TUNNEL) | User-Defined | 51 | The IPSEC AH (Authentication Header) tunneling protocol uses this service. |
| AIM | TCP | 5190 | AOL's Internet Messenger service. |
| AUTH | TCP | 113 | Authentication protocol used by some servers. |
| BGP | TCP | 179 | Border Gateway Protocol. |
| BOOTP_CLIENT | UDP | 68 | DHCP Client. |
| BOOTP_SERVER | UDP | 67 | DHCP Server. |
| CU-SEEME | TCP/UDP | 7648 | A popular videoconferencing solution from White Pines Software. |
| | TCP/UDP | 24032 | |
| DNS | TCP/UDP | 53 | Domain Name Server, a service that matches web names (for instance www.zyxel.com) to IP numbers. |
| ESP (IPSEC_TUNNEL) | User-Defined | 50 | The IPSEC ESP (Encapsulation Security Protocol) tunneling protocol uses this service. |
| FINGER | TCP | 79 | Finger is a UNIX or Internet related command that can be used to find out if a user is logged on. |
| FTP | TCP | 20 | File Transfer Protocol, a program to enable fast transfer of files, including large files that may not be possible by e-mail. |
| | TCP | 21 | |
| H.323 | TCP | 1720 | NetMeeting uses this protocol. |
| HTTP | TCP | 80 | Hyper Text Transfer Protocol - a client/server protocol for the world wide web. |
| HTTPS | TCP | 443 | HTTPS is a secured http session often used in e-commerce. |
| ICMP | User-Defined | 1 | Internet Control Message Protocol is often used for diagnostic purposes. |
| ICQ | UDP | 4000 | This is a popular Internet chat program. |
| IGMP (MULTICAST) | User-Defined | 2 | Internet Group Multicast Protocol is used when sending packets to a specific group of hosts. |
| IKE | UDP | 500 | The Internet Key Exchange algorithm is used for key distribution and management. |
| IMAP4 | TCP | 143 | The Internet Message Access Protocol is used for e-mail. |
| IMAP4S | TCP | 993 | This is a more secure version of IMAP4 that runs over SSL. |
| IRC | TCP/UDP | 6667 | This is another popular Internet chat program. |
| MSN Messenger | TCP | 1863 | Microsoft Networks' messenger service uses this protocol. |
| NetBIOS | TCP/UDP | 137 | The Network Basic Input/Output System is used for communication between computers in a LAN. |
| | TCP/UDP | 138 | |
| | TCP/UDP | 139 | |
| | TCP/UDP | 445 | |
| NEW-ICQ | TCP | 5190 | An Internet chat program. |
| NEWS | TCP | 144 | A protocol for news groups. |

Table 173 Examples of Services (continued)

| NAME | PROTOCOL | PORT(S) | DESCRIPTION |
|-------------------|--------------|---------|---|
| NFS | UDP | 2049 | Network File System - NFS is a client/server distributed file service that provides transparent file sharing for network environments. |
| NNTP | TCP | 119 | Network News Transport Protocol is the delivery mechanism for the USENET newsgroup service. |
| PING | User-Defined | 1 | Packet Internet Groper is a protocol that sends out ICMP echo requests to test whether or not a remote host is reachable. |
| POP3 | TCP | 110 | Post Office Protocol version 3 lets a client computer get e-mail from a POP3 server through a temporary connection (TCP/IP or other). |
| POP3S | TCP | 995 | This is a more secure version of POP3 that runs over SSL. |
| PPTP | TCP | 1723 | Point-to-Point Tunneling Protocol enables secure transfer of data over public networks. This is the control channel. |
| PPTP_TUNNEL (GRE) | User-Defined | 47 | PPTP (Point-to-Point Tunneling Protocol) enables secure transfer of data over public networks. This is the data channel. |
| RCMD | TCP | 512 | Remote Command Service. |
| REAL_AUDIO | TCP | 7070 | A streaming audio service that enables real time sound over the web. |
| REXEC | TCP | 514 | Remote Execution Daemon. |
| RLOGIN | TCP | 513 | Remote Login. |
| ROADRUNNER | TCP/UDP | 1026 | This is an ISP that provides services mainly for cable modems. |
| RTELNET | TCP | 107 | Remote Telnet. |
| RTSP | TCP/UDP | 554 | The Real Time Streaming (media control) Protocol (RTSP) is a remote control for multimedia on the Internet. |
| SFTP | TCP | 115 | The Simple File Transfer Protocol is an old way of transferring files between computers. |
| SMTP | TCP | 25 | Simple Mail Transfer Protocol is the message-exchange standard for the Internet. SMTP enables you to move messages from one e-mail server to another. |
| SMTPS | TCP | 465 | This is a more secure version of SMTP that runs over SSL. |
| SMTP | TCP | 587 | This is a more secure version of SMTP that authenticates sender from out of network mailservers. |
| SNMP | TCP/UDP | 161 | Simple Network Management Program. |
| SNMP-TRAPS | TCP/UDP | 162 | Traps for use with the SNMP (RFC:1215). |
| SQL-NET | TCP | 1521 | Structured Query Language is an interface to access data on many different types of database systems, including mainframes, midrange systems, UNIX systems and network servers. |
| SSDP | UDP | 1900 | The Simple Service Discovery Protocol supports Universal Plug-and-Play (UPnP). |
| SSH | TCP/UDP | 22 | Secure Shell Remote Login Program. |

Table 173 Examples of Services (continued)

| NAME | PROTOCOL | PORT(S) | DESCRIPTION |
|------------|------------|--------------------------|--|
| STRM WORKS | UDP | 1558 | Stream Works Protocol. |
| SYSLOG | UDP | 514 | Syslog allows you to send system logs to a UNIX server. |
| TACACS | UDP | 49 | Login Host Protocol used for (Terminal Access Controller Access Control System). |
| TELNET | TCP | 23 | Telnet is the login and terminal emulation protocol common on the Internet and in UNIX environments. It operates over TCP/IP networks. Its primary function is to allow users to log into remote host systems. |
| VDOLIVE | TCP UDP | 7000 user- defined | A videoconferencing solution. The UDP port number is specified in the application. |

Legal Information

Copyright

Copyright © 2015 by ZyXEL Communications Corporation.

The contents of this publication may not be reproduced in any part or as a whole, transcribed, stored in a retrieval system, translated into any language, or transmitted in any form or by any means, electronic, mechanical, magnetic, optical, chemical, photocopying, manual, or otherwise, without the prior written permission of ZyXEL Communications Corporation.

Published by ZyXEL Communications Corporation. All rights reserved.

Disclaimers

ZyXEL does not assume any liability arising out of the application or use of any products, or software described herein. Neither does it convey any license under its patent rights nor the patent rights of others. ZyXEL further reserves the right to make changes in any products described herein without notice. This publication is subject to change without notice.

Your use of the SBG3600-N Series is subject to the terms and conditions of any related service providers.

Trademarks

Trademarks mentioned in this publication are used for identification purposes only and may be properties of their respective owners.

Regulatory Notice and Statement

UNITED STATE AMERICA



The following information applies if you use the product within USA area.

FCC EMC Statement

- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
- 1 This device may not cause harmful interference, and
- 2 this device must accept any interference received, including interference that may cause undesired operation.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- This product has been tested and complies with the specifications for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used according to the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.
- If this equipment does cause harmful interference to radio or television reception, which is found by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- 1 Reorient or relocate the receiving antenna.
- 2 Increase the separation between the equipment or devices.
- 3 Connect the equipment to an outlet other than the receiver's.
- 4 Consult a dealer or an experienced radio/TV technician for assistance.

FCC Radiation Exposure Statement

- This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment.
- This transmitter must be at least 20 cm from the user and must not be co-located or operating in conjunction with any other antenna or transmitter.

CANADA

The following information applies if you use the product within Canada area.

Industry Canada ICES statement

CAN ICES-3 (B)/NMB-3(B)

Industry Canada RSS-GEN & RSS-210 statement

- This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.
- Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.
- This radio transmitter has been approved by Industry Canada to operate with the antenna types listed below with the maximum permissible gain and required antenna impedance for each antenna type indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.
- Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.
- Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.
- Le présent émetteur radio de modèle s'il fait partie du matériel de catégorie I a été approuvé par Industrie Canada pour fonctionner avec les types d'antenne énumérés ci-dessous et ayant un gain admissible maximal et l'impédance requise pour chaque type d'antenne. Les types d'antenne non inclus dans cette liste, ou dont le gain est supérieur au gain maximal indiqué, sont strictement interdits pour l'exploitation de l'émetteur.

Industry Canada radiation exposure statement

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body.

Déclaration d'exposition aux radiations:

Cet équipement est conforme aux limites d'exposition aux rayonnements IC établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 20 cm de distance entre la source de rayonnement et votre corps.

EUROPEAN UNION

The following information applies if you use the product within the European Union.

Declaration of Conformity with Regard to EU Directive 1999/5/EC (R&TTE Directive)

Compliance information for 2.4GHz and/or 5GHz wireless products relevant to the EU and other Countries following the EU Directive 1999/5/EC (R&TTE).

| | |
|-----------------------|---|
| Български (Bulgarian) | С настоящото ZyXEL декларира, че това оборудване е в съответствие със съществените изисквания и другите приложими разпоредбите на Директива 1999/5/EC. |
| Español (Spanish) | Por medio de la presente ZyXEL declara que el equipo cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE. |
| Čeština (Czech) | ZyXEL tímto prohlašuje, že tento zařízený je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 1999/5/EC. |
| Dansk (Danish) | Undertegnede ZyXEL erklærer herved, at følgende udstyr overholder de væsentlige krav og øvrige relevante krav i direktiv 1999/5/EF. |
| Deutsch (German) | Hiermit erklärt ZyXEL, dass sich das Gerät Ausstattung in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 1999/5/EU befindet. |
| Eesti keel (Estonian) | Käesolevaga kinnitab ZyXEL seadme seadmed vastavust direktiivi 1999/5/EÜ põhinõuetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele. |
| Ελληνικά (Greek) | ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ ΖΥΧΕΛ ΔΗΛΩΝΕΙ ΟΤΙ ΕΞΟΠΛΙΣΜΟΣ ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 1999/5/ΕΚ. |
| English | Hereby, ZyXEL declares that this equipment is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. |
| Français (French) | Par la présente ZyXEL déclare que l'appareil équipements est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/EC. |
| Hrvatski (Croatian) | ZyXEL ovime izjavljuje da je radijska oprema tipa u skladu s Direktivom 1999/5/EC. |
| Íslenska (Icelandic) | Hér með lýsir, ZyXEL því yfir að þessi búnaður er í samræmi við grunnkröfur og önnur viðeigandi ákvæði tilskipunar 1999/5/EC. |
| Italiano (Italian) | Con la presente ZyXEL dichiara che questo attrezzatura è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE. |

| | |
|-----------------------------|--|
| Latviešu valoda (Latvian) | Ar šo ZyXEL deklarē, ka iekārtas atbilst Direktīvas 1999/5/EK būtiskajām prasībām un citiem ar to saistītajiem noteikumiem. |
| Lietuvių kalba (Lithuanian) | Šiuo ZyXEL deklaruojama, kad šis įranga atitinka esminius reikalavimus ir kitas 1999/5/EB Direktyvos nuostatas. |
| Magyar (Hungarian) | Alulírott, ZyXEL nyilatkozom, hogy a berendezés megfelel a vonatkozó alapvető követelményeknek és az 1999/5/EK irányelv egyéb előírásainak. |
| Malti (Maltese) | Hawnhekk, ZyXEL, jiddikjara li dan taghmir jikkonforma mal-htigijiet essenzjali u ma provvedimenti oħrajn rilevanti li hemm fid-Direttiva 1999/5/EC. |
| Nederlands (Dutch) | Hierbij verklaart ZyXEL dat het toestel uitrusting in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EC. |
| Polski (Polish) | Niniejszym ZyXEL oświadcza, że sprzęt jest zgodny z zasadniczymi wymogami oraz pozostałymi stosownymi postanowieniami Dyrektywy 1999/5/EC. |
| Português (Portuguese) | ZyXEL declara que este equipamento está conforme com os requisitos essenciais e outras disposições da Directiva 1999/5/EC. |
| Română (Romanian) | Prin prezenta, ZyXEL declară că acest echipament este în conformitate cu cerințele esențiale și alte prevederi relevante ale Directivei 1999/5/EC. |
| Slovenčina (Slovak) | ZyXEL týmto vyhlasuje, že zariadenia spĺňa základné požiadavky a všetky príslušné ustanovenia Smernice 1999/5/EC. |
| Slovenščina (Slovene) | ZyXEL izjavlja, da je ta oprema v skladu z bistvenimi zahtevami in ostalimi relevantnimi določili direktive 1999/5/EC. |
| Suomi (Finnish) | ZyXEL vakuuttaa täten että laitteet tyyppinen laite on direktiivin 1999/5/EY oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen. |
| Svenska (Swedish) | Härmed intygar ZyXEL att denna utrustning står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 1999/5/EC. |
| Norsk (Norwegian) | Erklærer herved ZyXEL at dette utstyret er i samsvar med de grunnleggende kravene og andre relevante bestemmelser i direktiv 1999/5/EF. |

National Restrictions

This product may be used in all EU countries (and other countries following the EU Directive 2014/53/EU) without any limitation except for the countries mentioned below:

Ce produit peut être utilisé dans tous les pays de l'UE (et dans tous les pays ayant transposés la directive 2014/53/UE) sans aucune limitation, excepté pour les pays mentionnés ci-dessous:

Questo prodotto è utilizzabile in tutte i paesi EU (ed in tutti gli altri paesi che seguono le direttiva 2014/53/UE) senza nessuna limitazione, eccetto per i paesi menzionati di seguito:

Das Produkt kann in allen EU Staaten ohne Einschränkungen eingesetzt werden (sowie in anderen Staaten die der Richtlinie 2014/53/EU folgen) mit Ausnahme der folgenden aufgeführten Staaten:

In the majority of the EU and other European countries, the 2.4GHz and 5GHz bands have been made available for the use of wireless local area networks (LANs). Later in this document you will find an overview of countries in which additional restrictions or requirements or both are applicable.

The requirements for any country may evolve. ZyXEL recommends that you check with the local authorities for the latest status of their national regulations for both the 2.4GHz and 5GHz wireless LANs.

The following countries have restrictions and/or requirements in addition to those given in the table labeled "Overview of Regulatory Requirements for Wireless LANs":

Belgium

The Belgian Institute for Postal Services and Telecommunications (BIPT) must be notified of any outdoor wireless link having a range exceeding 300 meters. Please check <http://www.bipt.be> for more details.

Draadloze verbindingen voor buitengebruik en met een reikwijdte van meer dan 300 meter dienen aangemeld te worden bij het Belgisch Instituut voor postdiensten en telecommunicatie (BIPT). Zie <http://www.bipt.be> voor meer gegevens.

Les liaisons sans fil pour une utilisation en extérieur d'une distance supérieure à 300 mètres doivent être notifiées à l'Institut Belge des services Postaux et des Télécommunications (IBPT). Visitez <http://www.ibpt.be> pour de plus amples détails.

Denmark

In Denmark, the band 5150 - 5350 MHz is also allowed for outdoor usage.

I Danmark må frekvensbåndet 5150 - 5350 også anvendes udendørs.

Italy

This product meets the National Radio Interface and the requirements specified in the National Frequency Allocation Table for Italy. Unless this wireless LAN product is operating within the boundaries of the owner's property, its use requires a "general authorization." Please check <http://www.sviluppoeconomico.gov.it/> for more details.

Questo prodotto è conforme alla specifiche di Interfaccia Radio Nazionali e rispetta il Piano Nazionale di ripartizione delle frequenze in Italia. Se non viene installato all'interno del proprio fondo, l'utilizzo di prodotti Wireless LAN richiede una "Autorizzazione Generale". Consultare <http://www.sviluppoeconomico.gov.it/> per maggiori dettagli.

Latvia

The outdoor usage of the 2.4 GHz band requires an authorization from the Electronic Communications Office. Please check <http://www.esd.lv> for more details.

2.4 GHz frekvenču joslas izmantošanai ārpus telpām nepieciešama atļauja no Elektronisko sakaru direkcijas. Vairāk informācijas: <http://www.esd.lv>.

Notes:

1. Although Norway, Switzerland and Liechtenstein are not EU member states, the EU Directive 2014/53/EU has also been implemented in those countries.
2. The regulatory limits for maximum output power are specified in EIRP. The EIRP level (in dBm) of a device can be calculated by adding the gain of the antenna used (specified in dBi) to the output power available at the connector (specified in dBm).

List of national codes

| COUNTRY | ISO 3166 2 LETTER CODE | COUNTRY | ISO 3166 2 LETTER CODE |
|----------------|------------------------|----------------|------------------------|
| Austria | AT | Liechtenstein | LI |
| Belgium | BE | Lithuania | LT |
| Bulgaria | BG | Luxembourg | LU |
| Croatia | HR | Malta | MT |
| Cyprus | CY | Netherlands | NL |
| Czech Republic | CR | Norway | NO |
| Denmark | DK | Poland | PL |
| Estonia | EE | Portugal | PT |
| Finland | FI | Romania | RO |
| France | FR | Serbia | RS |
| Germany | DE | Slovakia | SK |
| Greece | GR | Slovenia | SI |
| Hungary | HU | Spain | ES |
| Iceland | IS | Sweden | SE |
| Ireland | IE | Switzerland | CH |
| Italy | IT | Turkey | TR |
| Latvia | LV | United Kingdom | GB |

Safety Warnings

- Do NOT use this product near water, for example, in a wet basement or near a swimming pool.
- Do NOT expose your device to dampness, dust or corrosive liquids.
- Do NOT store things on the device.
- Do NOT install, use, or service this device during a thunderstorm. There is a remote risk of electric shock from lightning.
- Connect ONLY suitable accessories to the device.
- Do NOT open the device or unit. Opening or removing covers can expose you to dangerous high voltage points or other risks. ONLY qualified service personnel should service or disassemble this device. Please contact your vendor for further information.
- Make sure to connect the cables to the correct ports.
- Place connecting cables carefully so that no one will step on them or stumble over them.
- Always disconnect all cables from this device before servicing or disassembling.
- Use ONLY an appropriate power adaptor or cord for your device. Connect it to the right supply voltage (for example, 110V AC in North America or 230V AC in Europe).
- Do NOT allow anything to rest on the power adaptor or cord and do NOT place the product where anyone can walk on the power adaptor or cord.
- Do NOT use the device if the power adaptor or cord is damaged as it might cause electrocution.
- If the power adaptor or cord is damaged, remove it from the device and the power source.
- Do NOT attempt to repair the power adaptor or cord. Contact your local vendor to order a new one.
- Do not use the device outside, and make sure all the connections are indoors. There is a remote risk of electric shock from lightning.
- Do NOT obstruct the device ventilation slots, as insufficient airflow may harm your device.
- Antenna Warning! This device meets ETSI and FCC certification requirements when using the included antenna(s). Only use the included antenna(s).
- If you wall mount your device, make sure that no electrical lines, gas or water pipes will be damaged.
- The PoE (Power over Ethernet) devices that supply or receive power and their connected Ethernet cables must all be completely indoors.
- This product is for indoor use only (utilisation intérieure exclusivement).
- FOR COUNTRY CODE SELECTION USAGE (WLAN DEVICES)
Note: The country code selection is for non-US model only and is not available to all US model. Per FCC regulation, all Wi-Fi product marketed in US must fixed to US operation channels only.

Environment statement

ErP (Energy-related Products)

ZyXEL products put on the EU market in compliance with the requirement of the European Parliament and the Council published Directive 2009/125/EC establishing a framework for the setting of ecodesign requirements for energy-related products (recast), so called as "ErP Directive (Energy-related Products directive) as well as ecodesign requirement laid down in applicable implementing measures, power consumption has satisfied regulation requirements which are:

Network standby power consumption < 12W, and/or

Off mode power consumption < 0.5W, and/or
Standby mode power consumption < 0.5W.
Wireless setting, please refer to "Wireless" chapter for more detail.

WEEE Directive



Your product is marked with this symbol, which is known as the WEEE mark. WEEE stands for Waste Electronics and Electrical Equipment. It means that used electrical and electronic products should not be mixed with general waste. Used electrical and electronic equipment should be treated separately.

"INFORMAZIONI AGLI UTENTI"

Ai sensi della Direttiva 2012/19/UE del Parlamento europeo e del Consiglio, del 4 luglio 2012, sui rifiuti di apparecchiature elettriche ed elettroniche (RAEE)



Il simbolo del cassonetto barrato riportato sull'apparecchiatura o sulla sua confezione indica che il prodotto alla fine della propria vita utile deve essere raccolto separatamente dagli altri rifiuti.

La raccolta differenziata della presente apparecchiatura giunta a fine vita è organizzata e gestita dal produttore. L'utente che vorrà disfarsi della presente apparecchiatura dovrà quindi contattare il produttore e seguire il sistema che questo ha adottato per consentire la raccolta separata dell'apparecchiatura giunta a fine vita.

L'adeguata raccolta differenziata per l'avvio successivo dell'apparecchiatura dismessa al riciclaggio, al trattamento e allo smaltimento ambientalmente compatibile contribuisce ad evitare possibili effetti negativi sull'ambiente e sulla salute e favorisce il reimpiego e/o riciclo dei materiali di cui è composta l'apparecchiatura.

Lo smaltimento abusivo del prodotto da parte del detentore comporta l'applicazione delle sanzioni amministrative previste dalla normativa vigente."

Environmental Product Declaration

| Български (Bulgarian) | Čeština (Czech) | Dansk (Danish) | Deutsch (German) |
|---|--|--|--|
| <p>Екологична продуктова декларация</p> <p>RoHS Директива 2011/65/EC WEEE Директива 2012/19/EC PPW Директива 94/62/EC REACH Регламент (ЕС) № 1907/2006 ErP Директива 2009/125/EC</p> <p>Име/титул: Richard Hsu / Quality Management Division Senior Manager Подпис: <i>Richard Hsu</i> Дата (dd/mm/yyyy): 01/10/2014</p> <p> </p> | <p>Environmentální prohlášení o produktu</p> <p>RoHS Směrnice 2011/65/EU WEEE Směrnice 2012/19/EU PPW Směrnice 94/62/ES REACH Nařízení (ES) č. 1907/2006 ErP Směrnice 2009/125/ES</p> <p>Jméno/ titul: Richard Hsu / Quality Management Division Senior Manager Podpis: <i>Richard Hsu</i> Datum (dd/mm/yyyy): 01/10/2014</p> <p> </p> | <p>Miljøvaredeklaration</p> <p>RoHS Direktiv 2011/65/EU WEEE Direktiv 2012/19/EU PPW Direktiv 94/62/EF REACH Forordning (EF) nr. 1907/2006 ErP Direktiv 2009/125/EF</p> <p>Navn/ titel: Richard Hsu / Quality Management Division Senior Manager Underskrift: <i>Richard Hsu</i> Dato (dd/mm/åååå): 01/10/2014</p> <p> </p> | <p>Produkt-Umweltdeklaration</p> <p>RoHS Richtlinie 2011/65/EU WEEE Richtlinie 2012/19/EU PPW Richtlinie 94/62/EG REACH VERORDNUNG (EG) Nr. 1907/2006 ErP Richtlinie 2009/125/EG</p> <p>Name/ titel: Richard Hsu / Quality Management Division Senior Manager Unterschrift: <i>Richard Hsu</i> Datum (gg/mm/jj): 2014/10/01</p> <p> </p> |
| <p>Toote keskkonnadeklaratsioon</p> <p>RoHS Direktiv 2011/65/EL WEEE Direktiv 2012/19/EL PPW Direktiv 94/62/EÜ REACH MAARUS (EÜ) nr 1907/2006 ErP Direktiv 2009/125/EL</p> <p>Nimi/ pealkiri: Richard Hsu / Quality Management Division Senior Manager Allkiri: <i>Richard Hsu</i> Kuupäev (pp/kk/aaaa): 01/10/2014</p> <p> </p> | <p>Environmental product declaration</p> <p>RoHS Directive 2011/65/EU WEEE Directive 2012/19/EU PPW Directive 94/62/EC REACH REGULATION (EC) No 1907/2006 ErP Directive 2009/125/EC</p> <p>Name/ title: Richard Hsu / Quality Management Division Senior Manager Signature: <i>Richard Hsu</i> Date (dd/mm/yyyy): 01/10/2014</p> <p> </p> | <p>Declaraciones Ambientales de Producto</p> <p>RoHS Directiva 2011/65/UE WEEE Directiva 2012/19/UE PPW Directiva 94/62/CE REACH REGLAMENTO (CE) n° 1907/2006 ErP Directiva 2009/125/CE</p> <p>Nombre/ título: Richard Hsu / Quality Management Division Senior Manager Firma: <i>Richard Hsu</i> Fecha (aaaa/mm/dd): 2014/10/01</p> <p> </p> | <p>Profil environnemental de produit</p> <p>RoHS Directive 2011/65/UE WEEE Directive 2012/19/UE PPW Directive 94/62/CE REACH RÈGLEMENT (CE) N° 1907/2006 ErP Directive 2009/125/CE</p> <p>Nom/ titre: Richard Hsu / Quality Management Division Senior Manager Signature: <i>Richard Hsu</i> Date (aaaa/mm/jj): 2014/10/01</p> <p> </p> |
| <p>Deklaraciju o zbirjanju proizvoda</p> <p>RoHS Direktiva 2011/65/EU WEEE Direktiva 2012/19/EU PPW Direktiva 94/62/EZ REACH Uredba (EZ) br. 1907/2006 ErP Direktiva 2009/125/EZ</p> <p>Ime/ naslov: Richard Hsu / Quality Management Division Senior Manager Potpis: <i>Richard Hsu</i> Datum (dd/mm/yyyy): 01/10/2014</p> <p> </p> | <p>Dichiarazione ambientale di prodotto</p> <p>RoHS Direttiva 2011/65/UE WEEE Direttiva 2012/19/UE PPW Direttiva 94/62/CE REACH REGOLAMENTO (CE) n. 1907/2006 ErP Direttiva 2009/125/CE</p> <p>Nome/ titolo: Richard Hsu / Quality Management Division Senior Manager Firma: <i>Richard Hsu</i> Data (aaaa/mm/gg): 2014/10/01</p> <p> </p> | <p>Produkta vides ietekmējuma deklarācija</p> <p>RoHS Direktīva 2011/65/ES WEEE Direktīva 2012/19/ES PPW Direktīva 94/62/EK REACH Regula (EK) Nr. 1907/2006 ErP Direktīva 2009/125/EK</p> <p>Nosaukums/ tūls: Richard Hsu / Quality Management Division Senior Manager Paraksts: <i>Richard Hsu</i> Datums (dd/mm/yyyy): 01/10/2014</p> <p> </p> | <p>Aplinkosauginių gaminių deklaracija</p> <p>RoHS Direktyva 2011/65/ES WEEE Direktyva 2012/19/ES PPW Direktyva 94/62/EB REACH REGLAMENTAS (ES) Nr. 1907/2006 ErP Direktyva 2009/125/EB</p> <p>Vardas/ titulas: Richard Hsu / Quality Management Division Senior Manager Parašas: <i>Richard Hsu</i> Data (ddmmmmmm): 01/10/2014</p> <p> </p> |
| <p>Környezetvédelmi terméknyilatkozat</p> <p>RoHS 2011/65/EU irányelv WEEE 2012/19/EU irányelv PPW 94/62/EK irányelv REACH 1907/2006/EK Rendelet ErP 2009/125/EK irányelv</p> <p>Név/ cím: Richard Hsu / Quality Management Division Senior Manager Aláírás: <i>Richard Hsu</i> Dátum (dd/mm/yyyy): 2014/10/01</p> <p> </p> | <p>Dikjarazzjoni Ambjentali dwar il-Prodott</p> <p>RoHS Direktiva 2011/65/UE WEEE Direktiva 2012/19/UE PPW Direktiva 94/62/KE REACH REGULATION (KE) NRU 1907/2006 ErP Direktiva 2009/125/UE</p> <p>Isem/ titlu: Richard Hsu / Quality Management Division Senior Manager Firma: <i>Richard Hsu</i> Data (aaaa/mm/jj): 2014/10/01</p> <p> </p> | <p>Miljøproductværlaring</p> <p>RoHS Riktlinje 2011/65/EU WEEE Riktlinje 2012/19/EU PPW Riktlinje 94/62/EG REACH Verordning (EG) nr. 1907/2006 ErP Riktlinje 2009/125/EG</p> <p>Navn/ titel: Richard Hsu / Quality Management Division Senior Manager Hendstegning: <i>Richard Hsu</i> Dato (dd/mm/åååå): 01/10/2014</p> <p> </p> | <p>Deklarację środowiskową produktu</p> <p>RoHS Dyrektywa 2011/65/UE WEEE Dyrektywa 2012/19/UE PPW Dyrektywa 94/62/WE REACH Rozporządzenie (WE) nr 1907/2006 ErP Dyrektywa 2009/125/WE</p> <p>Nazwisko/ tytuł: Richard Hsu / Quality Management Division Senior Manager Podpis: <i>Richard Hsu</i> Data (ddmmmmmm): 2014/10/01</p> <p> </p> |
| <p>Declaração ambiental do produto</p> <p>RoHS Directiva 2011/65/UE WEEE Directiva 2012/19/UE PPW Directiva 94/62/CE REACH Regulamento (CE) n° 1907/2006 ErP Directiva 2009/125/CE</p> <p>Nome/ título: Richard Hsu / Quality Management Division Senior Manager Assinatura: <i>Richard Hsu</i> Data (dd/mm/aaaa): 01/10/2014</p> <p> </p> | <p>Declarație de mediu privind produsele</p> <p>RoHS Directivă 2011/65/UE WEEE Directivă 2012/19/UE PPW Directivă 94/62/CE REACH REGULAMENTUL (CE) NR. 1907/2006 ErP Directivă 2009/125/CE</p> <p>Nume/ titlu: Richard Hsu / Quality Management Division Senior Manager Semnatura: <i>Richard Hsu</i> Data (zz/mm/aaaa): 01/10/2014</p> <p> </p> | <p>Vyhlasenie o environmentálnom výrobku</p> <p>RoHS Smernica 2011/65/EU WEEE Smernica 2012/19/EU PPW Smernica 94/62/ES REACH Naariadenie (ES) č. 1907/2006 ErP Smernica 2009/125/ES</p> <p>Menlo/ titul: Richard Hsu / Quality Management Division Senior Manager Podpis: <i>Richard Hsu</i> Dátum (ddmmmm): 01/10/2014</p> <p> </p> | <p>Okojsko deklaracija izdelka</p> <p>RoHS Direktiva 2011/65/EU WEEE Direktiva 2012/19/EU PPW Direktiva 94/62/ES REACH Uredba (ES) št. 1907/2006 ErP Direktiva 2009/125/ES</p> <p>Ime/ naziv: Richard Hsu / Quality Management Division Senior Manager Podpis: <i>Richard Hsu</i> Datum (ddmmmm): 01/10/2014</p> <p> </p> |
| <p>Standardin perustava ympäristötietustietos</p> <p>RoHS Direktiv 2011/65/EU WEEE Direktiv 2012/19/EU PPW Direktiv 94/62/EY REACH ASETUS (EY) N:o 1907/2006 ErP Direktiv 2009/125/EY</p> <p>Nimi/ osasto: Richard Hsu / Quality Management Division Senior Manager Alkajatus: <i>Richard Hsu</i> Päiväys (pp/kk/vvvv): 01/10/2014</p> <p> </p> | <p>Miljöproduktdeklaration</p> <p>RoHS Direktiv 2011/65/EU WEEE Direktiv 2012/19/EU PPW Direktiv 94/62/EY REACH Föreläggning (EY) nr 1907/2006 ErP Direktiv 2009/125/EY</p> <p>Namn/ titel: Richard Hsu / Quality Management Division Senior Manager Namnteckning: <i>Richard Hsu</i> Datum (ddmm/åååå): 01/10/2014</p> <p> </p> | <p>Περιβαλλοντική δήλωση προϊόντος</p> <p>RoHS Οδηγία 2011/65/ΕΕ WEEE Οδηγία 2012/19/ΕΕ PPW Οδηγία 94/62/ΕΚ REACH Κοινοβούλιο (ΕΚ) αριθ. 1907/2006 ErP Οδηγία 2009/125/ΕΚ</p> <p>Όνομα/ τίτλος: Richard Hsu / Quality Management Division Senior Manager Υπογραφή: <i>Richard Hsu</i> Ημερομηνία (gg/mm/aaaa): 01/10/2014</p> <p> </p> | <p>Miljødeklarasjon</p> <p>RoHS Direktiv 2011/65/EU WEEE Direktiv 2012/19/EU PPW Direktiv 94/62/EF REACH Forordning (EF) nr. 1907/2006 ErP Direktiv 2009/125/EF</p> <p>Navn/ titel: Richard Hsu / Quality Management Division Senior Manager Signatur: <i>Richard Hsu</i> Dato (ddmm/åååå): 01/10/2014</p> <p> </p> |

台灣



以下訊息僅適用於產品銷售至台灣地區

第十二條 經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

第十四條 低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。

前項合法通信，指依電信法規定作業之無線電通信。低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

Viewing Certifications

Go to <http://www.zyxel.com> to view this product's documentation and certifications.

ZyXEL Limited Warranty

ZyXEL warrants to the original end user (purchaser) that this product is free from any defects in material or workmanship for a specific period (the Warranty Period) from the date of purchase. The Warranty Period varies by region. Check with your vendor and/or the authorized ZyXEL local distributor for details about the Warranty Period of this product. During the warranty period, and upon proof of purchase, should the product have indications of failure due to faulty workmanship and/or materials, ZyXEL will, at its discretion, repair or replace the defective products or components without charge for either parts or labor, and to whatever extent it shall deem necessary to restore the product or components to proper operating condition. Any replacement will consist of a new or re-manufactured functionally equivalent product of equal or higher value, and will be solely at the discretion of ZyXEL. This warranty shall not apply if the product has been modified, misused, tampered with, damaged by an act of God, or subjected to abnormal working conditions.

Note

Repair or replacement, as provided under this warranty, is the exclusive remedy of the purchaser. This warranty is in lieu of all other warranties, express or implied, including any implied warranty of merchantability or fitness for a particular use or purpose. ZyXEL shall in no event be held liable for indirect or consequential damages of any kind to the purchaser.

To obtain the services of this warranty, contact your vendor. You may also refer to the warranty policy for the region in which you bought the device at http://www.zyxel.com/web/support_warranty_info.php.

Registration

Register your product online to receive e-mail notices of firmware upgrades and information at www.zyxel.com.

Open Source Licenses

This product contains in part some free software distributed under GPL license terms and/or GPL like licenses. Open source licenses are provided with the firmware package. You can download the latest firmware at www.zyxel.com. If you cannot find it there, contact your vendor or ZyXEL Technical Support at support@zyxel.com.tw.

To obtain the source code covered under those Licenses, please contact your vendor or ZyXEL Technical Support at support@zyxel.com.tw.

Customer Support

In the event of problems that cannot be solved by using this manual, you should contact your vendor. If you cannot contact your vendor, then contact a ZyXEL office for the region in which you bought the device. Regional websites are listed below.

See also http://www.zyxel.com/about_zyxel/zyxel_worldwide.shtml

Please have the following information ready when you contact an office.

Required Information

- Product model and serial number.
- Warranty Information.
- Date that you received your device.
- Brief description of the problem and the steps you took to solve it.

Corporate Headquarters (Worldwide)

Taiwan

- ZyXEL Communications Corporation
- <http://www.zyxel.com>

Asia

China

- ZyXEL Communications (Shanghai) Corp.
- ZyXEL Communications (Beijing) Corp.
- ZyXEL Communications (Tianjin) Corp.
- <http://www.zyxel.cn>

India

- ZyXEL Technology India Pvt Ltd
- <http://www.zyxel.in>

Kazakhstan

- ZyXEL Kazakhstan
- <http://www.zyxel.kz>

Korea

- ZyXEL Korea Corp.
- <http://www.zyxel.kr>

Malaysia

- ZyXEL Malaysia Sdn Bhd.
- <http://www.zyxel.com.my>

Pakistan

- ZyXEL Pakistan (Pvt.) Ltd.
- <http://www.zyxel.com.pk>

Philippines

- ZyXEL Philippines
- <http://www.zyxel.com.ph>

Singapore

- ZyXEL Singapore Pte Ltd.
- <http://www.zyxel.com.sg>

Taiwan

- ZyXEL Communications Corporation
- <http://www.zyxel.com>

Thailand

- ZyXEL Thailand Co., Ltd
- <http://www.zyxel.co.th>

Vietnam

- ZyXEL Communications Corporation-Vietnam Office
- <http://www.zyxel.com/vn/vi>

Europe

Austria

- ZyXEL Deutschland GmbH
- <http://www.zyxel.de>

Belarus

- ZyXEL BY
- <http://www.zyxel.by>

Belgium

- ZyXEL Communications B.V.
- <http://www.zyxel.com/be/nl/>

Bulgaria

- ZyXEL България
- <http://www.zyxel.com/bg/bg/>

Czech

- ZyXEL Communications Czech s.r.o
- <http://www.zyxel.cz>

Denmark

- ZyXEL Communications A/S
- <http://www.zyxel.dk>

Estonia

- ZyXEL Estonia
- <http://www.zyxel.com/ee/et/>

Finland

- ZyXEL Communications
- <http://www.zyxel.fi>

France

- ZyXEL France
- <http://www.zyxel.fr>

Germany

- ZyXEL Deutschland GmbH
- <http://www.zyxel.de>

Hungary

- ZyXEL Hungary & SEE
- <http://www.zyxel.hu>

Latvia

- ZyXEL Latvia

- <http://www.zyxel.com/lv/lv/homepage.shtml>

Lithuania

- ZyXEL Lithuania
- <http://www.zyxel.com/lt/lt/homepage.shtml>

Netherlands

- ZyXEL Benelux
- <http://www.zyxel.nl>

Norway

- ZyXEL Communications
- <http://www.zyxel.no>

Poland

- ZyXEL Communications Poland
- <http://www.zyxel.pl>

Romania

- ZyXEL Romania
- <http://www.zyxel.com/ro/ro>

Russia

- ZyXEL Russia
- <http://www.zyxel.ru>

Slovakia

- ZyXEL Communications Czech s.r.o. organizacna zlozka
- <http://www.zyxel.sk>

Spain

- ZyXEL Spain
- <http://www.zyxel.es>

Sweden

- ZyXEL Communications
- <http://www.zyxel.se>

Switzerland

- Studerus AG

- <http://www.zyxel.ch/>

Turkey

- ZyXEL Turkey A.S.
- <http://www.zyxel.com.tr>

UK

- ZyXEL Communications UK Ltd.
- <http://www.zyxel.co.uk>

Ukraine

- ZyXEL Ukraine
- <http://www.ua.zyxel.com>

Latin America

Argentina

- ZyXEL Communication Corporation
- <http://www.zyxel.com/ec/es/>

Ecuador

- ZyXEL Communication Corporation
- <http://www.zyxel.com/ec/es/>

Middle East

Egypt

- ZyXEL Communication Corporation
- <http://www.zyxel.com/homepage.shtml>

Middle East

- ZyXEL Communication Corporation
- <http://www.zyxel.com/homepage.shtml>

North America

USA

- ZyXEL Communications, Inc. - North America Headquarters
- <http://www.us.zyxel.com/>

Oceania

Australia

- ZyXEL Communications Corporation
- <http://www.zyxel.com/au/en/>

Africa

South Africa

- Nology (Pty) Ltd.
- <http://www.zyxel.co.za>

Index

A

- ACL rule [267](#)
- ACS [344](#)
- activation
 - firewalls [263](#)
 - SIP ALG [221](#)
 - SSID [146](#)
 - wireless LAN
 - scheduling [154](#)
- Address Resolution Protocol [321](#)
- administrator password [27](#)
- AH [298](#)
- algorithms [298](#)
- alternative subnet mask notation [398](#)
- antenna
 - directional [423](#)
 - gain [422](#)
 - omni-directional [423](#)
- AP (access point) [413](#)
- applications
 - Internet access [17](#)
- applications, NAT [225](#)
- ARP Table [321](#), [323](#)
- authentication [157](#), [158](#)
 - RADIUS server [158](#)
- Auto Configuration Server, see ACS [344](#)

B

- backup
 - configuration [361](#)
- Basic Service Set, See BSS [411](#)
- Basic Service Set, see BSS
- blinking LEDs [23](#)
- Broadband [104](#)
- broadcast [135](#)
- BSS [160](#), [411](#)
 - example [160](#)

C

- CA [279](#), [417](#)
- Canonical Format Indicator See CFI
- CCMs [364](#)
- certificate
 - factory default [280](#)
- Certificate Authority
 - See CA.
- certificates [279](#)
 - authentication [279](#)
 - CA
 - creating [280](#)
 - public key [279](#)
 - replacing [280](#)
 - storage space [280](#)
- Certification Authority [279](#)
- Certification Authority. see CA
- certifications
 - viewing [442](#)
- CFI [134](#)
- CFM [364](#)
 - CCMs [364](#)
 - link trace test [364](#)
 - loopback test [364](#)
 - MA [364](#)
 - MD [364](#)
 - MEP [364](#)
 - MIP [364](#)
- channel [413](#)
 - interference [413](#)
- channel, wireless LAN [156](#)
- client list [174](#)
- configuration
 - backup [361](#)
 - firewalls [263](#)
 - reset [362](#)
 - restoring [362](#)
 - static route [128](#), [189](#), [229](#), [339](#)
- Connectivity Check Messages, see CCMs
- contact information [443](#)

copyright [436](#)
CoS [207](#)
CoS technologies [195](#)
creating certificates [280](#)
CTS (Clear to Send) [414](#)
CTS threshold [152, 157](#)
customer support [443](#)

D

data fragment threshold [152, 157](#)
DDoS [262](#)
default server address [220](#)
Denials of Service, see DoS
DH [303](#)
DHCP [169, 185](#)
Differentiated Services, see DiffServ [207](#)
Diffie-Hellman key groups [303](#)
DiffServ [207](#)
 marking rule [208](#)
digital IDs [279](#)
disclaimer [436](#)
DMZ [220](#)
DNS [169, 185](#)
DNS server address assignment [135](#)
documentation
 related [2](#)
Domain Name [226](#)
Domain Name System, see DNS
Domain Name System. See DNS.
DoS [262](#)
DS field [207](#)
DS, dee differentiated services
DSCP [207](#)
dynamic DNS [228, 232, 336](#)
 wildcard [229](#)
Dynamic Host Configuration Protocol, see DHCP
dynamic WEP key exchange [418](#)
DYNDNS wildcard [229](#)

E

EAP Authentication [417](#)
ECHO [226](#)
e-mail
 log example [354](#)
Encapsulation [132](#)
 MER [132](#)
 PPP over Ethernet [133](#)
encapsulation [105, 298](#)
encryption [159, 419](#)
ESP [298](#)
ESS [412](#)
Extended Service Set IDentification [140, 147, 238](#)
Extended Service Set, See ESS [412](#)

F

FCC interference statement [436](#)
File Sharing [259](#)
file sharing [21](#)
filters
 MAC address [148, 158](#)
Finger [226](#)
firewalls [261](#)
 configuration [263](#)
 DDoS [262](#)
 Denial of Service (DoS) [264](#)
 DoS [262](#)
 LAND attack [262](#)
 Ping of Death [262](#)
 SYN attack [262](#)
firmware [356, 359](#)
 version [100](#)
forwarding ports [213](#)
fragmentation threshold [152, 157, 414](#)
FTP [213, 226](#)

G

General wireless LAN screen [138](#)
Guide
 Quick Start [2](#)

H

hidden node [413](#)

HTTP [226](#)

I

IANA [403](#)

Internet Assigned Numbers Authority
see IANA

IBSS [411](#)

ID type and content [302](#)

IEEE 802.11g [415](#)

IEEE 802.1Q [134](#)

IEEE 802.1x [238](#)

IGA [224](#)

IGMP [135](#)

multicast group list [325](#)
version [135](#)

IKE phases [299](#)

ILA [224](#)

Independent Basic Service Set
See IBSS [411](#)

initialization vector (IV) [419](#)

Inside Global Address, see IGA

inside header [299](#)

Inside Local Address, see ILA

interface group [253](#)

Internet

wizard setup [35](#)

Internet access [17](#)

wizard setup [35](#)

Internet Key Exchange [299](#)

Internet Protocol Security. See IPSec.

Internet Protocol version 6 [106](#)

Internet Protocol version 6, see IPv6

Internet Service Provider, see ISP

IP address [169, 186](#)

ping [365](#)

private [186](#)

WAN [106](#)

IP Address Assignment [134](#)

IP alias

NAT applications [226](#)

IPSec [285](#)

algorithms [298](#)

architecture [297](#)

NAT [300](#)

IPSec. See also VPN.

IPv6 [106, 424](#)

addressing [107, 135, 424](#)

EUI-64 [426](#)

global address [425](#)

interface ID [426](#)

link-local address [424](#)

Neighbor Discovery Protocol [424](#)

ping [424](#)

prefix [107, 135, 424](#)

prefix delegation [108](#)

prefix length [107, 135, 424](#)

unspecified address [425](#)

ISP [105](#)

L

L2TP VPN [309](#)

LAN [168](#)

client list [174](#)

DHCP [169, 185](#)

DNS [169, 185](#)

IP address [169, 170, 186](#)

MAC address [175](#)

status [101](#)

subnet mask [169, 170, 186](#)

LAND attack [262](#)

Layer 2 Tunneling Protocol Virtual Private Network,
see L2TP VPN [309](#)

layer-2 isolation [250](#)

example [251](#)

LBR [364](#)

limitations

wireless LAN [159](#)

WPS [166](#)

link trace [364](#)

Link Trace Message, see LTM

Link Trace Response, see LTR

login [26](#)

passwords [26, 27](#)

logs [315, 318, 325, 353](#)

Loop Back Response, see LBR

loopback [364](#)

LTM [364](#)

LTR [364](#)

M

MA [364](#)

MAC address [148](#), [175](#)

filter [148](#), [158](#)

MAC authentication [148](#)

Mac filter [272](#)

Maintenance Association, see MA

Maintenance Domain, see MD

Maintenance End Point, see MEP

Management Information Base (MIB) [346](#)

managing the device

good habits [24](#)

MBSSID [160](#)

MD [364](#)

MEP [364](#)

MTU (Multi-Tenant Unit) [134](#)

multicast [135](#), [242](#)

multicast rate [242](#)

Multiple BSS, see MBSSID

myZyXEL.com [336](#)

accounts, creating [336](#)

N

NAT [212](#), [214](#), [223](#), [224](#), [402](#)

applications [225](#)

IP alias [226](#)

example [225](#)

global [224](#)

IGA [224](#)

ILA [224](#)

inside [224](#)

IPSec [300](#)

local [224](#)

outside [224](#)

port forwarding [213](#)

port number [226](#)

services [226](#)

SIP ALG [221](#)

activation [221](#)

traversal [301](#)

NAT example [227](#)

negotiation mode [300](#)

Network Address Translation

see NAT

Network Address Translation, see NAT

Network Map [99](#)

NNTP [226](#)

O

other documentation [2](#)

outside header [299](#)

P

Pairwise Master Key (PMK) [419](#), [421](#)

passwords [26](#), [27](#)

PBC [161](#)

Per-Hop Behavior, see PHB [208](#)

PHB [208](#)

PIN, WPS [162](#)

example [163](#)

Ping of Death [262](#)

Point to Point Tunneling Protocol VPN

see PPTP VPN

Point-to-Point Tunneling Protocol [226](#)

POP3 [226](#)

port forwarding [213](#)

ports [23](#)

PPP over Ethernet, see PPPoE

PPPoE [105](#), [133](#)

Benefits [133](#)

PPTP [226](#)

PPTP VPN [304](#)

preamble [152](#), [157](#)

preamble mode [161](#)

prefix delegation [108](#)

pre-shared key [303](#)

private IP address [186](#)
product registration [442](#)
protocol [105](#)
PSK [419](#)
push button [21](#)
Push Button Configuration, *see* PBC
push button, WPS [161](#)

Q

QoS [194, 207](#)
 marking [195](#)
 setup [194](#)
 tagging [195](#)
 versus CoS [195](#)
Quality of Service, *see* QoS
Quick Start Guide [2](#)

R

RADIUS [416](#)
 message types [416](#)
 messages [416](#)
 shared secret key [416](#)
RADIUS server [158](#)
registration
 product [442](#)
related documentation [2](#)
remote management
 TR-069 [344](#)
Remote Procedure Calls, *see* RPCs [344](#)
reset [25, 362](#)
restart [363](#)
restoring configuration [362](#)
RFC 1058. *See* RIP.
RFC 1389. *See* RIP.
RFC 3164 [315](#)
RIP [192](#)
router features [17](#)
Routing Information Protocol. *See* RIP
RPPCs [344](#)
RSSI threshold [242](#)

RTS (Request To Send) [414](#)
 threshold [413, 414](#)
RTS threshold [152, 157](#)

S

schedules
 wireless LAN [154](#)
security
 wireless LAN [157](#)
security associations. *See* VPN.
Security Log [316](#)
Security Parameter Index, *see* SPI
service access control [342](#)
Service Set [140, 147, 238](#)
Services [226](#)
setup
 firewalls [263](#)
 static route [128, 189, 229, 339](#)
Simple Network Management Protocol, *see* SNMP
Single Rate Three Color Marker, *see* srTCM
SIP ALG [221](#)
 activation [221](#)
SMTP [226](#)
SNMP [226, 346](#)
 agents [346](#)
 Get [347](#)
 GetNext [347](#)
 Manager [346](#)
 managers [346](#)
 MIB [346](#)
 Set [347](#)
 Trap [347](#)
 versions [346](#)
SNMP trap [226](#)
SPI [262](#)
srTCM [210](#)
SSID [158](#)
 activation [146](#)
 MBSSID [160](#)
static route [188, 351](#)
 configuration [128, 189, 229, 339](#)
 example [188](#)
static VLAN
status [99](#)

- firmware version [100](#)
- LAN [101](#)
- WAN [100](#)
- wireless LAN [101](#)
- status indicators [23](#)
- subnet [396](#)
- subnet mask [169, 186, 397](#)
- subnetting [399](#)
- SYN attack [262](#)
- syslog
 - protocol [315](#)
 - severity levels [315](#)
- system
 - firmware [356, 359](#)
 - version [100](#)
 - passwords [26, 27](#)
 - reset [25](#)
 - status [99](#)
 - LAN [101](#)
 - WAN [100](#)
 - wireless LAN [101](#)
 - time [348](#)

T

- Tag Control Information See TCI
- Tag Protocol Identifier See TPID
- TCI
- The [106](#)
- The DHCP Client [320](#)
- thresholds
 - data fragment [152, 157](#)
 - RTS/CTS [152, 157](#)
- time [348](#)
- TPID [134](#)
- TR-069 [344](#)
 - ACS setup [344](#)
 - authentication [345](#)
- trademarks [436](#)
- transport mode [298](#)
- trTCM [210](#)
- tunnel mode [299](#)
- Two Rate Three Color Marker, see trTCM

U

- unicast [135](#)
- Universal Plug and Play, see UPnP
- upgrading firmware [356, 359](#)
- UPnP [176](#)
 - cautions [170](#)
 - example [182](#)
 - installation [182](#)
 - NAT traversal [169](#)
- USB features [21](#)

V

- VID
- Virtual Local Area Network See VLAN
- Virtual Private Network. See VPN.
- VLAN [134](#)
 - Introduction [134](#)
 - number of possible VIDs
 - priority frame
 - static
- VLAN ID [134](#)
- VLAN Identifier See VID
- VLAN tag [134](#)
- VPN [285](#)
 - established in two phases [286](#)
 - IPSec [285](#)
 - local network [285](#)
 - remote IPSec router [285](#)
 - remote network [285](#)
 - security associations (SA) [286](#)
- VPN. See also IKE SA, IPSec SA.

W

- WAN
 - status [100](#)
 - Wide Area Network, see WAN [104](#)
- warranty [442](#)
 - note [442](#)
- web configurator [26](#)
 - login [26](#)

- passwords [26, 27](#)
- WEP [159](#)
- WEP (Wired Equivalent Privacy) [238](#)
- WEP Encryption [142, 143](#)
- WEP encryption [141](#)
- WEP key [141](#)
- Wi-Fi Protected Access [238, 418](#)
- wireless client WPA supplicants [420](#)
- wireless LAN [137, 155](#)
 - authentication [157, 158](#)
 - BSS [160](#)
 - example [160](#)
 - channel [156](#)
 - encryption [159](#)
 - example [155](#)
 - fragmentation threshold [152, 157](#)
 - limitations [159](#)
 - MAC address filter [148, 158](#)
 - MBSSID [160](#)
 - preamble [152, 157](#)
 - RADIUS server [158](#)
 - RTS/CTS threshold [152, 157](#)
 - scheduling [154](#)
 - security [157](#)
 - SSID [158](#)
 - activation [146](#)
 - status [101](#)
 - WEP [159](#)
 - WPA [159](#)
 - WPA-PSK [159](#)
 - WPS [161, 163](#)
 - example [164](#)
 - limitations [166](#)
 - PIN [162](#)
 - push button [21, 161](#)
- wireless security [415](#)
- Wireless tutorial [46](#)
- wizard setup
 - Internet [35](#)
- WLAN
 - interference [413](#)
 - security parameters [422](#)
- WPA [159, 238, 418](#)
 - key caching [420](#)
 - pre-authentication [420](#)
 - user authentication [419](#)
 - vs WPA-PSK [419](#)
 - wireless client supplicant [420](#)
 - with RADIUS application example [420](#)
- WPA2 [238, 418](#)
 - user authentication [419](#)
 - vs WPA2-PSK [419](#)
 - wireless client supplicant [420](#)
 - with RADIUS application example [420](#)
- WPA2-Pre-Shared Key [419](#)
- WPA2-PSK [419](#)
 - application example [421](#)
- WPA-PSK [159, 419](#)
 - application example [421](#)
- WPS [161, 163](#)
 - example [164](#)
 - limitations [166](#)
 - PIN [162](#)
 - example [163](#)
 - push button [21, 161](#)

Z

- Zone Control [269](#)
- ZWO (ZyXEL Wireless Optimizer) [262](#)