



RGS Series

Rugged Switch Series

Version 1
Edition 3, 02/2023

CLI Reference Guide

Default Login Details

LAN IP Address	http://192.168.1.1
User Name	admin
Password	1234

IMPORTANT!

READ CAREFULLY BEFORE USE.

KEEP THIS GUIDE FOR FUTURE REFERENCE.

This is a Reference Guide for a series of products intended for people who want to configure the Switch through Command Line Interface (CLI).

Note: Some commands or command options in this guide may not be available in your product. See your product's User's Guide for a list of supported features. Every effort has been made to ensure that the information in this guide is accurate.

Do NOT use commands not documented in this guide.

Related Documentation

- Quick Start Guide
The Quick Start Guide shows you how to connect the Switch and access the Web Configurator.
- User's Guide
The User's Guide explains how to use the Web Configurator to configure the Switch.

Note: It is recommended you use the Web Configurator to configure the Switch.

- More Information
Go to <https://support.zyxel.com/> to find other information on the Switch.



CONTENTS

1 SCOPE	2
1.1 SCOPE	2
1.2 AUDIENCE.....	2
1.3 PRE-REQUIRED KNOWLEDGE.....	2
1.4 ACCESS TO HARDWARE INTERFACE.....	2
1.5 RELATED DOCUMENTS.....	2
2 OPERATOR INTERFACE.....	4
2.1 INTRODUCTION	4
2.2 CONNECT INTERFACE.....	4
2.3 SCREEN DESCRIPTION.....	4
2.4 EXECUTION MODES	5
2.5 GETTING HELP	6
2.6 TERMINAL KEY FUNCTION	6
2.7 NOTATION CONVENTIONS	6
3 COMMANDS DESCRIPTIONS	8
3.1 INITIALIZE MODE COMMANDS	8
3.1.1 exit	8
3.1.2 configure terminal	8
3.1.3 enable.....	8
3.1.4 Show terminal.....	8
3.1.5 Show history.....	8
3.1.6 Show clock	8
3.1.7 Show clock detail	8
3.2 ENABLE MODE COMMANDS	8
3.2.1 configure terminal	8
3.2.2 disable.....	9
3.2.3 show aaa.....	9
3.2.4 show access management.....	9
3.2.5 show access-list.....	9
3.2.6 show aggregation	9
3.2.7 show alarm	9
3.2.8 show cpu-load	10
3.2.9 show green-ethernet.....	10
3.2.10 show ip	10
3.2.11 show ipmc	10
3.2.12 show ipv6	10
3.2.13 show lacp	11
3.2.14 show line	11
3.2.15 show logging	11
3.2.16 show loop-protec	11
3.2.17 show ntp status.....	11
3.2.18 show users.....	11
3.2.19 show running-cfg	11
3.2.20 show running-config interface Gigabit.....	12
3.2.21 show running-config interface vlan.....	12
3.2.22 show running-config all-defaults.....	12
3.2.23 show running-config feature	12
3.2.24 show running-config line	12
3.2.25 show running-config vlan	12

3.2.26	show version	12
3.2.27	show clock.....	13
3.2.28	show dmdi	13
3.2.29	show version	13
3.2.30	show system inventory.....	13
3.2.31	show mac address table aging-time	13
3.2.32	show mac address table	13
3.2.33	show mac address table conf	13
3.2.34	show mac address table count.....	13
3.2.35	show mac address table learning.....	13
3.2.36	show mac address table static.....	14
3.2.37	show mac address table interface	14
3.2.38	show mac address vlan <vlanid>	14
3.2.39	show mvr.....	14
3.2.40	show fdb static table.....	14
3.2.41	show fdbstatic interface gigabit <portNo>.....	14
3.2.42	show fdbstatic vlan <vlanid>	15
3.2.43	show interface port < port_type_list >	15
3.2.44	show interface port <portNo> statistics.....	15
3.2.45	show platform phy.....	15
3.2.46	show poe	15
3.2.47	show port-security.....	15
3.2.48	show profile alarm	16
3.2.49	show snmp.....	16
3.2.50	show spanning-tree	17
3.2.51	show switchport forbidden	17
3.2.52	show tacacs-server.....	17
3.2.53	show vlan	17
3.2.54	show vlan id.....	17
3.2.55	show vlan name.....	17
3.2.56	show vlan brief	17
3.2.57	show vlan status.....	18
3.2.58	show qos-queue-mapping	18
3.2.59	show interface ports <portNo> priority	18
3.2.60	show qos	18
3.2.61	show queue-shaper.....	18
3.2.62	show port-shaper.....	18
3.2.63	show interface gigabit <portNo> storm-control	18
3.2.64	show interface gigabit <portNo> transceiver	19
3.2.65	show qos interface	19
3.2.66	show qos maps	19
3.2.67	show qos qce	19
3.2.68	show qos storm {unknown-uc unknown-mc broadcast}	19
3.2.69	show port-mirror	19
3.2.70	show rmon	20
3.2.71	show interface gigabit <portNo>	20
3.2.72	show interface vlan	20
3.2.73	show interface vlan <vlanid>	20
3.2.74	show interface gigabit <portNo> vlan	20
3.2.75	show multicast-fdb	20
3.2.76	show dot1x.....	20
3.2.77	show dot1x status.....	21
3.2.78	show dot1x statistics	21
3.2.79	show radius-server [statistics]	21
3.2.80	show voice.....	21
3.2.81	show web.....	21

3.3 CONFIGURE MODE COMMANDS.....	22
3.3.1 interface gigabit <portNo>	22
3.3.2 interface vlan <vlanid>	22
3.3.3 aaa	22
3.3.4 access	22
3.3.5 access-list	22
3.3.6 aggregation mode.....	22
3.3.7 alarm history clear	22
3.3.8 banner.....	22
3.3.9 ddmi	23
3.3.10 default access-list rate-limiter.....	23
3.3.11 profile sch.....	23
3.3.12 ntp server <1-5> ip-address <ip>.....	23
3.3.13 clock timezone.....	23
3.3.14 clock summer-time set [start-time] [end-time].....	23
3.3.15 account add <username>.....	24
3.3.16 account delete <username>.....	24
3.3.17 configuration save and replace.....	24
3.3.18 clear ip igmp snooping statistics.....	24
3.3.19 clear logging	24
3.3.20 clear mac address-table	24
3.3.21 debug	25
3.3.22 delete	25
3.3.23 dir	25
3.3.24 do.....	25
3.3.25 duplex	25
3.3.26 editing	25
3.3.27 firmware	25
3.3.28 flowcontrol.....	25
3.3.29 frame-sizes	26
3.3.30 green-etherneeee	26
3.3.31 green-etherneeee urgent-queues	26
3.3.32 help.....	26
3.3.33 iparp inspection	26
3.3.34 ip arp inspection translate	26
3.3.35 ip arp inspection entry	26
3.3.36 ip arp inspection vlan.....	27
3.3.37 ip dns proxy	27
3.3.38 ip http secure-redirect	27
3.3.39 ip http secure-server.....	27
3.3.40 ip source binding interface	27
3.3.41 ip ssh*.....	27
3.3.42 ip name-server	27
3.3.43 ip route	27
3.3.44 ip verify	28
3.3.45 ipmc profile.....	28
3.3.46 ipmc range.....	28
3.3.47 lacp	28
3.3.48 line	28
3.3.49 login host.....	28
3.3.50 login level.....	29
3.3.51 login on	29
3.3.52 logout	29
3.3.53 mac address-table aging-time.....	29
3.3.54 mac address-table static.....	29
3.3.55 more	29

3.3.56 no.....	29
3.3.57 ping.....	29
3.3.58 port-security.....	30
3.3.59 privilege.....	30
3.3.60 reload.....	30
3.3.61 rmon	30
3.3.62 rmon alarm.....	30
3.3.63 rmon alarm.....	31
3.3.64 terminal.....	31
3.3.65 vlan <vlanid>.....	31
3.3.66 vlan <vlanid> <name>.....	32
3.3.67 vlan disable <vlanid>.....	32
3.3.68 mac address-table aging-time <time>.....	32
3.3.69 mtu <value>	32
3.3.70 media-type.....	32
3.3.71 monitor destination interface.....	32
3.3.72 monitor source interface	32
3.3.73 monitor source cpu	33
3.3.74 speed	33
3.3.75 tacacs-server host	33
3.3.76 tacacs-server key.....	33
3.3.77 tacacs-server timeout	33
3.3.78 traps.....	33
3.3.79 upnp	34
3.3.80 upnp advertising-duration.....	34
3.3.81 upnp ttl.....	34
3.3.82 username	34
3.3.83 web.....	34
3.3.84 flow-control {enable disable}.....	35
3.3.85 speed	35
3.3.86 port {enable/disable}.....	35
3.3.87 Date/Time	35
3.4 VLAN MODE COMMANDS.....	35
3.4.1 vlan	35
3.4.2 vlan ethertype s-custom-port.....	36
3.4.3 vlan-trunking.....	36
3.4.4 switchport access vlan.....	36
3.4.5 switchport forbidden vlan.....	36
3.4.6 switchport hybrid acceptable-frame-type	36
3.4.7 switchport hybrid allowed vlan.....	36
3.4.8 switchport hybrid egress-tag.....	36
3.4.9 switchport hybrid ingress-filtering	37
3.4.10 switchport mode.....	37
3.4.11 switchport trunk allowed vlan	37
3.5 INTERFACE VLAN MODE COMMANDS.....	37
3.5.1 interface	37
3.5.2 interface vlan	37
3.5.3 ip address.....	37
3.5.4 ip name-server	38
3.5.5 ip dhcp relay	38
3.5.6 ip dhcp relay information option	38
3.5.7 ip dhcp snooping	38
3.5.8 ip helper-address	38
3.5.9 ipv6 address	38
3.5.10 ipv6mtu	38
3.6 RINGV2 GROUP MODE COMMANDS	39

3.6.1	<i>ringv2 protect</i>	39
3.6.2	<i>guard-time</i>	39
3.6.3	<i>mode</i>	39
3.6.4	<i>node1 interface GigabitEthernet <portNo></i> }	39
3.6.5	<i>node2 interface GigabitEthernet <portNo></i>	39
3.6.6	<i>role</i>	39
3.7	SPANNING TREE COMMANDS.....	40
3.7.1	<i>spanning-tree</i>	40
3.7.2	<i>spanning-tree aggregation</i>	40
3.7.3	<i>spanning-tree auto-edge</i>	40
3.7.4	<i>spanning-tree bpdu-guard</i>	40
3.7.5	<i>spanning-tree edge</i>	40
3.7.6	<i>spanning-tree edge bpdu-filter</i>	40
3.7.7	<i>spanning-tree mode</i>	40
3.7.8	<i>spanning-tree mst cost</i>	41
3.7.9	<i>spanning-tree mst port-priority</i>	41
3.7.10	<i>spanning-tree mst priority</i>	41
3.7.11	<i>spanning-tree mst vlan</i>	41
3.7.12	<i>spanning-tree mst forward-time</i>	41
3.7.13	<i>spanning-tree mst max-age</i>	41
3.7.14	<i>spanning-tree mst max-hops</i>	41
3.7.15	<i>spanning-tree mst name</i>	42
3.7.16	<i>spanning-tree mst <instance></i>	42
3.7.17	<i>spanning-tree recovery</i>	42
3.7.18	<i>spanning-tree transmit</i>	42
3.8	SNMP CONFIGURE COMMANDS.....	42
3.8.1	<i>snmp-server</i>	42
3.8.2	<i>snmp-server access</i>	42
3.8.3	<i>snmp-server community v2c</i>	43
3.8.4	<i>snmp-server community v3</i>	43
3.8.5	<i>snmp-server host</i>	43
3.8.6	<i>snmp-server host traps</i>	43
3.8.7	<i>snmp-server trap</i>	43
3.8.8	<i>snmp-server user</i>	43
3.8.9	<i>snmp-server version</i>	44
3.8.10	<i>snmp-server view</i>	44
3.8.11	<i>SNMP trap receive ipv6 host</i>	44
3.8.12	<i>snmp-server contact</i>	44
3.8.13	<i>snmp-server engine-id</i>	44
3.8.14	<i>snmp-server location</i>	44
3.8.15	<i>snmp-server security-to-group</i>	45
3.8.16	<i>SNMP trap receive ipv4 host</i>	45
3.9	QoS FUNCTION COMMAND	45
3.9.1	<i>qos qce</i>	45
3.9.2	<i>qos storm</i>	45
3.9.3	<i>qos cos</i>	45
3.9.4	<i>qos dscp-classify</i>	46
3.9.5	<i>qos dscp-remark</i>	46
3.9.6	<i>qos dscp-translate</i>	46
3.9.7	<i>qos map cos-dscp</i>	46
3.9.8	<i>qos map cos-dscp</i>	46
3.9.9	<i>qos map dscp-egress-translation</i>	46
3.9.10	<i>qos map dscp-ingress-translation</i>	47
3.9.11	<i>qos policer</i>	47
3.9.12	<i>qos wrr</i>	47
3.9.13	<i>qos queue-shaper</i>	48

3.9.14 qos queue-policer	48
3.9.15 qos shaper <unit>	48
3.10 IGMP FUNCTIONAL COMMANDS	48
3.10.1 ip igmp host-proxy [leave-proxy]	48
3.10.2 ip igmp snooping	48
3.10.3 ip igmp snooping immediate-leave	48
3.10.4 ip igmp snooping last-member-query-interval	48
3.10.5 ip igmp snooping max-groups	48
3.10.6 ip igmp snooping mrouter	49
3.10.7 ip igmp snooping querier	49
3.10.8 ip igmp snooping query-interval	49
3.10.9 ip igmp snooping vlan	49
3.10.10 ip igmp ssm-range	49
3.10.11 ip igmp unknown-flooding	49
3.10.12 clear ip igmp snooping statistics	49
3.11 MVR FUNCTIONAL COMMANDS	50
3.11.1 mvr	50
3.11.2 mvr immediate-leave	50
3.11.3 mvr name channel	50
3.11.4 mvr frame priority	50
3.11.5 mvr name <word16> frame tagged	50
3.11.6 mvr name <word16> igmp-address <ipv4_unicast>	50
3.11.7 mvr name <word16> last-member-query-interval <0-31744>	50
3.11.8 mvr name <word16> mode	50
3.11.9 mvr name <word16> type	51
3.11.10 mvr vlan	51
3.11.11 mvr vlan <vlan_list> channel	51
3.11.12 mvr vlan <vlan_list> frame priority	51
3.11.13 mvr vlan <vlan_list> frame tagged	51
3.11.14 mvr vlan <vlan_list> igmp-address	51
3.11.15 mvr vlan <vlan_list> mode	51
3.11.16 mvr vlan <vlan_list> type	52
3.12 MLD FUNCTIONAL COMMANDS	52
3.12.1 ipv6 mld host-proxy	52
3.12.2 ipv6 mld snooping	52
3.12.3 ipv6 mld snooping compatibility	52
3.12.4 ipv6 mld snooping immediate-leave	52
3.12.5 ipv6 mld snooping last-member-query-interval	52
3.12.6 ipv6 mld snooping max-groups	52
3.12.7 ipv6 mld snooping mrouter	53
3.12.8 ipv6 mld snooping query-interval	53
3.12.9 ipv6 mld snooping query-max-response-time	53
3.12.10 ipv6 mld snooping vlan	53
3.12.11 ipv6 mld ssm-range	53
3.12.12 ipv6 mld unknown-flooding	53
3.12.13 ipv6 route	53
3.13 AUTHENTICATE MODE COMMANDS	54
3.13.1 radius-server attribute 32	54
3.13.2 radius-server attribute 4	54
3.13.3 radius-server attribute 95	54
3.13.4 radius-server deadtime	54
3.13.5 radius-server host [auth-port] [acct-port] [timeout] [retransmit] [key]	54
3.13.6 radius -server key	54
3.13.7 radius-server retransmit	54
3.13.8 radius-server timeout	55
3.13.9 tacacs-server deadtime <1-1440>	55

3.13.10 tacacs-server host [auth-port] [timeout] [key]	55
3.13.11 tacacs-server deadtime <1-1440>	55
3.13.12 tacacs-server deadtime <1-1440>	55
3.13.13 dot1x feature	55
3.13.14 dot1x authentication timer	55
3.13.15 dot1x max-reauth-req	56
3.13.16 dot1x re-authentication	56
3.13.17 dot1x system-auth-control	56
3.13.18 dot1x timeout	56
3.13.19 dot1x guest-vlan	56
3.13.20 dot1x initialize	56
3.13.21 dot1x port-control	56
3.13.22 dot1x radius-vlan	57
3.13.23 show radius-server [statistics]	57
3.13.24 enable	57
3.13.25 end	57
3.13.26 exit	57
3.13.27 hostname	57
3.14 Loop-Protection Configure Commands	57
3.14.1 loop-protect	57
3.14.2 loop-protect action	57
3.14.3 loop-protect shutdown-time	57
3.14.4 loop-protect transmit-time	58
3.14.5 loop-protect tx-mode	58
3.15 LLDP Configure Commands	58
3.15.1 lldp holdtime	58
3.15.2 lldp med	58
3.15.3 lldp receive	58
3.15.4 lldp reinit <1-10>	59
3.15.5 lldp timer <5-32768>	59
3.15.6 lldp tlv-select	59
3.15.7 lldp transmission-delay	59
3.15.8 lldp transmit	59
3.16 RFC2544 Testing Configure Commands	59
3.16.1 rfc2544 profile <word32>	59
3.16.2 rfc2544 rename profile	59
3.16.3 rfc2544 save <word32> <word>	60
3.16.4 rfc2544 start <word32> profile <word32> [desc <line128>]	60
3.16.5 rfc2544 stop <word32>	60
3.16.6 show rfc2544 profile [<word32>]	60
3.17 GVRP Configure Commands	60
3.17.1 gvrp	60
3.17.2 gvrpjoin request vlan	60
3.17.3 gvrpleave request vlan	60
3.17.4 gvrp max-vlans	61
3.17.5 gvrp time { [join-time <1-20>] [leave-time <60-300>] [leave-all-time <1000-50>]	61
3.18 VOICE VLAN Configure Commands	61
3.18.1 voice vlan	61
3.18.2 voice vlan aging-time	61
3.18.3 voice vlan class	61
3.18.4 voice vlan oui	61
3.18.5 voice vlan vid	61
3.19 PROFILE ALARM COMMANDS	62
3.19.1 profile alarm	62
3.19.2 alarm	62
3.20 PoE COMMANDS	62

3.20.1	poe management mode	62
3.20.2	poe supply.....	62
3.20.3	poe 4pairs.....	63
3.20.4	poe mode.....	63
3.20.5	poe operation.....	63
3.20.6	poe power.....	63
3.20.7	poe priority.....	63
3.20.8	poe reset.....	63
3.20.9	poe schedule	64

[LIST OF TABLES]

Table 2-1	List of Execution Modes	5
Table 2-2	List of Terminal Keys	6

[LIST OF FIGURES]

Figure 2-1	Screen Description	5
------------	--------------------------	---

1. Scope

1.1 Scope

1.2 Audience

1.3 Pre-required Knowledge

1.4 Access to Hardware Interface

1.5 Related Documents

1 Scope

1.1 Scope

This user guide describes the commands and parameters of the Command Line Interface (CLI) as implemented in the current version of RGS series software. These commands are used to set-up, administer and maintain the system.

1.2 Audience

The guide is intended for operating personnel (sometimes called craft persons) who want to configure the Switch through Command Line Interface (CLI).

1.3 Pre-required Knowledge

The reader must be familiar with the:

- Basic operations of RGS series (see the HW Installation Guide).
- Security and activity monitoring constraints that limit how a command is implemented.

1.4 Access to Hardware Interface

Access to the hardware interface is by a terminal (or computer with terminal emulation software). Requirements for the terminal are:

- RS-232 ASCII port
- Selectable transmission baud rate
- Full alphanumeric capability
- Selectable odd/even or no parity check

1.5 Related Documents

You may want to refer to the following related documents:

- RGS series Quick Start Guide

2. Operator Interface

2.1 Introduction

2.2 Connect Interface

2.3 Authorization Level

2.4 Screen Description

2.5 Execution Modes

2.6 Getting Help

2.7 Terminal Key Function

2.8 Notation Conventions

2 Operator Interface

2.1 Introduction

Access to the Switch is protected by a logon security system. You can log on to the switch with the user name and password. After three failed logon attempts, the system refuses further attempts.

After you log on, the system monitors the interface for periods of inactivity. If the interface is inactive for too long, you are automatically logged off.

The CLI initial user name is (admin) and none password (). You should change the password as soon as possible, because the initial password is known to anyone who reads this manual. You can also change the user name or add additional user names. Use the "account add" command to enter a new user identification, password and authorization level.

2.2 Connect Interface

Interface	Parameter
Console	Baud rate: 115200bps, Data bit: 8, Parity: None, Stop bit: 1
Telnet	Port 23
SSH*	Port 22 (In Windows, you can run terminal emulator such as PuTTY)

* The SSH feature is removed after V1.00 FCS+2.

2.3 Screen Description

1. Connecting to RGS series Ethernet port (RJ45 Ethernet port)
2. Key-in the command under Telnet: **Telnet 192.168.1.1**

Login with default account and password.

Username: admin

Password: 1234

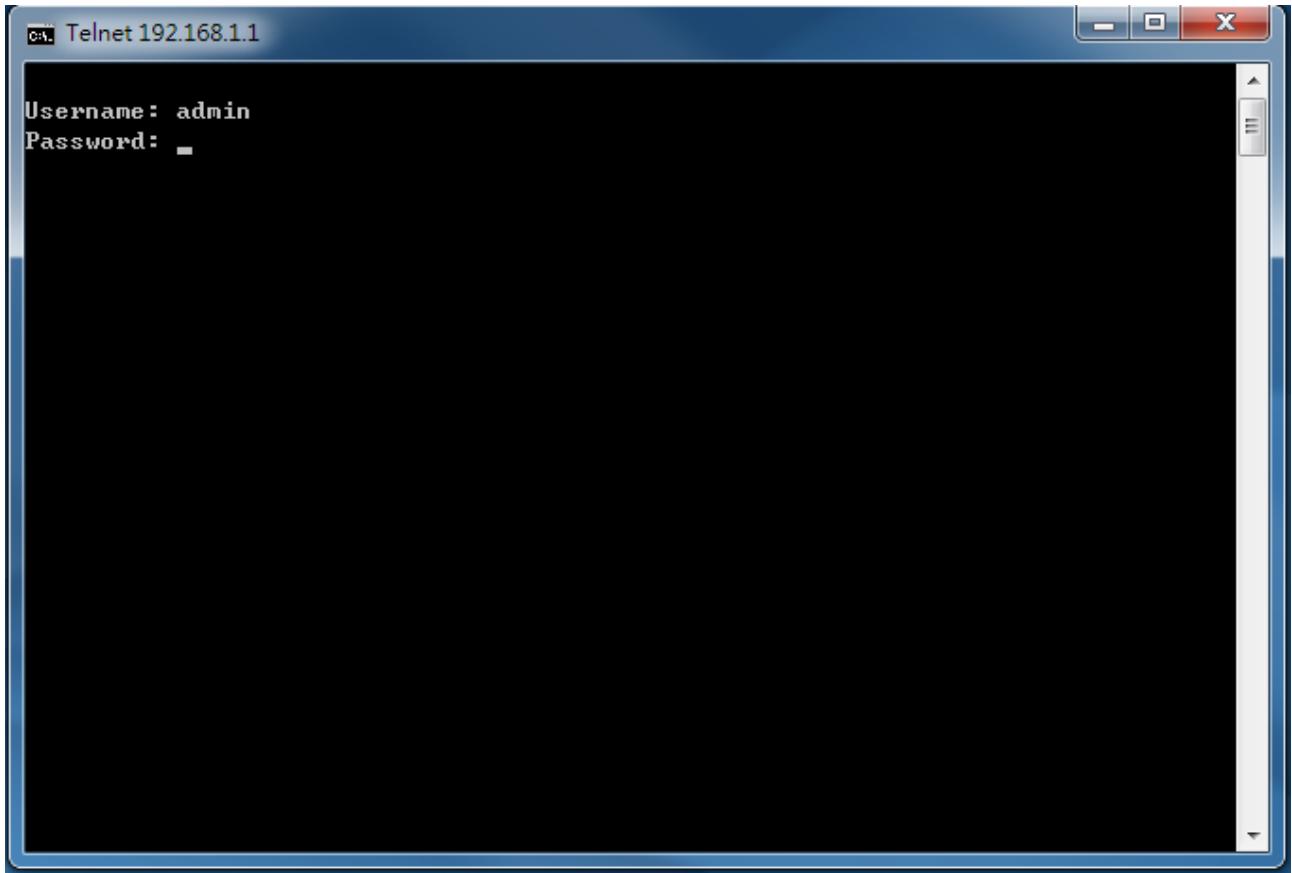


Figure 2-1 Screen Description

2.4 Execution Modes

The CLI contains several execution modes. Users will see different set of commands under different execution modes. Table 2-1 lists all the execution modes and their purposes. When users enter a certain execution mode, the corresponding mode prompt will be displayed automatically on the screen. The mode prompts of all the execution modes are also listed in Table 2-1.

Table 2-1 List of Execution Modes

Mode	Access Level	Prompt
Init Mode	Guest	>
Enable Mode	Guest	#
Config Mode	Guest	(conf)#
Alarm Profile Config Mode	Engineer	(alarm-profile-conf)#+
Gigabit Interface Config Mode	Engineer	(gigabit-intf-conf)#+
ACL Profile Config Mode	Engineer	(acl-profile-conf)#+
scheduler Profile Config Mode	Engineer	(sch-profile-conf)#+
Vlan Interface Config Mode	Engineer	(vlan-intf-conf)#+
IGMP MVR Profile Config Mode	Engineer	(igmp-mvr-profile-conf)#+
IGMP ACL Profile Config Mode	Engineer	(igmp-acl-profile-conf)#+
RingV2 Group Config Mode	Engineer	(ring)#+
Trunk Group Config Mode	Engineer	(trunk-group-conf)#+

2.5 Getting Help

The user can get help by entering a question mark '?' at each position in the command. The displayed result depends on the execution mode and previous input.

2.6 Terminal Key Function

Following is the list of all the terminal keys and their function.

Table 2-2 List of Terminal Keys

ENTER	Run a CLI config script
CTRL-M	
TAB	Tab completion. If tab is pressed after a non-whitespace character, complete the word before the Tab.
CTRL-I	If tab is pressed after a whitespace character, complete the next word.
?	Display available commands If ? is pressed after a non-whitespace character, show possible choices for this word. If ? is pressed after a whitespace character, show possible choices for the next word.
<Up Arrow>	Up history
CTRL-P	
<Down Arrow>	Down history
CTRL-N	
Home	Move the cursor to the beginning of the input line
CTRL-A	
End	Move the cursor to the end of the input line
CTRL-E	
<Left Arrow>	Move the cursor backward
CTRL-B	
<Right Arrow>	Move the cursor forward
CTRL-F	
BACKSPACE	Erase the character before the cursor
CTRL-H	

2.7 Notation Conventions

The notation conventions for the parameter syntax of each CLI command are as follows:

- Parameters enclosed in [] are optional.
- Parameter values are separated by a vertical bar “ | ” only when one of the specified values can be used.
- Parameter values are enclosed in { } when you must use one of the values specified.

3. Commands Descriptions

- 3.1 Initialize Mode Commands**
- 3.2 Enable Mode Commands**
- 3.3 Configure Mode Commands**
- 3.4 VLAN Mode Commands**
- 3.5 Interface VLAN Mode Commands**
- 3.6 Ring Group Mode Commands**
- 3.7 Spanning Tree Configure Commands**
- 3.8 sFlow Configure Command**
- 3.9 SNMP Configure Command**
- 3.10 QoS Function Command**
- 3.11 IGMP Functional Commands**
- 3.12 MVR Functional Commands**
- 3.13 MLD Functional Commands**
- 3.14 Authenticate Mode Commands**
- 3.15 Loop-Protection Configure commands**
- 3.16 LLDP Configure commands**
- 3.17 RFC2544 Testing Configure Commands**
- 3.18 GVRP Configure Commands**
- 3.19 Voice VLAN Configure Commands**

3 Commands Descriptions

3.1 Initialize Mode Commands

The commands in this section (except ‘enable’ command) can be executed under all command modes. These commands are global commands.

3.1.1 exit

Description	Exit current mode and quit CLI
Syntax	exit
Parameter	None

3.1.2 configure terminal

Description	Enter configuration mode
Syntax	configure terminal
Parameter	None

3.1.3 enable

Description	Enter enable mode
Syntax	enable
Parameter	None

3.1.4 Show terminal

Description	Show CLI environment variables
Syntax	show terminal
Parameter	None

3.1.5 Show history

Description	Show command history (Note: commands issued in one execution mode only appear in history of that execution mode)
Syntax	show history
Parameter	None

3.1.6 Show clock

Description	Show current time
Syntax	show clock [detail]
Parameter	None

3.1.7 Show clock detail

Description	Show detailed information
Syntax	show clock detail
Parameter	None

3.2 Enable Mode Commands

All the “show --” commands in this section can also be executed under any other command mode except Initialize Mode.

3.2.1 configure terminal

Description	Enter configuration mode
Syntax	configure
Parameter	None

3.2.2 disable

Description	Enter init mode
Syntax	disable
Parameter	None

3.2.3 show aaa

Description	Show AAA
Syntax	show aaa
Parameter	None

3.2.4 show access management

Description	Access management configuration	
Syntax	show access management [statistics <access_id_list>]	
Parameter		
	Name	Description
	statistics	Statistics data
	access_id_list	ID of access management entry

3.2.5 show access-list

Description	Access list	
Syntax	show access-list [interface [(<port_type> [<v_port_type_list>])] [rate-limiter [<rate_limiter_list>]] [ace statistics [<ace_list>]] show access-list ace-status [static] [loop-protect] [dhcp] [ptp] [upnp] [arp-inspection] [mep] [ipmc] [ip-source-guard] [ip-mgmt] [conflicts] [switch <switch_list>]]	
Parameter		
	Name	
	interface	Select an interface to configure
	ace-status	The local ACEs status
	port_type	GigabitEthernet,1 Gigabit Ethernet Port
	v_port_type_list	PORT_LIST, Port list in 1/1-14
	rate-limiter	Rate limiter
	rate_limiter_list	<RateLimiterList : 1~16> Rate limiter ID
	ace	Access list entry
	statistics	Traffic statistics
	ace_list	<Aceld : 1~256> ACE ID
	static	The ACEs that are configured by users manually
	loop-protect	The ACEs that are configured by Loop Protect module
	ipmc	The ACEs that are configured by IPMC module
	ip-source-guard	The ACEs that are configured by IP Source Guard module
	dhcp	The ACEs that are configured by DHCP module
	conflicts	The ACEs that did not get applied to the hardware due to hardware limitations
	arp-inspection	The ACEs that are configured by ARP Inspection module

3.2.6 show aggregation

Description	Aggregation	
Syntax	show aggregation [mode]	
Parameter		
	Name	Description
	mode	Traffic distribution mode

3.2.7 show alarm

Description	Alarm information	
Syntax	show alarm { history current }	
Parameter		
	Name	Description
	current	Show alarm current information

	history	Show alarm history information
--	---------	--------------------------------

3.2.8 show cpu-load

Description	CPU load
Syntax	show cpu-load
Parameter	

3.2.9 show green-ethernet

Description	EEE	
Syntax	show green-ethernet [interface (<port_type> [<port_list>])] show green-ethernet eee [interface (<port_type> [<port_list>])] show green-ethernet energy-detect [interface (<port_type> [<port_list>])] show green-ethernet short-reach [interface (<port_type> [<port_list>])]	
Parameter		
	Name	Description
	EEE	Shows EEE status for a specific port or ports
	energy-detect	Shows EEE energy-detect status for a specific port or ports
	short-reach	Shows EEE short-reach status for a specific port or ports
	interface	Shows EEE status for a specific port or ports
	port_type	GigabitEthernet, 1 Gigabit Ethernet Port
	port_list	<port_type_list> Port list in 1/1-14

3.2.10 show ip

Description	IP information	
Syntax	show ip	
Parameter		
	Name	Description
	arp	Address Resolution Protocol
	dhcp	Dynamic Host Configuration Protocol
	http	Hypertext Transfer Protocol
	igmp	Internet Group Management Protocol
	interface	IP interface status and configuration
	name-server	Domain Name System
	route	Display the current IP routing table
	source	source command
	statistics	Traffic statistics
	verify	verify command

3.2.11 show ipmc

Description	IPMC information	
Syntax	show ipmc profile [<profile_name>] [detail] show ipmc range [<entry_name>]	
Parameter		
	Name	Description
	profile	IPMC profile configuration
	range	A range of IPv4/IPv6 multicast addresses for the profile
	profile_name	<ProfileName : word16> Profile name in 16 characters
	detail	Detail information of a profile
	entry_name	<EntryName : word16> Range entry name in 16 characters

3.2.12 show ipv6

Description	IPv6 information	
Syntax	show ipv6	
Parameter		
	Name	Description
	interface	Select an interface to configure

	mld	Multicast Listener Discovery
	neighbor	IPv6 neighbors
	route	IPv6 routes
	statistics	Traffic statistics

3.2.13 show lacp

Description	LACP information	
Syntax	show lacp { internal statistics system-id neighbour }	
Parameter		
	Name	Description
	internal	Internal LACP configuration
	neighbour	Neighbor LACP status
	statistics	Internal LACP statistics
	system-id	LACP system id

3.2.14 show line

Description	Alive line information	
Syntax	show line [alive]	
Parameter		
	Name	Description
	alive	Display information about alive lines

3.2.15 show logging

Description	Logging information	
Syntax	show logging <log_id> [switch <switch_list>] show logging [info] [warning] [error] [switch <switch_list>]	
Parameter		
	Name	Description
	log_id	<logging_id: 1-4294967295> Logging ID
	error	Error
	info	Information
	warning	Warning

3.2.16 show loop-protect

Description	Loop protect information	
Syntax	show loop-protect [interface (<port_type> [<plist>])]	
Parameter		
	Name	Description
	interface	Interface status and configuration
	port_type	Gigabit Ethernet, 1 Gigabit Ethernet Port
	plist	<port_type_list> Port list in 1/1-14

3.2.17 show ntp status

Description	Show SNTP information	
Syntax	show sntp	
Parameter	None	

3.2.18 show users

Description	Show account list	
Syntax	show account	
Parameter	None	

3.2.19 show running-cfg

Description	Show running configuration	
Syntax	show running-cfg	
Parameter	None	

3.2.20 show running-config interface Gigabit

Description	Show port config	
Syntax	show running-config interface (<port_type> [<list>]) [all-defaults]	
Parameter		
	Name	Description
	list	<port_type_list> Port list in 1/1-14
	all-defaults	Include most/all default values

3.2.21 show running-config interface vlan

Description	Show default running configuration	
Syntax	show running-config interface vlan <vlan_list> [all-defaults]	
Parameter	None	

3.2.22 show running-config all-defaults

Description	Show all default setting	
Syntax	show running-config [all-defaults]	
Parameter	None	

3.2.23 show running-config feature

Description	Show running config feature	
Syntax	show running-config feature <feature_name> [all-defaults]	
Parameter		
	Name	Description
	feature_name	CWORD Valid words are 'GVRP' 'access' 'access-list' 'aggregation' 'alm_profile' 'arp-inspection' 'auth' 'clock' 'dhcp' 'dhcp-snooping' 'dhcp_server' 'dns' 'dot1x' 'green-ethernet' 'http' 'icli' 'ip-igmp-snooping' 'ip-igmp-snooping-port' 'ip-igmp-snooping-vlan' 'ipmc-profile' 'ipmc-profile-range' 'ipv4' 'ipv6' 'ipv6-mld-snooping' 'ipv6-mld-snooping-port' 'ipv6-mld-snooping-vlan' 'lacp' 'lldp' 'logging' 'loop-protect' 'mac' 'monitor' 'mstp' 'mvr' 'mvr-port' 'ntp' 'phy' 'port' 'port-security' 'pvlan' 'qos' 'rmon' 'snmp' 'source-guard' 'tring_g1' 'tring_g2' 'tring_g3' 'user' 'vlan' 'voice-vlan' 'web-privilege-group-level'
	all-defaults	Include most/all default values

3.2.24 show running-config line

Description	Line information	
Syntax	show running-config line { console vty } <list> [all-defaults]	
Parameter		
	Name	Description
	console	Console
	vty	VTY
	list	<range_list> List of console/VTYs
	all-defaults	Include most/all default values

3.2.25 show running-config vlan

Description	VLAN information	
Syntax	show running-config vlan <list> [all-defaults]	
Parameter		
	Name	Description
	list	<vlan_list> List of VLAN numbers
	all-defaults	Include most/all default values

3.2.26 show version

Description	Show firmware hardware and software status update status	
Syntax	show version	

Parameter	None
------------------	------

3.2.27 show clock

Description	Show current time
Syntax	show clock
Parameter	None

3.2.28 show dmdi

Description	Show DDMI configuration
Syntax	show dmdi
Parameter	None

3.2.29 show version

Description	Show version information
Syntax	show version
Parameter	None

3.2.30 show system inventory

Description	Show system inventory
Syntax	show system inventory
Parameter	None

3.2.31 show mac address table aging-time

Description	Show aging time for MAC learning table (system-wide)
Syntax	show aging time
Parameter	None

3.2.32 show mac address table

Description	Show MAC learning table
Syntax	show mac address-table [conf static aging-time { { learning count } [interface <port_type> [<port_type_list>]] } { address <mac_addr> [vlan <vlan_id>] } vlan <vlan_id> interface <port_type> [<port_type_list>]]
Parameter	None

3.2.33 show mac address table conf

Description	User added static mac addresses	
Syntax	show mac address-table [conf static aging-time { { learning count } [interface (<port_type> [<v_port_type_list>])] } { address <v_mac_addr> [vlan <v_vlan_id>] } vlan <v_vlan_id_1> interface (<port_type> [<v_port_type_list_1>])]	
Parameter		
	Name	Description

3.2.34 show mac address table count

Description	Total number of mac addresses	
Syntax	show mac address-table [conf static aging-time { { learning count } [interface (<port_type> [<v_port_type_list>])] } { address <v_mac_addr> [vlan <v_vlan_id>] } vlan <v_vlan_id_1> interface (<port_type> [<v_port_type_list_1>])]	
Parameter		
	Name	Description

3.2.35 show mac address table learning

Description	Learn/disable/secure stat
Syntax	show mac address-table [conf static aging-time { { learning count } [interface (<port_type> [<v_port_type_list>])] } { address <v_mac_addr> [vlan <v_vlan_id>] } vlan <v_vlan_id_1> interface (<port_type> [<v_port_type_list_1>])]

Parameter	Name	Description
-----------	------	-------------

3.2.36 show mac address table static

Description	All static mac addresses
Syntax	show mac address-table [conf static aging-time { { learning count } [interface (<port_type> [<v_port_type_list>])] } { address <v_mac_addr> [vlan <v_vlan_id>] } vlan <v_vlan_id_1> interface (<port_type> [<v_port_type_list_1>])]
Parameter	

3.2.37 show mac address table interface

Description	Show MAC learning table per port				
Syntax	show mac address-table [interface <port_type> [<port_type_list>]]				
Parameter					
	<table border="1"> <thead> <tr> <th>Name</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td><portNo></td> <td>Valid values: 1~10 Type: Mandatory</td> </tr> </tbody> </table>	Name	Description	<portNo>	Valid values: 1~10 Type: Mandatory
Name	Description				
<portNo>	Valid values: 1~10 Type: Mandatory				

3.2.38 show mac address vlan <vlanid>

Description	Show MAC learning table per VLAN index				
Syntax	show mac address-table { learning count } vlan <vlan_id>				
Parameter					
	<table border="1"> <thead> <tr> <th>Name</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td><vlanid></td> <td>Valid values: 1~4094 Type: Mandatory</td> </tr> </tbody> </table>	Name	Description	<vlanid>	Valid values: 1~4094 Type: Mandatory
Name	Description				
<vlanid>	Valid values: 1~4094 Type: Mandatory				

3.2.39 show mvr

Description	MVR information																						
Syntax	show mvr [vlan <v_vlan_list> name <mvr_name>] [group-database [interface (<port_type> [<v_port_type_list>])] [sfm-information]] [detail]																						
Parameter																							
	<table border="1"> <thead> <tr> <th>Name</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>vlan</td> <td>Search by VLAN</td> </tr> <tr> <td>v_vlan_list</td> <td><v_vlan_list> MVR multicast VLAN list</td> </tr> <tr> <td>name</td> <td>Search by MVR name</td> </tr> <tr> <td>mvr_name</td> <td><MvrName : word16> MVR multicast VLAN name</td> </tr> <tr> <td>group-database</td> <td>Multicast group database from MVR</td> </tr> <tr> <td>interface</td> <td>Search by port</td> </tr> <tr> <td>port_type</td> <td>Gigabit Ethernet, 1 Gigabit Ethernet Port</td> </tr> <tr> <td>v_port_type_list</td> <td>PORT_LIST, Port list in 1/1-14</td> </tr> <tr> <td>sfm-information</td> <td>Including source filter multicast information from MVR</td> </tr> <tr> <td>detail</td> <td>Detail information/statistics of MVR group database</td> </tr> </tbody> </table>	Name	Description	vlan	Search by VLAN	v_vlan_list	<v_vlan_list> MVR multicast VLAN list	name	Search by MVR name	mvr_name	<MvrName : word16> MVR multicast VLAN name	group-database	Multicast group database from MVR	interface	Search by port	port_type	Gigabit Ethernet, 1 Gigabit Ethernet Port	v_port_type_list	PORT_LIST, Port list in 1/1-14	sfm-information	Including source filter multicast information from MVR	detail	Detail information/statistics of MVR group database
Name	Description																						
vlan	Search by VLAN																						
v_vlan_list	<v_vlan_list> MVR multicast VLAN list																						
name	Search by MVR name																						
mvr_name	<MvrName : word16> MVR multicast VLAN name																						
group-database	Multicast group database from MVR																						
interface	Search by port																						
port_type	Gigabit Ethernet, 1 Gigabit Ethernet Port																						
v_port_type_list	PORT_LIST, Port list in 1/1-14																						
sfm-information	Including source filter multicast information from MVR																						
detail	Detail information/statistics of MVR group database																						

3.2.40 show fdb static table

Description	Show static MAC forwarding table
Syntax	show mac address-table static
Parameter	None

3.2.41 show fdbstatic interface gigabit <portNo>

Description	Show static MAC forwarding table per gigabit port.						
Syntax	Show mac address-table { learning count } [interface <port_type> [<port_type_list>]]						
Parameter							
	<table border="1"> <thead> <tr> <th>Name</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td><port_type></td> <td>Port type in Fast or Gigabit Ethernet</td> </tr> <tr> <td><portNo></td> <td>Valid values: 1~12 Type: Mandatory</td> </tr> </tbody> </table>	Name	Description	<port_type>	Port type in Fast or Gigabit Ethernet	<portNo>	Valid values: 1~12 Type: Mandatory
Name	Description						
<port_type>	Port type in Fast or Gigabit Ethernet						
<portNo>	Valid values: 1~12 Type: Mandatory						

3.2.42 show fdbstatic vlan <vlanid>

Description	Show static MAC forwarding table per VLAN index.	
Syntax	show mac address-table { learning count } vlan <vlanid>	
Parameter		
	Name	Description
	<vlanid>	Valid values: 1~4094 Type: Mandatory

3.2.43 show interface port < port_type_list >

Description	Show interface information per port	
Syntax	show interface <port_type> [<port_type_list>] status	
Parameter		
	Name	Description
	<port_type>	Port type in Fast or Gigabit Ethernet
	<portNo>	Valid values: 1~12 Type: Mandatory

3.2.44 show interface port <portNo> statistics

Description	Show Ethernet counter per gigabit port	
Syntax	show interface <port_type> [<port_type_list>] statistics	
Parameter		
	Name	Description
	<port_type>	Port type in Fast or Gigabit Ethernet
	<portNo>	Valid values: 1~12 Type: Mandatory
	counter	Show Gigabit Ethernet counter.

3.2.45 show platform phy

Description	PHYS' information	
Syntax	show platform phy [interface (<port_type> [<v_port_type_list>])] show platform phy id [interface (<port_type> [<v_port_type_list>])] show platform phy instance show platform phy status [interface (<port_type> [<v_port_type_list>])]	
Parameter		
	Name	Description
	id	ID
	instance	PHY Instance Information
	status	Status
	interface	Interface
	port_type	Gigabit Ethernet, 1 Gigabit Ethernet Port
	v_port_type_list	PORT_LIST, Port list in 1/1-12

3.2.46 show poe

Description	Show PoE status and information for each port	
Syntax	show poe show poe [interface (<port_type> [<v_port_type_list>])]	
Parameter		
	Name	Description
	poe	Power over Ethernet
	port_type	Gigabit Ethernet, 1 Gigabit Ethernet Port
	v_port_type_list	PORT_LIST, Port list in 1/1-12

3.2.47 show port-security

Description	Port security	
Syntax	show port-security	

Parameter		
	Name	Description
	port	Show MAC Addresses learned by Port Security
	switch	Show Port Security status
	interface	Interface
	port_type	Gigabit Ethernet, 1 Gigabit Ethernet Port
	v_port_type_list	PORT_LIST, Port list in 1/1-12

3.2.48 show profile alarm

Description	Profile alarm
Syntax	show profile alarm
Parameter	None

3.2.49 show snmp

Description	SNMP information	
Syntax	show snmp show snmp access [<group_name> { v1 v2c v3 any } { auth noauth priv }] show snmp community v3 [<community>] show snmp host [<conf_name>] [system] [switch] [interface] [aaa] show snmp mib context show snmp mib ifmib ifIndex show snmp security-to-group [{ v1 v2c v3 } <security_name>] show snmp user [<username> <engineID>] show snmp view [<view_name> <oid_subtree>]	
Parameter		
	Name	Description
	access	access configuration
	group_name	<GroupName : word32> group name
	any	any security model
	v1	v1 security model
	v2c	v2c security model
	v3	v3 security model
	auth	authNoPriv Security Level
	noauth	noAuthNoPriv Security Level
	priv	authPriv Security Level
	community	Community
	community	<Community : word127> Specify community name
	host	Set SNMP host's configurations
	conf_name	<ConfName : word32> Name of the host configuration
	aaa	AAA event group
	interface	Interface event group
	switch	Switch event group
	system	System event group
	mib	MIB(Management Information Base)
	context	MIB context
	ifmib	IF-MIB
	ifIndex	The IfIndex that is defined in IF-MIB
	security-to-group	security-to-group configuration
	security_name	<SecurityName : word32> security group name
	user	User
	username	<Username : word32> Security user name
	engineID	<Engiedid : word10-32> Security Engine ID

	view	MIB view configuration
	view_name	<ViewName : word32> MIB view name
	oid_subtree	<OidSubtree : word255> MIB view OID

3.2.50 show spanning-tree

Description	System Wide Spanning Tree Setting/Status	
Syntax	show spanning-tree [summary active { interface (<port_type> [<v_port_type_list>]) } { detailed [interface (<port_type> [<v_port_type_list_1>])] } { mst [configuration { <instance> [interface (<port_type> [<v_port_type_list_2>])] }] }	
Parameter		
	Name	Description
	active	STP active interfaces
	detailed	STP statistics
	interface	Choose port
	mst	Configuration
	summary	STP summary

3.2.51 show switchport forbidden

Description	Lookup VLAN Forbidden port entry	
Syntax	show switchport forbidden [{ vlan <vid> } { name <name> }]	
Parameter		
	Name	Description
	vlan	Show forbidden access for specific VLAN id
	vid	VLAN id
	name	Show forbidden access for specific VLAN name
	name	VLAN name

3.2.52 show tacacs-server

Description	TACACS+ configuration	
Syntax	show tacacs-server	
Parameter		

3.2.53 show vlan

Description	Show bridge port member set/status	
Syntax	show vlan	
Parameter	None	

3.2.54 show vlan id

Description	Show bridge port member set/status per VLAN index (1~4094)	
Syntax	show vlan id <vlanid>	
Parameter		
	Name	Description
	<vlanid>	Valid values: 1~4094 Type: Mandatory.

3.2.55 show vlan name

Description	Show bridge port member set/status per VLAN name (32 words)	
Syntax	show vlan name <vword32>	
Parameter		
	Name	Description
	< vword32>	Valid values: 32 words Type: Mandatory.

3.2.56 show vlan brief

Description	VLAN summary information	
Syntax	show vlan [id <vlan_list> name <name> brief]	
Parameter		

	Name	Description
	id	VLAN status by VLAN id
	vlan_list	<vlan_list> VLAN IDs 1-4095
	name	VLAN status by VLAN name
	name	<vword32> A VLAN name
	brief	VLAN summary information

3.2.57 show vlan status

Description	Show the VLANs configured for each interface	
Syntax	show vlan status [interface (<port_type> [<plist>])] [combined admin nas mvr voice-vlan mstp erps vcl evc gvrp all conflicts]	
Parameter		
	Name	Description
	admin	Show the VLANs configured by administrator
	all	Show all VLANs configured
	combined	Show the VLANs configured by a combination
	conflicts	Show VLANs configurations that has conflicts
	gvrp	Show the VLANs configured by GVRP
	interface	Show the VLANs configured for a specific interface(s)
	mstp	Show the VLANs configured by MSTP
	vcl	Show the VLANs configured by VCL
	voice-vlan	Show the VLANs configured by Voice VLAN

3.2.58 show qos-queue-mapping

Description	Show QoS queue mapping table
Syntax	show qos maps
Parameter	None

3.2.59 show interface ports <portNo> priority

Description	Show QoS per gigabit port.	
Syntax	show interface <port_type> [<port_type_list>] statistics { priority [<0~7>] }	
Parameter		
	Name	Description
	priority [<0~7>]	Valid values: 0 ~7 Type: Mandatory
	<port_type>	Port type in Fast, Gigabit Ethernet
	<portNo>	Valid values: 1~12 Type: Mandatory

3.2.60 show qos

Description	Show scheduler profile table
Syntax	show queue-scheduler profile
Parameter	None

3.2.61 show queue-shaper

Description	Show queue shaper information
Syntax	show queue-shaper
Parameter	None

3.2.62 show port-shaper

Description	Show port shaper information
Syntax	show port-shaper
Parameter	None

3.2.63 show interface gigabit <portNo> storm-control

Description	Show storm control information per gigabit port
Syntax	show interface gigabit <portNo> storm-control
Parameter	

	Name	Description
	<port_type>	Port type in Fast, Gigabit Ethernet
	<portNo>	Valid values: 1~12 Type: Mandatory

3.2.64 show interface gigabit <portNo> transceiver

Description	Show interface transceiver	
Syntax	show interface GigabitEthernet interface <port_type_list> transceiver	
Parameter		
	Name	Description
	<portNo>	Valid values: 9~12 (for 14 port model) Type: Mandatory

3.2.65 show qos interface

Description	QoS interface information	
Syntax	show qos [{ interface [(<port_type> [<port>])] }]	
Parameter		
	Name	Description
	interface	Interface
	port_type	Gigabit Ethernet, 1 Gigabit Ethernet Port
	port	PORT_LIST, Port list in 1/1-14

3.2.66 show qos maps

Description	Maps	
Syntax	show qos maps { maps [dscp-cos] [dscp-ingress-translation] [dscp-classify] [cos-dscp] [dscp-egress-translation] }	
Parameter		
	Name	Description
	cos-dscp	Map for cos to dscp
	dscp-classify	Map for dscp classify enable
	dscp-cos	Map for dscp to cos
	dscp-egress-translation	Map for dscp egress translation
	dscp-ingress-translation	Map for dscp ingress translation

3.2.67 show qos qce

Description	QCE	
Syntax	show qos { qce [<qce>] }	
Parameter		
	Name	Description
	qce	<Id : 1-256> QCE ID

3.2.68 show qos storm {unknown-uc | unknown-mc | broadcast}

Description	Show storm control information by VLAN	
Syntax	show vlan unknown-uc show vlan unknown-mc show vlan broadcast	
Parameter		
	Name	Description
	unknown-uc	Show unknown unicast storm control information by VLAN. Type: Mandatory
	unknown-mc	Show unknown multicast storm control information by VLAN. Type: Mandatory
	broadcast	Show broadcast storm control information by VLAN. Type: Mandatory

3.2.69 show port-mirror

Description	Show port mirror information
Syntax	show port-mirror
Parameter	None

3.2.70 show rmon

Description		
Syntax	show rmon alarm [<id_list>] show rmon event [<id_list>] show rmon history [<id_list>] show rmon statistics [<id_list>]	
Parameter	Name	Description
	alarm	Display the RMON alarm table
	event	Display the RMON event table
	history	Display the RMON history table
	statistics	Display the RMON statistics table
	id_list	<1~65535>, Statistics entry list

3.2.71 show interface gigabit <portNo>

Description	Show interface gigabit port information	
Syntax	show interface gigabit <portNo>	
Parameter	Name	Description
	<portNo>	Gigabit port. Valid values: 1 ~ 10 Type: Mandatory

3.2.72 show interface vlan

Description	Show VLAN interface information of all VLANs	
Syntax	show interface vlan	
Parameter	None	

3.2.73 show interface vlan <vlanid>

Description	Show VLAN interface information of specify VLAN	
Syntax	show interface vlan <vlanid>	
Parameter	Name	Description
	<vlanid>	VLAN ID. Valid values: 1 ~ 4094 Type: Mandatory

3.2.74 show interface gigabit <portNo> vlan

Description	Show VLAN information per port	
Syntax	show interface gigabit <portNo> vlan	
Parameter	Name	Description
	<portNo>	Gigabit port Valid values: 1 ~ 12 Type: Mandatory

3.2.75 show multicast-fdb

Description	Show IGMP group membership table	
Syntax	show multicast-fdb	
Parameter	None	

3.2.76 show dot1x

Description	Show dot1x information	
Syntax	show dot1x	
Parameter	None	

3.2.77 show dot1x status

Description	Show dot1x stats
Syntax	show dot1x status [interface <port_type> [<port_type_list>]] [brief]
Parameter	None

3.2.78 show dot1x statistics

Description	Show dot1x statistics	
Syntax	show dot1x statistics { eapol radius all } [interface (<port_type> [<v_port_type_list>])]	
Parameter		
	Name	Description
	all	Show all dot1x statistics
	eapol	Show EAPOL statistics
	radius	Show Backend Server statistics
	interface	Interface
	port_type	Gigabit Ethernet, 1 Gigabit Ethernet Port
	v_port_type_list	PORT_LIST, Port list in 1/1-14

3.2.79 show radius-server [statistics]

Description	show radius-server statistics	
Syntax	show radius-server [statistics]	
Parameter		
	Name	Description
	[statistics]	Count radius packet statistics

3.2.80 show voice

Description	VLAN for voice traffic	
Syntax	show voice vlan [oui <oui> interface (<port_type> [<port_list>])]	
Parameter		
	Name	Description
	vlan	Vlan for voice traffic
	oui	OUI configuration
	oui	OUI value
	interface	Select an interface to configure
	port_type	Gigabit Ethernet, 1 Gigabit Ethernet Port
	port_list	<port_type_list> Port list in 1/1-14

3.2.81 show web

Description	Web privilege	
Syntax	show web privilege group [<group_name>] level	
Parameter		
	Name	Description
	privilege	Web privilege
	group	Web privilege group
	group_name	CWORD Valid words are 'Aggregation' 'DHCP' 'Debug' 'Dhcp_Client' 'Diagnostics' 'EEE' 'Green_Ethernet' 'IP2' 'IPMC_Snooping' 'LACP' 'LLDP' 'Loop_Protect' 'MAC_Table' 'MVR' 'Maintenance' 'Mirroring' 'NTP' 'Ports' 'Private_VLANS' 'QoS' 'RPC' 'Security' 'Spanning_Tree' 'System' 'Timer' 'VCL' 'VLANS' 'Voice_VLAN' 'XXRP' 'sFlow'
	level	Web privilege group level

3.3 Configure Mode Commands

Commands that can be executed under Configure Mode

3.3.1 interface gigabit <portNo>

Description	Gigabit Ethernet interface. (enter gigabit interface mode)	
Syntax	interface gigabit <portNo>	
Parameter	Name	Description
	<portNo>	Valid values: 1 ~ 10 Type: Mandatory

3.3.2 interface vlan <vlanid>

Description	VLAN Ethernet interface (enter mode of interface VLAN)	
Syntax	interface vlan <vlanid>	
Parameter	Name	Description
	<vlanid>	Valid values: 1 ~ 4094 Type: Mandatory

3.3.3 aaa

Description	Authentication	
Syntax	aaa authentication	
Parameter	Name	Description
	authentication	Authentication

3.3.4 access

Description	Management configuration	
Syntax	access management	
Parameter	Name	Description
	management	Access management configuration

3.3.5 access-list

Description	Enter ACL Profile Config Mode	
Syntax	profile acl	
Parameter	Name	Description
	<vlanid>	Valid values: 1 ~ 4094 Type: Mandatory
Parameter	None	

3.3.6 aggregation mode

Description	Traffic distribution mode	
Syntax	aggregation mode { dmac ip port smac }	
Parameter	Name	Description
	dmac	Destination MAC affects the distribution
	ip	IP address affects the distribution
	port	IP port affects the distribution
	smac	Source MAC affects the distribution

3.3.7 alarm history clear

Description	Clear alarm history	
Syntax	alarm history clear	
Parameter	Name	Description

3.3.8 banner

Description	Banner control	
Parameter	Name	Description

Syntax	banner { LINE exec login motd }	
Parameter	Name	Description
	LINE	c banner-text c, where 'c' is a delimiting character
	exec	Set EXEC process creation banner
	login	Set login banner
	motd	Set Message of the Day banner

3.3.9 ddmi

Description	Enable DDMI function
Syntax	ddmi
Parameter	None

3.3.10 default access-list rate-limiter

Description	Rate limiter	
Syntax	default access-list rate-limiter [<rate_limiter_list>]	
Parameter		
Name	Description	
RateLimiterId : 1-16	Rate limiter ID	

3.3.11 profile sch

Description	Enter Scheduling Profile Config Mode
Syntax	profile sch
Parameter	None

3.3.12 ntp server <1-5> ip-address <ip>

Description	Set NTP server address	
Syntax	ntp server <1-5> ip-address { <ipv4_unicast> <ipv6_unicast> <hostname> }	
Parameter		
Name	Description	
<1-5>	index number	
<ipv4> <ipv6>	Type: Mandatory	
<hostname>	Server name	

3.3.13 clock timezone

Description	Set time zone	
Syntax	clock timezone <word16> <-23-23> [<0-59>]	
Parameter		
Name	Description	
< word16>	Valid values: please see ' list timezone ' Type: Mandatory	
default	Set time zone to default (GMT/UTC). Type: Mandatory	

3.3.14 clock summer-time set [start-time] [end-time]

Description	Set date/time	
Syntax	clock summer-time <word16> date [<1-12> <1-31> <2000-2097> <hhmm> <1-12> <1-31> <2000-2097> <hhmm> [<1-1440>]]	
Parameter		
Name	Description	
< word16>	Valid values: please see ' list timezone ' Type: Mandatory	
<day>	Valid values: 1 ~ 31 Type: Mandatory	
<month>	Valid values: 1 ~ 12 Type: Mandatory	
<year>	Valid values: 2000-2097	

		Type: Mandatory
	<minute>	Valid values: 0 ~ 59 Type: Mandatory
	<second>	Valid values: 0 ~ 59 Type: Optional

3.3.15 account add <username>

Description	Add an account	
Syntax	username <word31> privilege <0-15> password encrypted <word4-44>	
Parameter		
	Name	Description
	< word31>	Valid values: 1 ~ 31 characters Type: Mandatory
	<0-15>	Valid values: 0 ~ 15 Type: Mandatory
	< word4-44>	Valid values: 4-44 characters Type: Mandatory

3.3.16 account delete <username>

Description	Delete an account	
Syntax	no username <word31>	
Parameter		
	Name	Description
	< word31>	Valid values: 1 ~ 31 characters Type: Mandatory

3.3.17 configuration save and replace

Description	Save and install configuration	
Syntax	copy { startup-config running-config <Filename> } { startup-config running-config < Filename > } [syntax-check]	
Parameter		
	Name	Description
	running-config	Currently running configuration
	startup-config	Startup configuration
	syntax-check	Perform syntax check on source configuration
	Filename	File in FLASH or on TFTP server

3.3.18 clear ip igmp snooping statistics

Description	clear ipigmpsnoopingstatisti	
Syntax	clear ip igmp snooping [vlan<vlan_list>] statistics	
Parameter		
	Name	Description
	vlan_list	VLAN list.

3.3.19 clear logging

Description	clear logging	
Syntax	clear logging [info] [warning] [error] [switch <switch_list>]	
Parameter		
	Name	Description
	info	Information
	warning	Warning
	error	Error
	Switch list	List of switch ID, ex, 1,3-5,6

3.3.20 clear mac address-table

Description	clear mac address-table	
Syntax	clear mac address-table	
Parameter		

3.3.21 debug

Description	Set prompt for testing	
Syntax	debug prompt	
Parameter		
	Name	Description
	<word>	Word for prompt in 32 characters

3.3.22 delete

Description	Delete one file in flash: file system	
Syntax	delete <word>	
Parameter		
	Name	Description
	<word>	Name of file to delete

3.3.23 dir

Description	Directory of all files in flash: file system	
Syntax	dir	
Parameter		
	Name	Description
	<word>	Name of file to delete

3.3.24 do

Description	To run exec commands in config mode	
Syntax	do <line>	
Parameter		
	Name	Description
	<line>	Exec Command

3.3.25 duplex

Description	Set duplex mode	
Syntax	duplex { half full auto [half full] }	
Parameter		
	Name	Description
	half	Forced half duplex
	full	Forced full duplex
	auto	Auto negotiation of duplex mode
	[half full]	Advertise half/full duplex

3.3.26 editing

Description	Enable command line editing	
Syntax	editing	
Parameter		
	Name	Description

3.3.27 firmware

Description	Firmware swap and upgrade	
Syntax	firmware { swap upgrade }	
Parameter		
	Name	Description
	swap	Swap between Active and Alternate firmware image
	upgrade	Firmware upgrade

3.3.28 flowcontrol

Description	Enable/disable flow control	
Syntax	flowcontrol { on off }	
Parameter		
	Name	Description
	on	Enable flow control
	off	Disable flow control

3.3.29 frame-sizes

Description	Select the frame sizes that the enabled tests will loop through	
Syntax	frame-sizes { [64] [128] [256] [512] [1024] [1280] [1518] [2000] [9600] }	
Parameter		
	Name	Description
	64	Enable testing with 64-byte TST PDUs
	128	Enable testing with 128-byte TST PDUs
	256	Enable testing with 256-byte TST PDUs
	512	Enable testing with 512-byte TST PDUs
	1024	Enable testing with 1024-byte TST PDUs
	1280	Enable testing with 1280-byte TST PDUs
	1518	Enable testing with 1518-byte TST PDUs
	2000	Enable testing with 2000-byte TST PDUs
	9600	Enable testing with 9600-byte TST PDUs

3.3.30 green-etherneeee

Description	Powering down of PHYs when there is no traffic.	
Syntax	green-etherneeee	
Parameter		

3.3.31 green-etherneeee urgent-queues

Description	Enables EEE urgent queue. An urgent queue means that latency is kept to a minimum for traffic going to that queue. Note: EEE power savings will be reduced.	
Syntax	green-etherneeee urgent-queues [<range_list>]	
Parameter		
	Name	Description
	range_list	EEE Interface

3.3.32 help

Description	Description of the interactive help system	
Syntax	help	
Parameter		

3.3.33 iparp inspection

Description	IP ARP inspection	
Syntax	iparp inspection	
Parameter		

3.3.34 ip arp inspection translate

Description	IP ARP inspection entry interface configuration	
Syntax	ip arp inspection translate [interface <port_type><port_type_id><vlan_id><mac_icast><ipv4_icast>]	
Parameter		
	Name	Description
	port_type	Port type in Fast, Gigabit
	port_type_id	Port ID in the format of switch-no/port-no
	vlan_id	Select a VLAN id to configure
	mac_icast	Select a MAC address to configure
	ipv4_icast	Select an IP address to configure

3.3.35 ip arp inspection entry

Description	ARP inspection entry interface configuration	
Syntax	ip arp inspection entry interface <port_type> <in_port_type_id> <vlan_var> <mac_var> <ipv4_var>	
Parameter		
	Name	Description
	port_type	Port type in Fast, Gigabit

	in_port_type_id	Port ID in the format of switch-no/port-no
	vlan_var	Select a VLAN id to configure
	mac_var	Select a MAC address to configure
	ipv4_var	Select an IP address to configure

3.3.36 ip arp inspection vlan

Description	IP ARP inspection VLAN setting	
Syntax	ip arp inspection vlan<vlan_list>	
Parameter		
	Name	Description
	vlan_list	ARP inspection VLAN list

3.3.37 ip dns proxy

Description	IP DNS proxy service	
Syntax	ipdns proxy	
Parameter		

3.3.38 ip http secure-redirect

Description	IP http secure-redirect	
Syntax	ip http secure-redirect	
Parameter		

3.3.39 ip http secure-server

Description	IP Secure HTTP web server	
Syntax	ip http secure-server	
Parameter		

3.3.40 ip source binding interface

Description	IP source binding entry interface configuration	
Syntax	ip source binding interface <port_type> <port_type_id> <vlan_id> <ipv4_unicast> <mac_unicast>	
Parameter		
	Name	Description
	port_type	Port type in Fast, Gigabit or Ten gigabit Ethernet
	port_type_id	Port ID in the format of switch-no/port-no
	vlan_id	Select a VLAN id to configure
	ipv4_unicast	Select an IP Address to configure
	mac_unicast	Select a MAC address to configure

3.3.41 ip ssh*

Description	IP Secure Shell	
Syntax	ipssh	
Parameter		

* The SSH feature is removed after V1.00 FCS+2.

3.3.42 ip name-server

Description	IP name server	
Syntax	ip name-server { <v_ipv4_unicast> dhcp [interface vlan <v_vlan_id>] }	
Parameter		
	Name	Description
	v_ipv4_unicast	A valid IPv4 unicast address
	dhcp	Dynamic Host Configuration Protocol
	v_vlan_id	VLAN identifier(s): VID

3.3.43 ip route

Description	IP Route	
Syntax	ip route <v_ipv4_addr> <v_ipv4_netmask> <v_ipv4_gw>	
Parameter		

	Name	Description
	v_ipv4_addr	Network
	v_ipv4_netmask	Netmask
	v_ipv4_gw	Gateway

3.3.44 ip verify

Description	IP verify	
Syntax	ip verify [source] [translate]	
Parameter		
	Name	Description
	source	verify source
	translate	IP address verify source translate all entries

3.3.45 ipmc profile

Description	IPMC profile configuration
Syntax	ipmc profile
Parameter	

3.3.46 ipmc range

Description	A range of IPv4/IPv6 multicast addresses for the profile	
Syntax	ipmc range <word16> { <ipv4_mcast> [<ipv4_mcast>] <ipv6_mcast> [<ipv6_mcast>] }	
Parameter		
	Name	Description
	word16	Range entry name in 16 characters
	ipv4_mcast	Valid IPv4 multicast address
	ipv4_mcast	Valid IPv4 multicast address that is not less than start address
	ipv6_mcast	Valid IPv6 multicast address
	ipv6_mcast	Valid IPv6 multicast address that is not less than start address

3.3.47 lacp

Description	LACP system priority	
Syntax	lacp system-priority <v_1_to_65535>	
Parameter		
	Name	Description
	system-priority	System priority
	<v_1_to_65535>	Priority value, lower means higher priority

3.3.48 line

Description	Console terminal control	
Syntax	line { <0~16> console 0 vty <0~15> }	
Parameter		
	Name	Description
	<0~16>	List of line numbers
	console	Console terminal line
	vty	Virtual terminal

3.3.49 login host

Description	Domain name and IP address	
Syntax	logging host { <v_ipv4_ucast> <v_word45> }	
Parameter		
	Name	Description
	hostname	Domain name of the log server
	ipv4_ucast	IP address of the log server

3.3.50 login level

Description	Log level	
Syntax	logging level { info warning error }	
Parameter		
	Name	Description
	error	Error
	info	Information
	warning	Warning

3.3.51 login on

Description	System log in	
Syntax	logging on	
Parameter		

3.3.52 logout

Description	System logout	
Syntax	logout	
Parameter		

3.3.53 mac address-table aging-time

Description	MAC table entries/configuration	
Syntax	mac address-table aging-time <v_0_10_to_1000000>	
Parameter		
	Name	Description
	<v_0_10_to_1000000>	Aging time in seconds, 0 disables aging

3.3.54 mac address-table static

Description	MAC table entries/configuration	
Syntax	mac address-table static <v_mac_addr> vlan <v_vlan_id> interface (<port_type> [<v_port_type_list>])	
Parameter		
	Name	Description
	<v_mac_addr>	48 bit MAC address
	v_vlan_id	VLAN IDs 1-4095
	port_type	Select an interface to configure
	v_port_type_list	Port list

3.3.55 more

Description	File in FLASH or on TFTP server	
Syntax	more <Path>	
Parameter		

3.3.56 no

Description	Function disable	
Syntax	no { debug port-securit terminal }	
Parameter		
	Name	Description
	debug	Debugging functions
	port-securit	Port security (psec limit)
	terminal	Set terminal line parameters

3.3.57 ping

Description	The ping function	
Syntax	ping { ip ipv6 }	
Parameter		
	Name	Description
	ip	IP (ICMP) echo
	ipv6	IPv6 (ICMPv6) echo

3.3.58 port-security

Description	Port security	
Syntax	port-security [aging] [time <v_10_to_10000000>]	
Parameter		
	Name	Description
	aging	Enable/disable port security aging
	time	Time in seconds between check for activity on learned MAC addresses
	v_10_to_10000000	<10-10000000> seconds

3.3.59 privilege

Description		
Syntax	privilege { exec configure config-vlan line interface if-vlan ipmc-profile snmps-host stp-aggr dhcp-pool rfc2544-profile } level <privilege> <cmd>	
Parameter		
	Name	Description
	config-vlan	VLAN configuration mode
	configure	Global configuration mode
	dhcp-pool	DHCP Pool configuration mode
	exec	Exec mode
	if-vlan	VLAN Interface mode
	interface	Port List Interface mode
	ipmc-profile	IPMC Profile mode
	line	Line configuration mode
	rfc2544-profile	RFC2544 Profile mode
	snmps-host	SNMP Server Host mode
	stp-aggr	STP Aggregation mode

3.3.60 reload

Description	System or configuration reset	
Syntax	reload { cold default }	
Parameter		
	Name	Description
	cold	Reload cold
	defaults	Reload defaults without rebooting

3.3.61 rmon

Description	RMON	
Syntax	rmon {alarm event}	
Parameter		
	Name	Description
	alarm	Configure an RMON alarm
	event	Configure an RMON event

3.3.62 rmon alarm

Description	RMON Alarm	
Syntax	rmon alarm <id> <oid_str> <interval> { absolute delta } rising-threshold <rising_threshold> [<rising_event_id>] falling-threshold <falling_threshold> [<falling_event_id>] { [rising falling both] }	
Parameter		
	Name	Description
	id	Alarm entry ID
	ifInDiscards	The number of inbound packets that are discarded even the packets are normal
	flnErrors	The number of inbound packets that contained errors preventing them from being deliverable to a higher-layer protocol

	ifInNUcastPkts	The number of broad-cast and multi-cast packets delivered to a higher-layer protocol
	ifInOctets	The total number of octets received on the interface, including framing characters
	ifInUcastPkts	The number of uni-cast packets delivered to a higher-layer protocol
	ifInUnknownProtos	The number of the inbound packets that were discarded because of the unknown or un-support protocol
	ifOutDiscards	The number of outbound packets that are discarded event the packets is normal
	ifOutErrors	The number of outbound packets that could not be transmitted because of errors
	ifOutNUcastPkts	The number of broad-cast and multi-cast packets that request to transmit
	ifOutOctets	The number of octets transmitted out of the interface, including framing characters
	ifOutUcastPkts	The number of uni-cast packets that request to transmit
	interval	Sample interval
	absolute	Test each sample directly
	delta	Test delta between samples
	rising_threshold	<-2147483648-2147483647> rising threshold value
	rising_event_id	<0-65535> Event to fire on rising threshold crossing
	falling_threshold	<-2147483648-2147483647> falling threshold value
	falling_event_id	<0-65535> Event to fire on falling threshold crossing
	both	Trigger alarm when the first value is larger than the rising threshold or less than the falling threshold (default)
	falling	Trigger alarm when the first value is less than the falling threshold
	rising	Trigger alarm when the first value is larger than the rising threshold

3.3.63 rmon alarm

Description	RMON Event	
Syntax	rmon event <id> [log] [trap <community>] { [description <description>] }	
Parameter		
	Name	Description
	description	Specify a description of the event
	log	Generate RMON log when the event fires
	trap	Generate SNMP trap when the event fires

3.3.64 terminal

Description	Terminal control	
Syntax	terminal { editing exec-timeout help history length width }	
Parameter		
	Name	Description
	editing	Enable command line editing
	exec-timeout	Set the EXEC timeout
	help	Description of the interactive help system
	history	Control the command history function
	length	Set number of lines on a screen
	width	Set width of the display terminal

3.3.65 vlan <vlanid>

Description	Configure VLAN	
Syntax	vlan <vlanid>	
Parameter		
	Name	Description
	<vlanid>	Create an empty VLAN index Valid values: 1 ~ 4094 Type: Mandatory

3.3.66 vlan <vlanid> <name>

Description	Configure VLAN's name	
Syntax	vlan <vlanid> <name>	
Parameter		
Name	Description	
<vlanid>	Create an empty VLAN index. Valid values: 1 ~ 4094 Type: Mandatory	
<name>	VLAN Name (0~31) String Size: 0~31 Type: Mandatory	

3.3.67 vlan disable <vlanid>

Description	Delete VLAN member set/setting	
Syntax	vlan disable <vlanid>	
Parameter		
Name	Description	
<vlanid>	Valid values: 1 ~ 4094 Type: Mandatory	

3.3.68 mac address-table aging-time <time>

Description	Configure aging time for a bridge port	
Syntax	mac address-table aging-time <time>	
Parameter		
Name	Description	
<time>	Valid values: 10 ~ 1000000 (seconds), 0: disable aging Type: Mandatory	

3.3.69 mtu <value>

Description	MTU size	
Syntax	mtu <value>	
Parameter		
Name	Description	
<value>	Range. Valid values: 1536~9000 (bytes) Type: Mandatory	

3.3.70 media-type

Description	Configure media-type	
Syntax	media-type { rj45 sfp dual }	
Parameter		
Name	Description	
rj45	RJ-45 interface (copper interface)	
sfp	SFP interface (fiber interface)	
dual	Dual media interface (copper and fiber interface)	

3.3.71 monitor destination interface

Description	The destination port. That is the port that traffic should be mirrored to.	
Syntax	monitor destination interface <port_type> <port_type_id>	
Parameter		
Name	Description	
<port_type>	Port type	
<port_type_id>	Port number	

3.3.72 monitor source interface

Description	Mirror Interface traffic
-------------	--------------------------

Syntax	monitor source { { interface (<port_type> [<v_port_type_list>]) }	
Parameter	Name	Description
	port_type	1 Gigabit Ethernet Port
	v_port_type_list	Port list

3.3.73 monitor source cpu

Description	Mirror Interface traffic	
Syntax	monitor source { cpu [<cpu_switch_range>] } { both rx tx }	
Parameter	Name	Description
	both	Setting source port to both will mirror both ingress and egress traffic
	rx	Setting source port to RX will mirror ingress traffic
	tx	Setting source port to TX will mirror egress traffic

3.3.74 speed

Description	Configures interface speed. If you use 10, 100, or 1000 keywords with the auto keyword the port will only advertise the specified speeds.	
Syntax	speed { 10g 2500 1000 100 10 auto { [10] [100] [1000] } }	
Parameter	Name	Description
	1000	1 Gbps
	100	100 Mbps
	10	10 Mbps
	auto	Auto negotiation
	[10]	10 Mbps
	[100]	100 Mbps
	[1000]	1 Gbps

3.3.75 tacacs-server host

Description	Configure TACACS+ server	
Syntax	tacacs-server host <word1-255> [port <0-65535>] [timeout <1-1000>] [key <line1-63>]	
Parameter	Name	Description
	word1-255	Hostname or IP address
	0-65535	TCP port number
	1-1000	Wait time in seconds
	line1-63	The shared key

3.3.76 tacacs-server key

Description	Configure TACACS+ encryption key	
Syntax	tacacs-server key <line1-63>	
Parameter	Name	Description
	line1-63	

3.3.77 tacacs-server timeout

Description	Time to wait for a TACACS+ server to reply	
Syntax	tacacs-server timeout <1-1000>	
Parameter	Name	Description
	1-1000	Wait time in seconds

3.3.78 traps

Description	trap event configuration	
Syntax	traps [aaa authentication] [system [coldstart] [warmstart]] [switch [stp] [rmon]]	

Parameter		
	Name	Description
	aaa authentication	AAA authentication fail event
	coldstart	Cold start event
	warmstart	Warm start event
	stp	STP event
	rmon	RMON event

3.3.79 upnp

Description	Set UPnP's configurations
Syntax	upnp
Parameter	

3.3.80 upnp advertising-duration

Description	Set UPnP's advertising duration	
Syntax	upnp advertising-duration <100-86400>	
Parameter		
	Name	Description
	100-86400	Advertising duration

3.3.81 upnp ttl

Description	Set UPnP's TTL value	
Syntax	upnp ttl <1-255>	
Parameter		
	Name	Description
	1-255	TTL value

3.3.82 username

Description	User account	
Syntax	username <username> privilege <priv> password encrypted <encry_password> username <username> privilege <priv> password none username <username> privilege <priv> password unencrypted <password>	
Parameter		
	Name	Description
	username	<Username : word31> User name allows letters, numbers and underscores
	privilege	Set user privilege level
	priv	User privilege level
	password	Specify the password for the user
	encrypted	Specifies an ENCRYPTED password will follow
	none	NULL password
	unencrypted	Specifies an UNENCRYPTED password will follow

3.3.83 web

Description		
Syntax	web privilege group <group_name> level { [cro <cro>] [crw <crw>] [sro <sro>] [srw <srw>] }*1	
Parameter		
	Name	Description
	privilege	Web privilege
	group	Web privilege group
	group_name	Valid words are 'Aggregation' 'DHCP' 'Debug' 'Dhcp_Client' 'Diagnostics' 'EEE' 'Green_Ethernet' 'IP2' 'IPMC_Snooping' 'LACP' 'LLDP' 'Loop_Protect' 'MAC_Table' 'MVR' 'Maintenance' 'Mirroring' 'NTP' 'Ports' 'Private_VLANS' 'QoS' 'RPC' 'Security' 'Spanning_Tree' 'System' 'Timer' 'VCL' 'VLANS' 'Voice_VLAN' 'XXRP' 'sFlow'
	level	Web privilege group level
	cro	Configuration Read-only level
	crw	Configuration Read-write level

	sro	Status/Statistics Read-only level
	srw	Status/Statistics Read-write level
	cro	<Cro : 0-15>
	crw	<Crw : 0-15>
	sro	<Sro : 0-15>
	srw	<SrW : 0-15>

3.3.84 flow-control {enable | disable}

Description	Enable/Disable flow-control	
Syntax	flow-control {enable disable}	
Parameter		
	Name	Description
	enable	Enable flow-control
	disable	Disable flow-control

3.3.85 speed

Description	Configure gigabit Ethernet speed and Copper/SFP for gigabit port 7~8 (port1~6 Only support copper, no SFP) (port 9, 10 only support auto)	
Syntax	speed {auto full-1000mbps full-100mbps full-10mbps half-100mbps half-10mbps}	
Parameter		
	Name	Description
	auto	Auto negotiation
	full-1000mbps	Set 1000Mbps full duplexing
	full-100mbps	Set 100Mbps full duplexing
	full-10mbps	Set 10Mbps full duplexing
	half-100mbps	Set 100Mbps half duplexing
	half-10mbps	Set 10Mbps half duplexing

3.3.86 port {enable/disable}

Description	Set interface gigabit port enable or disable	
Syntax	port {enable/disable}	
Parameter		
	Name	Description
	disable	Turn off gigabit port
	enable	Turn on gigabit port

3.3.87 Date/Time

Description	Set device date and time	
Syntax	clock datetime <2000-2037> <1-12> <1-31> <0-23> <0-59> <0-59>	
Parameter		
	Name	Description
	<2000-2037>	year
	<1-12>	month
	<1-31>	date
	<0-23>	hour
	<0-59>	minute
	<0-59>	second

3.4 VLAN Mode Commands

3.4.1 vlan

Description	VLAN commands	
Syntax	vlan <vlan_list>	
Parameter		
	Name	Description

	vlan_ids	ISL VLAN IDs 1~4095
--	----------	---------------------

3.4.2 vlan ethertype s-custom-port

Description	VLAN Ethernet type for custom S-ports configuration	
Syntax	vlan ethertype s-custom-port <0x0600-0xffff>	
Parameter		
	Name	Description
	0x0600-0xffff	Ethertype (Range: 0x0600-0xffff)

3.4.3 vlan-trunking

Description	Change whether trunking of unknown VLANs is enabled	
Syntax	vlan-trunking	
Parameter		

3.4.4 switchport access vlan

Description	Set switch access mode of the interface	
Syntax	switchport access vlan <vlan_id>	
Parameter		
	Name	Description
	vlan_id	VLAN ID of the VLAN when this port is in access mode

3.4.5 switchport forbidden vlan

Description	Adds or removes forbidden VLANs from the current list of forbidden VLANs	
Syntax	switchport forbidden vlan { add remove } <vlan_list>	
Parameter		
	Name	Description
	add	Add to existing list
	remove	Remove from existing list
	vlan_list	VLAN IDs

3.4.6 switchport hybrid acceptable-frame-type

Description	Set acceptable frame type on a port	
Syntax	switchport hybrid acceptable-frame-type { all tagged untagged }	
Parameter		
	Name	Description
	all	Allow all frames
	tagged	Allow only tagged frames
	untagged	Allow only untagged frames

3.4.7 switchport hybrid allowed vlan

Description	Set allowed VLAN characteristics when interface is in hybrid mode	
Syntax	switchport hybrid allowed vlan { all none [add remove except] <vlan_list> }	
Parameter		
	Name	Description
	all	All VLANs
	none	No VLANs
	add	Add VLANs to the current list
	remove	Remove VLANs from the current list
	except	All VLANs except the following
	vlan_list	VLAN IDs of the allowed VLANs when this port is in hybrid mode

3.4.8 switchport hybrid egress-tag

Description	Egress VLAN tagging configuration	
Syntax	switchport hybrid egress-tag { none all [except-native] }	
Parameter		
	Name	Description

	none	No egress tagging
	all	Tag all frames
	except-native	Tag all frames except frames classified to native VLAN of the hybrid port

3.4.9 switchport hybrid ingress-filtering

Description	VLAN Ingress filter configuration
Syntax	switchport hybrid ingress-filtering
Parameter	

3.4.10 switchport mode

Description	Set switching mode	
Syntax	switchport mode { access trunk hybrid }	
Parameter		
Name	Description	
access	Set mode to ACCESS unconditionally	
trunk	Set mode to TRUNK unconditionally	
hybrid	Set mode to HYBRID unconditionally	

3.4.11 switchport trunk allowed vlan

Description	Set allowed VLAN characteristics when interface is in trunk mode	
Syntax	switchport trunk allowed vlan { all none [add remove except] <vlan_list> }	
Parameter		
Name	Description	
all	All VLANs	
none	No VLANs	
add	Add VLANs to the current list	
remove	Remove VLANs from the current list	
except	All VLANs except the following	
vlan_list	VLAN IDs of the allowed VLANs when this port is in trunk mode	

3.5 Interface VLAN Mode Commands

3.5.1 interface

Description	Interface configuration	
Syntax	interface <port_type> [<port_type_list>]	
Parameter		
Name	Description	
port_type	Port type in Fast, Gigabit	
port_type_list	List of Port ID, ex. 1/1,3-5;2/2-4,6	

3.5.2 interface vlan

Description	VLAN interface configurations	
Syntax	interface vlan<vlan_list>	
Parameter		
Name	Description	
vlan_list	List of VLAN interface numbers, 1~4095	

3.5.3 ip address

Description	IPv4 address configurations	
Syntax	ip address { { <ipv4_addr><ipv4_netmask> } { dhcp [fallback <ipv4_addr><ipv4_netmask> [timeout <uint>]] } }	
Parameter		
Name	Description	

	ipv4_addr	IP address
	ipv4_netmask	IP netmask
	dhcp	Enable DHCP
	fallback	DHCP fallback settings
	ipv4_addr	DHCP fallback address
	ipv4_netmask	DHCP fallback netmask
	timeout	DHCP fallback timeout
	uint	DHCP fallback timeout in seconds

3.5.4 ip name-server

Description	Interface Internet Protocol config commands Domain Name System	
Syntax	ip name-server { <ipv4_unicast> dhcp [interface vlan<vlan_id>] }	
Parameter		
	Name	Description
	ipv4_unicast	A valid IPv4 unicast address
	vlan_id	VLAN identifier(s): VID

3.5.5 ip dhcp relay

Description	DHCP relay agent configuration
Syntax	ipdhcp relay
Parameter	

3.5.6 ip dhcp relay information option

Description	IP DHCP relay information option (Option 82)
Syntax	ipdhcp relay information option
Parameter	

3.5.7 ip dhcp snooping

Description	IP DHCP snooping
Syntax	ipdhcp snooping
Parameter	

3.5.8 ip helper-address

Description	DHCP relay server	
Syntax	ip helper-address <v_ipv4_unicast>	
Parameter		
	Name	Description
	Ip : ipv4_unicast	IP address of the DHCP relay server

3.5.9 ipv6 address

Description	Configure the IPv6 address of an interface	
Syntax	ipv6 address <ipv6_subnet>	
Parameter		
	Name	Description
	ipv6_subnet	IPv6 prefix x:x::y/z

3.5.10 ipv6mtu

Description	IPv6 Maximum transmission unit	
Syntax	ipv6 mtu<1280-1500>	
Parameter		
	Name	Description
	1280-1500	MTU value in bytes

3.6 RingV2 Group Mode Commands

3.6.1 ringv2 protect

Description	To configure ring protection	
Syntax	ring protect	
Parameter		
	Name	Description
	group1	Configure ring protection v2 group1 (Ring)
	group2	Configure ring protection v2 group2 (Ring)
	group3	Configure ring protection v2 group3 (Chain)

3.6.2 guard-time

Description	Set guard time	
Syntax	guard-time { <ringGuardTimerDef> }	
Parameter		
	Name	Description
	ringGuardTimerDef	<10-3600>, unit: seconds. Default is 10 seconds

3.6.3 mode

Description	Enable/disable ring group	
Syntax	mode { disable enable }	
Parameter		
	Name	Description
	disable	Set the specified Ring group to Disabled
	enable	Set the specified Ring group to Enabled

3.6.4 node1 interface GigabitEthernet <portNo>

Description	Set interface of ring protection node	
Syntax	node1 interface GigabitEthernet <portNo>	
Parameter		
	Name	Description
	<portNo>	Valid values: 1~max port index

3.6.5 node2 interface GigabitEthernet <portNo>

Description	Set interface of ring protection node	
Syntax	Node2 interface GigabitEthernet <portNo>	
Parameter		
	Name	Description
	<portNo>	Valid values: 1~max port index

3.6.6 role

Description	Set role for group	
Syntax	role { ring-master ring-slave coupling-primary coupling-backup dual-homing chain-head chain-tail chain-member b-chain-terminal-1 b-chain-terminal-2 b-chain-central-block b-chain-member}	
Parameter		
	Name	Description
	ring-master	Set role to ring master
	ring-slave	Set role to ring slave
	coupling-primary	Set role to coupling primary
	coupling-backup	Set role to coupling backup
	dual-homing	Set role to dual homing
	chain-head	Set role to chain head
	chain-member	Set role to chain member
	chain-tail	Set role to chain tail
	b-chain-central-block	Set role to balancing chain central block
	b-chain-member	Set role to balancing chain member

	b-chain-terminal-1	Set role to balancing chain terminal 1
	b-chain-terminal-2	Set role to balancing chain terminal 2

3.7 Spanning Tree Commands

3.7.1 spanning-tree

Description	Enable/disable STP on this interface	
Syntax	spanning-tree	
Parameter		
Name	Description	

3.7.2 spanning-tree aggregation

Description	Spanning Tree protocol	
Syntax	spanning-tree aggregation	
Parameter		
Name	Description	

3.7.3 spanning-tree auto-edge

Description	Auto detect edge status	
Syntax	spanning-tree auto-edge	
Parameter		
Name	Description	

3.7.4 spanning-tree bpdu-guard

Description	Enable/disable BPDU guard	
Syntax	spanning-tree bpdu-guard	
Parameter		
Name	Description	

3.7.5 spanning-tree edge

Description	Edge port spanning-tree STP Bridge	
Syntax	spanning-tree edge	
Parameter		
Name	Description	

3.7.6 spanning-tree edge bpdu-filter

Description	Enable BPDU filter (stop BPDU tx/rx)	
Syntax	spanning-tree edge bpdu-filter	
Parameter		
Name	Description	

3.7.7 spanning-tree mode

Description	mode STP protocol mode STP 802.1D Spanning Tree RSTP Rapid Spanning Tree (802.1w) MSTP Multiple Spanning Tree (802.1s)	
Syntax	spanning-tree mode { stp rstp mstp }	
Parameter		
Name	Description	
stp	802.1D Spanning Tree	

	rstp	Rapid Spanning Tree (802.1w)
	mstp	Multiple Spanning Tree (802.1s)

3.7.8 spanning-tree mst cost

Description	STP bridge instance STP Cost of this port	
Syntax	spanning-tree mst <0-7> cost { <1-200000000> auto }	
Parameter		
	Name	Description
	<0-7>	instance 0-7 (CIST=0, MST2=1...)
	<1-200000000>	STP Cost of this port

3.7.9 spanning-tree mst port-priority

Description	port-priority	
Syntax	spanning-tree mst <0-7> port-priority <0-240>	
Parameter		
	Name	Description
	<0-7>	instance 0-7 (CIST=0, MST2=1...)
	<0-240>	STP priority of this port

3.7.10 spanning-tree mst priority

Description	Priority of the instance Range in seconds	
Syntax	spanning-tree mst <0-7> priority <0-61440>	
Parameter		
	Name	Description
	<0-7>	instance 0-7 (CIST=0, MST2=1...)
	<0-61440>	Priority of the instance

3.7.11 spanning-tree mst vlan

Description	VLAN keyword	
Syntax	spanning-tree mst <0-7> vlan <vlan_list>	
Parameter		
	Name	Description
	<0-7>	instance 0-7 (CIST=0, MST2=1...)
	<vlan_list>	Range of VLANs

3.7.12 spanning-tree mst forward-time

Description	forward-time Delay between port states	
Syntax	spanning-tree mst forward-time <4-30>	
Parameter		
	Name	Description
	<4-30>	Delay between port states

3.7.13 spanning-tree mst max-age

Description	Max bridge age before timeout	
Syntax	spanning-tree mst max-age <6-40> [forward-time <4-30>]	
Parameter		
	Name	Description
	<6-40>	Max bridge age before timeout
	<4-30>	forward-time

3.7.14 spanning-tree mst max-hops

Description	MSTP bridge max hop count	
Syntax	spanning-tree mst max-hops <6-40>	
Parameter		

	Name	Description
	<6-40>	MSTP bridge max hop count

3.7.15 spanning-tree mst name

Description	Name of the bridge Revision Revision keyword	
Syntax	spanning-tree mst name <word32> revision <0-65535>	
Parameter		
	Name	Description
	<word32>	Name of the bridge
	<0-65535>	Revision keyword

3.7.16 spanning-tree mst <instance>

Description	instance 0-7 (CIST=0, MST2=1...)	
Syntax	spanning-tree mst <instance> priority <prio> spanning-tree mst <instance> vlan <v_vlan_list>	
Parameter		
	Name	Description
	instance	<Instance: 0-7> instance 0-7 (CIST=0, MST2=1...)
	priority	Priority of the instance
	vlan	VLAN keyword
	prio	<Prio : 0-61440> Range in seconds
	v_vlan_list	<v_vlan_list> Range of VLANs

3.7.17 spanning-tree recovery

Description	Recovery	
Syntax	spanning-tree recovery interval <interval>	
Parameter		
	Name	Description
	interval	The interval
	interval	Interval: 30-86400. Range in seconds

3.7.18 spanning-tree transmit

Description	Transmit	
Syntax	spanning-tree transmit hold-count <holdcount>	
Parameter		
	Name	Description
	hold-count	Max number of transmit BPDUs per sec
	holdcount	<Holdcount : 1-10> 1-10 per sec, 6 is default

3.8 SNMP Configure Commands

3.8.1 snmp-server

Description	Enable SNMP server	
Syntax	snmp-server	
Parameter		
	Name	Description

3.8.2 snmp-server access

Description	snmp-server access configuration	
Syntax	snmp-server access < group name > model { v1 v2c v3 any } level { auth noauth priv } [read <word255>] [write <word255>]	
Parameter		
	Name	Description
	< group name >	32 words

	< v1 v2c v3 any >	V1~V3 security model
	< level >	security level
	{ auth noauth priv }	authNoPriv Security Level
		noAuthNoPriv Security Level
		authPriv Security Level
	read	specify a read view for the group
	<word255>	read view name

3.8.3 snmp-server community v2c

Description	Set the SNMP v2c community	
Syntax	snmp-server community v2c <word127> [ro rw]	
Parameter		
	Name	Description
	< word127 >	Community word
	< ro >	Read only
	<rw>	Read write

3.8.4 snmp-server community v3

Description	Set the SNMP v3 community	
Syntax	snmp-server community v3 <word127> [<ipv4_addr> <ipv4_netmask>]	
Parameter		
	Name	Description
	< word127 >	Community word
	< ipv4_addr >	IPv4 address
	<ipv4_netmask>	IPv4 netmask

3.8.5 snmp-server host

Description	Set SNMP server's configurations	
Syntax	snmp-server host <word32>	
Parameter		
	Name	Description
	< word32 >	Name of the host configuration

3.8.6 snmp-server host traps

Description	Set SNMP host's configurations	
Syntax	snmp-server host < Name of the host configuration > traps [linkup] [linkdown] [lldp]	
Parameter		
	Name	Description
	< Name of the host configuration >	Name of the host configuration
	<200-1468>	packet byte
	[linkup]	Link up event
	[linkdown]	Link down event
	[lldp]	LLDP event

3.8.7 snmp-server trap

Description	Set SNMP server's configurations	
Syntax	snmp-server trap	
Parameter		
	Name	Description

3.8.8 snmp-server user

Description	Set the SNMPv3 user's configurations	
Syntax	snmp-server user <Username> engine-id <Engine ID octet string> [{ md5 <word8-32> sha <word8-40> } [priv { des aes } <word8-32>]]	
Parameter		

	Name	Description
	<Username >	32 words
	<Engine ID octet string>	word10-32
	MD5	Set MD5 protocol
	sha	Set SHA protocol
	<word8-40>	SHA password
	priv	Set Privacy
	{ des aes }	Set DES/AES protocol
	<word8-32>	Set privacy password

3.8.9 snmp-server version

Description	Set the SNMP server's version	
Syntax	snmp-server version { v1 v2c v3 }	
Parameter		
	Name	Description
	{ v1 v2c v3 }	SNMP v1,v2c,v3

3.8.10 snmp-server view

Description	SNMP MIB view configuration	
Syntax	snmp-server view <word32> <word255> { include exclude }	
Parameter		
	Name	Description
	< word32 >	MIB view name
	< word255>	MIB view OID
	{ include exclude }	Included/Excluded type from the view

3.8.11 SNMP trap receive ipv6 host

Description	Host configuration	
Syntax	host <ipv6_unicast> [<1-65535>] [traps informs]	
Parameter		
	Name	Description
	ipv6_unicast	IP address of SNMP trap host
	1-65535	UDP port of the trap messages
	traps	Send Trap messages to this host
	informs	Send Inform messages to this host

3.8.12 snmp-server contact

Description	SNMP server contact	
Syntax	snmp-server contact <v_line255>	
Parameter		
	Name	Description
	v_line255	<line255> contact string

3.8.13 snmp-server engine-id

Description	SNMP server engine ID	
Syntax	snmp-server engine-id local <engineID>	
Parameter		
	Name	Description
	local	Set SNMP local engine ID
	engineID	<Enginelid : word10-32> local engine ID

3.8.14 snmp-server location

Description	SNMP server location	
Syntax	snmp-server location <v_line255>	
Parameter		
	Name	Description
	v_line255	<line255> location string

3.8.15 snmp-server security-to-group

Description	SNMP server security	
Syntax	snmp-server security-to-group model { v1 v2c v3 } name <security_name> group <group_name>	
Parameter	Name	Description
	model	security model
	v1	v1 security model
	v2c	v2c security model
	v3	v3 security model
	name	security user
	security_name	<SecurityName : word32> security user name
	group	security group
	group_name	<GroupName : word32> security group name

3.8.16 SNMP trap receive ipv4 host

Description	Host configuration	
Syntax	host { <ipv4_unicast> <hostname> } [<1-65535>] [traps informs]	
Parameter	Name	Description
	Ipv4_unicast	IP address of SNMP trap host
	hostname	Hostname of SNMP trap host
	1-65535	UDP port of the trap messages
	traps	Send Trap messages to this host
	informs	Send Inform messages to this host

3.9 Qos Function Command

3.9.1 qos qce

Description	QCE setting	
Syntax	qos qce { <Id : 1-256> refresh update }	
Parameter	Name	Description
	<Id : 1-256>	QCE ID
	refresh	Refresh QCE tables in hardware
	update	Update an existing QCE

3.9.2 qos storm

Description	QoS storm	
Syntax	qos storm { unicast multicast broadcast } { { <rate> [kfps] } { 1024 kfps } }	
Parameter	Name	Description
	broadcast	Police broadcast frames
	multicast	Police multicast frames
	unicast	Police unicast frames
	<rate>	1024, Rate is 1024 kfps <Rate : 1,2,4,8,16,32,64,128,256,512> Policer rate (default fps)

3.9.3 qos cos

Description	Class of service configuration	
Syntax	qos cos <0-7>	
Parameter	Name	Description
	<0-7>	Specific class of service

3.9.4 qos dscp-classify

Description	Set QoS DSCP-classify	
Syntax	qos dscp-classify { zero selected any }	
Parameter		
	Name	Description

3.9.5 qos dscp-remark

Description	Set QoS DSCP-remark	
Syntax	qos dscp-remark { rewrite remap remap-dp }	
Parameter		
	Name	Description

3.9.6 qos dscp-translate

Description	Enable QoS DSCP-translate mode	
Syntax	qos dscp-translate	

3.9.7 qos map cos-dscp

Description	Configure CoS mapping to DSCP table	
Syntax	qos map cos-dscp <0~7> dpl <0~1> dscp { <0-63> { be af11 af12 af13 af21 af22 af23 af31 af32 af33 af41 af42 af43 cs1 cs2 cs3 cs4 cs5 cs6 cs7 ef va } }	
Parameter		
	Name	Description
	<0~7>	CoS level
	<0~1>	Specific drop precedence level
	<0-63>	DSCP level
	be	Default PHB (DSCP 0) for best effort traffic
	af11~13	Assured Forwarding PHB 11~13 (DSCP 10,12,14)
	af22~23	Assured Forwarding PHB 22~23 (DSCP 20,22)
	af31~33	Assured Forwarding PHB 31~33 (DSCP 26,28,30)
	Af41~43	Assured Forwarding PHB 41~43 (DSCP 34,36,38)
	cs1~7	Class Selector PHB CS1~7 precedence 1~7 (DSCP 8*(cs value))
	ef	Expedited Forwarding PHB (DSCP 46)
	va	Voice Admit PHB (DSCP 44)

3.9.8 qos map dscp-cos

Description	Configure DSCP mapping to cos table	
Syntax	qos map dscp-cos { <0~63> { be af11 af12 af13 af21 af22 af23 af31 af32 af33 af41 af42 af43 cs1 cs2 cs3 cs4 cs5 cs6 cs7 ef va } } cos <0~7> dpl <dpl>	
Parameter		
	Name	Description
	<0~7>	CoS level
	<0-63>	DSCP level
	be	Default PHB (DSCP 0) for best effort traffic
	af11~13	Assured Forwarding PHB 11~13 (DSCP 10,12,14)
	af22~23	Assured Forwarding PHB 22~23 (DSCP 20,22)
	af31~33	Assured Forwarding PHB 31~33 (DSCP 26,28,30)
	Af41~43	Assured Forwarding PHB 41~43 (DSCP 34,36,38)
	cs1~7	Class Selector PHB CS1~7 precedence 1~7 (DSCP 8*(cs value))
	ef	Expedited Forwarding PHB (DSCP 46)
	va	Voice Admit PHB (DSCP 44)
	<0~1>	Specific drop precedence level

3.9.9 qos map dscp-egress-translation

Description	Configure DSCP egress-translation	
--------------------	-----------------------------------	--

Syntax	qos map dscp-egress-translation { <0~63> { be af11 af12 af13 af21 af22 af23 af31 af32 af33 af41 af42 af43 cs1 cs2 cs3 cs4 cs5 cs6 cs7 ef va } } <0~1> to { <0~63> { be af11 af12 af13 af21 af22 af23 af31 af32 af33 af41 af42 af43 cs1 cs2 cs3 cs4 cs5 cs6 cs7 ef va } }	
Parameter		
	Name	Description
<0~7>		CoS level
<0~63>		DSCP level
be		Default PHB (DSCP 0) for best effort traffic
af11~13		Assured Forwarding PHB 11~13 (DSCP 10,12,14)
af22~23		Assured Forwarding PHB 22~23 (DSCP 20,22)
af31~33		Assured Forwarding PHB 31~33 (DSCP 26,28,30)
Af41~43		Assured Forwarding PHB 41~43 (DSCP 34,36,38)
cs1~7		Class Selector PHB CS1~7 precedence 1~7 (DSCP 8*(cs value))
ef		Expedited Forwarding PHB (DSCP 46)
va		Voice Admit PHB (DSCP 44)
<0~1>		Specific drop precedence level

3.9.10 qos map dscp-ingress-translation

Description	Configure DSCP ingress-translation	
Syntax	qos map dscp-ingress-translation { <0~63> { be af11 af12 af13 af21 af22 af23 af31 af32 af33 af41 af42 af43 cs1 cs2 cs3 cs4 cs5 cs6 cs7 ef va } } to { <0~63> { be af11 af12 af13 af21 af22 af23 af31 af32 af33 af41 af42 af43 cs1 cs2 cs3 cs4 cs5 cs6 cs7 ef va } }	
Parameter		
	Name	Description
<0~7>		CoS level
<0~63>		DSCP level
be		Default PHB (DSCP 0) for best effort traffic
af11~13		Assured Forwarding PHB 11~13 (DSCP 10,12,14)
af22~23		Assured Forwarding PHB 22~23 (DSCP 20,22)
af31~33		Assured Forwarding PHB 31~33 (DSCP 26,28,30)
Af41~43		Assured Forwarding PHB 41~43 (DSCP 34,36,38)
cs1~7		Class Selector PHB CS1~7 precedence 1~7 (DSCP 8*(cs value))
ef		Expedited Forwarding PHB (DSCP 46)
va		Voice Admit PHB (DSCP 44)
<0~1>		Specific drop precedence level

3.9.11 qos policer

Description	Configure QoS policer	
Syntax	qos policer <unit> [fps] [flowcontrol]	
Parameter		
	Name	Description
< unit >		Traffic meter
< fps >		Frame rate
[flowcontrol]		Enable flow control mode

3.9.12 qos wrr

Description	Specifies QoS wrr mode	
Syntax	qos wrr <1-100> <1-100> <1-100> <1-100> <1-100> <1-100>	
Parameter		
	Name	Description
<1-100>		Every level proportion

3.9.13 qos queue-shaper

Description	Configure queue-shaper command	
Syntax	qos queue-shaper queue <0~7> <uint> [excess]	
Parameter		
	Name	Description
	<1-100>	Every level proportion
	<unit>	Traffic meter
	[excess]	Agree the shaper could be excess or not

3.9.14 qos queue-policer

Description	Configure queue-policer command	
Syntax	qos queue-policer queue <0~7> <uint>	
Parameter		
	Name	Description
	<0~7>	Queue number
	<uint>	Traffic meter

3.9.15 qos shaper <unit>

Description	Configure QoS shaper command	
Syntax	qos shaper <unit>	
Parameter		
	Name	Description
	<1-100>	Every level proportion
	<unit>	Traffic meter

3.10 IGMP Functional Commands

3.10.1 ip igmp host-proxy [leave-proxy]

Description	IGMP proxy for leave configuration	
Syntax	ip igmp host-proxy [leave-proxy]	
Parameter		
	Name	Description
	leave-proxy	IGMP proxy for leave

3.10.2 ip igmp snooping

Description	Snooping IGMP	
Syntax	ip igmp snooping	
Parameter		

3.10.3 ip igmp snooping immediate-leave

Description	IP IGMP snooping immediate leave configuration	
Syntax	Ip igmp snooping immediate-leave	
Parameter		

3.10.4 ip igmp snooping last-member-query-interval

Description	IP IGMP snooping Last Member Query Interval in tenths of seconds	
Syntax	ip igmp snooping last-member-query-interval <0-31744>	
Parameter		
	Name	Description
	0-31744	0 - 31744 tenths of seconds

3.10.5 ip igmp snooping max-groups

Description	IGMP group throttling configuration	
Syntax	ip igmp snooping max-groups <1-10>	
Parameter		

	Name	Description
	1-10	Maximum number of IGMP group registration

3.10.6 ip igmp snooping mrouter

Description	IP IGMP snooping Multicast router port configuration
Syntax	ip igmp snooping mrouter
Parameter	

3.10.7 ip igmp snooping querier

Description	IP IGMP querier configuration	
Syntax	ip igmp snooping querier { election address <ipv4_unicast> }	
Parameter		
	Name	Description
	election	Act as an IGMP Querier to join Querier-Election
	address	IGMP Querier address configuration
	ipv4_unicast	A valid IPv4 unicast address

3.10.8 ip igmp snooping query-interval

Description	IP IGMP snooping Query-Interval in seconds	
Syntax	ip igmp snooping query-interval <1-31744>	
Parameter		
	Name	Description
	1-317	1 - 31744 seconds

3.10.9 ip igmp snooping vlan

Description	IP IGMP snooping VLAN IDs	
Syntax	ip igmp snooping vlan<vlan_list>	
Parameter		
	Name	Description
	vlan_list	VLAN identifier(s): VID

3.10.10 ip igmp ssm-range

Description	SSM range	
Syntax	ip igmp ssm-range <v_ipv4_mcast> <ipv4_prefix_length>	
Parameter		
	Name	Description
	v_ipv4_mcast	Valid IPv4 multicast address
	ipv4_prefix_length	Length

3.10.11 ip igmp unknown-flooding

Description	IP IGMP flooding unregistered IPv4 multicast traffic
Syntax	ip igmp unknown-flooding
Parameter	

3.10.12 clear ip igmp snooping statistics

Description	Clear IP IGMP snooping statistics	
Syntax	clear ip igmp snooping [vlan<vlan_list>] statistics	
Parameter		
	Name	Description
	vlan_list	VLAN list

3.11 MVR Functional Commands

3.11.1 mvr

Description	Multicast VLAN Registration configuration	
Syntax	mvr	
Parameter		
Name	Description	

3.11.2 mvr immediate-leave

Description	mvr immediate leave configuration	
Syntax	mvr immediate-leave	
Parameter		
Name	Description	

3.11.3 mvr name channel

Description	Multicast VLAN name and channel configuration	
Syntax	mvr name <word16> channel <word16>	
Parameter		
Name	Description	
name <word16>	MVR multicast VLAN name	
channel <word16>	Profile name in 16 characters	

3.11.4 mvr frame priority

Description	Multicast VLAN interface CoS priority	
Syntax	mvr name <word16> frame priority <0-7>	
Parameter		
Name	Description	
name <word16>	MVR multicast VLAN name	
priority <0-7>	CoS priority ranges from 0 to 7	

3.11.5 mvr name <word16> frame tagged

Description	MVR control frame in TX, Tagged IGMP/MLD frames will be sent	
Syntax	mvr name <word16> frame tagged	
Parameter		
Name	Description	
name <word16>	MVR multicast VLAN name	

3.11.6 mvr name <word16> igmp-address <ipv4_unicast>

Description	MVR address configuration used in IGMP	
Syntax	mvr name <word16> igmp-address <ipv4_unicast>	
Parameter		
Name	Description	
name <word16>	MVR multicast VLAN name	
<ipv4_unicast>	A valid IPv4 unicast address	

3.11.7 mvr name <word16> last-member-query-interval <0-31744>

Description	Configure last Member Query Interval in tenths of seconds	
Syntax	mvr name <word16> last-member-query-interval <0-31744>	
Parameter		
Name	Description	
name <word16>	MVR multicast VLAN name	
<0-31744>	0 - 31744 tenths of seconds	

3.11.8 mvr name <word16> mode

Description	Dynamic MVR operation mode
-------------	----------------------------

Syntax	mvr name <word16> mode { dynamic compatible }	
Parameter	Name	Description
	dynamic	Dynamic MVR operation mode
	compatible	Compatible MVR operation mode

3.11.9 mvr name <word16> type

Description	MVR port role configuration	
Syntax	mvr name <word16> type { source receiver }	
Parameter	Name	Description
	source	MVR source port
	receiver	MVR receiver port

3.11.10 mvr vlan

Description	Multicast VLAN Registration configuration	
Syntax	mvr vlan <vlan_list> [name <word16>]	
Parameter	Name	Description
	<vlan_list>	MVR multicast VLAN list
	name <word16>	MVR multicast VLAN name in 16 characters

3.11.11 mvr vlan <vlan_list> channel

Description	MVR channel configuration	
Syntax	mvr vlan <vlan_list> channel <word16>	
Parameter	Name	Description
	<vlan_list>	MVR multicast VLAN list
	channel <word16>	MVR multicast channel name in 16 characters

3.11.12 mvr vlan <vlan_list> frame priority

Description	Interface CoS priority	
Syntax	mvr vlan <vlan_list> frame priority <0-7>	
Parameter	Name	Description
	<vlan_list>	MVR multicast VLAN list
	<0-7>	CoS priority ranges from 0 to 7

3.11.13 mvr vlan <vlan_list> frame tagged

Description	Set tagged IGMP/MLD frames will be sent	
Syntax	mvr vlan <vlan_list> frame tagged	
Parameter	Name	Description
	<vlan_list>	MVR multicast VLAN list

3.11.14 mvr vlan <vlan_list> igmp-address

Description	Set tagged IGMP/MLD frames will be sent	
Syntax	mvr vlan <vlan_list> igmp-address <ipv4_unicast>	
Parameter	Name	Description
	<vlan_list>	MVR multicast VLAN list
	<ipv4_unicast>	A valid IPv4 unicast address for IGMP

3.11.15 mvr vlan <vlan_list> mode

Description	Dynamic MVR VLAN operation mode	
Syntax	mvr vlan <vlan_list> mode { dynamic compatible }	
Parameter	Name	Description

	Name	Description
	<vlan_list>	MVR multicast VLAN list
	dynamic	Dynamic MVR operation mode
	compatible	Compatible MVR operation mode

3.11.16 mvr vlan <vlan_list> type

Description	MVR VLAN role configuration	
Syntax	mvr vlan <vlan_list> type { source receiver }	
Parameter		
	Name	Description
	<vlan_list>	MVR multicast VLAN list
	source	MVR source port
	receiver	MVR receiver port

3.12 MLD Functional Commands

3.12.1 ipv6 mld host-proxy

Description	IPv6 MLD proxy configuration	
Syntax	ipv6 mld host-proxy [leave-proxy]	
Parameter		
	Name	Description
	leave-proxy	MLD proxy for leave configuration

3.12.2 ipv6 mld snooping

Description	IPv6 mld snooping	
Syntax	ipv6 mld snooping	
Parameter		

3.12.3 ipv6 mld snooping compatibility

Description	IPv6 MLD snooping compatibility configuration	
Syntax	ipv6 mld snooping compatibility { auto v1 v2 }	
Parameter		
	Name	Description
	auto	Compatible with MLDv1/MLDv2
	v1	Forced MLDv1
	v2	Forced MLDv2

3.12.4 ipv6 mld snooping immediate-leave

Description	IPv6 MLD snooping immediate-leave configuration	
Syntax	ipv6 mld snooping immediate-leave	
Parameter		

3.12.5 ipv6 mld snooping last-member-query-interval

Description	IPv6 mld snooping last member query interval in tenths of seconds	
Syntax	ipv6 mld snooping last-member-query-interval <0-31744>	
Parameter		
	Name	Description
	0-31744	0 - 31744 tenths of seconds

3.12.6 ipv6 mld snooping max-groups

Description	IPv6 MLD group throttling configuration	
Syntax	ipv6 mld snooping max-groups <1-10>	
Parameter		
	Name	Description
	1-10	Maximum number of MLD group registration

3.12.7 ipv6 mld snooping mrouter

Description	IPv6 mld snooping multicast router port configuration
Syntax	ipv6 mld snooping mrouter
Parameter	

3.12.8 ipv6 mld snooping query-interval

Description	IPv6 MLD snooping query interval in seconds	
Syntax	ipv6 mld snooping query-interval <1-31744>	
Parameter		
	Name	Description
	1-31744	1 - 31744 seconds

3.12.9 ipv6 mld snooping query-max-response-time

Description	IPv6 MLD snooping query maximum response interval in tenths of seconds	
Syntax	ipv6 mld snooping query-max-response-time <0-31744>	
Parameter		
	Name	Description
	0-31744	0 - 31744 tenths of seconds

3.12.10 ipv6 mld snooping vlan

Description	IPv6 MLD snooping VLAN	
Syntax	ipv6 mld snooping vlan<vlan_list>	
Parameter		
	Name	Description
	vlan_list	VLAN identifier(s): VID

3.12.11 ipv6 mld ssm-range

Description	SSM range	
Syntax	ipv6 mld ssm-range <v_ipv6_mcast> <ipv6_prefix_length>	
Parameter		
	Name	Description
	v_ipv6_mcast	Valid IPv6 multicast address
	ipv6_prefix_length	length

3.12.12 ipv6 mld unknown-flooding

Description	Flooding unregistered IPv6 multicast traffic
Syntax	ipv6 mld unknown-flooding
Parameter	

3.12.13 ipv6 route

Description	IPv6 route	
Syntax	ipv6 route <v_ipv6_subnet> { <v_ipv6_ucast> interface vlan <v_vlan_id> <v_ipv6_addr> }	
Parameter		
	Name	Description
	v_ipv6_subnet	IPv6 prefix x:x::y/z
	v_ipv6_ucast	IP address of the DHCP relay server
	v_vlan_id	VLAN ID
	v_ipv6_addr	IP address

3.13 Authenticate Mode Commands

3.13.1 radius-server attribute 32

Description	Configure radius-server attribute	
Syntax	radius-server attribute 32 <id>	
Parameter		
	Name	Description
	id	Id : line1-253

3.13.2 radius-server attribute 4

Description	Configure radius-server attribute	
Syntax	radius-server attribute 4 <ipv4_unicast>	
Parameter		
	Name	Description
	<ipv4_unicast>	ipv4_unicast address

3.13.3 radius-server attribute 95

Description	Configure radius-server attribute	
Syntax	radius-server attribute 95 <ipv6_unicast>	
Parameter		
	Name	Description
	<ipv6_unicast>	IPv6_unicast address

3.13.4 radius-server deadtime

Description	Configure radius-server dead time	
Syntax	radius-server deadtime <1-1440>	
Parameter		
	Name	Description
	<1-1440>	Time in minutes

3.13.5 radius-server host [auth-port] [acct-port] [timeout] [retransmit] [key]

Description	Configure radius-server host behavior	
Syntax	radius-server host <word1-255> [auth-port <0-65535>] [acct-port <0-65535>] [timeout <1-1000>] [retransmit <1-1000>] [key <line1-63>]	
Parameter		
	Name	Description
	<word1-255>	Hostname or IP address
	auth-port <0-65535>	UDP port number for RADIUS authentication server
	acct-port <0-65535>	UDP port number for RADIUS accounting server
	timeout <1-1000>	Wait time in seconds for this RADIUS server to reply (overrides default)
	retransmit <1-1000>	

3.13.6 radius -server key

Description	Radius-server key	
Syntax	radius-server key <key>	
Parameter		
	Name	Description
	key	<Key : line1-63> The shared key

3.13.7 radius-server retransmit

Description	Radius-server retransmit	
Syntax	radius-server retransmit <retries>	
Parameter		
	Name	Description

	retries	<Retries : 1-1000> Number of retries for a transaction
--	---------	--

3.13.8 radius-server timeout

Description	Radius-server timeout	
Syntax	radius-server timeout <seconds>	
Parameter		
	Name	Description
	seconds	<Seconds : 1-1000> Wait time in second

3.13.9 tacacs-server deadtime <1-1440>

Description	Time to stop using a TACACS+ server that does not respond	
Syntax	tacacs-server deadtime <1-1440>	
Parameter		
	Name	Description
	< <1-1440>	Time in minutes

3.13.10 tacacs-server host [auth-port] [timeout] [key]

Description	Configure TACACS-server host behavior	
Syntax	tacacs-server host <word1-255> [port <0-65535>] [timeout <1-1000>] [key <line1-63>]	
Parameter		
	Name	Description
	< <1-1440>	TCP port number

3.13.11 tacacs-server deadtime <1-1440>

Description	Time to stop using a TACACS+ server that does not respond	
Syntax	tacacs-server deadtime <1-1440>	
Parameter		
	Name	Description
	< <1-1440>	Time in minutes

3.13.12 tacacs-server deadtime <1-1440>

Description	Time to stop using a TACACS+ server that does not respond	
Syntax	tacacs-server deadtime <1-1440>	
Parameter		
	Name	Description
	< <1-1440>	Time in minutes

3.13.13 dot1x feature

Description	Globally enables/disables a dot1x feature functionality	
Syntax	dot1x feature { [guest-vlan] [radius-qos] [radius-vlan] }	
Parameter		
	Name	Description
	guest-vlan	Globally enables/disables state of guest VLAN
	radius-qos	Globally enables/disables state of RADIUS-assigned QoS.
	radius-vlan	Globally enables/disables state of RADIUS-assigned VLAN.

3.13.14 dot1x authentication timer

Description	dot1x authentication timer	
Syntax	dot1x authentication timer { inactivity <v_10_to_100000> } { re-authenticate <v_1_to_3600> }	
Parameter		
	Name	Description
	inactivity	Time in seconds between check for activity on successfully authenticated MAC addresses

	re-authenticate	The period between re-authentication attempts in seconds
--	-----------------	--

3.13.15 dot1x max-reauth-req

Description	Maximum value of authentication request	
Syntax	dot1x max-reauth-req <1-255>	
Parameter		
Name	Description	
<1-255>	number of times	

3.13.16 dot1x re-authentication

Description	Re-authentication	
Syntax	dot1x re-authentication	
Parameter		

3.13.17 dot1x system-auth-control

Description	System authentication control	
Syntax	dot1x system-auth-control	
Parameter		

3.13.18 dot1x timeout

Description	Timeout control	
Syntax	dot1x timeout { quiet-period <v_10_to_1000000> } { tx-period <v_1_to_65535> }	
Parameter		
Name	Description	
quiet-period	Time in seconds before a MAC-address that failed authentication gets a new authentication chance	
tx-period	The time between EAPOL retransmissions	

3.13.19 dot1x guest-vlan

Description	Enables/disables Guest VLAN globally or on one or more ports	
Syntax	dot1x guest-vlan dot1x guest-vlan<1-4095>	
Parameter		
Name	Description	
<1-4095>	Guest VLAN ID used when entering the Guest VLAN	

3.13.20 dot1x initialize

Description	Forces a re-initialization of the clients on the port and thereby a re-authentication immediately	
Syntax	dot1x initialize [interface <port_type> [<port_type_list>]]	
Parameter		
Name	Description	
<port_type>	Port type in Fast, Gigabit or Ten Gigabit Ethernet	
<port_type_list>	List of Port ID, ex. 1/1,3-5;2/2-4,6	

3.13.21 dot1x port-control

Description	Sets the port security state	
Syntax	dot1x port-control { force-authorized force-unauthorized auto single multi mac-based }	
Parameter		
Name	Description	
force-authorized	Port access is allowed	
force-unauthorized	Port access is not allowed	
auto	Port-based 802.1X Authentication	
single	Single Host 802.1X Authentication	
multi	Multiple Host 802.1X Authentication	
mac-based	Switch authenticates on behalf of the client	

3.13.22 dot1x radius-vlan

Description	Enables/disables per-port state of RADIUS-assigned VLAN
Syntax	dot1x radius-vlan
Parameter	

3.13.23 show radius-server [statistics]

Description	Show radius-server statistics	
Syntax	show radius-server [statistics]	
Parameter		
Name	Description	
[statistics]	Count radius packet statistics	

3.13.24 enable

Description	Privilege level control	
Syntax	Enable { password [level <priv>] <password> } { secret { 0 5 } [level <priv>] <password> }	
Parameter		
Name	Description	
password	Assign the privileged level clear password	
secret	Assign the privileged level secret	

3.13.25 end

Description	Level exit
Syntax	end
Parameter	

3.13.26 exit

Description	Level exit
Syntax	end
Parameter	

3.13.27 hostname

Description	This system's network name
Syntax	hostname <hostname>
Parameter	

3.14 Loop-Protection Configure commands

3.14.1 loop-protect

Description	Loop protection configuration on port
Syntax	loop-protect
Parameter	

3.14.2 loop-protect action

Description	Loop protection configuration on port	
Syntax	loop-protect action { [shutdown] [log] }	
Parameter		
Name	Description	
shutdown	Shutdown port	
log	Generate log	

3.14.3 loop-protect shutdown-time

Description	Loop protection shutdown time interval
Syntax	loop-protect shutdown-time <0-604800>

Parameter		
	Name	Description
	0-604800	Shutdown time in second

3.14.4 loop-protect transmit-time

Description	Loop protection transmit time interval	
Syntax	loop-protect transmit-time <1-10>	
Parameter		
	Name	Description
	1-10	Transmit time in second

3.14.5 loop-protect tx-mode

Description	Loop protection actively generate PDUs	
Syntax	loop-protect tx-mode	
Parameter		

3.15 LLDP Configure commands

3.15.1 lldp holdtime

Description	Sets LLDP hold time (the neighbor switch will discarded the LLDP information after \"hold time\" multiplied with \"timer\" seconds)	
Syntax	lldp holdtime <2-10>	
Parameter		
	Name	Description
	<2-10>	Hold time 2-10 seconds

3.15.2 lldp med

Description	LLDP MED											
Syntax	See description											
Parameter												
	Name	Description										
	datum	Datum (geodetic system) type <table border="1"> <tr> <td>nad83-mllw</td><td>Mean lower low water datum 1983</td></tr> <tr> <td>nad83-navd88</td><td>North American vertical datum 1983</td></tr> <tr> <td>wgs84</td><td>World Geodetic System 1984</td></tr> </table>	nad83-mllw	Mean lower low water datum 1983	nad83-navd88	North American vertical datum 1983	wgs84	World Geodetic System 1984				
nad83-mllw	Mean lower low water datum 1983											
nad83-navd88	North American vertical datum 1983											
wgs84	World Geodetic System 1984											
	fast	Number of times to repeat LLDP frame transmission at fast start <v_1_to_10> : <1-10>										
	location-tlv	LLDP-MED Location Type Length Value parameter <table border="1"> <tr> <td>altitude</td><td>Altitude parameter</td></tr> <tr> <td>civic-addr</td><td>Civic address information and postal information</td></tr> <tr> <td>elin-addr</td><td>Emergency Location Identification Number, (e.g. E911 and others), such as defined by TIA or NENA.</td></tr> <tr> <td>latitude</td><td>Latitude parameter</td></tr> <tr> <td>longitude</td><td>Longitude parameter</td></tr> </table>	altitude	Altitude parameter	civic-addr	Civic address information and postal information	elin-addr	Emergency Location Identification Number, (e.g. E911 and others), such as defined by TIA or NENA.	latitude	Latitude parameter	longitude	Longitude parameter
altitude	Altitude parameter											
civic-addr	Civic address information and postal information											
elin-addr	Emergency Location Identification Number, (e.g. E911 and others), such as defined by TIA or NENA.											
latitude	Latitude parameter											
longitude	Longitude parameter											
	media-vlan-policy	Use the media-vlan-policy to create a policy, which can be assigned to an interface <Index : 0-31> : Policy id for the policy which is created										

3.15.3 lldp receive

Description	Enable/disable decoding of received LLDP frames	
Syntax	lldp receive	

3.15.4 llpd reinit <1-10>

Description	LLDP TX re-initialization delay in seconds	
Syntax	llpd reinit <1-10>	
Parameter		
	Name	Description
	<1-10>	Re-initialization delay time

3.15.5 llpd timer <5-32768>

Description	Sets LLDP TX interval (The time between each LLDP frame transmitted in seconds)	
Syntax	llpd timer <5-32768>	
Parameter		
	Name	Description
	<5-32768>	5-32768 seconds

3.15.6 llpd tlv-select

Description	Which optional TLVs to transmit	
Syntax	llpd tlv-select { management-address port-description system-capabilities system-description system-name }	
Parameter		
	Name	Description
	management-address	Enable/disable transmission of management address
	port-description	Enable/disable transmission of port description
	system-capabilities	Enable/disable transmission of system capabilities
	system-description	Enable/disable transmission of system description
	system-name	Enable/disable transmission of system name

3.15.7 llpd transmission-delay

Description	Sets LLDP transmission-delay. LLDP transmission delay (the amount of time that the transmission of LLDP frames will delayed after LLDP configuration has changed) in seconds.)	
Syntax	llpd transmission-delay <1-8192>	
Parameter		
	Name	Description
	<1-8192>	transmission-delay seconds

3.15.8 llpd transmit

Description	Enable/disable transmission of LLDP frames	
Syntax	llpd transmit	
Parameter		

3.16 RFC2544 Testing Configure Commands

3.16.1 rfc2544 profile <word32>

Description	RFC2544 profile configuration	
Syntax	rfc2544 profile <word32>	
Parameter		
	Name	Description
	<word32>	Profile name up to 32 characters long

3.16.2 rfc2544 rename profile

Description	Rename an existing profile	
Syntax	rfc2544 rename profile <word32> <word32>	
Parameter		
	Name	Description

	profile <word32>	Old profile name
	<word32>	New profile name

3.16.3 rfc2544 save <word32> <word>

Description	Save a report to a file on a TFTP server	
Syntax	rfc2544 save <word32> <word>	
Parameter		
	Name	Description
	<word32>	Name of existing report to save
	<word>	TFTP server URL on the form tftp://server[:port]/path-to-file

3.16.4 rfc2544 start <word32> profile <word32> [desc <line128>]

Description	Start execution of a pre-configured profile	
Syntax	rfc2544 start <word32> profile <word32> [desc <line128>]	
Parameter		
	Name	Description
	start <word32>	Unique name of resulting report
	profile <word32>	Name of existing profile to execute
	desc <line128>	Description that will appear in the report

3.16.5 rfc2544 stop <word32>

Description	Stop execution of an ongoing test	
Syntax	rfc2544 stop <word32>	
Parameter		
	Name	Description
	<word32>	Report name to stop execution of

3.16.6 show rfc2544 profile [<word32>]

Description	Show RFC2544 profile name	
Syntax	show rfc2544 profile [<word32>]	
Parameter		
	Name	Description
	<word32>	RFC2544 profile name

3.17 GVRP Configure Commands

3.17.1 gvrp

Description	Enable GVRP on port(s)	
Syntax	gvrp	
Parameter		
	Name	Description
	<word32>	RFC2544 profile name

3.17.2 gvrpjoin request vlan

Description	Emit a Join-Request for test purpose	
Syntax	gvrp join-request vlan<vlan_list>	
Parameter		
	Name	Description
	vlan_list	List of VLANs

3.17.3 gvrpleave request vlan

Description	Emit a Leave-Request for test purpose	
Syntax	gvrp leave-request vlan<vlan_list>	
Parameter		
	Name	Description
	vlan_list	List of VLANs

3.17.4 gvrp max-vlans

Description	GVRP maximum number of VLANs	
Syntax	gvrp max-vlans<1-4095>	
Parameter		
	Name	Description
	<1-4095>	A valid range is from 1-4095

3.17.5 gvrp time { [join-time <1-20>] [leave-time <60-300>] [leave-all-time <1000-50>] }

Description	Set GVRP time	
Syntax	gvrp time { [join-time <1-20>] [leave-time <60-300>] [leave-all-time <1000-5000>] }	
Parameter		
	Name	Description
	1-20	Join timer, available from 1 to 20
	60-300	Leave timer, available from 60 to 300
	1000-5000	Leave all timer, available from 1000 to 5000

3.18 Voice VLAN Configure Commands

3.18.1 voice vlan

Description	VLAN for voice appliance attributes	
Syntax	voice vlan	
Parameter		

3.18.2 voice vlan aging-time

Description	Set secure learning aging time for voice traffic	
Syntax	voice vlan aging-time <10-10000000>	
Parameter		
	Name	Description
	10-10000000	Aging time, 10-10000000 seconds

3.18.3 voice vlan class

Description	Set voice traffic class	
Syntax	voice vlan class { <0-7> low normal medium high }	
Parameter		
	Name	Description
	0-7	Traffic class value
	low	Traffic class low (0)
	normal	Traffic class normal (1)
	medium	Traffic class medium (2)
	high	Traffic class high (3)

3.18.4 voice vlan oui

Description	Set voice traffic OUI configuration	
Syntax	voice vlan oui <oui> [description <line32>]	
Parameter		
	Name	Description
	oui	OUI value
	description	Set description for the OUI
	line32	Description line

3.18.5 voice vlan vid

Description	Set voice VLAN ID	
Syntax	voice vlan vid <vlan_id>	
Parameter		

	Name	Description
	<vlan_id>	VLAN ID, 1-4095

3.19 Profile alarm Commands

3.19.1 profile alarm

Description	Profile alarm
Syntax	profile alarm
Parameter	

3.19.2 alarm

Description	Set alarm content	
Syntax	alarm <alarmId> { mask unmask major minor }	
Parameter	101~114: GE-1~14 Port link down (for 14 port model)	
	Name	Description
	alarmId	151: set Power alarm
	mask	Set alarm as mask, it means event will not be send notify
	unmask	Set alarm as un-mask, it means event will be send notify
	major	Set alarm level as major
	minor	Set alarm level as minor

3.20 PoE Commands

3.20.1 poe management mode

Description	Use management mode to configure PoE power management method	
Syntax	poe management mode <mode>	
Parameter		
	Name	Description
	allocation-consumption	Maximum port power determined by allocated, and power is managed according to power consumption.
	allocation-reserved-power	Maximum port power determined by allocated, and power is managed according to reserved power.
	class-consumption	Maximum port power determined by class, and power is managed according to power consumption.
	class-reserved-power	Maximum port power determined by class, and power is managed according to reserved power.
	lldp-consumption	Maximum port power determined by LLDP Media protocol, and power is managed according to power consumption.
	lldp-reserved-power	Maximum port power determined by LLDP Media protocol, and power is managed according to reserved power.

3.20.2 poe supply

Description	Use PoE supply to specify the maximum power the power supply can deliver	
Syntax	poe supply <power>	
Parameter		
	Name	Description
	<power>	Value: 1-240 Maximum power the power supply can deliver.

3.20.3 poe 4pairs

Description	Enable 4pairs mode
Syntax	poe 4pairs
Parameter	

3.20.4 poe mode

Description	Set PoE mode	
Syntax	poe mode <mode>	
Parameter		
	Name	Description
	disable	Set PoE to disable
	enable	Set PoE to enable always
	schedule	Set PoE to enable by scheduling
	force-on	<p>Enable PoE and set the port to supply power to the connected PD even when the PD does not support the IEEE 802.3at or IEEE 802.3af standard. Make sure the connected PD supports auto voltage polarity and the operating voltage range is 54V to 40V.</p> <p>The operation mode will be set to 802.3at automatically after PoE force-on mode is enabled.</p> <p>The operation mode setting will remain at 802.3at even after PoE force-on mode is cancelled.</p>

3.20.5 poe operation

Description	Set PoE operation mode	
Syntax	poe operation <af/at>	
Parameter		
	Name	Description
	af	Set operation mode to 802.3af (maximum power 15.4W)
	at	Set operation mode to 802.3at (maximum power 30.0 W)

3.20.6 poe power

Description	Set maximum power for port in allocation mode	
Syntax	poe power limit <power>	
Parameter		
	Name	Description
	<power>	Maximum power for the interface (0-15.4 Watt for PoE standard mode, 0-30.0 Watt for PoE plus mode)

3.20.7 poe priority

Description	Set PoE port priority	
Syntax	poe priority <prioriy>	
Parameter		
	Name	Description
	critical	Set priority to critical
	high	Set priority to high
	low	Set priority to low

3.20.8 poe reset

Description	Set PoE power reset time	
Syntax	poe reset <Hour> <Minute> <range_list>	
Parameter		
	Name	Description
	<0-23>	Hour

	<0-59>	Minute
	<range_list>	Day(s).(1:Sunday, 2:Monday, 3:Tuesday, 4:Wednesday, 5:Thursday, 6:Friday, 7:Saturday)

3.20.9 poe schedule

Description	Set PoE power scheduling during the week	
Syntax	poe schedule <Day> <range_list>	
Parameter		
	Name	Description
	fri mon sat sun thu tue wed	Day
	<range_list>	There are 48 time interval one day. Each interval has 30 minutes. ([1]<00:00-00:29> [2]<00:30-00:59>[3]<01:00-01:29> ... [47]<23:00-23:29> [48]<23:30-23:59>).